



**EUROTHERM
DRIVES**

590+ DRV Series DC Digital Drive

Product Manual

HA470388U002 Issue 1

© Copyright Eurotherm Drives Limited 2003

All rights strictly reserved. No part of this document may be stored in a retrieval system, or transmitted in any form or by any means to persons not employed by a Eurotherm Drives company without written permission from Eurotherm Drives Ltd.

Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Eurotherm Drives cannot accept responsibility for damage, injury, or expenses resulting therefrom.

WARRANTY

Eurotherm Drives warrants the goods against defects in design, materials and workmanship for the period of 12 months from the date of delivery on the terms detailed in Eurotherm Drives Standard Conditions of Sale IA058393C.

Eurotherm Drives reserves the right to change the content and product specification without notice.

Safety Information



Requirements

IMPORTANT: Please read this information BEFORE installing the equipment.

Intended Users

This manual is to be made available to all persons who are required to install, configure or service equipment described herein, or any other associated operation.

The information given is intended to highlight safety issues, and to enable the user to obtain maximum benefit from the equipment.

Complete the following table for future reference detailing how the unit is to be installed and used.

INSTALLATION DETAILS	
Serial Number <i>(see product label)</i>	
Where installed <i>(for your own information)</i>	
Unit used as a: <i>(refer to Certification for the drive)</i>	<input type="checkbox"/> Component <input type="checkbox"/> Relevant Apparatus
Unit fitted:	<input type="checkbox"/> Wall-mounted <input checked="" type="checkbox"/> Enclosure

Application Area

The equipment described is intended for industrial (non consumer) motor speed control utilising dc shunt machines.

Personnel

Installation, operation and maintenance of the equipment should be carried out by qualified personnel. A qualified person is someone who is technically competent and familiar with all safety information and established safety practices; with the installation process, operation and maintenance of this equipment; and with all the hazards involved.

Safety Information



Hazards

WARNING!

This equipment can endanger life through rotating machinery and high voltages. Failure to observe the following will constitute an ELECTRICAL SHOCK HAZARD. This is a product of the restricted sales distribution class according to IEC 61800-3. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures. This product is designated as "professional equipment" as defined in EN61000-3-2. Permission of the supply authority shall be obtained before connection to the low voltage supply.

- The equipment must be **permanently earthed** due to the high earth leakage current.
- The drive motor must be connected to an appropriate safety earth.
- Before working on the equipment, ensure isolation of the mains supply from terminals L1, L2 and L3.
- Never perform high voltage resistance checks on the wiring without first disconnecting the drive from the circuit being tested.
- When replacing a drive in an application and before returning to use, it is essential that all user defined parameters for the product's operation are correctly installed.
- This equipment contains electrostatic discharge (ESD) sensitive parts. Observe static control precautions when handling, installing and servicing this product.

IMPORTANT: Metal parts may reach a temperature of 90 degrees centigrade in operation.

Application Risk

The specifications, processes and circuitry described herein are for guidance only and may need to be adapted to the user's specific application.

Eurotherm Drives does not guarantee the suitability of the equipment described in this Manual for individual applications.

Risk Assessment

Under fault conditions, power loss or other operating conditions not intended, the equipment may not operate as specified. In particular:

- The motor speed may not be controlled
- The direction of rotation of the motor may not be controlled
- The motor may be energised

Guards

The user must provide guarding and /or additional safety systems to prevent risk of injury and electric shock.

Protective Insulation

- All control and signal terminals are SELV, i.e. protected by double insulation. Ensure all wiring is rated for the highest system voltage.

Note: *Thermal sensors contained within the motor must be double insulated.*

- All exposed metalwork in the drive is protected by basic insulation and bonding to a safety earth.

RCDs

These are not recommended for use with this product but, where their use is mandatory, only Type B RCDs should be used.

Contents

Contents

Page

Chapter 1 GETTING STARTED

Equipment Inspection and Storage	1-2
Packaging and Lifting Details	1-2
About this Manual	1-2
Initial Steps	1-2
How the Manual is Organised	1-3

Chapter 2 AN OVERVIEW OF THE DRIVE

How it Works	2-1
Control Features	2-2
Understanding the Product Code	2-3
Catalog Number (North America).....	2-3
Model Number (Europe).....	2-4
• Door Assembly Product Code	2-5
Product Identification	2-6
Component Identification	2-7
• 590+ DRV DC Digital Drive (Frames 1 & 2)	2-7
• 590+ Door Assembly (Frames 3, 4, 5 & H).....	2-8
• 590+ Drive (Frame 3).....	2-9
• 590+ Drive (Frames 4 & 5)	2-10
• 590+ Product (Frame H)	2-11

Chapter 3 INSTALLING THE DRIVE

Mechanical Installation	3-1
• Lifting the Drive	3-1
• Product Dimensions.....	3-1
• Mounting the Drive.....	3-1
• Ventilation and Cooling Requirements.....	3-2
Line Reactor/Isolation Transformer	3-2
Electrical Installation	3-3
Wiring Instructions - Minimum Connections	3-3
• Power Wiring	3-3
• Control Wiring	3-5
• Speed Feedback Options.....	3-7
• Hardware Requirements	3-8
• Additional Control Connections	3-9
Motor Field Connections	3-10
• Internal/External Supply (Frames 2, 3, 4 & 5)	3-10
Terminal Locations	3-13
EMC Wiring Details.....	3-14

Contents

<i>Contents</i>	<i>Page</i>
Optional Equipment	3-15
• Fitting the Remote 6901 Keypad	3-15
• Dynamic Braking Option	3-16
• Blower Motor Protector Option.....	3-16
• Control Transformer Option (factory-fitted).....	3-16
• Technology Box Options.....	3-17
Installation Drawings.....	3-18
Connection Diagrams.....	3-27

Chapter 4 CALIBRATION AND START-UP

Initial Checks.....	4-1
Recommended Tools	4-1
Check Motor.....	4-1
Check Supply.....	4-2
Calibrate the Drive.....	4-2
Initial Drive Start.....	4-3
Tune the Current Loop (AUTOTUNE)	4-6
Set Up Field Control.....	4-8
Set Up Speed Feedback	4-9
Setup For Field Weakening.....	4-11
Adjust Speed Loop	4-11
Other Important Parameters.....	4-13
Recording Parameters	4-13
Password Protection	4-13
Entering a Password	4-13
Changing a Password.....	4-13
Restore Default Settings (2-Button Reset).....	4-14

Chapter 5 THE KEYPAD

Connecting the Keypad	5-1
Using the Keypad.....	5-1
• The L/R Key.....	5-2
• The PROG Key	5-2
Control Key Definitions.....	5-2
• Using the Keys in Remote Mode.....	5-2
• Using the Keys in Local Mode	5-3
Indications	5-4
• Keypad LEDs.....	5-4
• Keypad Alarm Messages	5-4
The Menu System	5-5
The Local Menu	5-6
Navigating the Menu System	5-7
Changing a Parameter Value	5-7
The Menu System Map	5-8

Contents

<i>Contents</i>	<i>Page</i>
Menu Shortcuts and Special Key Combinations	5-9
• Quick Tag Information	5-9
• Changing the Product Code (3-button reset).....	5-9
• Resetting to Factory Defaults (2-button reset)	5-10
Special Menu Features	5-11
Changing the Menu Detail/Viewing Level.....	5-11
Selecting the Display Language	5-11
Password Protection	5-12
• To Activate Password Protection	5-12
• To Deactivate Password Protection	5-13
How to Save, Restore and Copy your Settings	5-14
Saving Your Application	5-14
Restoring Saved Settings.....	5-14
Copying an Application.....	5-14

Chapter 6 PROGRAMMING YOUR APPLICATION

Programming with Block Diagrams.....	6-1
Modifying a Block Diagram	6-1
• Setup and Configuration Modes	6-1
• Making and Breaking Function Block Connections.....	6-1
• Programming Rules	6-2
• Saving Your Modifications	6-2
Understanding the Function Block Description.....	6-2
• MMI Menu Maps.....	6-3
Function Block Descriptions.....	6-4
• ANALOG INPUTS.....	6-5
• ANALOG OUTPUTS.....	6-7
• AUX I/O.....	6-8
• BLOCK DIAGRAM (MMI only)	6-13
• CALIBRATION	6-14
• CONFIGURE DRIVE.....	6-17
• CURRENT LOOP	6-19
• CURRENT PROFILE	6-22
• DIAGNOSTICS.....	6-23
• DIAMETER CALC.	6-29
• DIGITAL INPUTS	6-31
• DIGITAL OUTPUTS.....	6-34
• FIELD CONTROL.....	6-36
• INERTIA COMP	6-40
• INHIBIT ALARMS	6-41
• INTERNAL LINKS	6-44
• JOG/SLACK.....	6-48
• MENUS.....	6-50
• miniLINK.....	6-51
• OP STATION.....	6-52
• PASSWORD (MMI only)	6-54

Contents

<i>Contents</i>	<i>Page</i>
• PID	6-55
• PRESET	6-59
• RAISE/LOWER	6-61
• RAMPS	6-63
• SETPOINT SUM 1	6-68
• SETPOINT SUM 2	6-70
• SPEED LOOP	6-72
• SPEED LOOP (ADVANCED)	6-76
• SRAMP	6-78
• STANDSTILL	6-81
• STOP RATES	6-83
• SYSTEM PORT P3	6-86
• 5703 SUPPORT	6-87
• TAPER CALC.	6-88
• TEC OPTION	6-90
• TENS+COMP CALC.....	6-91
• TORQUE CALC.....	6-94
• USER FILTER.....	6-95

Chapter 8 ROUTINE MAINTENANCE AND REPAIR

Maintenance	8-1
• Service Procedures	8-1
• Preventive Maintenance	8-1
Repair.....	8-1
Saving Your Application Data	8-1
Returning the Unit to Eurotherm Drives.....	8-2
Disposal	8-2
Technical Support Checks.....	8-3
Fuse Replacement (Frame H)	8-4
• 4Q Product (Regenerative)	8-4
• 2Q Product (Non-Regenerative)	8-5
Phase Assembly Replacement (Frame H)	8-6
Replacing the Fan (Frames 4 & 5).....	8-8

Chapter 9 CONTROL LOOPS

Principle of Operation.....	9-1
Current Loop	9-1
• Manual Tuning.....	9-2
Speed Loop	9-3
Field Control.....	9-4
• Set-up Notes	9-4
• Current Control.....	9-4
• Voltage Control.....	9-4
• Field Weakening	9-5
• Standby Field	9-5

Contents

Contents

Page

Chapter 10 PARAMETER SPECIFICATION TABLE

Specification Table: Tag Number Order10-2

Parameter Table: MMI Menu Order10-19

Chapter 11 TECHNICAL SPECIFICATIONS

Environmental Details	11-1
EMC Compliance.....	11-1
Electrical Ratings - Power Circuit	11-2
Power Supply Details.....	11-3
Control Power Supply Details.....	11-3
AC Line Reactor (Frames 1, 2, 3, 4 & 5).....	11-4
AC Line Reactor (Frame H)	11-5
External AC Supply (RFI) Filters	11-6
Input Line Fuses (Frames 1, 2, 3, 4, & 5).....	11-7
SCR Leg Fuses (Frame H)	11-8
Power Supply Fuses.....	11-8
Field Fuses.....	11-8
Earthing/Grounding Safety Details.....	11-9
Terminal Definitions (Digital/Analog Inputs & Outputs).....	11-10
Terminal Information - Power Board (Frames 1, 2, 3, 4 & 5).....	11-11
Terminal Information - Control Board	11-14
Terminal Information (Frame H)	11-18
Terminal Information - Option Boards	11-19
Wiring Requirements for EMC Compliance	11-19
Wire Sizes and Termination Tightening Torques (Frames 1, 2, 3, 4 & 5).....	11-20
Termination Tightening Torque (Frame H).....	11-21
Dynamic Braking	11-21
Cooling Fans	11-22

Chapter 12 CERTIFICATION FOR THE DRIVE

Requirements for EMC Compliance12-1

Minimising Radiated Emissions 12-1 |

Earthing/Grounding Requirements..... 12-1 |

- Protective Earth/Ground (PE) Connections 12-1 |

- Control/Signal EMC Earth Connections..... 12-2 |

Cabling Requirements 12-2 |

- Planning Cable Runs 12-2 |

- Increasing Motor Cable Length..... 12-2 |

EMC Installation Options..... 12-3 |

- Screening & Earthing/Grounding (cubicle mounted, Class A) 12-3 |

- Star Point Earthing/Grounding..... 12-4 |

- Sensitive Equipment..... 12-5 |

Contents

<i>Contents</i>	<i>Page</i>
Requirements for UL Compliance.....	12-6
• Motor Overload Protection.....	12-6
• Branch Circuit/Short Circuit Protection Requirements	12-6
• Short Circuit Ratings	12-6
• Field Wiring Temperature Rating.....	12-7
• Operating Ambient Temperature	12-7
• Field Wiring Terminal Markings	12-7
• Power and Control Field Wiring Terminals.....	12-7
• Field Earthing/Grounding Terminals	12-7
• Field Terminal Kits.....	12-7
• Fuse Replacement Information	12-7
Recommended Wire Sizes (Frames 1, 2, 4 & 5).....	12-8
Recommended Wire Sizes (Frame H)	12-8
European Directives and the CE Mark	12-9
CE Marking for Low Voltage Directive	12-9
CE Marking for EMC - Who is Responsible?	12-9
• Legal Requirements for CE Marking	12-10
• Applying for CE Marking for EMC	12-10
Which Standards Apply?	12-11
Certificates.....	12-13

Chapter 13 STANDARD AND OPTIONAL EQUIPMENT

Standard Equipment	13-1
Power Board Circuit Descriptions	13-1
• AH470280U005, U006, U007, U008 (Frame 1)	13-1
• AH470330U101, U102, U001, U002 (Frame 2)	13-3
• AH385851U002, U003 (Frame 3).....	13-5
• AH466701U001, U002, U003 (Frames 4 & 5)	13-10
• AH466001U001, U101 (Frame H)	13-16
Optional Equipment	13-19
Speed Feedback Option Boards	13-19
• Microtach Option Board	13-20
• Wire-Ended Encoder Option Board.....	13-20
• Tacho Calibration Option Board.....	13-20
• Combined Tacho and Encoder Feedback	13-21
Communications Technology Options.....	13-21
• COMMS Option Technology Box	13-21

Contents

Contents

Page

Chapter 14 SERIAL COMMUNICATIONS

Communications Technology Option	14-1
Config Ed Lite	14-1
System Port (P3)	14-1
UDP Support.....	14-1
• UDP Menu Structure	14-2
• UDP Transfer Procedure	14-2
• MMI Dump	14-3
5703 Support	14-4
5703 Support	14-5
• Commissioning the 5703/1	14-6
Error Codes	14-7
ERROR REPORT (EE)	14-7

Chapter 15 590+ DRV FRAME H

Changing DC Output Terminals (Frame H)	15-1
Removing the Cover (Frame H).....	15-1
Installing the Fan (Frame H)	15-2

Chapter 16 THE DEFAULT APPLICATION

Block Diagrams	16-1
Programming Block Diagram - Sheet 1	16-3
Programming Block Diagram - Sheet 2.....	16-4
Main Block Diagram	16-5
Field Control Block Diagram	16-6
Start/Healthy Logic Block Diagram	16-7
Functional Block Diagram	16-8

Software Block Diagram (fold-out)

GETTING STARTED

The 590+ DRV contains the 590+ controller, a contactor and ac supply fusing. An optional control transformer, motor blower and dynamic brake are also available.

System Design

The drive is designed for use in a suitable enclosure, with associated control equipment. The unit accepts a variety of standard three-phase ac supply voltages depending upon the model, and is suitable for the powering of DC shunt field and permanent magnet motors, providing controlled dc output voltage and current for armature and field.

All units are designed for simple and economical panel mounting. Plug-in control connectors simplify the fitting and removal of the unit to the panel.

Where possible, standard parts are used throughout the range thereby reducing the variety of spare parts required to maintain a multi-drive system. For example, the same basic control boards are used in all controllers regardless of horsepower or bridge configuration.

The control circuit is totally isolated from the power circuit thus simplifying the interconnection of controllers within a system and improving operator safety. The coding circuitry adjusts automatically to accept supply frequencies between 45-65Hz and possesses high immunity to supply-borne interference. The controllers are phase rotation insensitive.

Control and Communications

The drive is controlled by a 16-bit microcontroller providing advanced features such as:

- **Complex control algorithms** which are not achievable by simple analog techniques.
- **Software-configurable control circuitry** built around standard software blocks.
- **Serial link communications** with other drives or a PC for advanced process systems.

The Keypad gives access to parameters, diagnostic messages, trip settings and full application programming.

Regenerative and Non-Regenerative Models

The 590+ DRV Series includes both regenerative and non-regenerative models:

- **Regenerative drives** consist of two fully-controlled thyristor bridges, contactors, fuses, and a field bridge with full transient and overload protection, together with sophisticated electronic control of acceleration and deceleration, speed and torque in both directions of rotation.
- **Non-regenerative drives** consist of one fully-controlled thyristor bridge, contactors, fuses, and a field bridge with full transient and overload protection, together with its associated electronic control circuitry, and provide accurate speed and/or torque control in one selected direction of rotation.

Field Regulator

A field regulator is standard. The regulator consists of a full-wave, half-controlled, single phase thyristor bridge with transient and overload protection. It provides either a fixed voltage or fixed current source, depending upon the selected mode of operation. The field current mode of operation can be further enhanced to provide field weakening for controlling motors in extended speed or constant horsepower control.

1-2 Getting Started

Equipment Inspection and Storage

- Check for signs of transit damage
- Check the product code on the rating label conforms to your requirement.

If the unit is not being installed immediately, store the unit in a well-ventilated place away from high temperatures, humidity, dust, or metal particles.

Refer to Chapter 2: “An Overview of the Drive” to check the rating label/product code.

Refer to Chapter 8: “Routine Maintenance and Repair” for information on returning damaged goods.

Refer to Chapter 11: “Technical Specifications” - Environmental Details for the storage temperature.

Packaging and Lifting Details

Caution

The packaging is combustible and, if disposed of in this manner incorrectly, may lead to the generation of lethal toxic fumes.

Save the packaging in case of return. Improper packaging can result in transit damage.

Use a safe and suitable lifting procedure when moving the drive. Never lift the drive by its terminal connections.

Prepare a clear, flat surface to receive the drive before attempting to move it. Do not damage any terminal connections when putting the drive down.

Refer to Chapter 11: “Technical Specifications” - Mechanical Details for unit weights.

About this Manual

This manual is intended for use by the installer, user and programmer of the 590+ DRV Series DC Digital Drive. It assumes a reasonable level of understanding in these three disciplines.

Note: *Please read all Safety Information before proceeding with the installation and operation of this unit.*

Enter the “Model No” from the rating label into the table at the front of this manual. There is also a column for you to record your application’s parameter settings in the table in Chapter 10. It is important that you pass this manual on to any new user of this unit.

This manual is for the 590+ DRV and the 590+ Door.

Initial Steps

Use the manual to help you plan the following:

Installation

Know your requirements:

- certification requirements, CE/UL/c-UL conformance
- conformance with local installation requirements
- supply and cabling requirements

Operation

Know your operator:

- how is it to be operated, local and/or remote?
- what level of user is going to operate the unit?
- decide on the best menu level for the Keypad (where supplied)

Programming (Keypad or suitable PC programming tool only)

Know your application:


- plan your “block diagram programming”
- enter a password to guard against illicit or accidental changes
- learn how to back-up your application data
- customise the Keypad to the application

How the Manual is Organised

The manual is divided into chapters and paragraphs. Page numbering restarts with every chapter, i.e. 5-3 is Chapter 5, page 3.

Application Block Diagram

You will find this at the rear of the manual. The pages unfold to show a complete block diagram, this will become your programming tool as you become more familiar with the software.

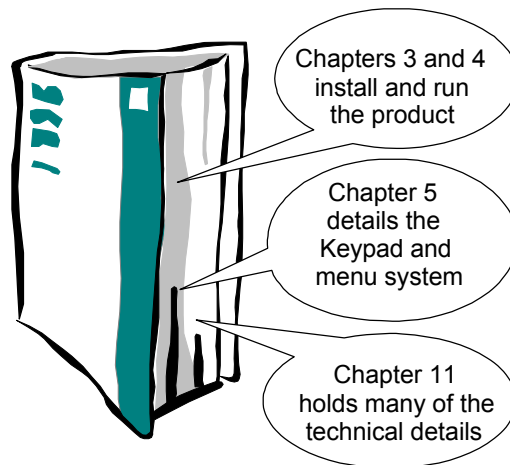Quick-Start Guide

1-4 Getting Started

AN OVERVIEW OF THE DRIVE

How it Works

Note: Refer to Chapter 9: "Control Loops" for a more detailed explanation.


In *very* simple terms, the drive controls the dc motor with the use of *Control Loops* - an inner Current Loop and an outer Speed Loop. These control loops can be seen in the Application Block Diagram. The block diagram shows all the drive's software connections.

Using the Keypad, you can select the control loops to be used by the drive to provide either:


- Current Control
- Speed Control (default)

It is usual to supply a Current or Speed Feedback signal to the appropriate loop for more effective control of the drive. Current Feedback sensors are built-in, whereas Speed Feedback is provided directly from the armature sensing circuit (default), or by tachogenerator, encoder or Microtach connection to the relevant option board.

When in Speed Control, you can modify the performance of the drive further by controlling the motor field, i.e. Field Control. By weakening the field current, you can obtain an increase in motor speed beyond that normally achievable for the rated Armature Voltage of the dc motor.

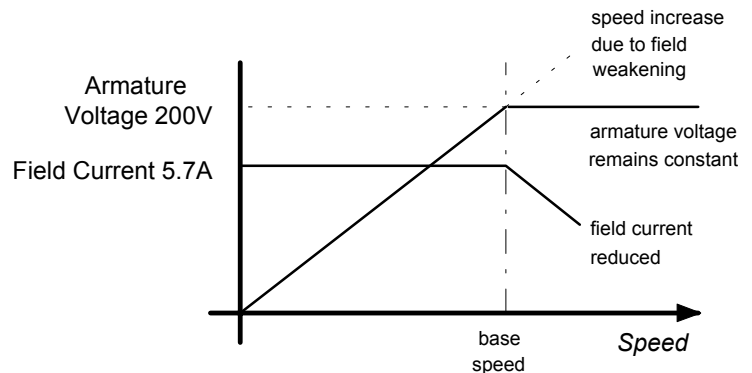

The drive is controlled remotely using digital/analog inputs and outputs, or locally using the Keypad.

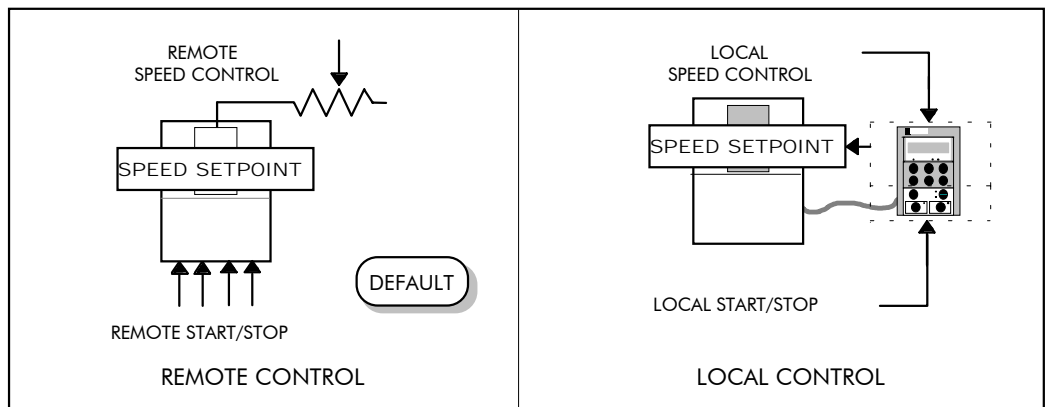

By plugging in a COMMS Technology Box Option, the drive can be linked into a network and controlled by a PLC/SCADA or other intelligent device.

2-2 An Overview of the Drive

Control Features

Control	Control Circuits	Fully isolated from power circuit (SELV)
	Output Control	<ul style="list-style-type: none"> Fully controlled 3-phase thyristor bridge Microprocessor implemented phase control extended firing range For use on 50 or 60Hz supplies with a frequency compliance range of 45 to 65Hz Phase control circuits are phase rotation insensitive
	Control Action	<ul style="list-style-type: none"> Fully digital Advanced PI with fully adaptive current loops for optimum dynamic performance Self Tuning Current Loop utilising "Autotune" algorithm Adjustable speed PI with integral defeat
	Speed Control	<ul style="list-style-type: none"> By Armature Voltage feedback with IR compensation By Encoder feedback or analog tachogenerator
	Speed Range	100 to 1 typical with tachogenerator feedback
	Steady State Accuracy	<ul style="list-style-type: none"> 0.01 % Encoder Feedback with Digital setpoint (serial link or P3) 0.1 % Analog Tach Feedback 2 % Voltage Feedback
	Adjustments	All adjustments in software can be altered by the Keypad or via serial communications. The Keypad provides monitoring and adjustment of parameters and levels, in addition to diagnostic facilities.
Protection		<ul style="list-style-type: none"> High energy MOVs Overcurrent (instantaneous) Overcurrent (inverse time) Field failure Speed feedback failure Motor overtemperature Thyristor Stack overtemperature Thyristor "Trigger" failure Thyristor Snubber Network Zero-speed detection Standstill logic Stall protection
Diagnostics		<ul style="list-style-type: none"> Fully computerised with first fault latch and automatic display Digital LCD monitoring Full diagnostic information available on RS422/RS485 LED circuit state indication

Table 2-1 Control Features

Understanding the Product Code

Catalog Number (North America)

The unit is fully identified using an alphanumeric code which records how the drive was calibrated and its various settings when despatched from the factory.

The Product Code appears as the “Cat No”. Each block of the Product Code is identified as below:

Catalog Number (North America)		
Block No.	Variable	Description
1	XXXX	Generic product 955+ : Base model number DRV
2	X	1 digit identifying the nominal 3 phase ac power supply voltage; 1 = 110-115 Vac 8 = 220-500 Vac C = 575 Vac D = 600 Vac
3	X	1 digit identifying the control type: R = Regenerative, 4Q DC Drive N = Non-regenerative, 2Q DC Drive
4	XXXX	Four characters specifying the output in Horsepower: <i>Equivalent European Rating</i> 0007 = 7.5 * (Frame 1) 15A 0020 = 20 * (Frame 1) 35A 0030 = 30 * (Frame 2) 55A 0040 = 40 * (Frame 2) 70A 0050 = 50 * (Frame 2) 90A 0060 = 60 * (Frame 2) 110A 0075 = 75 * (Frame 2) 125A 0100 = 100 * (Frame 2) 165A 0125 = 125 (Frame 3) 0150 = 150 (Frame 3) 0200 = 200 (Frame 4) 0250 = 250 (Frame 4) 0300 = 300 (Frame 4) 0400 = 400 (Frame 4) 0500 = 500 (Frame 4) 0600 = 600 (Frame 5) 0700 = 700 (Frame 5) 0800 = 800 (Frame 5) 0900 = 900 (Frame H) 1000 = 1000 (Frame H) 1250 = 1250 (Frame H) 1500 = 1500 (Frame H)
5	XXX	Up to three characters specifying the build options (factory installed): CX = Control transformer fitted (* units only) 240 = 240V AC Contactor fitted (* units only)

2-4 An Overview of the Drive

Model Number (Europe)

The unit is fully identified using an alphanumeric code which records how the drive was calibrated, its various settings when despatched from the factory, and the country of origin.

The Product Code appears as the “Model No”. Each block of the Product Code is identified as below:

Model Number (Europe)		
Block No.	Variable	Description
1	XXXXXXXX	Generic product 590P-DRV : 590+DRV 4Q DC Drive 591P-DRV : 590+DRV 2Q DC Drive
2	XXXX	Four digits identifying the maximum dc output current rating that may be calibrated for each size of product: 0015 = 15A (Frame 1) 0035 = 35A (Frame 1) 0040 = 40A (Frame 2) 0055 = 55A (Frame 2) 0070 = 70A (Frame 2) 0090 = 90A (Frame 2) 0110 = 110A (Frame 2) 0125 = 125A (Frame 2) 0165 = 165A (Frame 2)
3	XXX	3 digits identifying the nominal 3 phase ac power, supply voltage: 220 110 to 220V (±10%) 50/60Hz 500 220 to 500V (±10%) 50/60Hz 600 500 to 600V (±10%) 50/60Hz (Frame 4 & 5 only) 690 500 to 690V (±10%) 50/60Hz (Frame H only)
4	XXXX	4 digits describing the mechanical package including livery and mechanical package style: <i>First two digits (on the left)</i> <i>Livery</i> 00 Standard Eurotherm Livery 05 Distributor Livery 01-04 and 06-99 Defined customer liveries TBA <i>Third digit</i> <i>Mechanical Package Style</i> 1 Standard (IP20), protected panel mounting 4 Panel Mounting IP20 plus Roof Vent Kit (Frame 4 only) <i>Fourth digit</i> <i>Keypad</i> 0 No Keypad 1 Built-in 6901 Keypad
5	XX	Two characters specifying the user interface language: UK = English SP = Spanish * FR = French IT = Italian * GR = German * * refer to Customer Services
6	XXX	Up to three characters specifying the feedback option (one must be fitted): ARM = Armature Voltage ENP = Encoder (plastic fibre-optic) AN = Analog Tacho ENG = Encoder (glass fibre-optic) ENW = Encoder (wire-ended)

Model Number (Europe)		
Block No.	Variable	Description
7	XXXXX	Up to five characters specifying the protocol for the 6055 communications Tech Box option: 0 = No Comms option fitted EI00 = RS485 (EI BINARY, EI ACSII or MODBUS RTU) PROF = PROFIBUS DP LINK = LINK DNET = DEVICENET CAN = CANOPEN MBP = MODBUS+ ENET = ETHERNET
8	XXX	Up to three characters specifying the auxiliary mains power supply for contactor (all units): 110 = 110(±10%) 50/60Hz 230 = 220V to 240V (±10%) 50/60Hz CX = Control transformer fitted internally
9	XXX	Motor blower output: 0 = Not fitted 063 = 0.40 to 0.63A 400 = 2.50 to 4.00A 016 = 0.10 to 0.16A 100 = 0.63 to 1.00A 630 = 4.0A to 6.30A 025 = 0.16 to 0.25A 160 = 1.00 to 1.60A 040 = 0.25 to 0.40A 250 = 1.60 to 2.50A
10	XXX	Auxiliary volt-free contact: AUX = Fitted
11	XXX	Up to three characters specifying engineering special options: 0 = No special option

Door Assembly Product Code

The door assembly is identified separately. The Product Code appears on a label displayed under the terminal cover.

Block No.	Variable	Description
1	XXXXX	Generic product 590PD : Fits Frame 4 and 5 units 590PXD : Fits Frame 3 and H units
2	XXXX	4 digits describing the mechanical package including livery and mechanical package style: <i>First two digits (on the left)</i> <i>Livery</i> 00 Standard Eurotherm Livery 05 Distributor Livery 01-04 and 06-99 Defined customer liveries TBA <i>Third digit</i> <i>Mechanical Package Style</i> 1 Standard <i>Fourth digit</i> <i>Keypad</i> 0 No Keypad 1 Built-in Keypad
3	XX	Two characters specifying the user interface language: UK = English FR = French GR = German (refer to Customer Services) SP = Spanish (refer to Customer Services) IT = Italian (refer to Customer Services)
4	XXX	Up to three characters specifying engineering special options: 0 = No special option

2-6 An Overview of the Drive

Product Identification


■ Indicates a panel-mounted DRV unit

Output Currents (armature):

Frame 1	Frame 2	Frame 3	Frame 4	Frame 5	Frame H
15A 35A	40A (Europe only) 55A 70A 90A 110A 125A 165A	206A 246A	360A 425A 490A 700A 815A	1000A 1200A 1334A	1050A 1450A 1600A 2000A 2400A

Component Identification

590+ DRV DC Digital Drive (Frames 1 & 2)

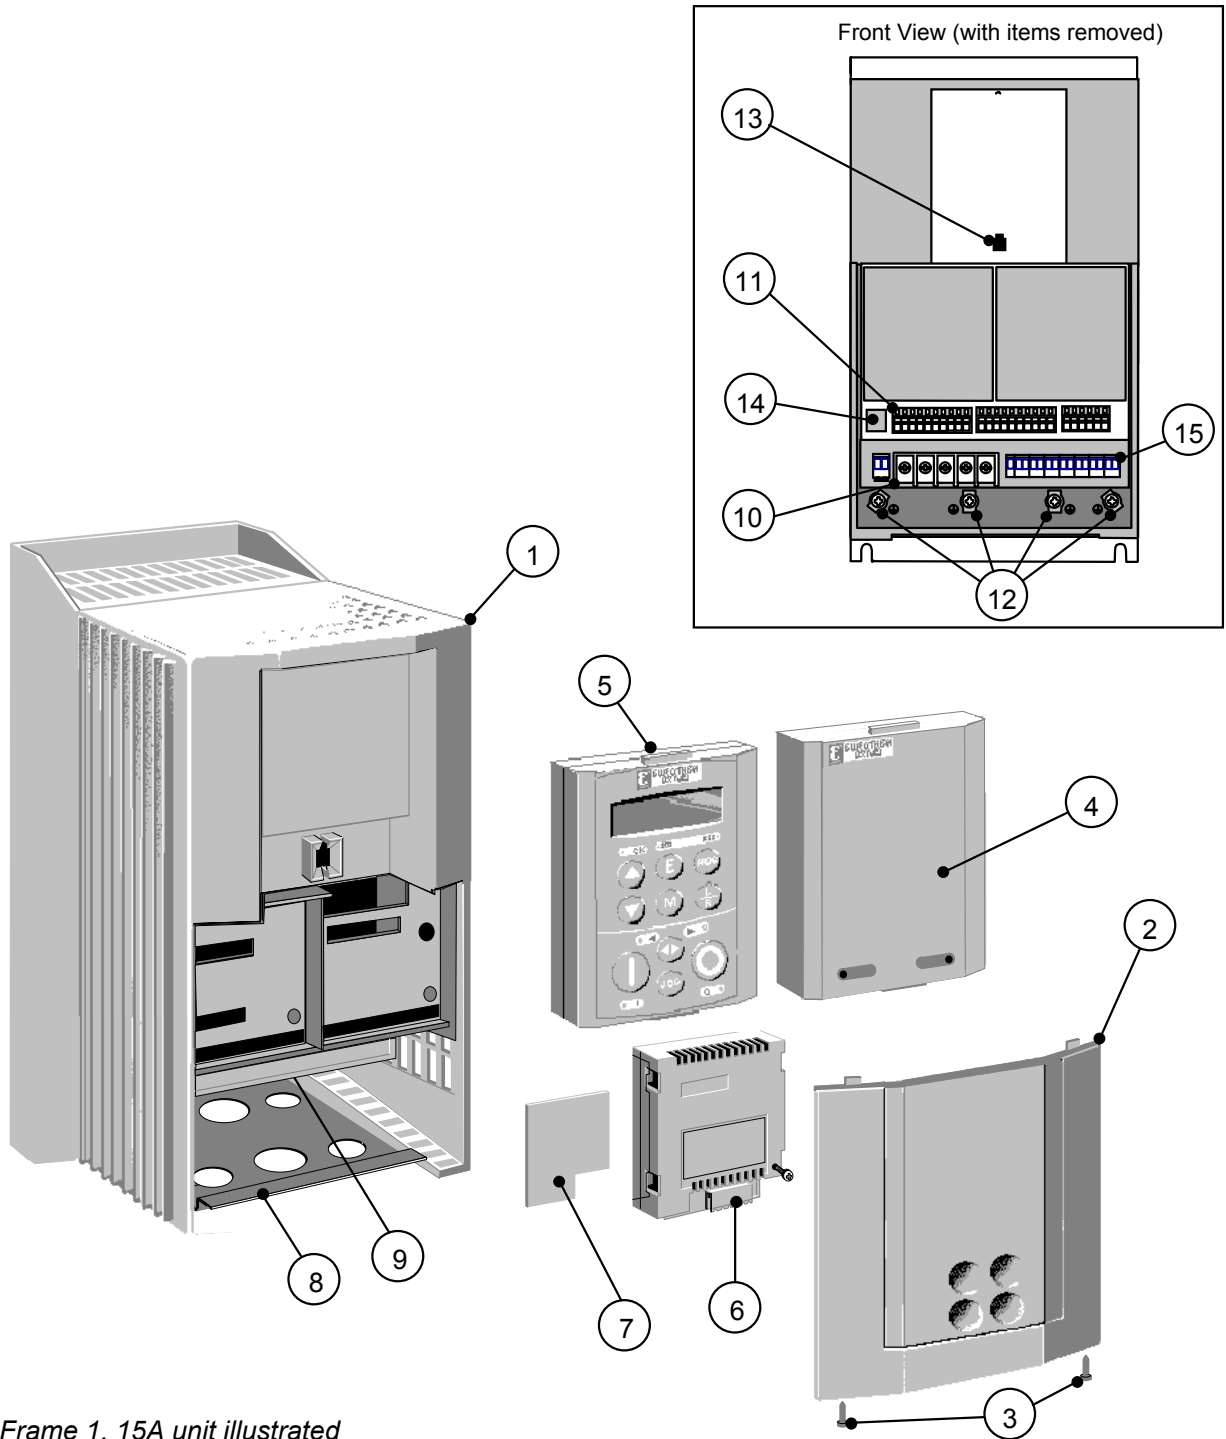


Frame 1, 15A unit illustrated

1 Main drive assembly	9 Power terminal shield
2 Terminal cover	10 Power terminals
3 Terminal cover retaining screw	11 Control terminals
4 Blank cover (part number: LA389836U001)	12 Earthing/grounding points
5 6901 Keypad	13 Keypad port
6 COMMS technology box (optional)	14 RS232 programming port
7 Speed feedback technology card (optional)	15 Auxiliary power, external contactor, blower and isolated thermistor terminals
8 Gland plate	

2-8 An Overview of the Drive

590+ Door Assembly (Frames 3, 4, 5 & H)

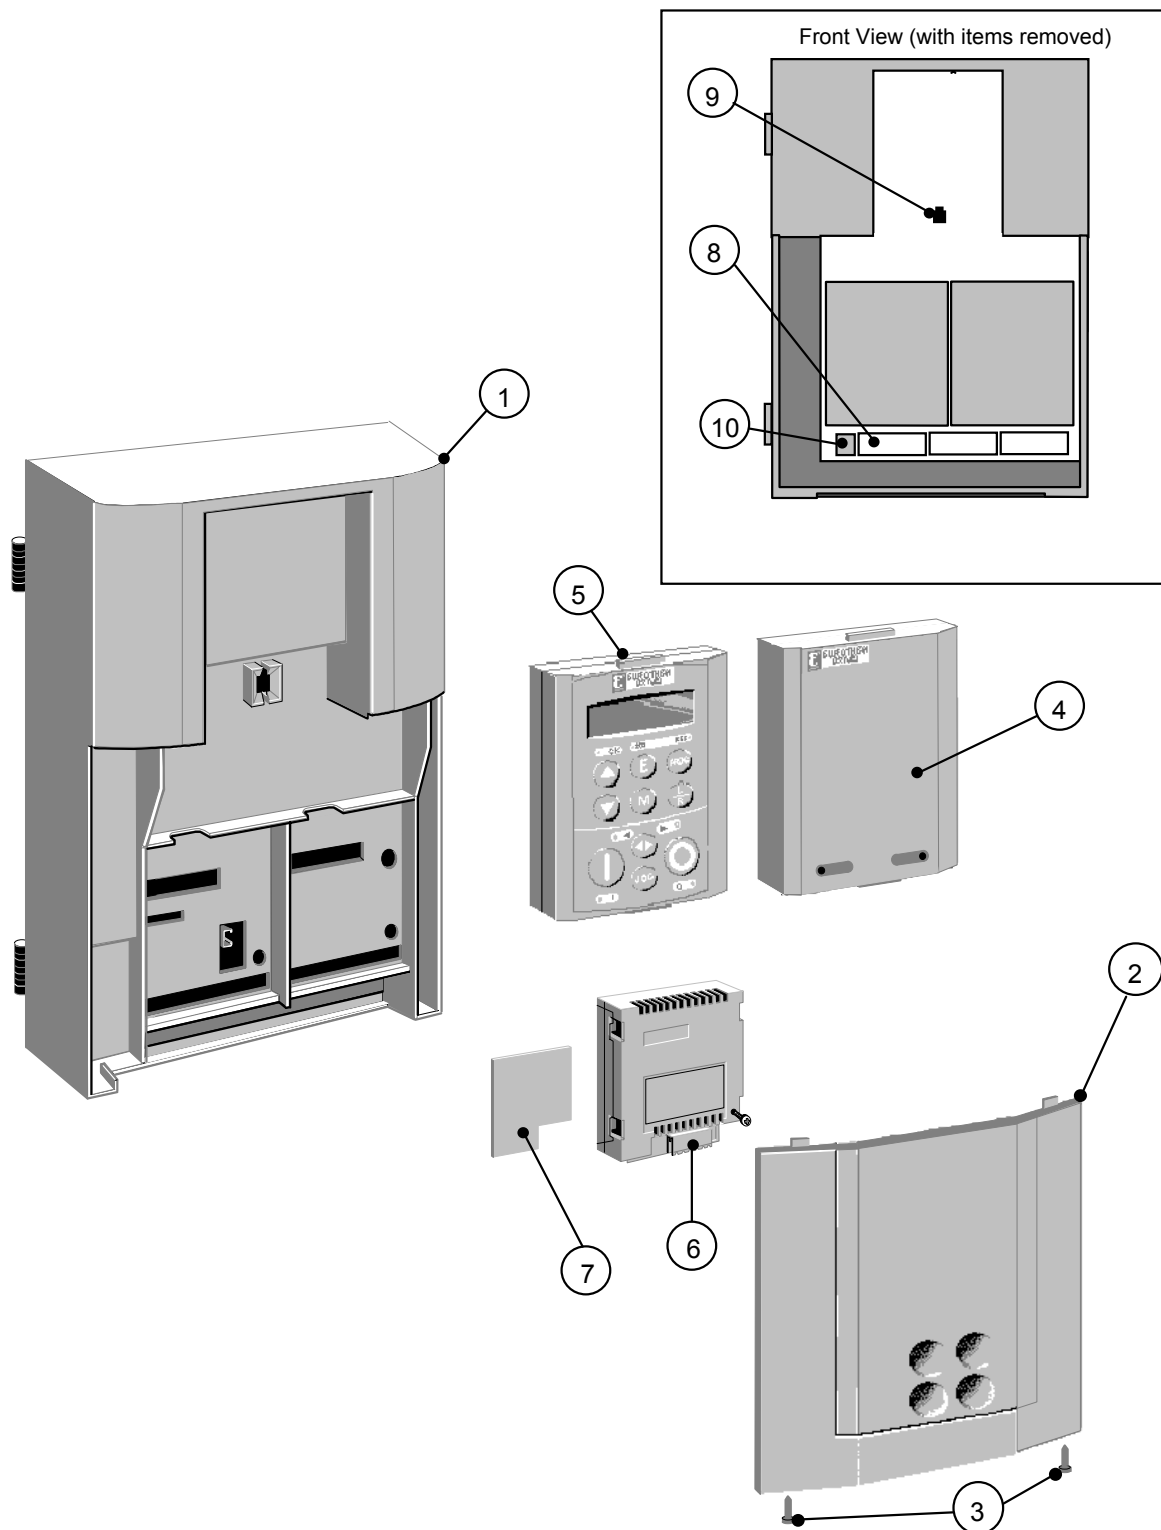


Frames 4 & 5 : Product Code 590PD/.... (illustrated)

Frames 3 & H : Product Code 590PXD/.... (with additional motor thermistor terminals)

- | | |
|--|--|
| 1 Main door assembly | 7 Speed feedback technology card (optional) |
| 2 Terminal cover | 8 Control terminals |
| 3 Terminal cover retaining screw | 9 Keypad port |
| 4 Blank cover (part number: LA389836U001) | 10 RS232 programming port (P3) |
| 5 6901 Keypad | |
| 6 COMMS technology box (optional) | |


590+ Drive (Frame 3)

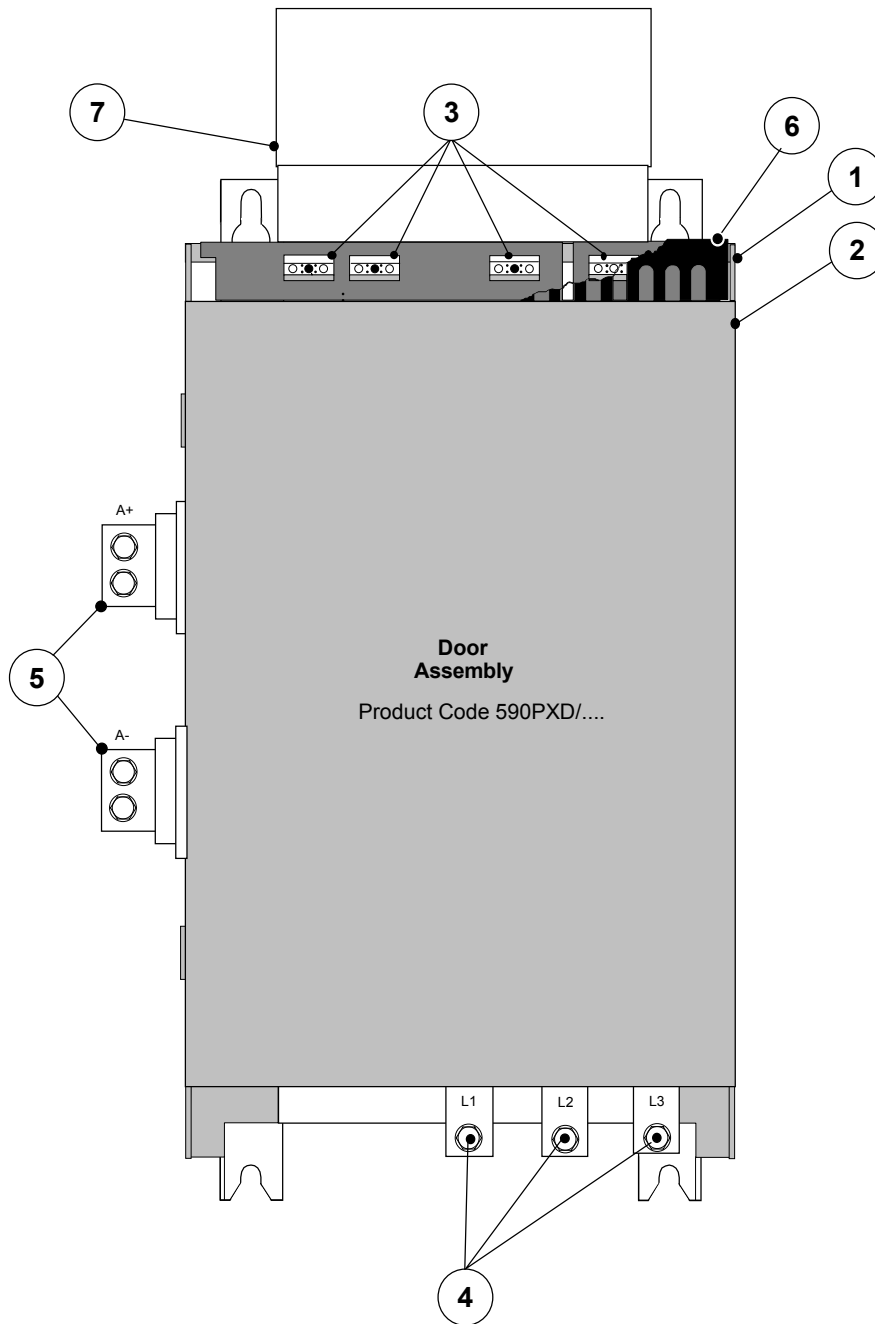

1	Main drive assembly	5	Busbars - main power output
2	Door assembly	6	IP20 Top Cover
3	Field wiring terminals	7	IP20 Fan Housing (where fitted)
4	Busbars - main power input		

2-10 An Overview of the Drive


590+ Drive (Frames 4 & 5)

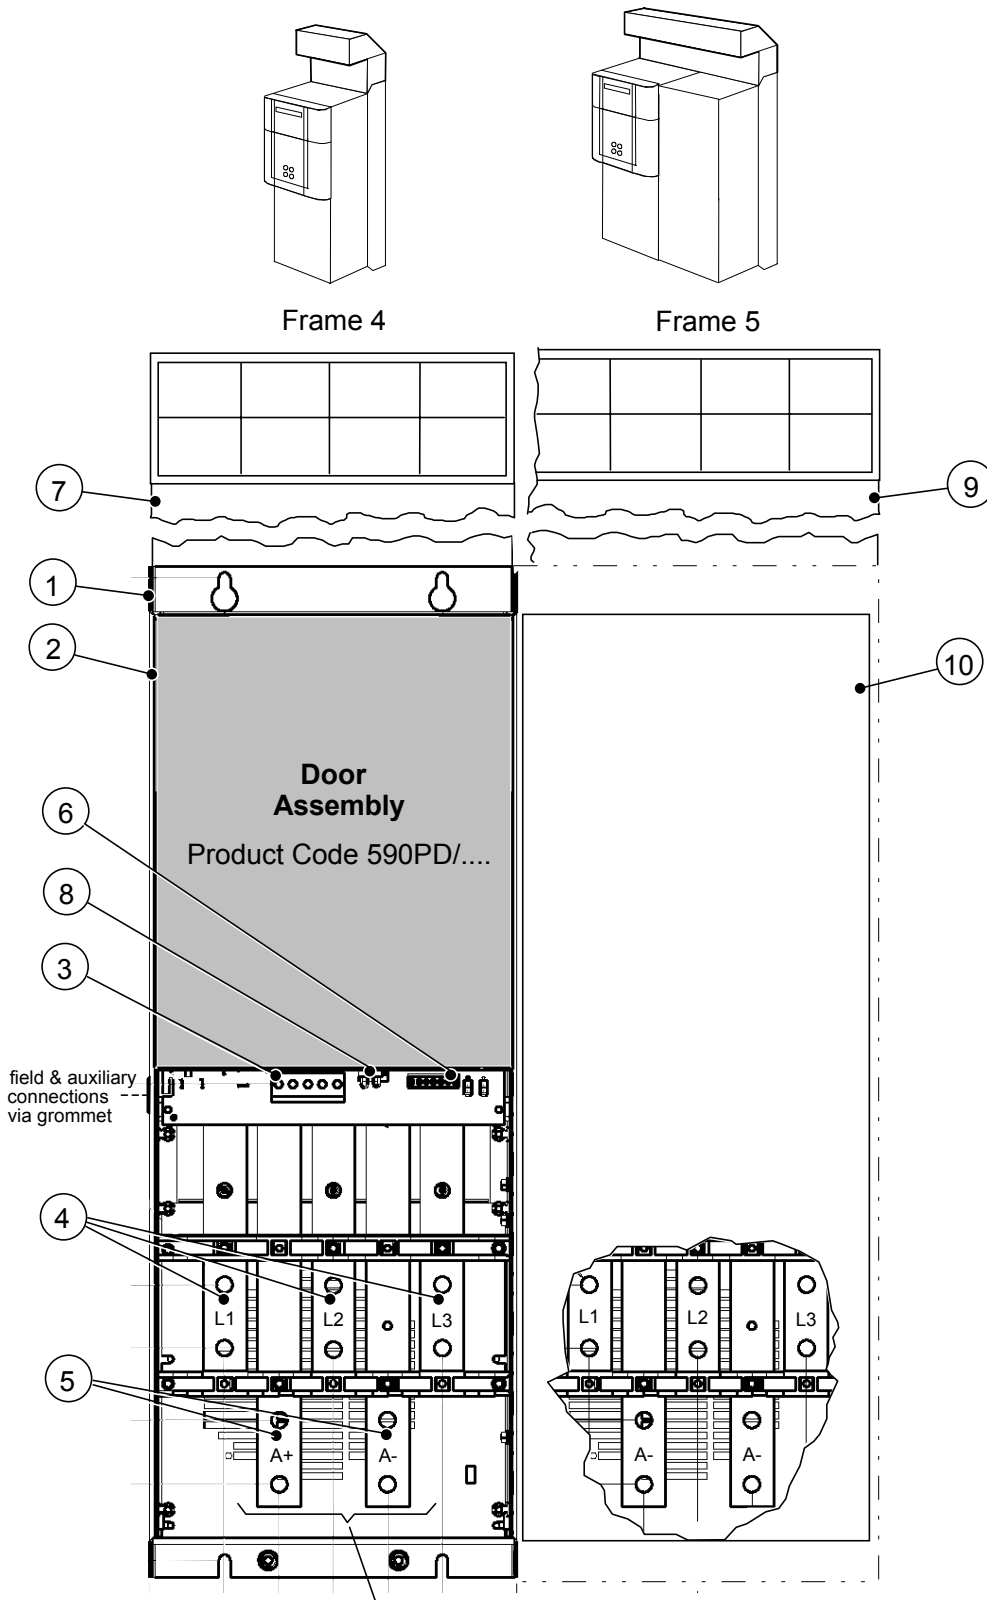

When Frame 5, both terminals are for A+ connections

1	Main drive assembly	6	Auxiliary supply, contactor and motor thermistor terminals
2	Standard door assembly	7	Frame 4 External vent (where fitted)
3	Motor field terminals	8	Contactor Control Select
4	Busbars - main power input	9	Frame 5 External vent (where fitted)
5	Busbars - main power output	10	Terminal Cover (Frame 5)

590+ Product (Frame H)

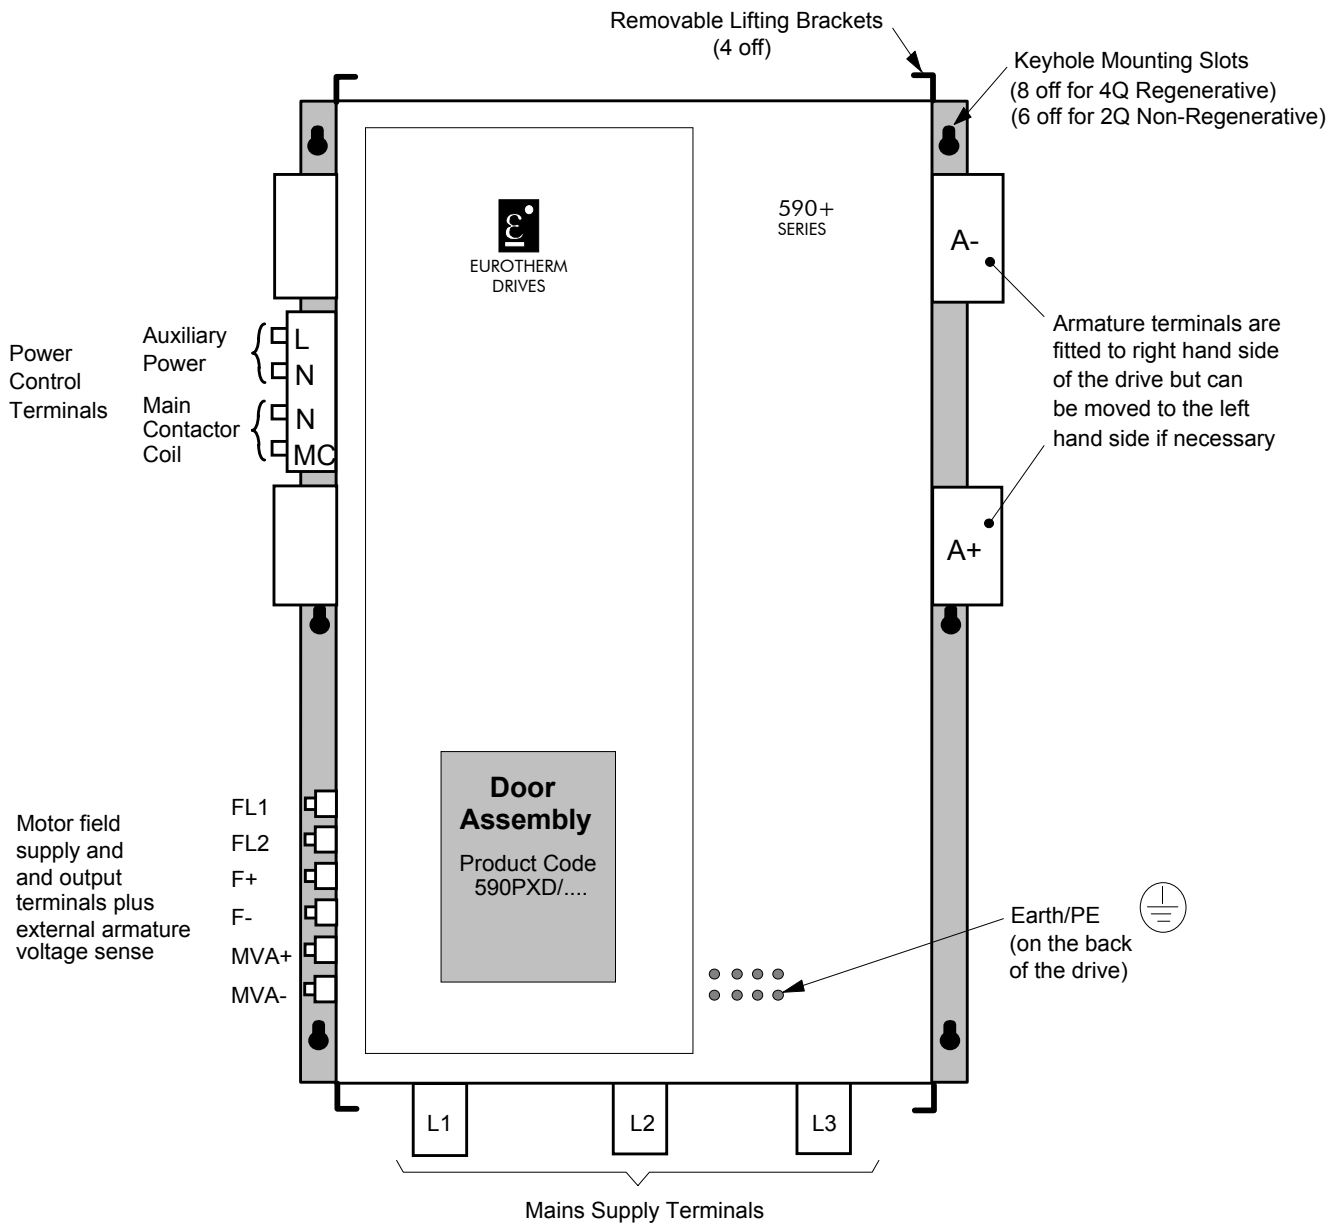

Refer to Chapter 15: "590+ DRV Frame H" for additional information.

2-12 An Overview of the Drive

INSTALLING THE DRIVE

IMPORTANT: Read Chapter 12: “Certification for the Drive” before installing this unit.

Mechanical Installation

Lifting the Drive

Use a safe and suitable lifting procedure when moving the drive. Never lift the drive by its terminal connections. Refer to Chapter 11: Technical Specifications - Mechanical Details for weights.

Prepare a clear, flat surface to receive the drive before attempting to move it. Do not damage any terminal connections when putting the drive down.

Product Dimensions

Refer to “Installation Drawings”, page 3-18 for further information.

Mounting the Drive

General installation details are given below for mounting the drive.

Mount the unit vertically on a solid, flat, vertical surface. It is mounted using bolts or screws into four mounting points (keyhole slots). Holes for the mounting bolts or screws must be placed accurately.

Cover any units already mounted to the panel while drilling mounting holes to protect them from stray metal filings.

Note: To meet EMC requirements, it must be mounted inside a suitable cubicle. To comply with the European safety standards VDE 0160 (1994)/EN50178 (1998), the cubicle must require a tool for opening.

General Mounting Hints

Insert the mounting studs from the rear of the panel. Attach lock washers and nuts part way on to the lower mounting studs; these will help to keep the drive in place when mounting.

Caution

Use proper lifting techniques when lifting and moving.

Lift the drive and engage the bottom slots safely on to the studs between the panel and lock washers/nuts you just fitted. Engage the top slots with the remaining mounting studs and finger-tighten the drive to the panel with lock washers and nuts. Finally, use the socket wrench to tighten all nuts securely.

Check the drive and its housing for packing material, mounting debris, or any other material that could damage and/or restrict the operation of the equipment.

Recommended Tools

Installing a 590+DRV DC Digital Drive requires a few standard hand tools. A socket wrench to fit either ¼-20 or M6 (as applicable) bolts and nuts is needed to mount the drive to the panel. Screwdrivers and a wire-crimping tool are needed to make various electrical connections. For installing DRVs larger than 165A, wrenches are needed to make some of the electrical connections. Below is a list of some of the required tools.

Socket wrench with a 6 inch extension

Deep sockets: M10, M13, M17, 7/16”, 1/2”

Screwdrivers: Phillips #2, flat blade - 0.5 x 3.0mm, 0.6 x 3.5mm, 0.8 x 4.0mm

Small wire cutters

3-2 Installing the Drive

Ventilation and Cooling Requirements

The drive gives off heat in normal operation and must therefore be mounted to allow the free flow of air through the air entries and exits. Maintain the minimum air clearances given on the drawings to ensure that heat generated by other adjacent equipment is not transmitted to the drive, be aware that other equipment may have its own clearance requirements. When mounting two or more 590+ DRVs together, these clearances are cumulative.

Ensure that the mounting surface is normally cool.

The table below gives the heat dissipation in Watts for the 590+ drive.

Motor Rating HP @ 500V	Motor FLC (A)	Total Watts	Motor Rating HP @ 500V	Motor FLC (A)	Total Watts
3	5	68	60	110	316
5	9	76	75	125	458
7.5	15	88	100	165	607
15	27	135	125	206	673
20	34	164	150	246	866
25	43	161	200	330	1130
30	55	195	250	405	1413
40	70	267	300	480	1625
50	90	291	400	648	1722

Line Reactor/Isolation Transformer

If no isolation transformer is used, we recommend that you always use the specified line reactor with the drive to provide a known supply impedance for effective operation of the thyristor transient suppression circuits. At least 2% line impedance should be provided in the supply side of the drive.

Note: On installations requiring compliance with EN61800-3 Table 11, you must fit capacitors between the phase and ground, before the specified Line Reactor. This applies to DRVs with an armature current <100A.

Refer to Chapter 11: "Technical Specifications" - Line Reactor for selection details.

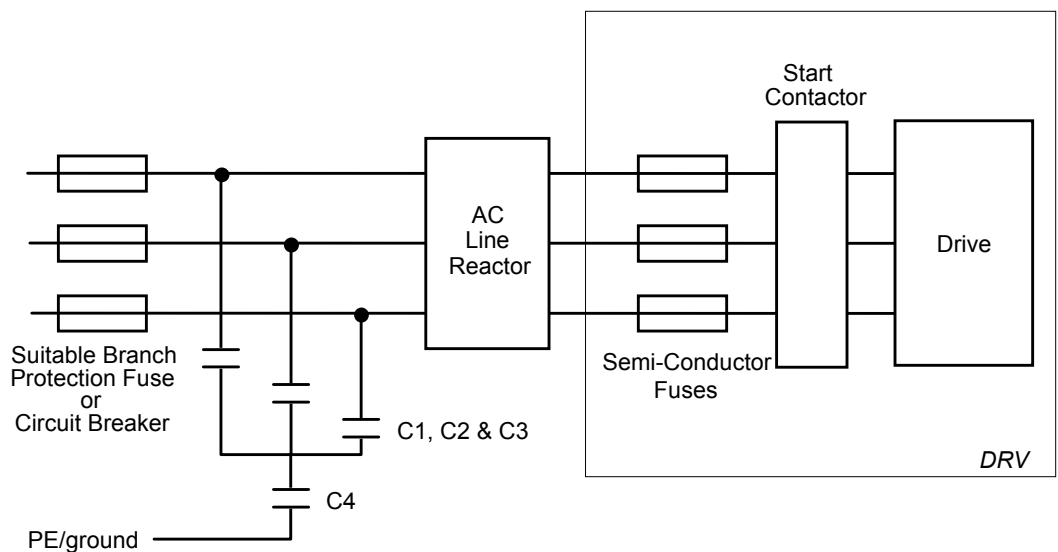


Figure 3-1 AC Line Reactor and Capacitors fitted to Frame 1 (35A) & Frame 2 (40A & 70A) DRV

Capacitor Reference Number	Capacitor Value/Type
C1, C2, C3	3.0 μ F 400V, EMI suppressor type Class X1
C4	1.0 μ F 400V, EMI suppressor type Class X1

Electrical Installation

IMPORTANT: Please read the Safety Information on page Cont. 3 & 4 before proceeding.

WARNING!

Power terminals carry electrical voltage, which can be lethal. Never work on any control equipment or motors without first removing all power supplies from the equipment.

Make sure all wiring connections meet or exceed applicable local and National Electrical Codes.

Be sure to fit branch circuit and motor overload protection.

Caution

To avoid damaging the drive NEVER carry out high voltage resistance or dielectric strength tests without first completely disconnecting the drive from the circuit being tested.

This Chapter deals only with a "general purpose" operation as a basic speed controller, because of the complexity of showing all possible configurations.

Special wiring instructions usually form part of a customer-specific system and connection details will be provided separately.

For information on cabling requirements for EMC refer to page 3-14.

Wiring Instructions - Minimum Connections

Note: Refer to Chapter 11: "Technical Specifications" for Terminal Information, Wires Sizes and Termination Tightening Torques. Refer to EMC Wiring Details, page 3-14.

Power Wiring

Refer to the relevant Connection Diagram, page 3-27.

Power cables must have a minimum rating of 1.1 x full load current, (1.25 x FLC when required to comply with UL requirements).

Protective Earth/Ground (PE)

IMPORTANT: The drive and filter (if fitted) must be **permanently earthed/grounded**. Each conductor used for permanent earthing/grounding must *individually* meet the requirements for a protective earth/ground conductor.

For installations to EN 60204 in Europe:

- For **permanent earthing**, the drive requires either two individual incoming, protective earth conductors (<math><10\text{mm}^2/6\text{AWG}</math> cross-section), or one conductor ($\geq 10\text{mm}^2/6\text{AWG}$ cross-section) connected to an independent earth/ground point near the drive. Refer to Chapter 12: "Certification for the Drive" - Screening & Earthing, and Star Point Earthing



The 590+ DRV DC Digital Drive has ground terminals for each incoming and outgoing supply. A substantial connection must be made to the incoming supply ground terminal near terminals L1, L2, L3. The ground terminals at the bottom of the drive can be used for armature ground and grounding the auxiliary 120 VAC loads.

3-Phase Mains Supply (L1, L2, L3)

Connect the main AC power supply to terminals L1, L2 & L3 through the correctly sized branch circuit protection and an AC line reactor or dedicated drive isolation transformer.

IMPORTANT: You **must** provide branch circuit protection, rated for the supply voltage:
AC Current = 0.83 x DC Armature Current

3-4 Installing the Drive

IMPORTANT: 1-Phase Auxiliary/Control Supply (L, N)

The DRV may be fitted with the Mains Transformer Option (standard on DRVs >165A), refer to "Control Transformer Option (factory -fitted), page 3-16. In this case there is no need for you to make any connections to these terminals.

If you make connection, you should provide 3A fusing for this supply. Connect the auxiliary/control supply to terminals L (Line) and N (Neutral).

Motor Armature (A+, A-)

Note: *If in doubt about connection of the DC motor to the drive, check with Eurotherm Drives.*

Connect the motor armature to terminals A+ and A-. To comply with national and local electrical codes, external DC overload protection must be provided.

Connect an earth from the motor to the DRV grounding point. Run the motor protective earth/ground connection in parallel with the motor supply conductors, ideally in the same conduit/screen/armour.

Make screen connections between the motor casing and the earth connection on the terminal rail. Refer to Chapter 12: "Certification of the Drive" - Minimising Radiated Emissions.

If you are using dynamic braking to stop the motor, connect the negative armature lead through a suitably rated dynamic brake resistor to terminal DB+. Refer to Dynamic Braking Option below.

Dynamic Braking Option (DB+)

This option provides a limited braking ability, primarily for use as an emergency stop, by using the external contactor to switch a resistor across the motor armature.

Note: *The enable input C5 must be True (24V) for the drive to run. If using the Dynamic Braking Option, remove the jumper across control terminals C5, C9 on the drive.*

The braking current rating of the contactor is 150% of armature current. Contact Eurotherm Drives for a range of resistors meeting NEMA ICS 3-302.62.

If in doubt about the connection of the DC motor to the drive check with Eurotherm Drives.

Motor Field (F+, F-)

WARNING!

The field bridge is supplied from the input side of the main contactor and is live whenever power is applied to the drive. Remove power completely to isolate the field.

Connect the motor field (-) to terminal F- and field (+) to F+ if you are supplying the drive field regulator internally or from the mains supply. However, if the drive's field regulator requires an external field supply, see External Field Supply below for connection details.

For EMC, make screen connections, as shown in the power wiring diagram, between the motor casing and a ground connection on the DRV. Refer to Chapter 12: "Certification of the Drive" - Minimising Radiated Emissions.

Make no connections to these terminals: if the motor has no field connections, if it is a permanent magnet motor, if the field is derived externally.

In these cases, you will be asked to set the FIELD ENABLE parameter to Disable during the set-up procedure in Chapter 4.

External Field Supply (FL1, FL2)

Note: *This connection is not available on Frame 1 DRVs.*


Occasionally, motors require field voltages greater or smaller than can be supplied by the main L1, L2 and L3 supply. An option exists on Frame 2, 3, 4 & 5 DRVs to convert to using an external ac field. If this option is not required, do not connect to these terminals.

Frame H DRVs always require an external field supply.

Change the drive from an internal to an external field type - refer to Motor Field Connections, page 3-10. Connect the external field supply to FL1 and FL2. It is important that connection of the drive and the external field supply is consistent when using an externally supplied field regulator. Connect L1 to FL1, and L2 to FL2. **Always** derive the supply from L1 (Red) and L2 (Yellow) phases directly, or indirectly through a single-phase transformer as shown by the Power Wiring Diagram. The required field voltage determines the size of the external field supply. The

supply must be protected externally with suitable branch circuit protection fuses. The fuses should be no larger than 10A for Frame 2, 20A for Frame 3, 30A for Frames 4 & 5, and 60A for Frame H.

Control Wiring

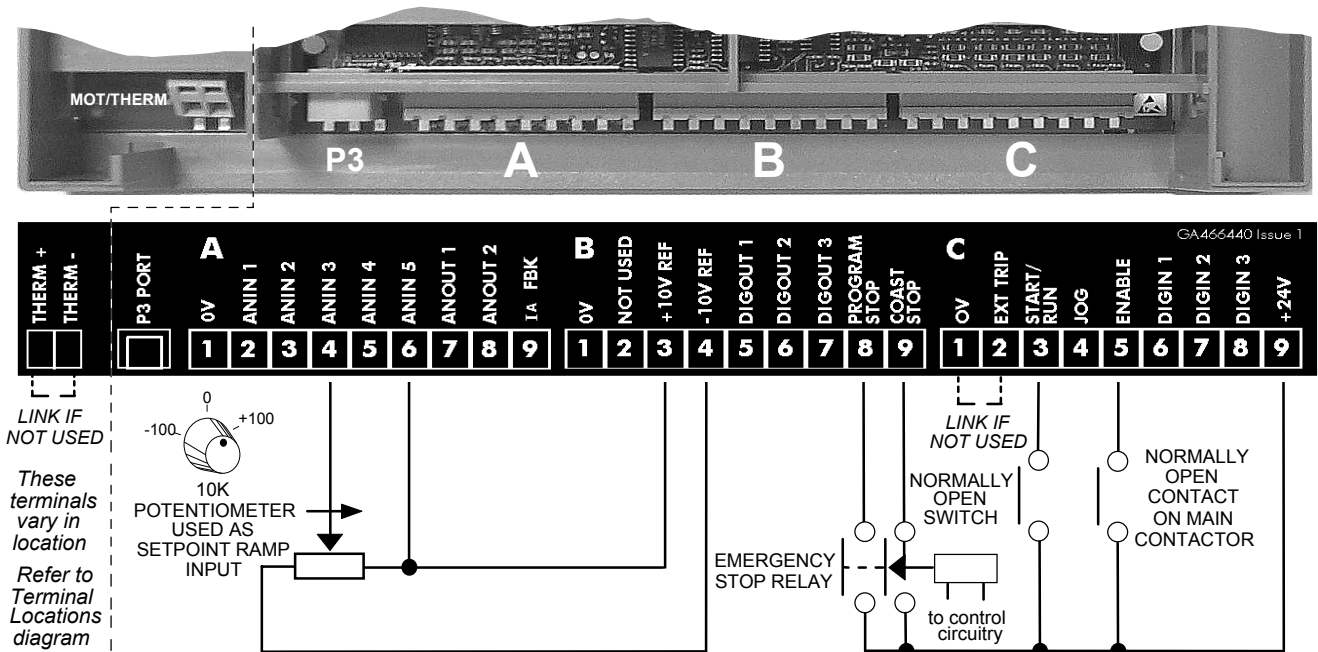

All connections made to terminal blocks A, B and C must be isolated signal voltages. To comply with EMC requirements, use screened control cables with a minimum cross-section area of 0.75mm² (18AWG).

Control wiring should be bundled and routed to the left side of the drive so the control door on Frames 3, 4, 5 & H is free to open.

ENABLE

Enable (C5)

Terminal C5 is connected to C9 (+24V) through a normally open contact on the main contactor on Frames 3, 4, 5 & H. The drive will remain disabled until the main contactor is closed. On Frames 1 and 2, the AC contactor is connected internally in series with terminal C5. Connect terminal C5 to C9 directly for basic operation.

THERM

Thermistor (TH1,TH2)

Connect the motor thermistor to terminals TH1 and TH2.

Note: Terminals TH1 and TH2 must be connected together if the sensors are not fitted. This will prevent the drive from tripping the motor temperature alarm (THERMISTOR). The alarm cannot be inhibited in software.

EXT TRIP

External Trip (C2)

This input terminal provides an external trip facility to any normally closed trip switch, e.g. for vent fan overload protection. For example, if the motor has an external blower motor, wire an auxiliary contact from the blower starter's overload trip circuitry between terminals C1 and C2.

PROGRAM STOP

Program and Coast Stop (B8, B9)

For a regenerative emergency stop (regenerative units only) connect terminal B8 (PROGRAM STOP) to terminal C9 (+24VDC) through a normally open contact of an emergency stop relay. Also connect terminal B9 (COAST STOP) to terminal C9 through a time-delayed off, normally open contact on the same emergency stop relay. Activating the E-Stop circuit removes 24 VDC from B8 and regenerates the motor power back into the main supply. The delayed-off contact on B9 (COAST STOP) acts as a fail safe, allowing the drive to coast to stop after the time delay.

COAST STOP

For non-regenerative drives or for coast stopping with regenerative models, permanently connect together terminal B8 to B9 and connect terminal B9 to +24 VDC (terminal C9) through a non-delayed, normally-open contact of the emergency stop relay. Upon activating an emergency stop condition, the drive will coast stop immediately.

3-6 Installing the Drive

Dynamic Braking

The drive will dynamic brake if wired for coast stopping and a properly sized resistor is connected. In DRV Frames 3 and 4 through to 250Hp, the contactor includes a normally closed, dynamic braking DC contactor pole rated to carry full load armature current upon closing. The start-stop circuitry should be designed to prevent the motor from restarting and the pole from opening until *after* the motor reaches zero speed.

Note: The dynamic brake contactor pole is rated to make, but not interrupt DC motor current. To avoid damaging the contact, interlock the drive's ZERO SPEED output signal to the DRIVE START logic to prevent the drive from restarting until the motor has reached standstill.

For regenerative or non-regenerative drives, dynamic braking may be used as an alternative, emergency stopping method. Refer to the relevant Connection Diagram, page 3-27.

ANIN 5

Current Limit (A6)

For most applications, connect terminal A6 (ANIN 5) to terminal B3 (+10VDC REF). This sets the drive's positive and negative current limit to +100% and -100% respectively for forward and reverse motor operation. This allows the main current limit to be controlled internally, via the Keypad, using the MAIN CURRENT LIMIT parameter.

To control the main current limit externally, connect a 10k Ω potentiometer between terminals B3 (+10VDC REF) and B1 (0VDC). Connect the wiper to terminal A6 instead of the connection above. The potentiometer will now control the current limit from 0 to 200% if the MAIN CURRENT LIMIT parameter is set at 200.00%.

ANIN 3

+10V REF

-10V REF



0V

Speed Demand (A4, B3, B4/B1)

For normal operation, connect the speed demand signal to terminal A4 (RAMP SETPOINT). This input is scaled so that +10VDC input equals the maximum forward speed demand (+100%), and -10VDC input equals the maximum reverse speed demand (-100%).

Connect the ends of an external potentiometer to terminals B3 (+10VDC REF) and B4 (-10VDC REF) and the wiper to terminal A4.

For non-reversing applications and 2 quadrant drive, the speed demand only needs to operate between 0V and +10VDC, therefore connect the high, or clockwise end of the potentiometer to terminal B3 and the low or counterclockwise end to B1 (0V).

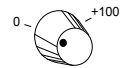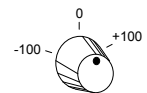

Note: If more than one speed setpoint is used, they are additive. For alternative speed setpoints refer to page 3-9.

START/
RUN

Start/Stop Input (C3)

Connect terminal C3 (RUN) to C9 (+24V) through a normally open contact. This provides normal start/stop control. When it is closed, the drive will start; when the contact is open, the drive will attempt to perform a controlled stop.

The DRV is now wired for "general purpose" operation as a basic speed controller. Now select your Speed Feedback Option, page 3-7.

Speed Feedback Options

Refer to Chapter 13: “Standard and Optional Equipment” - Optional Equipment for further information.

Several options are available for speed feedback:

Armature Voltage Option (default)

This is the default feedback signal. It requires no external connections.

This effectively provides an open-loop system. It equates the speed of the motor to voltage, but without compensating for the motor resistance within the system. Applying the parameter IR COMPENSATION can improve this. However, although the performance is adequate for some applications, another form of speed feedback should be used where accurate speed control is required.

Note: The speed loop is set-up for armature voltage by the SPEED FBK SELECT parameter in the SPEED LOOP function block. Select ARM VOLTS FBK for this parameter.

Analog Tachometer Option (G1, G2, G3, G4)

An Analog Tachometer can be connected to the drive via the Tacho Calibration Option Board. This board provides terminals G1 to G4. Use a screened twisted pair cable throughout its entire length to provide speed feedback.

An AC or DC tachometer can be connected. The screen is grounded/earthed only at the drive end. Any other grounding arrangement may cause problems.

Terminals G1 & G2 are for AC tacho connections.

Terminals G3 & G4 are for DC tacho connections.

Note: The speed loop is set-up for an analog tacho by the SPEED FBK SELECT parameter in the SPEED LOOP function block. Select ANALOG TACH for this parameter.

Note: If an AC tachogenerator is used, the output is rectified to produce the dc feedback to the speed loop. Consequently, the drive can only be used with a positive setpoint.

Microtach Option (F1, C1, C9)

The Eurotherm Drives Microtach is available in two versions:

- 5701 Plastic Fibre Microtach
- 5901 Glass Fibre Microtach

A Microtach can be connected to provide speed feedback via the Microtach Option Board using the international standard “ST” fibre optic system. This board provides terminal F1. F1 is the fibre optic receiver input socket. Terminals C9 (+24V dc) and C1 (0V) are used to provide the supply and return respectively.

Note: The speed loop is set-up for the Microtach by the SPEED FBK SELECT parameter in the SPEED LOOP function block. Select ENCODER for this parameter.

The maximum Microtach frequency is 50kHz, thus with a standard 1000 lines per revolution Microtach the motor speed cannot exceed 3000 rpm.

Wire-Ended Encoder Option (E1, E2, E3, E4, E5, E6)

The wire-ended encoder can be connected to the drive via the Wire-Ended Encoder Option Board. This board provides terminals E1 to E6. Use a screened cable throughout its entire length to provide speed feedback.

Terminals E1 (0V) and E2 (+24V dc) are the return and supply respectively.

Note: The speed loop is set-up for the Encoder by the SPEED FBK SELECT parameter in the SPEED LOOP function block. Select ENCODER for this parameter.

The maximum allowable encoder frequency is 100kHz, thus with a standard 1000 lines per revolution encoder the motor speed cannot exceed 6000 rpm.

For specification and connection information refer to Eurotherm Drives or the Technical Manual supplied with the Encoder.

3-8 Installing the Drive

Hardware Requirements

AC Line Reactors

Eurotherm Drives provide suitable AC Line Reactors for this duty, mechanically designed to connect directly to the drive ac supply terminals. Refer to Chapter 11: AC Line Reactor

Filters

Eurotherm Drives provide suitable filters for this duty. The filter must only be fitted on the mains side of the contactor.

Branch Circuit Protection

You **must** provide branch circuit protection to protect the 3-phase supply cabling. AC current for the drive = $0.83 \times \text{DC Armature Current}$.

Thermistors

We recommend that you use temperature sensitive resistors or switches in the field and interpole windings of the machine to protect the dc motor against overtemperature. When the motor is fitted with over-temperature sensing devices, such as thermostats or thermistors, connect them in series between terminals TH1 and TH2.

- Thermistors must have a combined working resistance of 750Ω or less, rising to $4k\Omega$ at over-temperature. These thermistors are classified by IEC34-II as Mark A.
- Temperature switches must be normally closed and open at their rated temperature.

The drive's thermistor alarm will activate at $3k\Omega$.

Blower Motor (Option)

The Blower Motor option includes a circuit breaker and auxiliary contact.

An auxiliary contact on the blower motor starter is connected internally in series with the motor thermistor to indicate motor overtemperature.

Additional Control Connections

Note: Chapter 11: "Technical Specifications", Terminal Information - Control Board lists details for all control terminals.

The remaining control connections are discussed below:

ANIN 1

Speed Setpoint No. 1 (A2)

This is another choice of input for the speed setpoint. It bypasses the "Setpoint Ramp Generator" used by terminal A4 (ANIN3), and should be used if direct control is required. There may be some latency in the signal because of the processing possibilities.

Note: If more than one speed setpoint is used, they are additive.

ANIN 2

Speed Setpoint No. 2/Current Demand (A3) and Current Demand Isolate (C8)

Terminal A3 (Analog Input 2) is a dual function terminal, either as "Speed Setpoint No. 2" (this is a direct signal with minimum processing) or "Current Demand". This function is selected by mode switch control terminal C8, "Current Demand Isolate". Refer to Chapter 11: "Technical Specifications" - Terminal Information-Control Board for more information.

DIGIN 3

Note: If more than one speed setpoint is used, they are additive.

ANIN 4

Auxiliary Current Clamp -ve (A5) and Current Clamp Select (C6)

Current Clamp (C6) configures Auxiliary Current Clamp -ve. If terminal C6 = 0V, then the drive operates with a unipolar current limit provided at terminal A6, Main Current Clamp +ve. However, if terminal C6 = 24V, then the drive operates with a bipolar current limit; a positive current clamp is provided at terminal A6, Main Current Clamp +ve, a negative current clamp is provided at terminal A5, Auxiliary Current Clamp -ve.

DIGIN 1

ANOUT 1

Speed Feedback (A7)

This is an instrument output to indicate the speed of the motor.

ANOUT 2

Total Speed Setpoint (A8)

This is an instrument output to indicate the total speed setpoint, i.e. the sum of all setpoints.

IA FBK

Current Meter Output (A9)

This is an instrument output to indicate the drive current.

DIGOUT 1

Zero Speed, Drive Healthy, Drive Ready (B5, B6, B7)

These digital output terminals provide a +24V dc output signal under certain conditions. This allows for the connection of relays which, in conjunction with the Enable, Start/Run and Emergency Stop relay, can be used to enhance the safe starting and stopping of the drive.

DIGOUT 2

DIGOUT 3

These are configurable outputs and can be used as required in the control system design, i.e. cubicle door lamps, connection to a suitable PLC.

JOG

Jog (C4)

This is a one-button function for positioning the motor at a pre-determined speed.

DIGIN 2

Ramp Hold (C7)

This will hold the ramp speed setpoint at its last value.

Technology Box Option (H1 - H6)

When the option is fitted to the drive, it provides terminal block H which allows drives to be connected together to form a network.

Refer to the appropriate Technical Manual supplied with the Technology Box.

3-10 Installing the Drive

Motor Field Connections

WARNING!
Isolate the drive before converting to internal/external supply.

The FIELD CONTROL function block controls the motor field. The FLD CTRL MODE parameter allows you to select either Voltage or Current Control mode.

- In Voltage Control mode, the FLD.VOLTS RATIO parameter is used to scale the motor field output voltage as a percentage of the input supply voltage.
- In Current Control mode, the SETPOINT parameter is used to set an absolute motor field output current, expressed as a percentage of the calibrated field current (IF CAL).




Internal/External Supply (Frames 2, 3, 4 & 5)

Note: The Frame 1 unit uses only an internal motor field supply. The Frame H unit uses only an external motor field supply. For information about the following terminal/power boards refer to Chapter 11: "Technical Specifications" - Power Board Types, and Terminal Information (Power Board).

The internal motor field is more widely used, however, there is provision on the unit for an external motor field supply to be connected (perhaps for where the field voltage is greater than the input voltage and therefore not attainable, or where the motor field is switched separately for convenience).

Terminal Board - PCB Reference AH470330 (Frame 2)

The position of the jumper selects the board to use either an internal or external motor field.

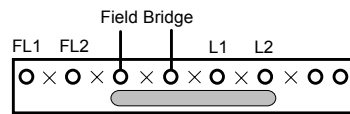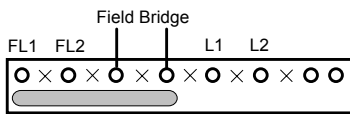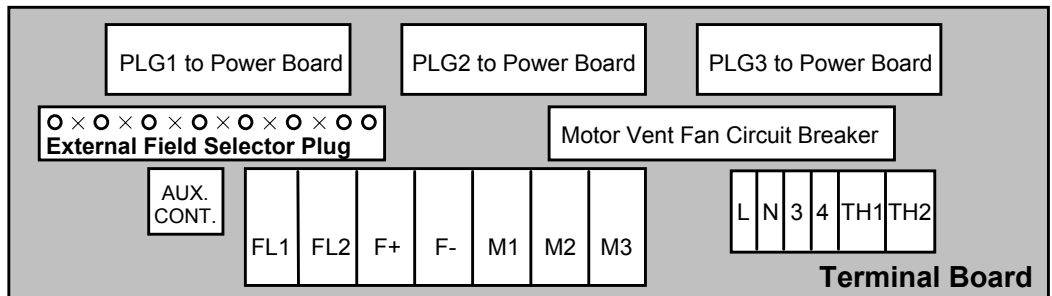

Internal Motor Field (default for this board)

Terminals F+ and F-, the motor field outputs, are energised when the 3-phase supply is connected to L1/L2/L3. Terminals FL1 and FL2 are not required. The internal motor field supply is fused by 10A fuses, FS5 & FS6.

External Motor Field

Terminals FL1 and FL2 can be used for external ac supply connection for the Motor Field Supply. You should provide suitably rated external, fast-acting semi-conductor fusing, to a maximum of 10A.

Caution

When using an external ac input it is important to have the correct phase relationship on the terminals. The supply must be derived from L1 (Red) and L2 (Yellow) phases directly or indirectly through a single-phase transformer.
L1 must be connected to FL1, and L2 connected to FL2.

The external field supply can now be connected and power restored to the drive.

Power Board - PCB Reference AH385851 (Frame 3)

This power board can be altered for use with either an internal or external motor field supply:

Internal Motor Field (default for this board)


Terminals D3 and D4, the motor field outputs, are energised when the 3-phase supply to L1/L2/L3 is energised and the internal motor field is used. Terminals D1 and D2 are not energised. The internal motor field supply is fused by the 10A fuses, FS2 & FS3.

External Motor Field Connections

Terminals D1 and D2 on the Power Board can be used for an external ac supply connection for the Motor Field Supply.

A simple re-wiring procedure disconnects the internal motor field supply and prepares terminals D1 and D2 for the external ac supply connection.

You should provide suitably rated external, fast-acting semi-conductor fusing, to a maximum of 10A.

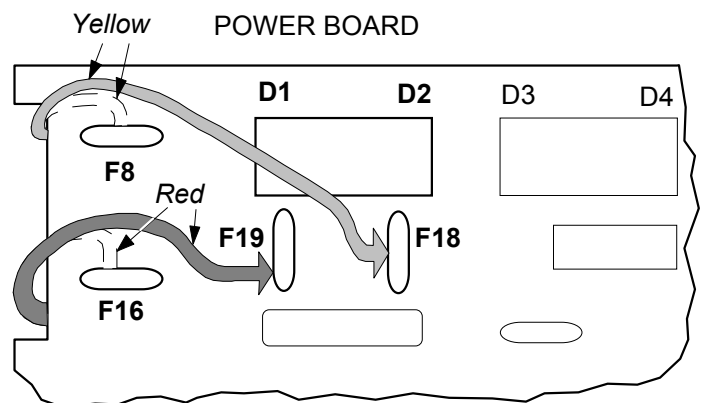

Re-Wiring Procedure

WARNING!

Isolate all power to the drive.

1. Loosen the control board fixing screws (2 off) and position the control board to allow access to the power board.
2. Remove the **red** link/jumper from the Faston connector "F16" on the left-hand side of the board and connect it to staging post "F19", located below terminal D1.
3. Remove the **yellow** link/jumper wire from the Faston connector "F8" on the left-hand side of the board and connect it to staging post "F18", located below terminal D2.

3-12 Installing the Drive

Caution

When using an external ac input it is important to have the correct phase relationship on the terminals. The supply must be derived from L1 (Red) and L2 (Yellow) phases directly or indirectly through a single phase transformer.
L1 must be connected to D1, and L2 connected to D2.

The external field supply can now be connected and power restored to the drive.

Power Board – PCB Reference AH 466701 (Frames 4 & 5)

This power board can be altered for use with either an internal or external motor field supply:

Internal Motor Field (default for this board)


Terminals F+ and F-, the motor field outputs, are energised when the 3-phase supply to L1/L2/L3 is energised and the internal motor field is used. Terminals FL1 and FL2 are not energised. The internal motor field supply is fused by the 30A fuses FS1 and FS2.

External Motor Field Connections

Terminals FL1 and FL2 on the Power Board can be used for an external ac supply connection for the Motor Field Supply.

A simple re-wiring procedure disconnects the internal field supply and prepares terminals FL1 and FL2 for the external ac supply connection.

You should provide suitably rated external, fast-acting semi-conductor fusing, to a maximum of 30A.

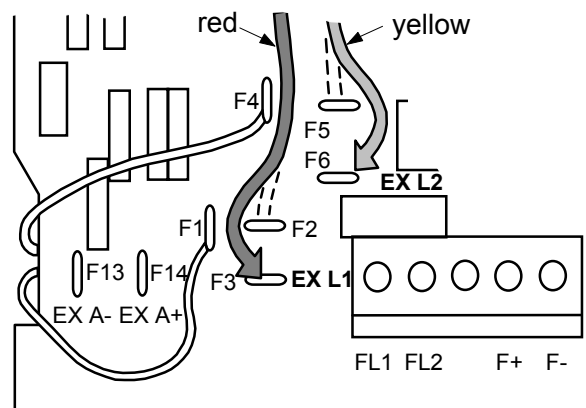

Re-Wiring Procedure

WARNING!

Isolate all power to the drive.


1. Loosen the control board fixing screws (2 off) and position the control board to allow access to the power board.
2. Remove the **red** link/jumper from the Faston connector “F2” and connect it to the staging post “F3” nearby (EX L1).
3. Remove the **yellow** link/jumper wire from the Faston connector “F5” and connect it to the staging post “F6” nearby (EX L2).

Caution


When using an external ac input it is important to have the correct phase relationship on the terminals. The supply must be derived from L1 (Red) and L2 (Yellow) phases directly or indirectly through a single phase transformer.
L1 must be in phase with FL1, and L2 must be in phase with FL2.

The external field supply can now be connected and power restored to the drive.

Terminal Locations

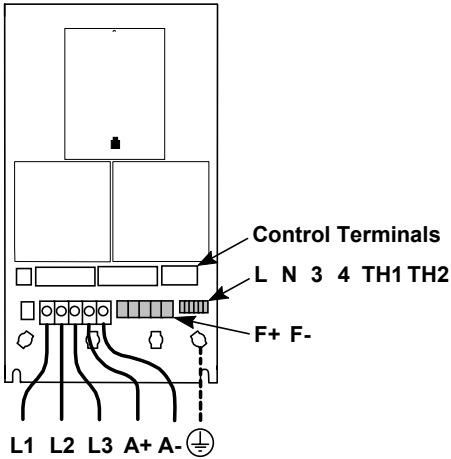

Frame 1

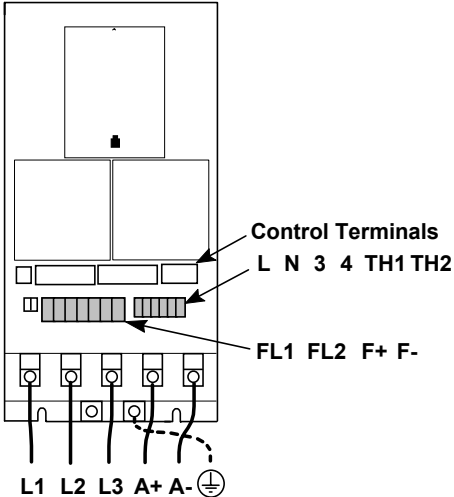

Frame 2

For larger frame sizes, refer to the Installation Drawings, page 3-18.

3-14 Installing the Drive

EMC Wiring Details

Cabling Requirements

Cables are considered to be electrically *sensitive*, *clean* or *noisy*. You should already have planned your cable routes with respect to segregating these cables for EMC compliance. If not, refer to Chapter 12: “Certification for the Drive”.

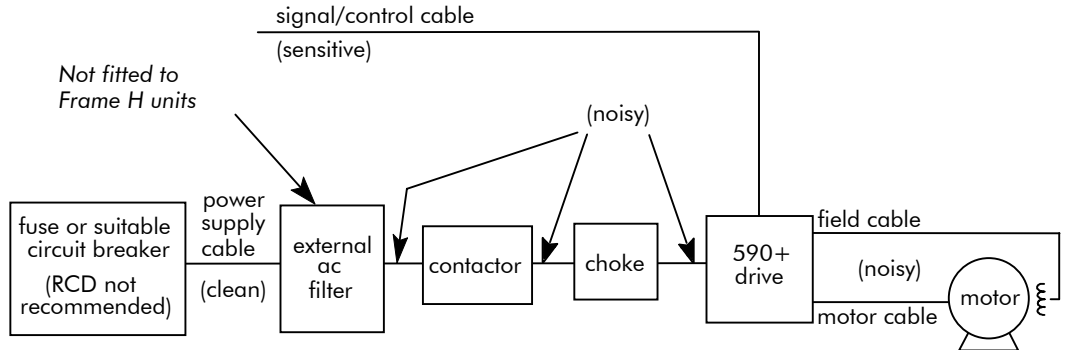


Figure 3-3 Cabling Requirements

If the drive is to be operating in a regenerating mode for extended periods acting as a load generator for another machine, it is advisable to fit additional protection in the armature circuit. A dc fuse or high speed circuit breaker will provide this protection. If in doubt, contact Eurotherm Drives.

Cable Gland Requirements (Frame 1)

Use a metal gland to connect to the cubicle backplate, near the VSD (variable speed drive). It must be capable of securing a 360 degree screened connection to give EMC compliance. A 360 degree screened connection can be achieved as shown.

We suggest a rubber grommet should be fitted on holes where a cable gland is not used.

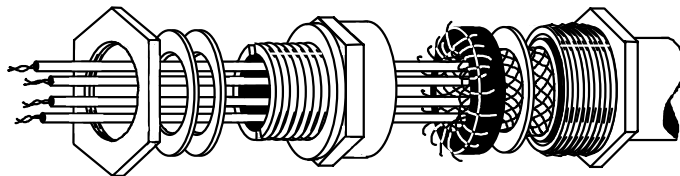


Figure 3-4 360 Degree Screened Connection

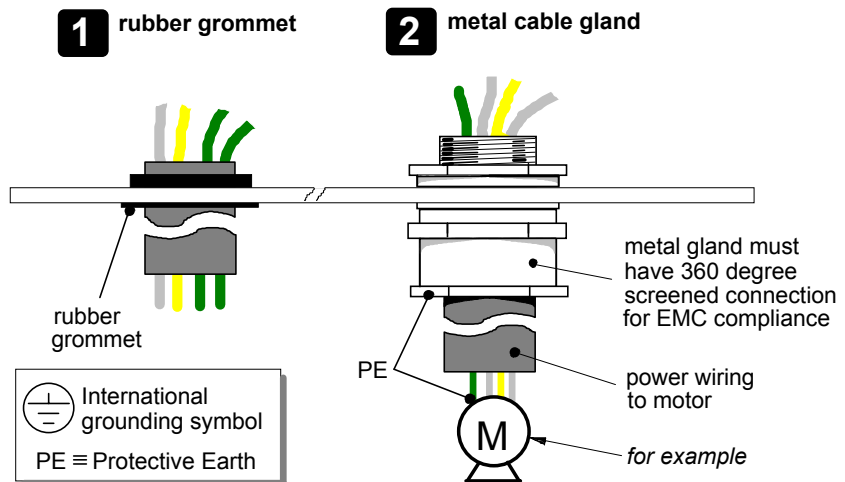


Figure 3-5 Cable and Screen Fixings

Optional Equipment

Fitting the Remote 6901 Keypad




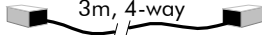
The 6052 Mounting Kit is required to remote-mount a 6901 Keypad. It is possible to remote-mount the drive-mounted Keypad using the port illustrated

You can also replace a Keypad for a PC running ConfigEd Lite (or other suitable PC programming tool) in all of the options above. Refer to the Software Product Manual: "Serial Communications".


6052 Mounting Kit Parts for the Remote Keypad

Tools Required

No. 2 Posidrive screwdriver.

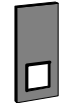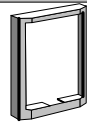6052 Mounting Kit			
1		1	
4	 No. 6 x 12mm	1	 3m, 4-way

Assembly Procedure

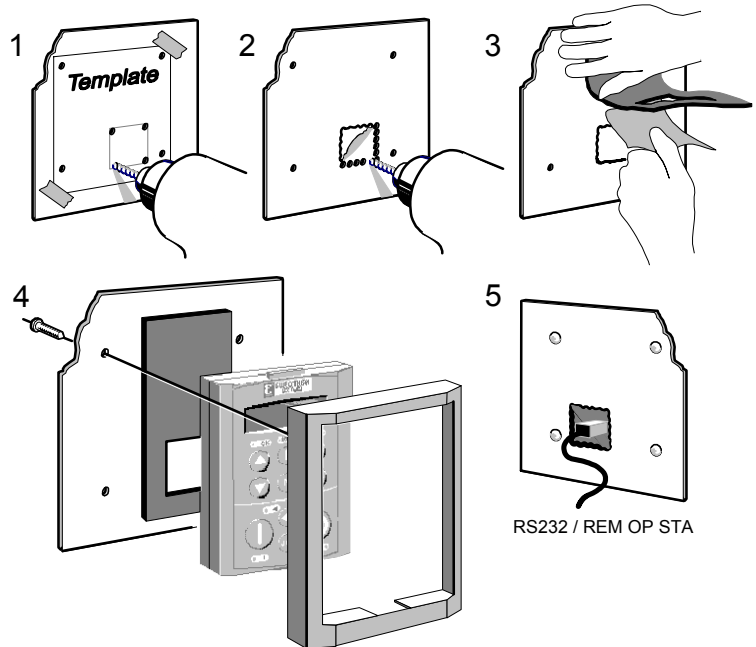


Cutout Dimensions

An actual size template is provided with Keypad/6052 Mounting Kit.

Figure 3-7 Mounting Dimensions for the Remote-Mounted Keypad 6901

Note: Insert the Blank Cover (part number LA389836U001). It replaces the Keypad on the front of the drive, and provides "Health" and "Run" indications.

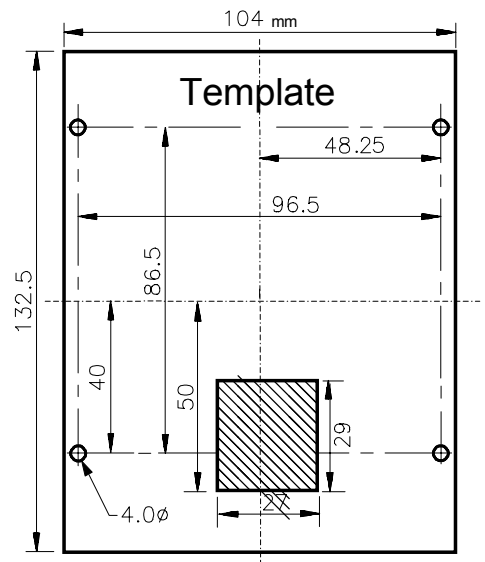

3-16 Installing the Drive

Dynamic Braking Option

The 590+ DRV Frames 1 and 2 are equipped with an AC (line-side) contactor. For dynamic braking applications, you will need a braking resistor and this kit to connect the resistor across the motor terminals. This combination, in accordance with NEMA ICS 3-302.62, will provide 150% instantaneous braking torque from base speed for each power range, with 2 times motor inertia and 3 stops per hour.

Please contact Eurotherm Drives for more information.

Blower Motor Protector Option

This option uses a manual motor circuit controller to provide motor overload and branch circuit protection for a single or three phase AC blower motor. The starter assembly is fully wired and ready for site installation. This option offers:

- Branch circuit protection
- Instantaneous magnetic short circuit protection
- Thermal overload protection, Class 10, with adjustable trip current settings
- Start/Stop/Reset switching with “tripped” pushbutton indication
- Normally open auxiliary contact wired into the drive logic to indicate “Motor Overtemperature” trip

Please contact Eurotherm Drives for more information.

Control Transformer Option (factory-fitted)

The three taps on the primary are selectable to set the correct input voltage of either 220V, 400V or 460V. The transformer has a single fuse in the secondary.


Please contact Eurotherm Drives for more information.

Technology Box Options

The Technology Box Options are:

1. Speed Feedback (Analog Tachometer Calibration Option Card or Microtach/Encoder Feedback Option Card)
2. Communications Technology Box (6055 - LINK II, Profibus, DeviceNet) which allows drives to be connected together to form a network.

They are plugged into the two positions, as illustrated.

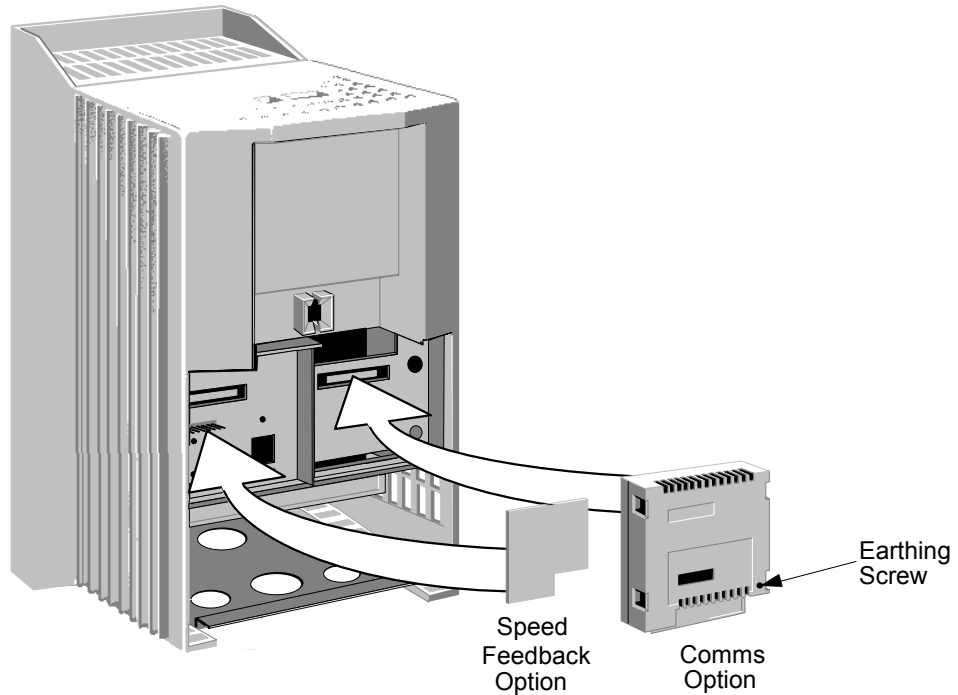


You can operate the drive with the Speed Feedback and/or Communications Technology Options.

Refer to the appropriate Technology Option Technical Manual for further information.

Removal

After removing the earth screw, remove the COMMS option by carefully pushing a long screwdriver (for instance) under the option and gently levering it out. The option moulding protects the pins.

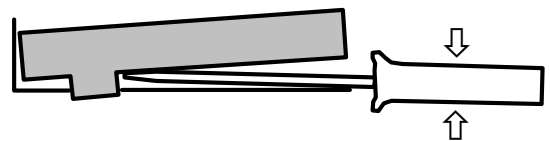

WARNING!

Isolate the drive before fitting or removing the option.

3-18 Installing the Drive

Installation Drawings

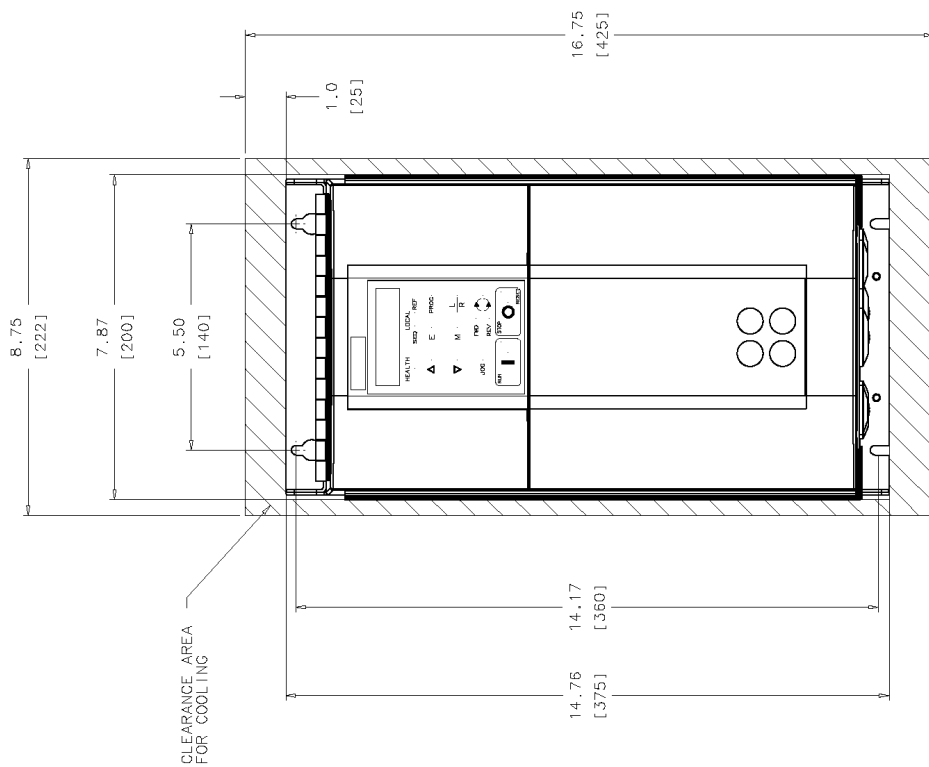
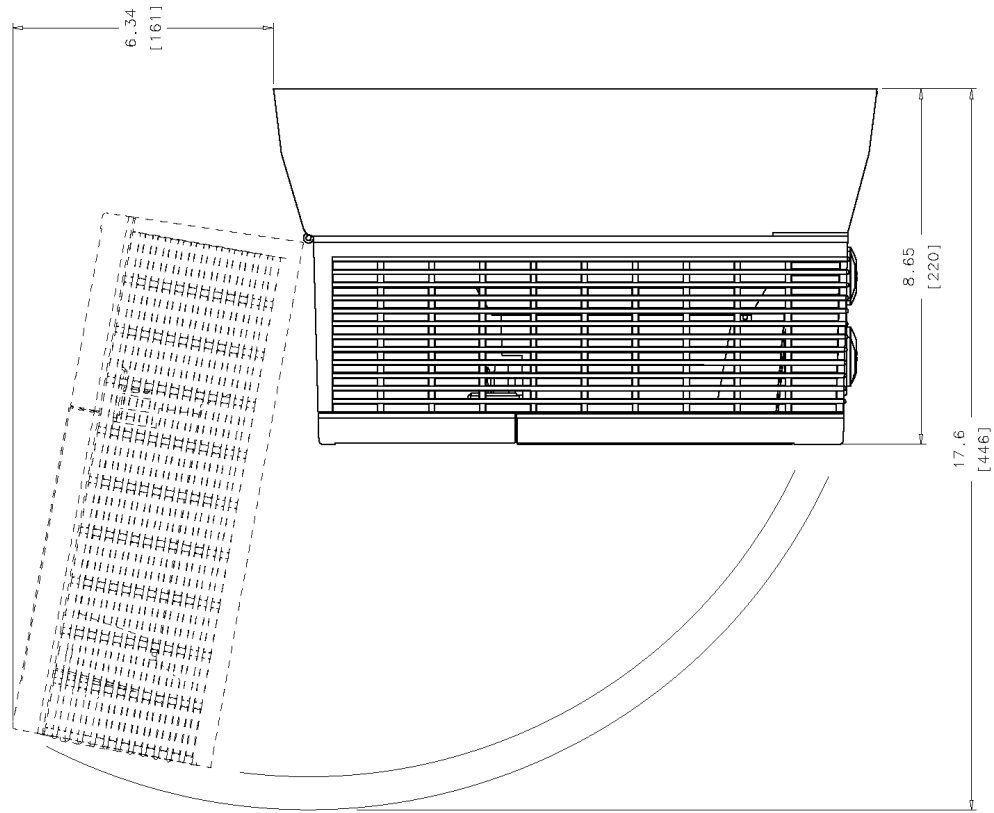


Figure 3-8 Frame 1 : 7.5Hp, 20Hp (15A, 35A) Stack Assembly

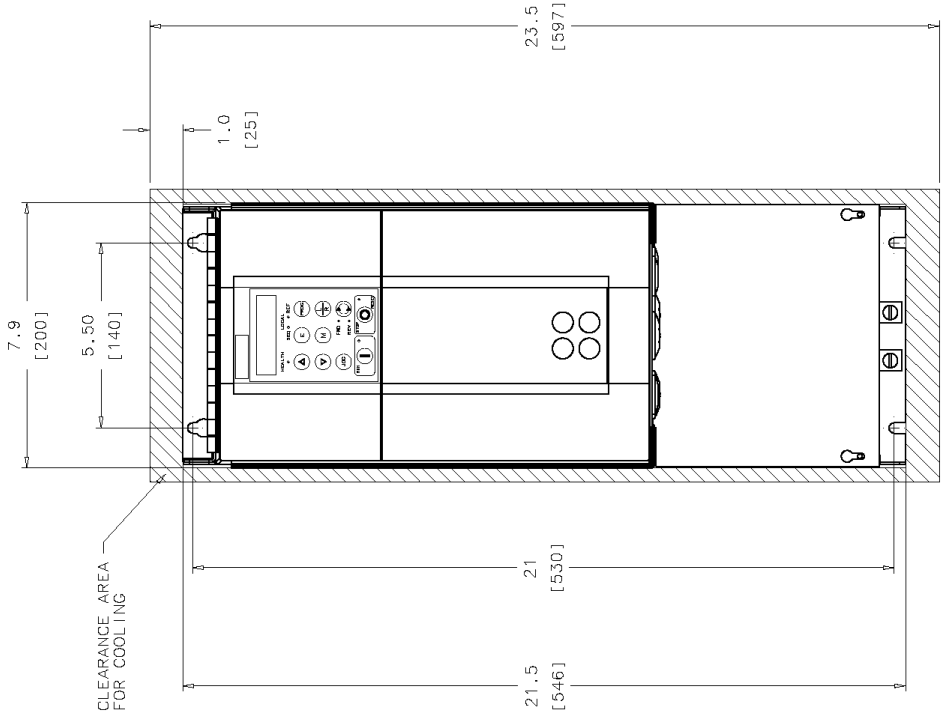
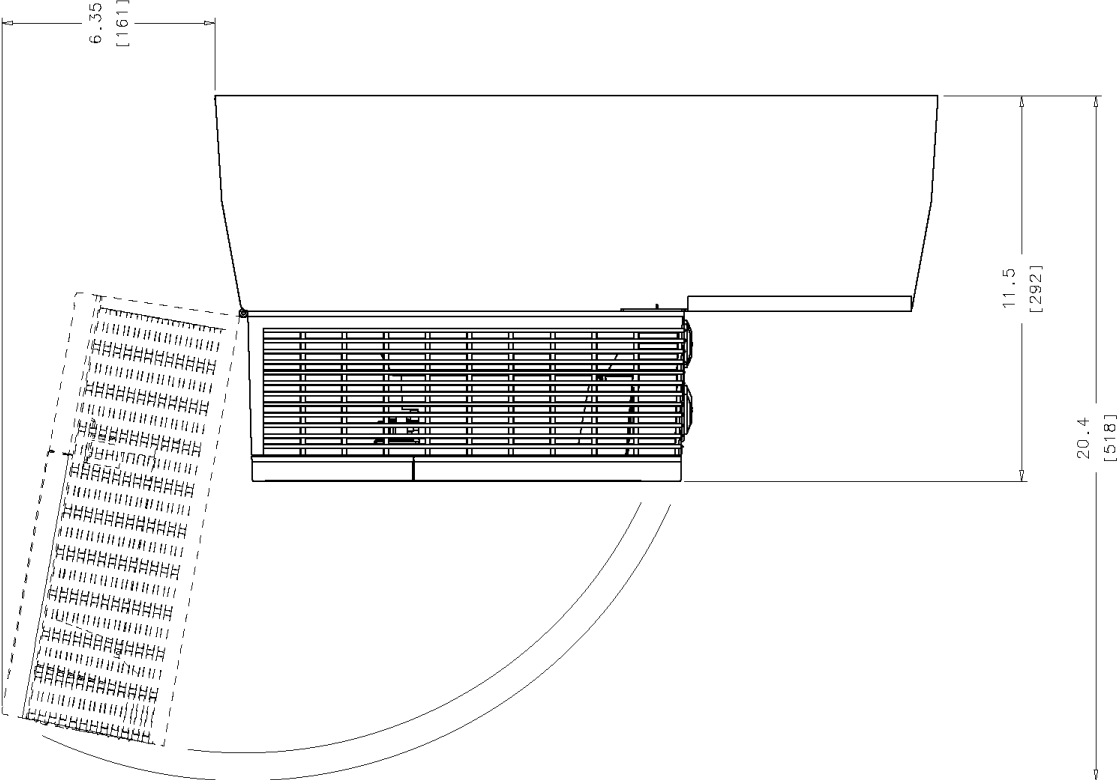


Figure 3-9 Frame 2 : 30-100Hp (40A-165A) Stack Assembly

3-20 Installing the Drive

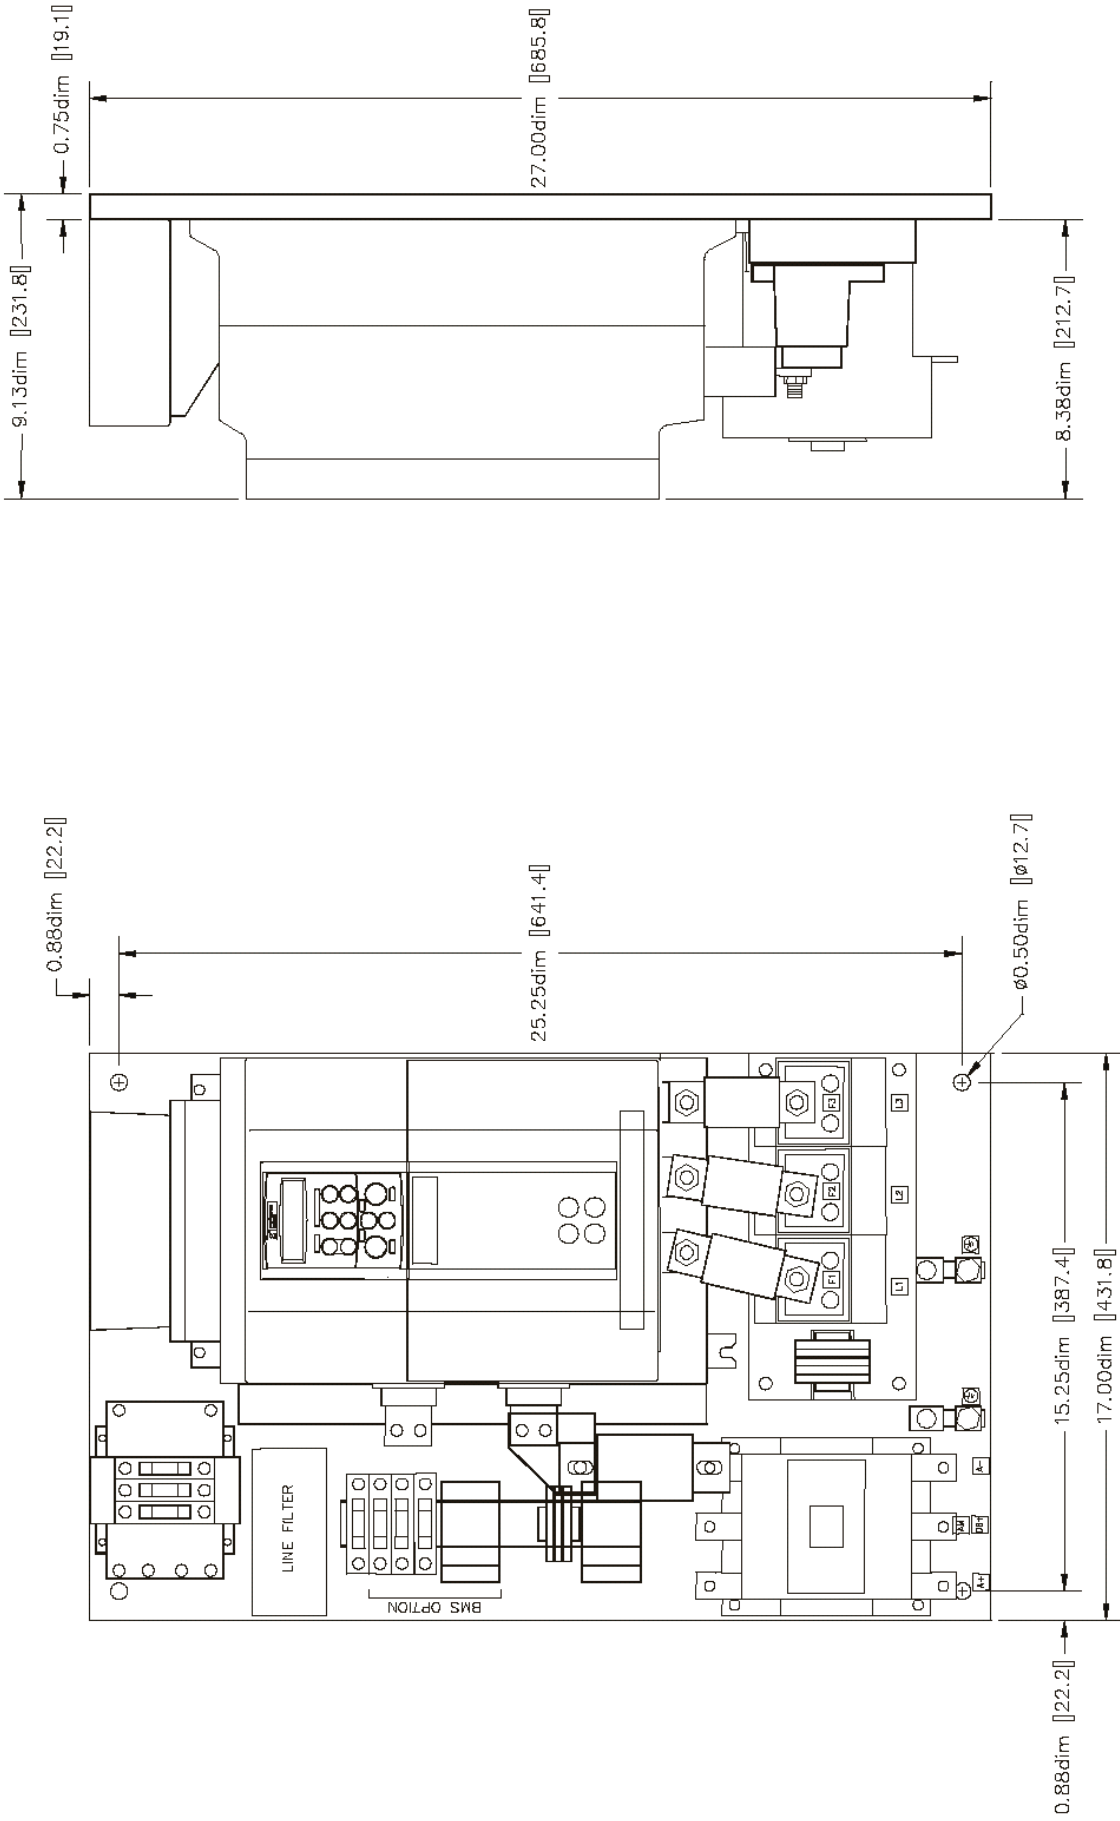


Figure 3-10 Frame 3 DRV : 125 & 150 Hp (246A)

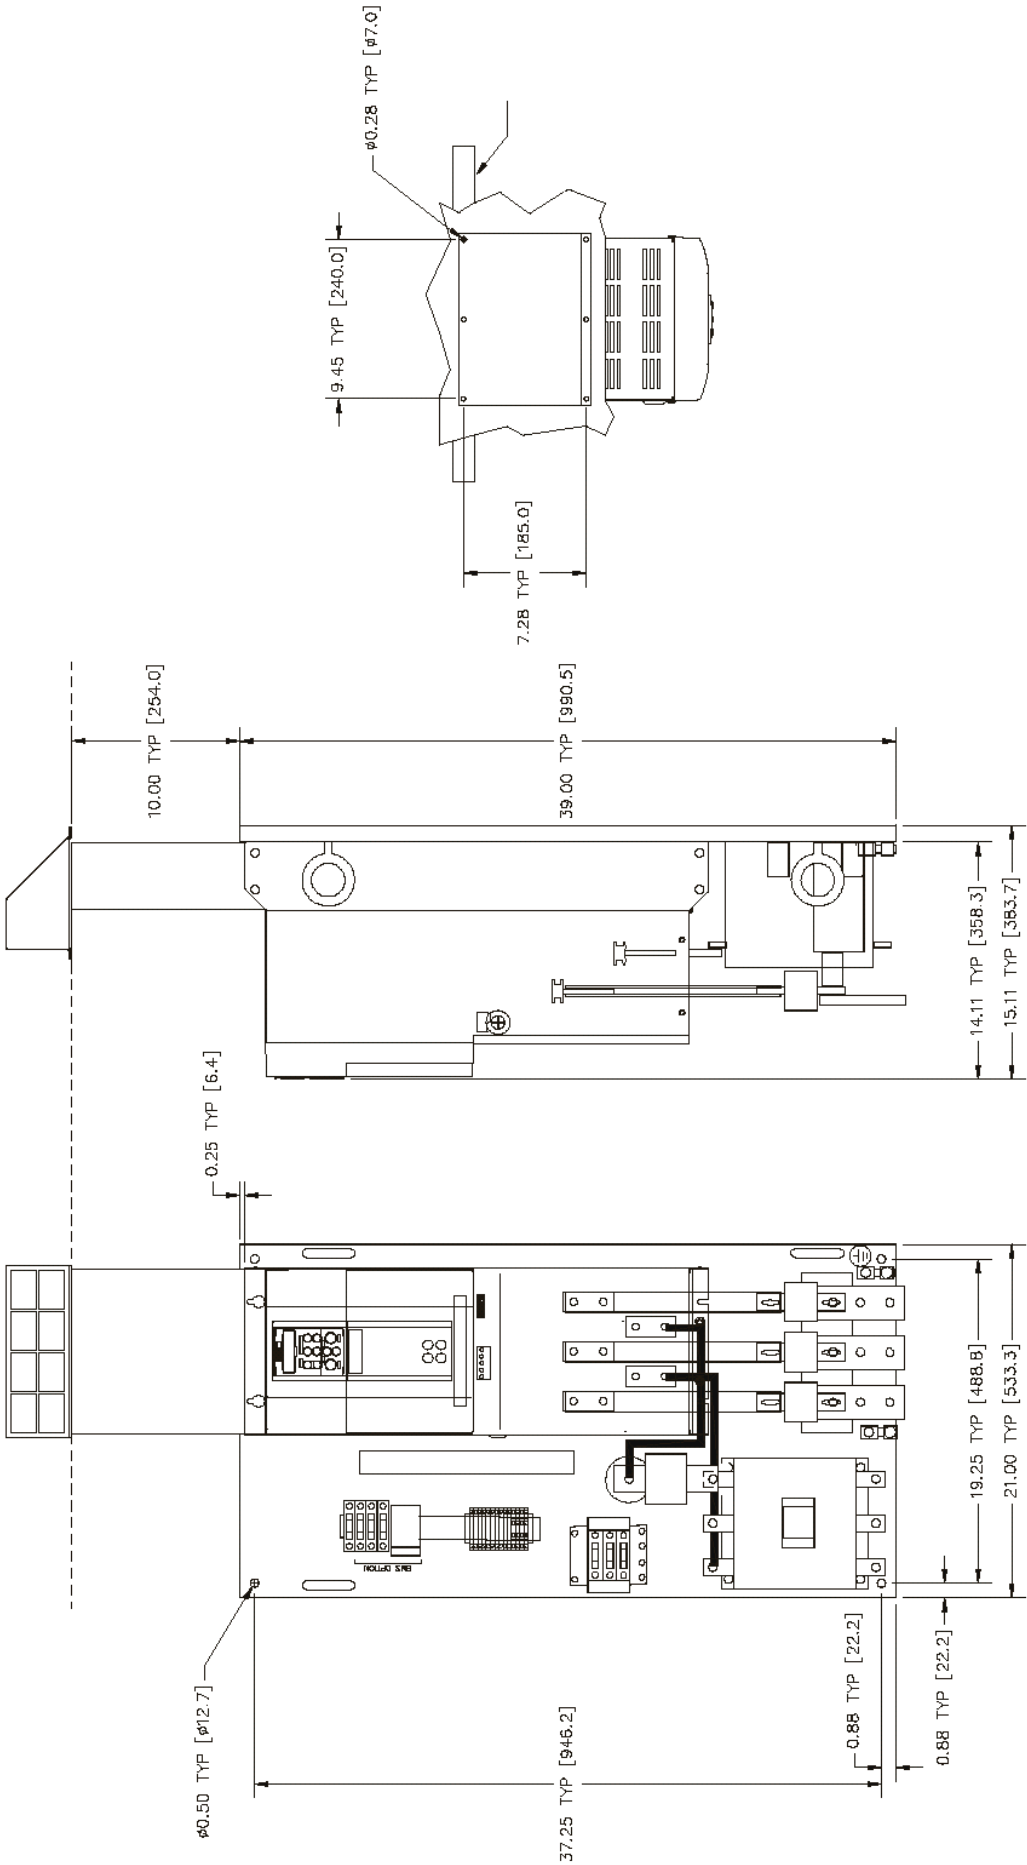


Figure 3-11 Frame 4 DRV with 3 Pole DC Contactor : 200-250Hp (380A)

3-22 Installing the Drive


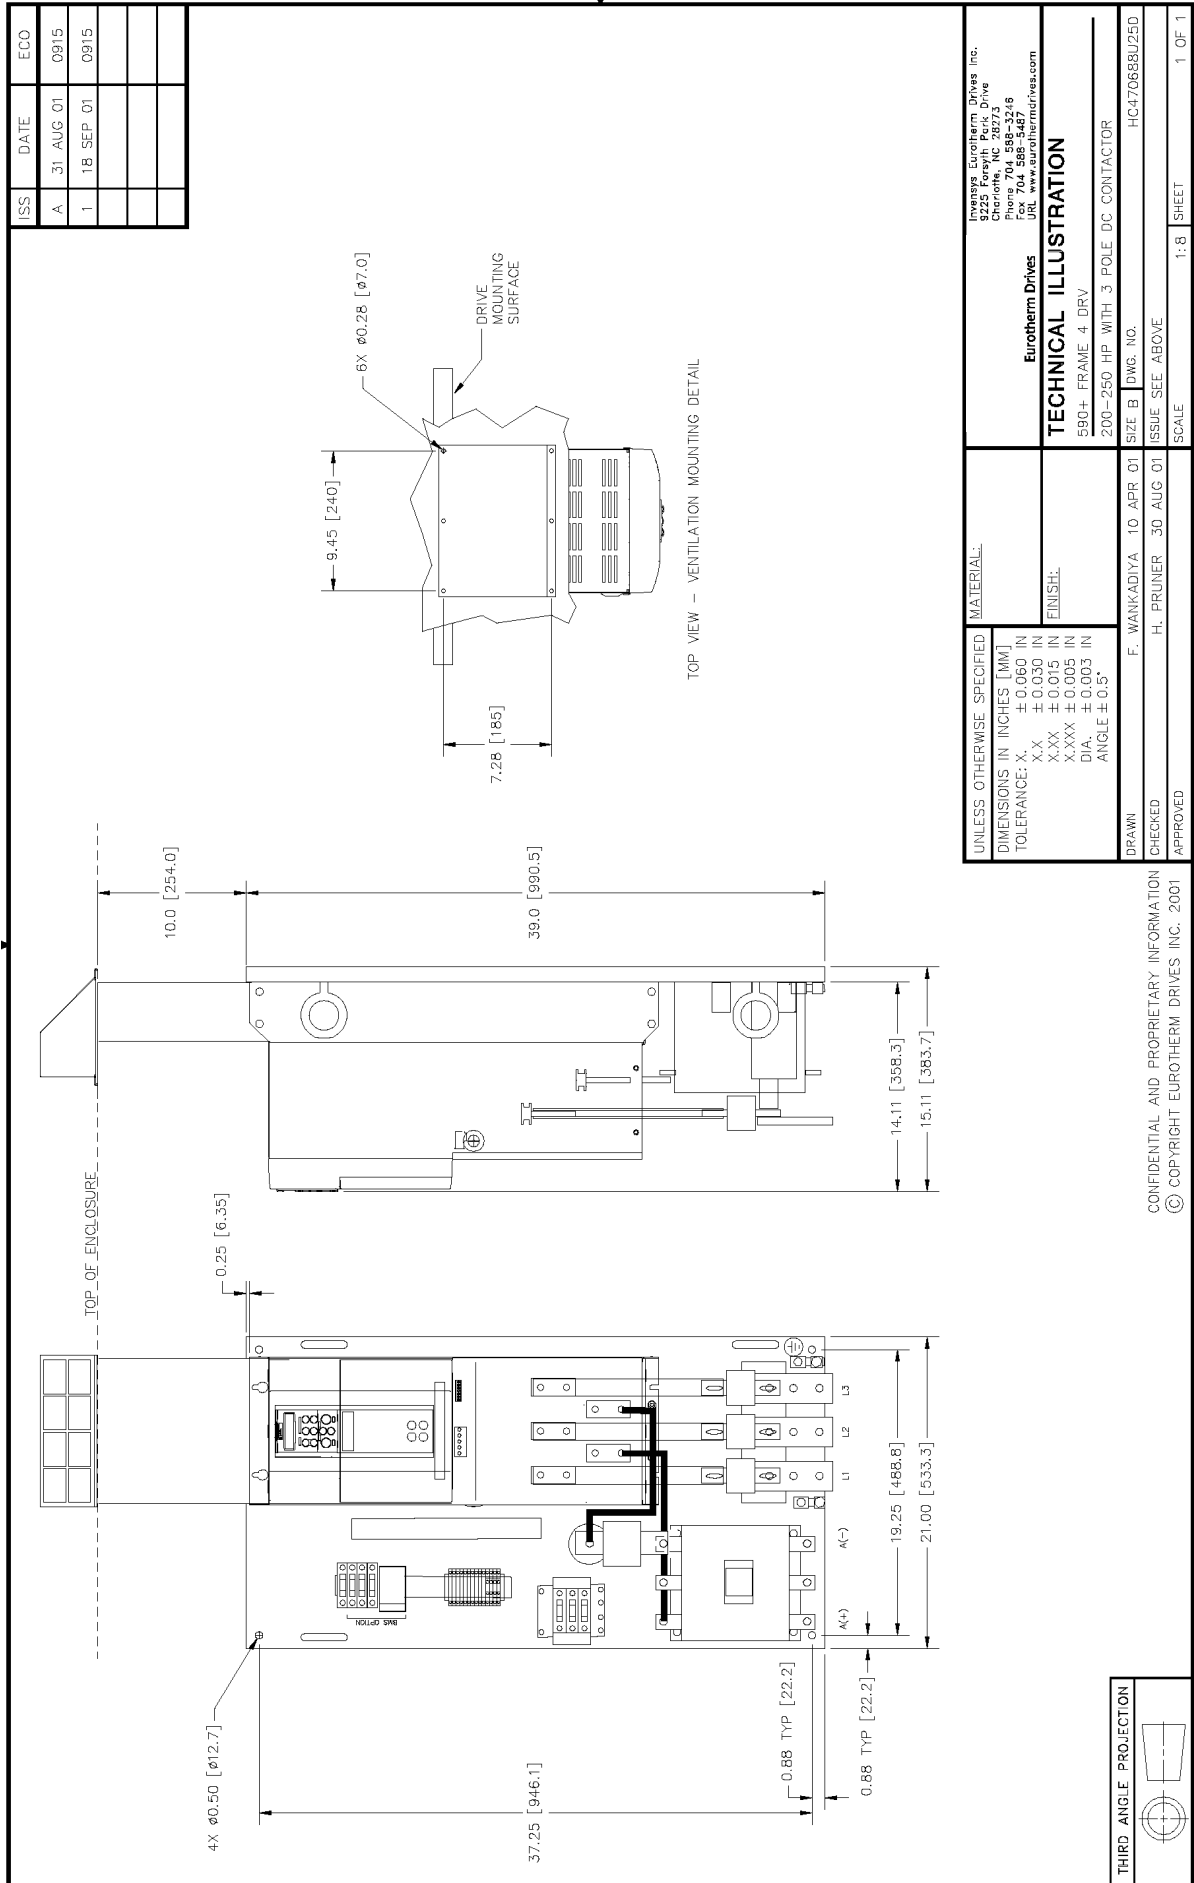


Figure 3-12 Frame 4 DRV with AC Contactor : 200-400Hp (380-725A)

3-24 Installing the Drive

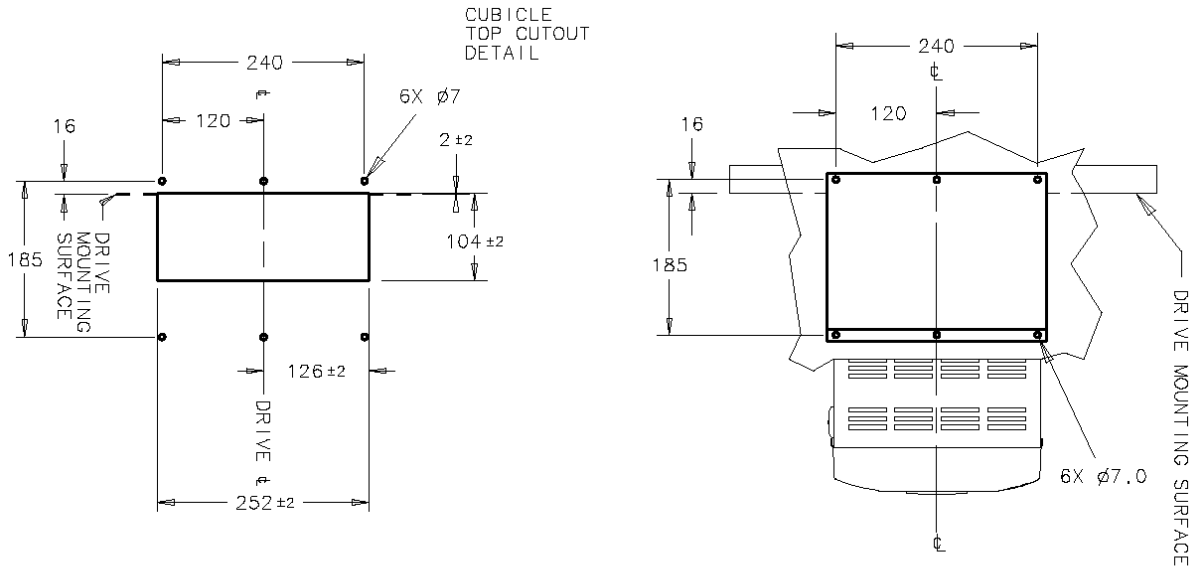

- NOTES
1. SEE HG466700U001 FOR DRIVE DETAIL DIMENSIONS
 2. KIT PROVIDES IP20 PROTECTION, BUT GASKET WILL PREVENT DRIPPING AND STANDING LIQUIDS FROM ENTERING CUBICLE.

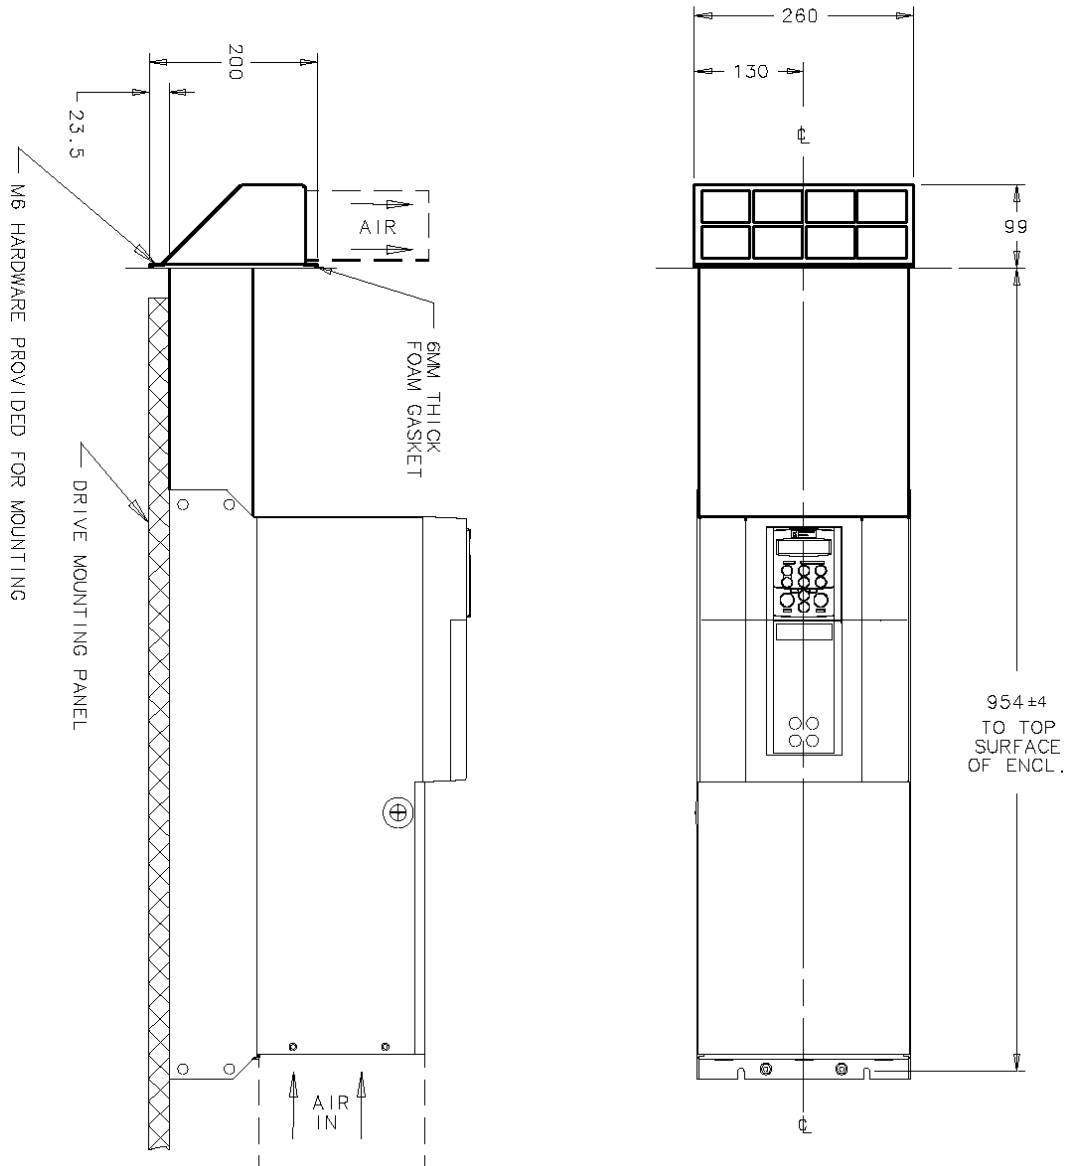


Figure 3-14 Frame 4 Drive : 200-500Hp (380-830A) External Vent Kit Installation – Drawing No. HG466700U002


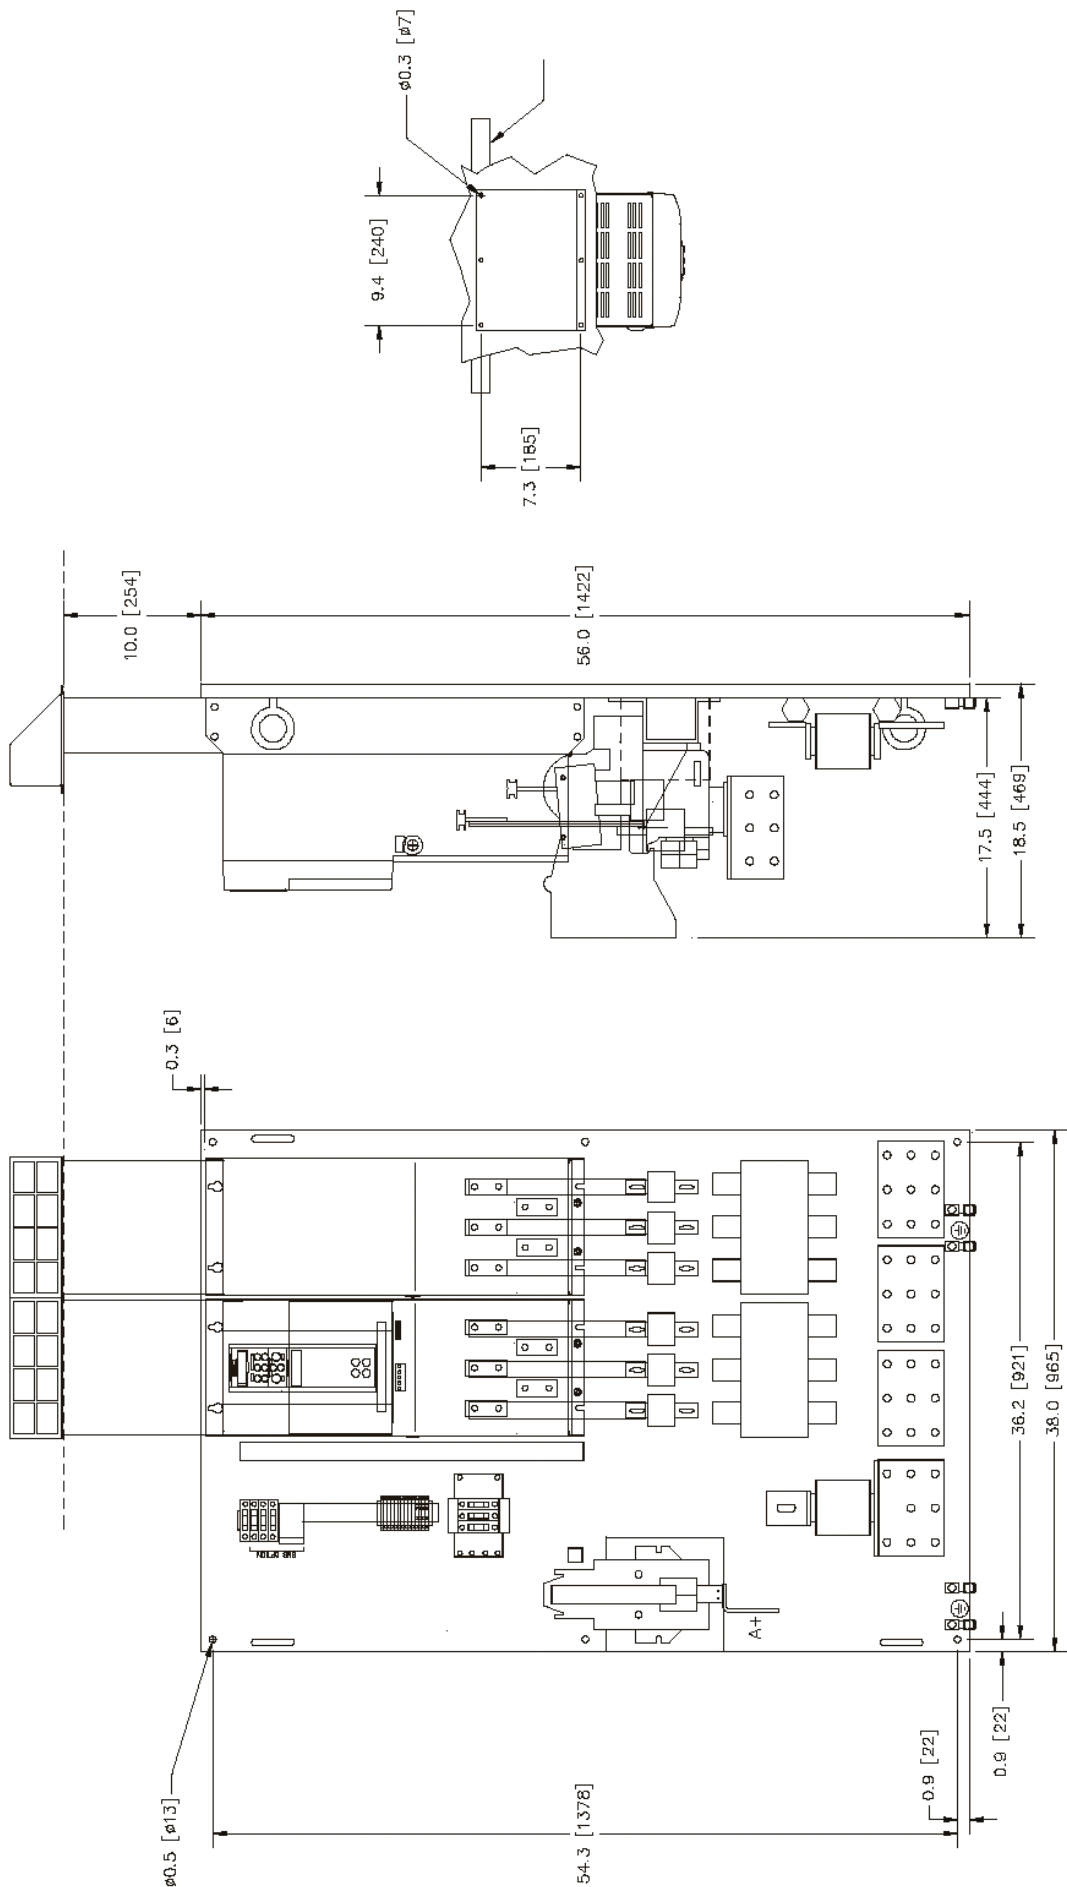




Figure 3-15 Frame 5 DRV : 600-800Hp (1580A)

3-26 Installing the Drive

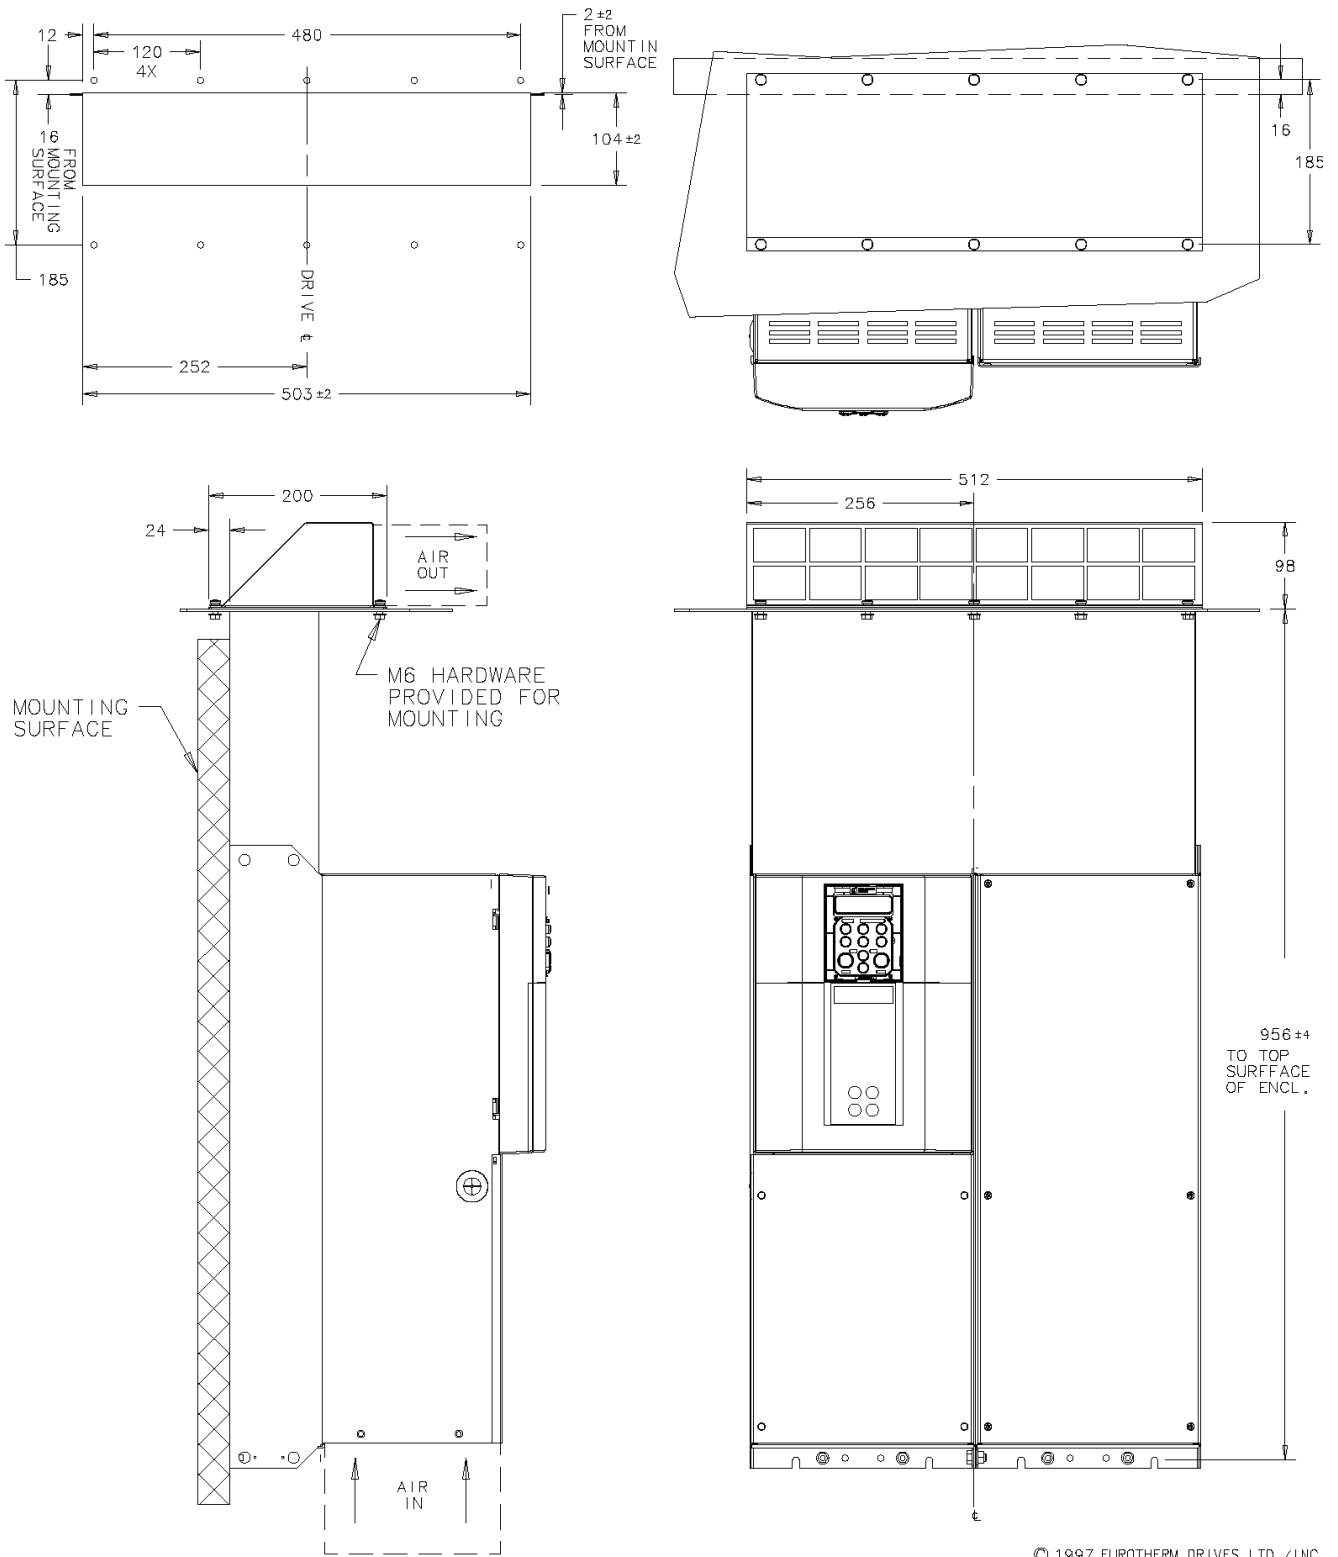

© 1997 EURO THERM DRIVES LTD./INC.


Figure 3-16 Frame 5 Drive : 900Hp (1580A) External Vent Kit Installation – Drawing No. HG466700U111

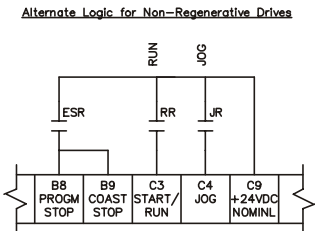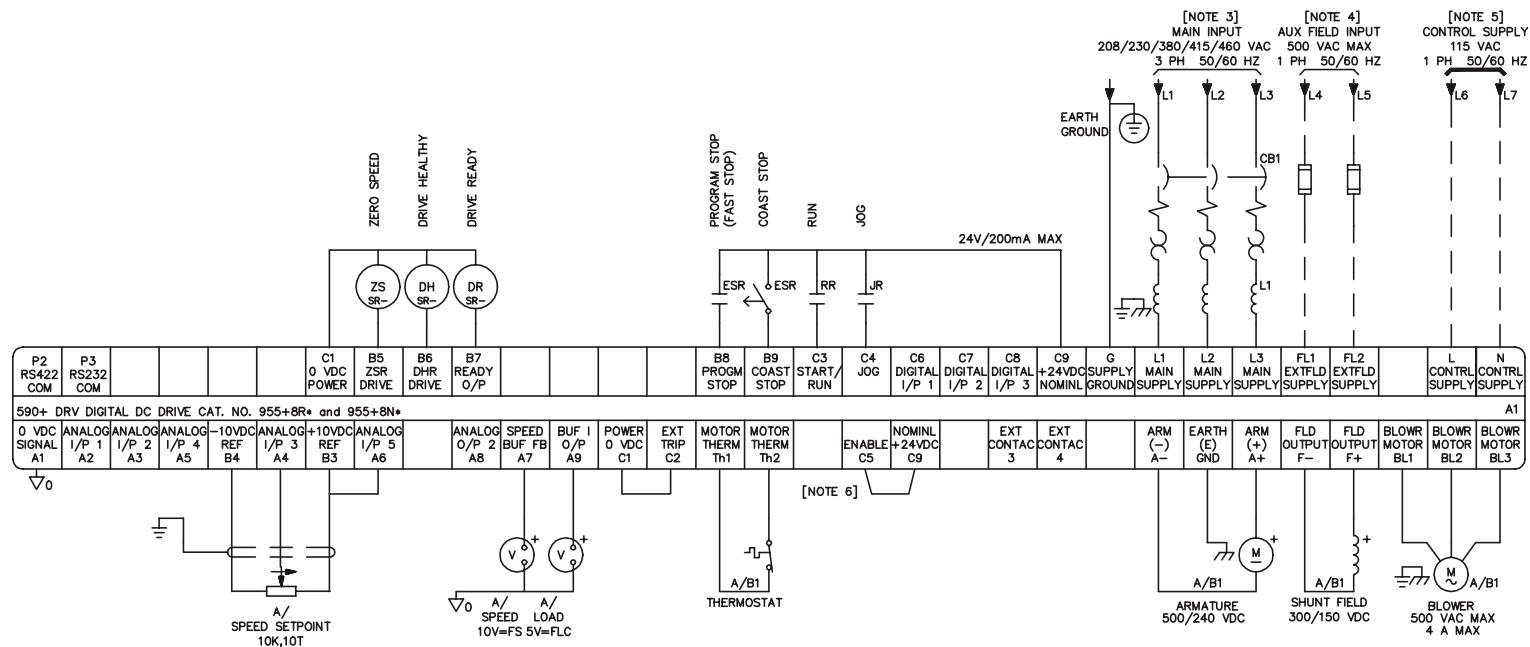


NOTES

- Internal armature voltage speed feedback shown.
- Verify hardware checks. (Details in chapter 3)
 - Control transformer taps set for the correct supply, if applicable.
 - Field supply selected for internal or external supply? Does not apply to frame 1.
 - Calibration for tachometer feedback voltage
 - Blower motor starter trip setting, if fitted.
- User must provide branch circuit protection. AC current = 0.83 x DC armature current.
- Branch circuit and overload protection to be fitted by customer. Does not apply to frame 1.
- Do not connect external control power if using the control transformer option.
- The enable input C5 needs to be true (24V) to run the drive. If using the dynamic braking option, remove the jumper across C5,C9.
- Resistor RE is required when full speed tachometer voltage exceeds 199V. If switch setting = ss and input voltage = V_{in} , then $RE = [(50V_{in}/ss) - 50]$ Kohms


Typical Control Logic Diagram

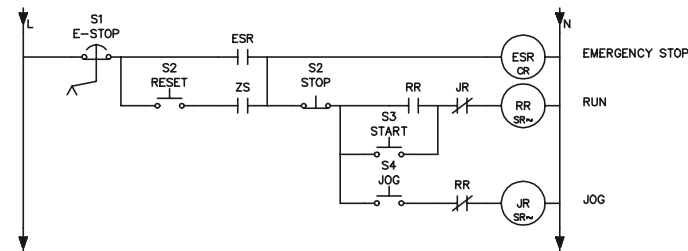


Tachometer Generator Speed Feedback

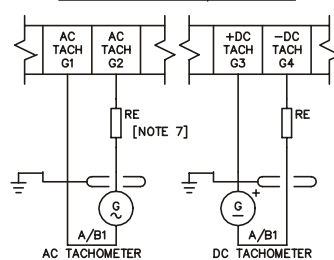


Encoder Speed Feedback

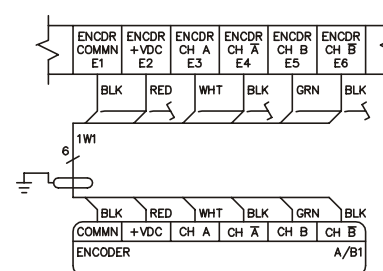


5701/5901 Microtach Speed Feedback

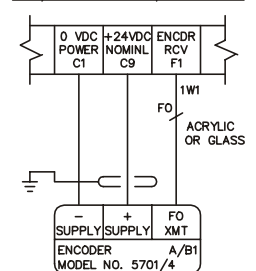


Frames 1 & 2 DRV 7.5-100 Hp - Minimum Connection Diagram ('general purpose' configuration)

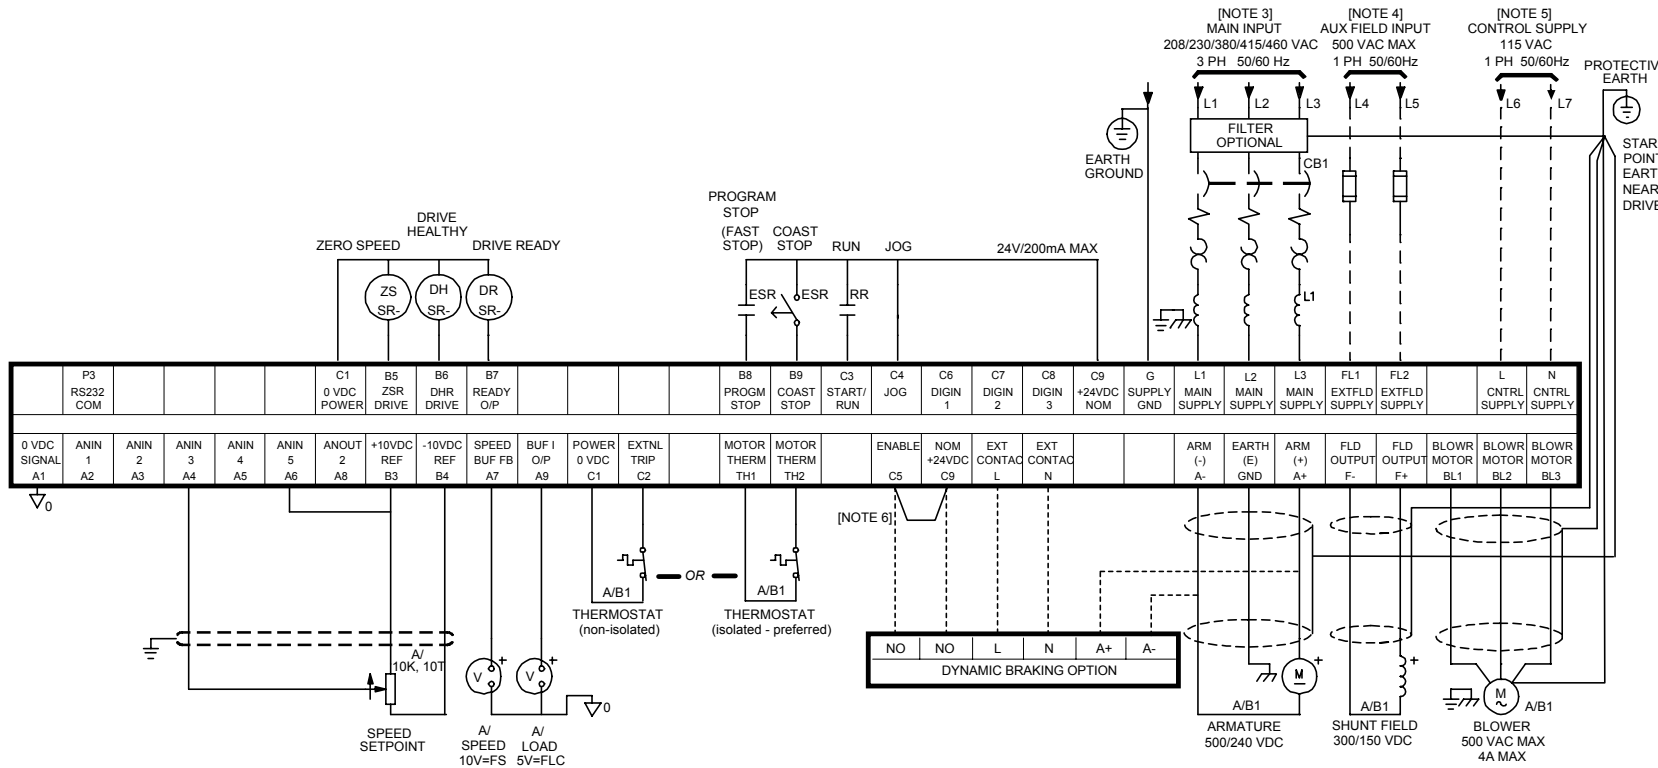


- NOTES**
- Internal armature voltage speed feedback shown.
 - Verify hardware checks. (Details in Chapter 3)
 - * Control transformer taps set for the correct supply, if applicable.
 - * Field supply selected for internal or external supply? Does not apply to frame 1.
 - * Calibration for tachometer feedback voltage
 - * Blower motor starter trip setting, if fitted.
 - User must provide branch circuit protection. AC current = 0.83 x DC armature current.
 - Branch circuit and overload protection to be fitted by customer. Does not apply to frame 1.
 - Do not connect external control power if using the control transformer option.
 - The enable input C5 needs to be true (24V) to run the drive. If using the dynamic braking option, remove the jumper across C5, C9.
 - Resistor RE is required when full speed tachometer voltage exceeds 199V. If switch setting = ss and input voltage = Vin, then RE = [(50V/in/ss) - 50] Kohms

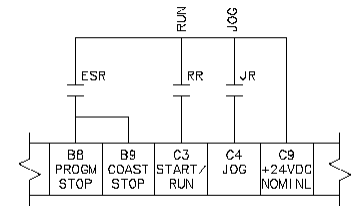


TYPICAL CONTROL LOGIC DIAGRAM

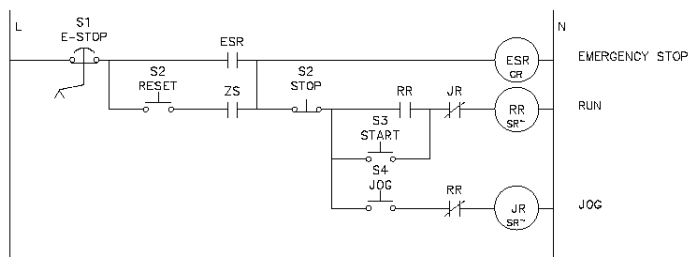


TACHOMETER GENERATOR SPEED FEEDBACK

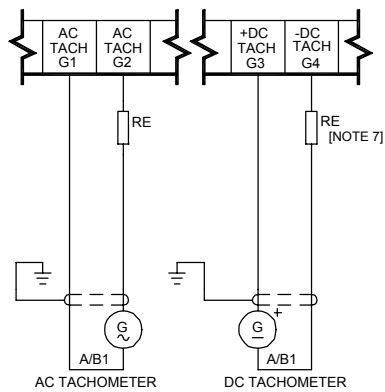


ENCODER SPEED FEEDBACK

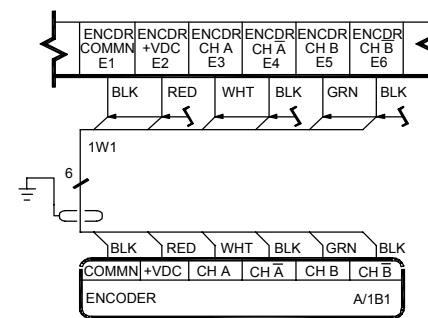

5701/5901 MICROTACH SPEED FEEDBACK

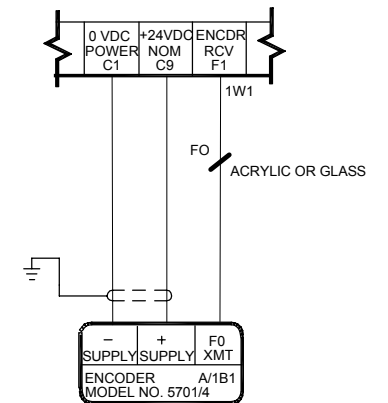


Frames 1 & 2 DRV 7.5-100 Hp - Minimum Connection Diagram for EMC ('general purpose' configuration)

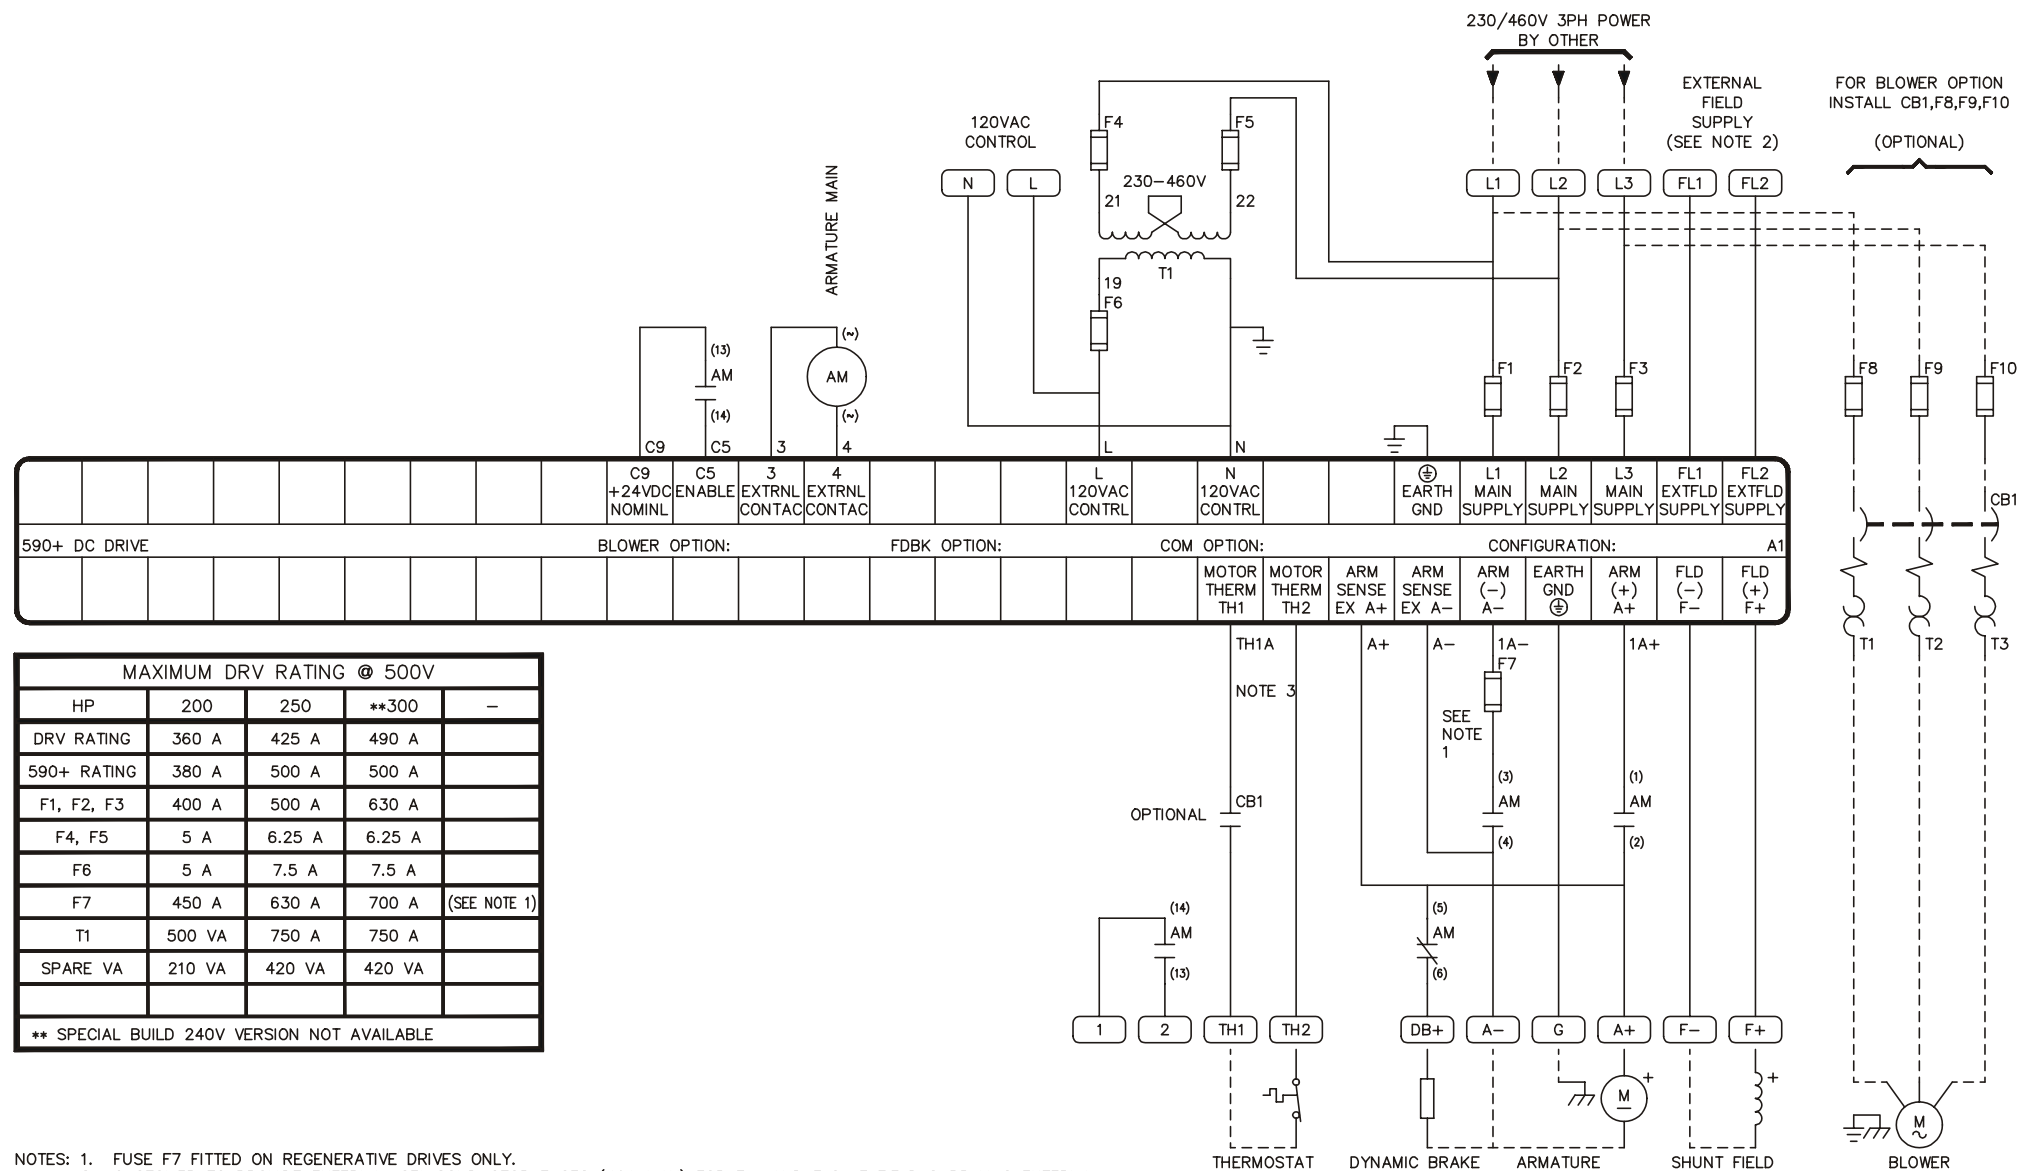


- NOTES: 1. FUSE F7 FITTED ON REGENERATIVE DRIVES ONLY.
 2. CUSTOMER TO PROVIDE EXTERNAL SEMICONDUCTOR FUSES (40A MAX) FOR FL1 AND FL2. IF FIELD SUPPLY IS EXTERNAL.
 3. WIRE NUMBER TH1A ONLY IF OPTIONAL CONTACT FITTED

Frame 4 DRV 200-250 Hp - Minimum Connection Diagram ('general purpose' configuration)

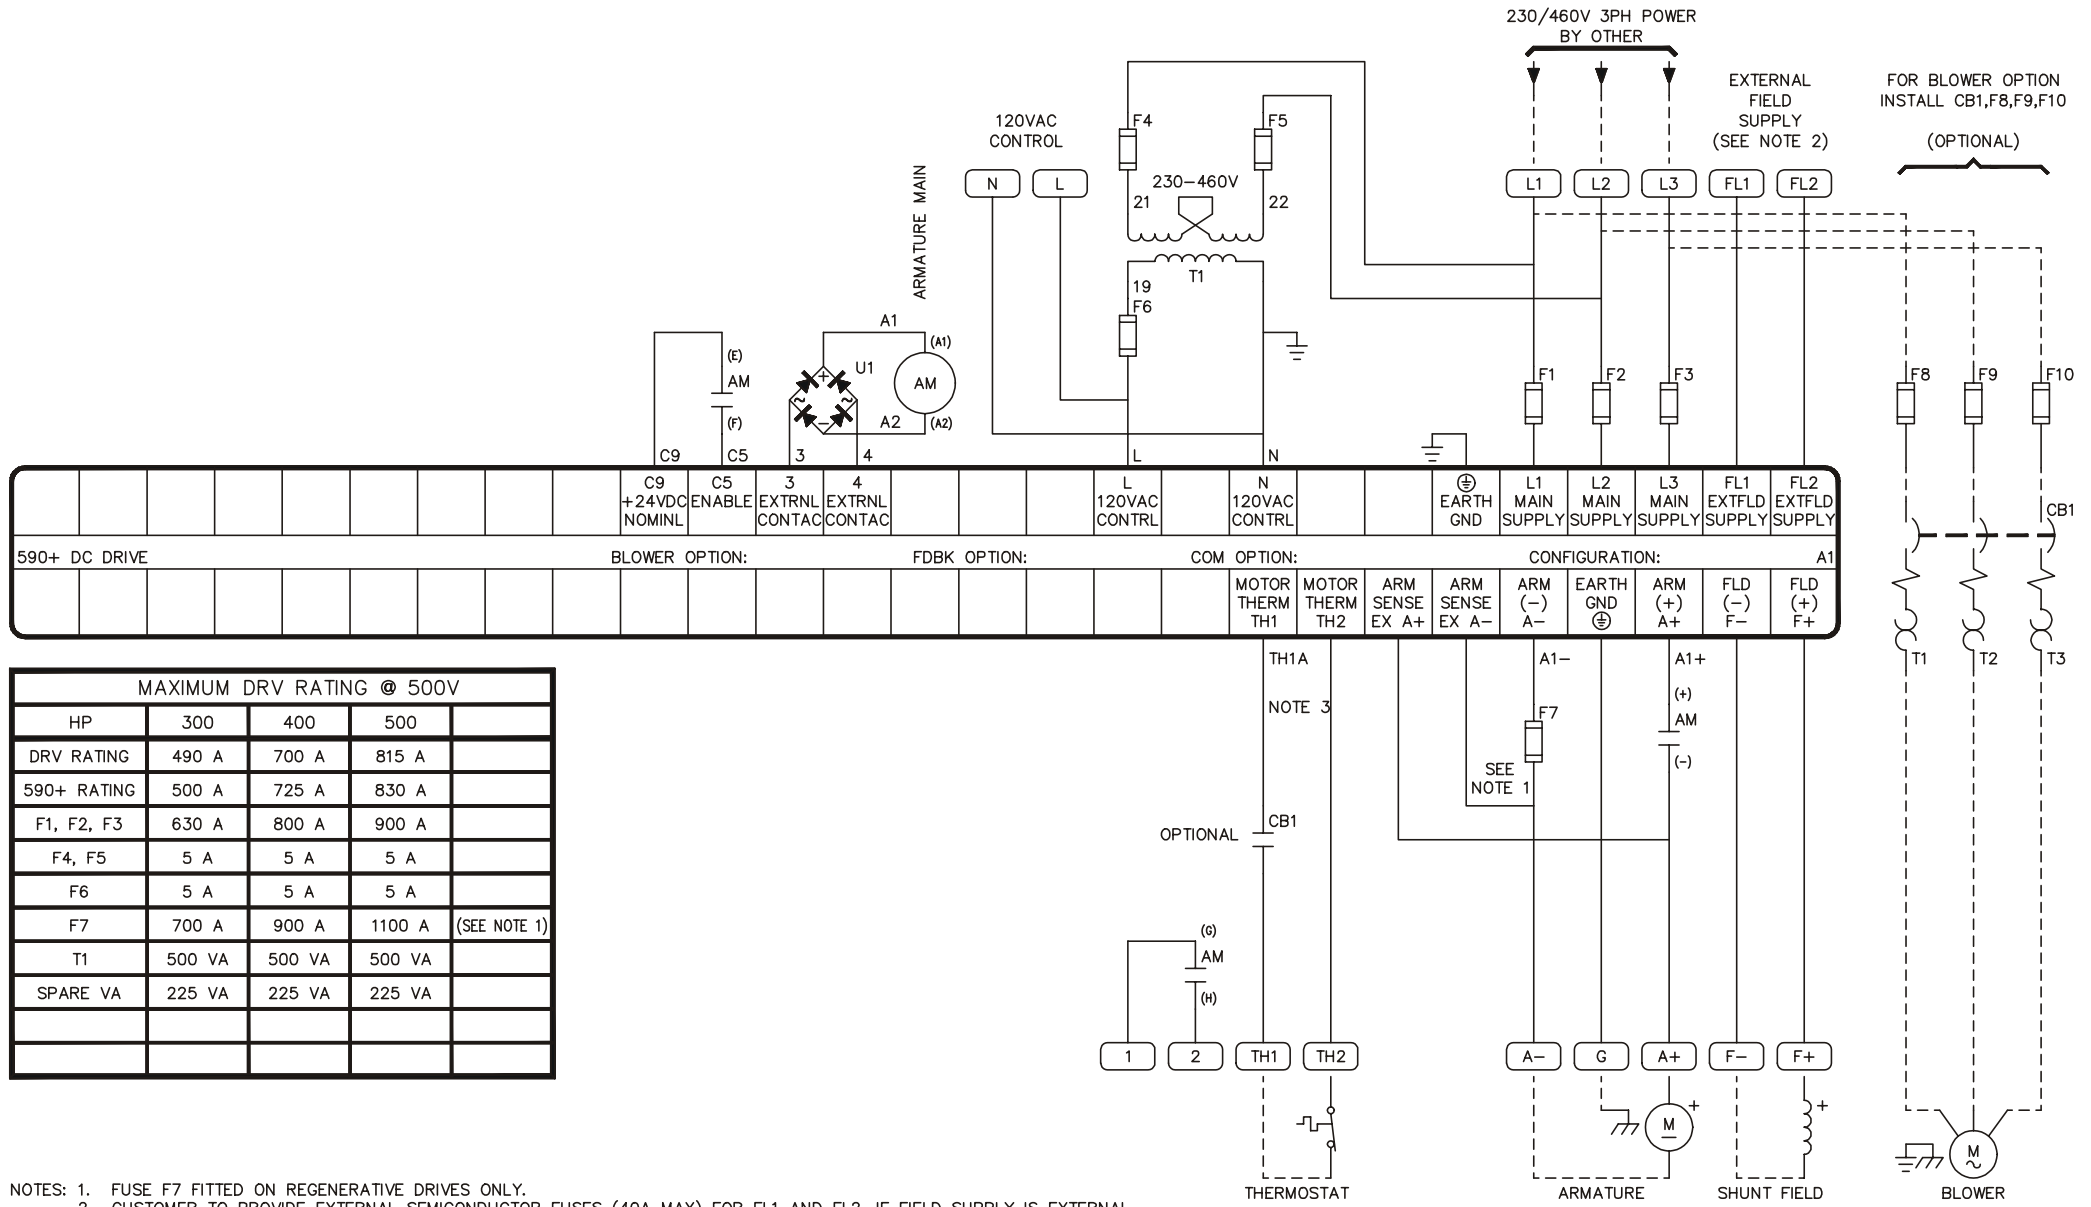

- NOTES: 1. FUSE F7 FITTED ON REGENERATIVE DRIVES ONLY.
 2. CUSTOMER TO PROVIDE EXTERNAL SEMICONDUCTOR FUSES (40A MAX) FOR FL1 AND FL2. IF FIELD SUPPLY IS EXTERNAL.
 3. WIRE NUMBER TH1A ONLY IF OPTIONAL CONTACT FITTED

Frame 4 DRV 300-500 Hp - Minimum Connection Diagram ('general purpose' configuration)

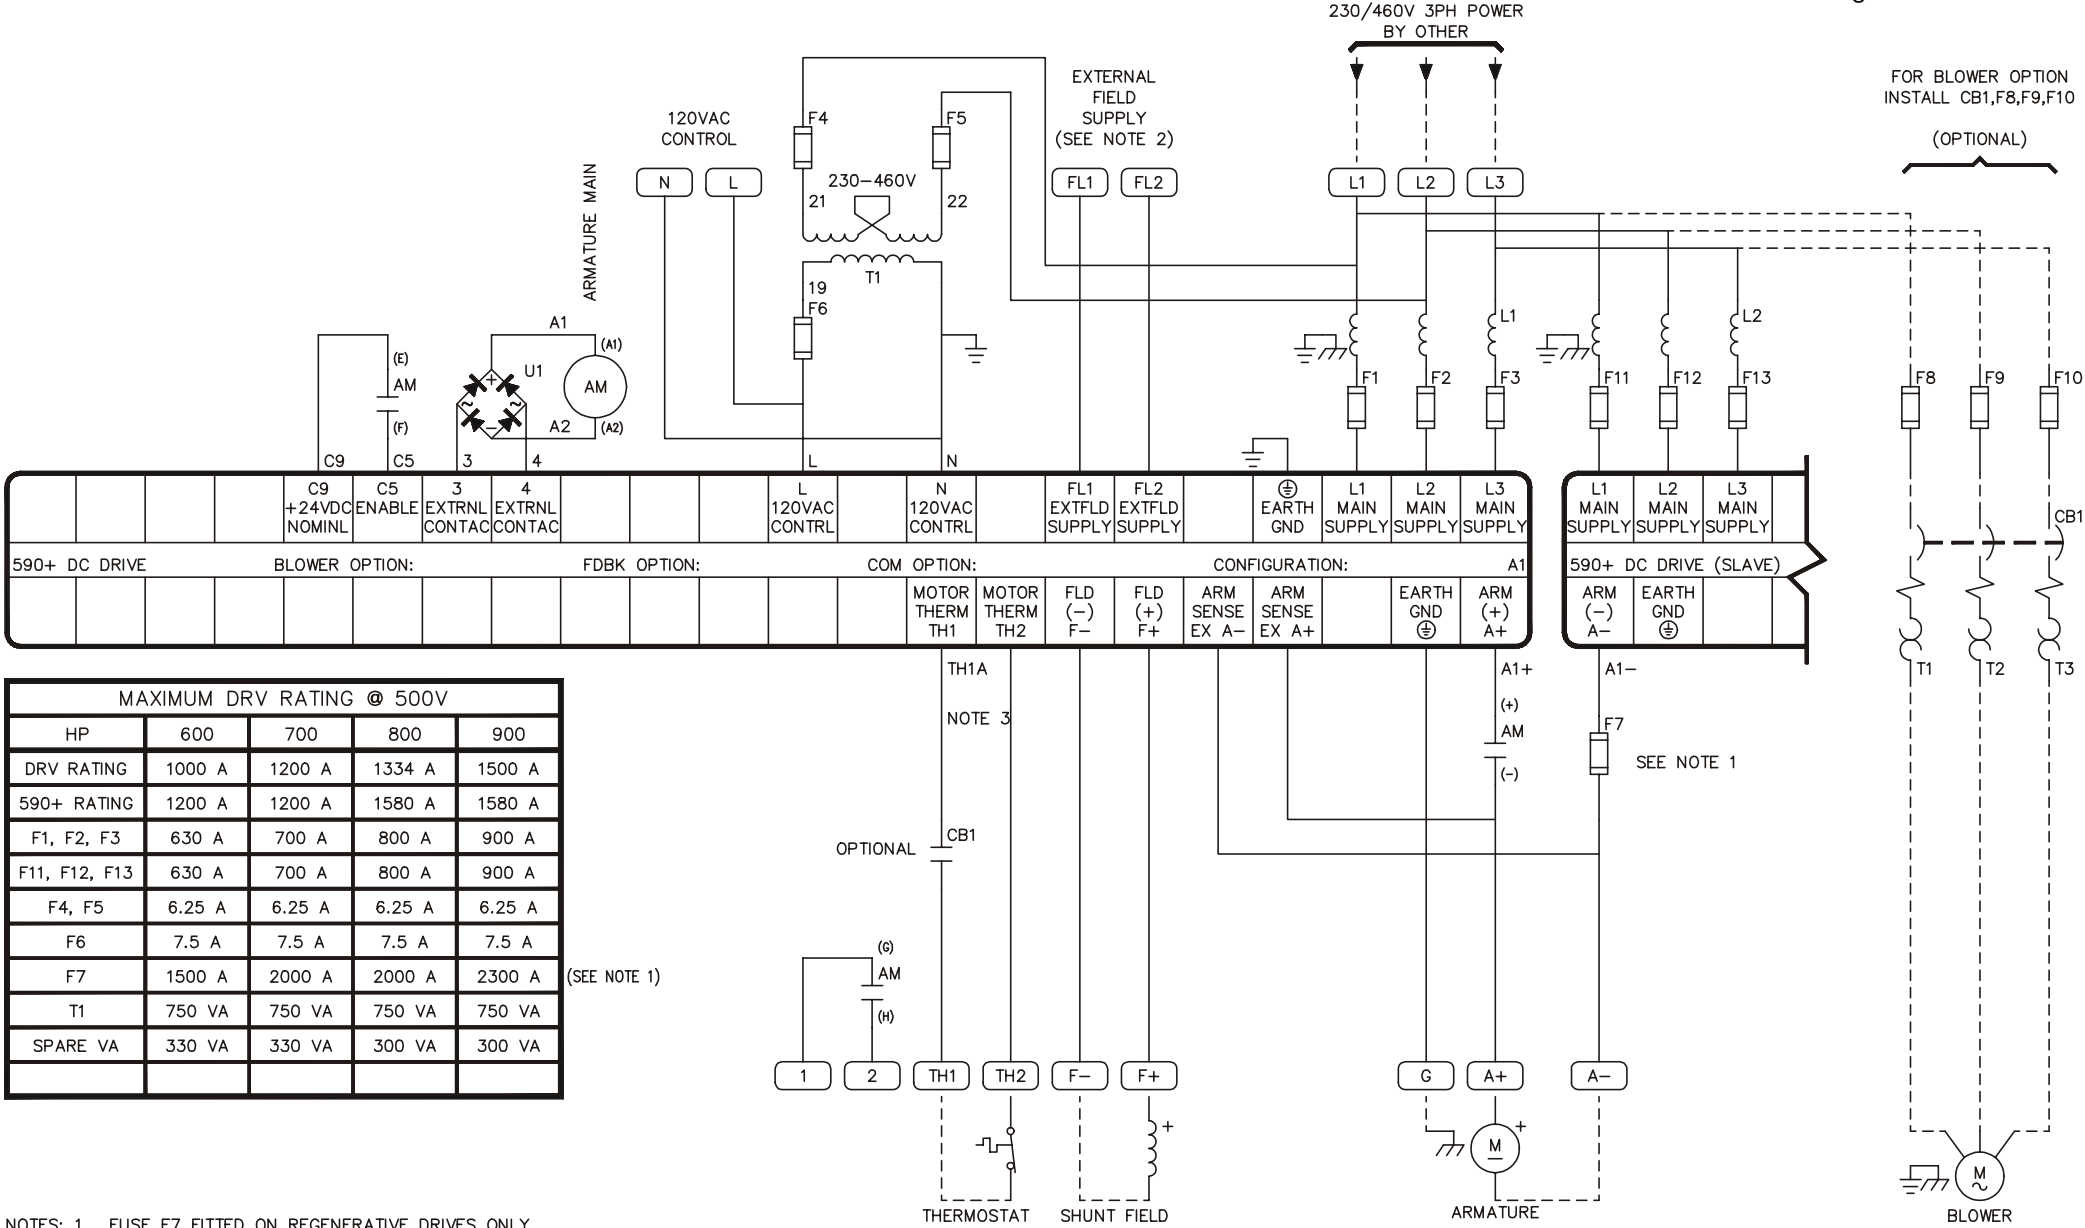

MAXIMUM DRV RATING @ 500V				
HP	600	700	800	900
DRV RATING	1000 A	1200 A	1334 A	1500 A
590+ RATING	1200 A	1200 A	1580 A	1580 A
F1, F2, F3	630 A	700 A	800 A	900 A
F11, F12, F13	630 A	700 A	800 A	900 A
F4, F5	6.25 A	6.25 A	6.25 A	6.25 A
F6	7.5 A	7.5 A	7.5 A	7.5 A
F7	1500 A	2000 A	2000 A	2300 A
T1	750 VA	750 VA	750 VA	750 VA
SPARE VA	330 VA	330 VA	300 VA	300 VA

(SEE NOTE 1)

- NOTES: 1. FUSE F7 FITTED ON REGENERATIVE DRIVES ONLY.
 2. CUSTOMER TO PROVIDE EXTERNAL SEMICONDUCTOR FUSES (40A MAX) FOR FL1 AND FL2. IF FIELD SUPPLY IS EXTERNAL.
 3. WIRE NUMBER TH1A ONLY IF OPTIONAL CONTACT FITTED

Frame 5 DRV 600-800 Hp - Minimum Connection Diagram ('general purpose' configuration)

CALIBRATION AND START-UP

The 590+ DRV Digital drive is shipped with a default configuration designed to control a shunt or permanent magnet field DC motor. You can adjust the drive's parameters or change its configuration to achieve optimum performance and perform specific control applications.

The drive can be tuned or configured using the drive's keypad, or by using a computer running the software package ConfigEd Lite. This chapter guides the user through the start up procedure using the keypad.

Follow these procedures only *after* installing and wiring your 590+ DRV Digital drive (see Chapter 3). Review Chapter 5 to become familiar with the keypad before proceeding.

When an instruction refers to a keypad procedure, the menu levels are shown as a path with double colons “::” separating each lower menu level, for example, the parameter RAMP ACCEL TIME is shown as:

SETUP PARAMETERS::RAMPS::RAMP ACCEL TIME

Initial Checks

Recommended Tools

WARNING!

This equipment can endanger life through rotating machinery and high voltages. Confirm that all wiring connections are correct before attempting start up procedures.

Equipment recommended to set up your 590+ DRV Digital drive and tune a motor include:

- IBM compatible PC with Microsoft Windows™ 3.0 or greater to run ConfigEd Lite
- Oscilloscope to monitor armature current waveform and speed feedback
- Voltmeter to monitor motor armature and field voltage and check control signal levels
- Ohmmeter to check signal continuity
- Clamp-on, Hall effect ammeter to measure armature and field currents
- Digital hand tachometer to check line or motor speed

Check Motor

WARNING!

Disconnect or isolate motor connections from the controller before performing any megger insulation, or high voltage tests on the motor windings.

After wiring and installing the 590+ DRV Digital drive, make these motor checks *before* applying power.

- Check and record motor nameplate information for future reference.
- Verify that the motor wiring agrees with the motor installation drawings, if available. Be sure to check the motor field wiring. Some motors have two winding fields that require a series or parallel connection depending on the supply and torque requirements.
- Use an ohmmeter to check insulation and continuity on the motor's armature and field. Use the following as a guide for measuring continuity and resistance through the armature and field:

Armature resistance < 1 ohm (about 3 ohms for motors rated under 10 HP).

Field resistance = Motor nameplate field voltage ÷ Motor nameplate field current

4-2 Calibration and Start-up

Insulation checks help ensure that there are no shorts in the motor. Use an ohmmeter set to its highest setting and measure the resistance between each conductor and ground. All readings should be greater than 10 M ohms. If available, use a megger to check for insulation faults in the motor armature and field windings.

Check Supply

WARNING!




Measure and verify the power supply to the drive *before* applying power to the input of the drive.


















1. Measure each leg of the three-phase power supply to ensure they are within $\pm 10\%$ of motor supply requirements. The controller has multiple ratings. Check whether the supply is suitable to attain the maximum desired armature voltage. Generally, the maximum armature voltage for a three-phase DC drive is 110% of the AC supply voltage. A 240 VDC armature motor requires a 230 VAC supply; 500 VDC motor needs a 480 VAC supply. Consult the factory for other ratings.
2. If a frequency meter is available, measure the incoming line frequency. The frequency should be within the acceptable range of 40 to 70 Hz.
3. Verify that the auxiliary supply voltage is correct at 120 VAC.
 - a. Frame 1 and 2 DRVs require external auxiliary supplies connected to terminals L and N. These drives may include an optional internal control transformer. For them, ensure the transformer taps are set for the supply voltage.
 - b. Frame 3 and larger DRVs include an internal control transformer. For these drives, ensure the transformer taps are set for the supply voltage.
4. Connect power but do *not* start the drive. The drive should now receive control power and the keypad display should read DC 4Q 35A::MENU LEVEL (the DC 4Q 35A line may vary depending on your drive).
5. Check that the motor is free to rotate.

Calibrate the Drive

Go to the Configure Drive menu to enter the motor calibration data. This is also a good time to enter other commonly used parameter data.

Note: To change any parameter in the procedure below, press the M key to access the parameter and then use the arrow keys to change the setting. When finished, press the E key. At that point you can move to the next parameter.

Press	Keypad Display	Description
	DC 4Q 35A MENU LEVEL	The DC 4Q 35A line may vary depending on your drive. This is the top of the menu tree.
	MENU LEVEL DIAGNOSTICS	You are now viewing the level 1 menu headings.
	MENU LEVEL CONFIGURE DRIVE	You have navigated to the CONFIGURE DRIVE menu at level 1. The CONFIGURE ENABLE parameter contained in this menu allows the calibration settings to be edited (parameters marked with an asterisk (*) in this table). Other parameters in this table can be changed at any time.

Press	Keypad Display	Description
	CONFIGURE DRIVE CONFIGURE ENABLE	This is the CONFIGURE ENABLE parameter. Press  again to edit the parameter. Press  to select ENABLED. All of the LEDs on the display will flash to indicate the drive is in Configuration mode. The drive will not run until CONFIGURE ENABLE is set back to DISABLED. Press  to exit.
Now navigate to the following parameters and use the  ,  ,  and  keys, as above, to enter your values.		
	CONFIGURE DRIVE NOM MOTOR VOLTS	* Enter the motor nameplate voltage
	CONFIGURE DRIVE ARMATURE CURRENT	* Enter the motor nameplate armature current
	CONFIGURE DRIVE FIELD CURRENT	* Enter the motor nameplate field current
	CONFIGURE DRIVE FLD. CTRL MODE	Verify set to VOLTAGE CONTROL
	CONFIGURE DRIVE FLD. VOLTS RATIO	Calculate and enter ratio where $\text{FLD. VOLTS RATIO} = (\text{Motor Nameplate Field Volts} \div \text{AC Supply}) \times 100$ For example, $300 \text{ VDC} \div 460 \text{ VAC} \times 100 = 65\%$
	CONFIGURE DRIVE SPEED FBK SELECT	Verify set to ARMATURE VOLTS when first installing the drive
	CONFIGURE DRIVE ENCODER LINES	- Skip if not using an encoder - Enter the encoder pulses per revolution (PPR) rating
	CONFIGURE DRIVE ENCODER RPM	- Skip if not using an encoder - Enter the process maximum speed; corresponds to 100% speed
	CONFIGURE DRIVE CONFIGURE ENABLE	Set to DISABLED. The drive will start calibrating, indicated by the display: CONFIGURE DRIVE::CALIBRATING

Initial Drive Start

WARNING!

Before starting the drive for the first time, make sure that your motor is uncoupled from the load, or ensure that the motor load can move without causing mechanical damage or danger to personnel.

Now start the drive using the keypad in local mode. This eliminates the configuration but uses the safety interlocks and allows the user to check the feedback polarity, motor speed, motor rotation, etc. The drive will not Autotune if it can't run the motor.

1. Press the L/R key to switch to Local Mode. The SEQ and REF LEDs on the keypad will be ON.

4-4 Calibration and Start-up

2. Use the arrow keys to set REF: to 0.00%.
3. Press the Start key, the motor will start but will not turn.
4. Use meter to check the field volts. The meter should read the calibrated value for field volts which should match the motor nameplate.

Motor Rotation Check

5. Use the arrow keys to increase REF: to 10%. The motor will rotate at that speed.
6. Observe the motor direction.








If the motor does not turn at all, check that you have proper connections to terminals A6 (CURRENT LIMIT), B8 (PROGRAM STOP), B9 (COAST STOP), and C5 (ENABLE). Each of these signals can be monitored in the DIAGNOSTICS menu on the keypad. Missing any of these will prevent the drive from starting or running.

Did the motor run in the wrong direction? If yes, the field polarity is incorrect. Stop the drive, disconnect all power supplies and external field supply (if used) and reverse the field connections (F+ and F-).

7. Use a meter to check armature volts. The meter should read 10% of the calibrated value (for example, 50 VDC for a 500 VDC motor).

Monitor DIAGNOSTIC::CURRENT FEEDBACK. If CURRENT FEEDBACK still reads 0.00%, turn the power off and check the armature connections. If the problem persists, refer to Chapter 7 for detailed troubleshooting information.

8. Press the PROG key to display the drive menu. Go to the DIAGNOSTICS menu (see the following procedure).

Press	Keypad Display	Description
	DC 4Q 35A MENU LEVEL	The DC 4Q 35A line may vary depending on your drive. This is the top of the menu tree.
	MENU LEVEL DIAGNOSTICS	You are now viewing the level 1 menu headings.
	DIAGNOSTICS SPEED DEMAND	This the SPEED DEMAND parameter.
	SPEED DEMAND 0.00 %	You are monitoring the SPEED DEMAND parameter.
Now navigate to the other diagnostic parameters in this menu, using the   keys, to monitor speed, terminal volts, field volts, etc. Press  to exit.		

Note: The speed feedback will be calibrated later in this start-up procedure.

9. **Skip this step if there are no speed feedback devices on the motor.** Reconnect the power and start the drive. This verifies that the speed feedback device is wired and functioning properly.
 - a. For motors fitted with analog **DC tachometer generators**, monitor DIAGNOSTICS::TACH INPUT.
 - If the reading is about 0.00%, the drive isn't getting a feedback signal. Stop the drive, disconnect all power supplies and check the tachometer generator wiring, connections, feedback card, etc.
 - If the reading is negative, stop the drive, disconnect all power supplies and reverse the tachometer generator wires.
 - If the reading is not near 10.00%, stop the drive, disconnect all power supplies and verify the calibration settings. Calculate the voltage at maximum speed using the following formula. Remember to convert the voltage rating of the tachometer generator to Volts per RPM; for example, 50V/1000 RPM = 0.05V per RPM.

$$\text{Maximum DC Voltage} = \text{Volts per RPM} \times \text{Maximum Desired RPM}$$

- b. For motors fitted **AC tachometer generators**, monitor DIAGNOSTICS::TACH INPUT:
- If the reading is about 0.00%, the drive isn't getting a feedback signal. Stop the drive, disconnect all power supplies and check the tachometer generator wiring, connections, feedback card, etc.
 - If the reading is not near 10.00%, stop the drive, disconnect all power supplies and verify the calibration settings. Calculate the voltage at maximum speed using the following formula. Remember to convert the voltage rating of the tachometer generator to Volts per RPM; for example, 50V/1000 RPM = 0.05V per RPM.

$$\text{Maximum AC Voltage} = \text{Volts per RPM} \times \text{Maximum Desired RPM} \times 1.3$$

Caution

A runaway condition can exist when using an AC tachometer generator on a regenerative model 590+ DRV, even if the speed reference is always positive. To avoid this problem, use a non-regenerative drive on a motor with an AC tachometer generator. If using a regenerative 590+ DRV Digital drive set minimum demand to 0% under SETUP PARAMETERS::SPEED LOOP::MIN DEMAND.

- c. For motors fitted with **5701/5901 Microtachs** or **wire-ended electrical encoders**, monitor DIAGNOSTICS::ENCODER..
- If the reading is about 0 RPM, the drive isn't getting a feedback signal. Stop the drive, disconnect all power supplies and check the encoder wiring, connections, feedback card, etc.
 - If the reading is negative, stop the drive and change the feedback sign by setting SETUP PARAMETERS::SPEED LOOP::ENCODER SIGN to POSITIVE or NEGATIVE as required.
 - If the reading is not near 10% of the base RPM (for example 175 RPM for a 1750 RPM motor), stop the drive and verify the calibration settings.

Caution

When changing set up parameters (such as feedback polarity), be certain to save the change before disconnecting control power or the set up will be lost.

10. If the drive is regenerative and the application requires reverse rotation, provide a negative speed demand, start the drive and verify that the motor runs in the reverse direction.
11. Stop the drive then SAVE PARAMETERS.

Note: *At this stage, you have successfully run the motor and verified the speed feedback devices are functioning correctly.*

Tune the Current Loop (AUTOTUNE)

Caution

This is an essential step in setting up your 590+ DRV Digital drive and *should not* be overlooked.

The AUTOTUNE function tunes the current loop automatically and sets the proportional gain, integral gain, and the discontinuous/continuous breakpoint for optimum drive response for a given motor. The drive cannot achieve peak performance without properly setting these parameters. Perform a complete AUTOTUNE procedure at least once with each controller/motor combination or if the motor armature or field windings have been rewound.

4-6 Calibration and Start-up

Note: AUTOTUNE may not work on motors with either very long or very short time constants (for example, very short time constant permanent magnet motors). In these instances the current loop must be tuned manually. Contact Eurotherm Drives Customer Service for assistance.

WARNING!









When clamping the motor, you must use a clamping force equal to or greater than the motor torque rating.

AUTOTUNE can be used for shunt wound, compound wound, and permanent magnet motors. The shaft on compound-wound and permanent magnet motors must be locked for AUTOTUNE to work. For shunt wound motors, the shaft may need to be clamped if a residual field causes the motor to rotate during AUTOTUNE. Any rotation of the motor during the AUTOTUNE procedure causes AUTOTUNE to abort.

WARNING!

Make sure it is safe to power and turn the motor and that operation of the motor and the drive will not pose a danger to personnel or equipment.

1. Turn on the main supply power.
2. Set AUTOTUNE to ON (see the following procedure).

Press	Keypad Display	Description
	DC 4Q 35A MENU LEVEL	The DC 4Q 35A line may vary depending on your drive. This is the top of the menu tree.
	MENU LEVEL DIAGNOSTICS	You are now viewing the level 1 menu headings.
	MENU LEVEL CONFIGURE DRIVE	You have navigated to the CONFIGURE DRIVE menu at level 1.
	CONFIGURE DRIVE CONFIGURE ENABLE	This is the CONFIGURE DRIVE menu.
	CONFIGURE DRIVE AUTOTUNE	Navigate to the AUTOTUNE parameter by repeatedly pressing the  key. Press  to edit the parameter. Press  to select ON.

3. Start the drive using the keypad.
4. At this point, the drive performs the AUTOTUNE function automatically, setting the following parameters:
 - a. SETUP PARAMETERS::CURRENT LOOP::PROP. GAIN
 - b. SETUP PARAMETERS::CURRENT LOOP::INT. GAIN
 - c. SETUP PARAMETERS::CURRENT LOOP::DISCONTINUOUS

These parameters give optimum performance of the current loop and should *not* be adjusted outside the AUTOTUNE algorithm.

5. Once AUTOTUNE is finished, the main contactor will open automatically, signaling the end of the procedure. The controller returns to a safe, stopped condition.

Note: If the AUTOTUNE is interrupted for any reason, either due to an alarm like the motor rotates over 10% speed during the procedure or removing the RUN or ENABLE signals, AUTOTUNE ceases automatically. The armature current

is disabled, the main contactor opens, and the AUTOTUNE parameter is reset to OFF. To retry the procedure, first clear any faults.

6. Remove the clamp, if fitted, from the motor.
7. SAVE PARAMETERS when finished.

Armature Current Waveform Check

Because there is no field voltage, the drive conducts full load current through the armature during an AUTOTUNE. You can monitor the armature current waveform with an oscilloscope to verify correct operation of the controller. Attach the oscilloscope leads to the Armature Current test point and the Sig. Ground test point. Refer to Chapter 7: Test Points for the drive's test point locations. At full rated current, the armature current signal (IA) should average 1.0 volts since 1.0 volts equals 100% current. There should be six current pulses per mains cycle at all times. The pulses should be uniformly shaped and evenly spaced, each with a width of 2.8 mS on 60 Hertz supplies, and 3.3 mS on 50 Hertz supplies.

Set Up Field Control







 



Note: *If the drive is controlling a permanent magnet motor, set FIELD ENABLE to DISABLED and skip this section.*

At this point, the drive/motor combination is operating in field voltage control. This section lists the procedure for setting up for Voltage or Current control. For best performance, set the field to Current control.

1. Give a 0% speed demand to the drive.
2. Start the drive. Measure the field voltage with a DC voltmeter and verify that it matches the motor nameplate rating. Measure the motor field current with a Hall effect current meter or a current shunt. If the motor field voltage or current is incorrect, follow the steps below to set in the correct field supply.

WARNING!

Failure to set up the field supply correctly can cause dangerous overspeed conditions resulting in serious equipment damage or injury to personnel. Do not continue the start up procedure until the DC field supply is within its required rating.

Press	Keypad Display	Description
	DC 4Q 35A MENU LEVEL	The DC 4Q 35A line may vary depending on your drive. This is the top of the menu tree.
	MENU LEVEL DIAGNOSTICS	You are now viewing the level 1 menu headings.
	MENU LEVEL CONFIGURE DRIVE	You have navigated to the CONFIGURE DRIVE menu at level 1.
	CONFIGURE DRIVE CONFIGURE ENABLE	This is the CONFIGURE DRIVE menu.
	CONFIGURE DRIVE FLD. CTRL MODE	Navigate to the FLD. CTRL MODE parameter by repeatedly pressing the  key. Press  to edit the parameter. Verify this is set to VOLTAGE CONTROL or CURRENT CONTROL. Press  or  to select. Press  to exit.

4-8 Calibration and Start-up

Press	Keypad Display	Description
		Now navigate to the following parameter and use the M , ▲ , ▼ and E keys, as above, to enter your value.
▼	CONFIGURE DRIVE FLD. VOLTS RATIO	- Skip if in Field Current mode - Calculate and enter ratio where FLD. VOLTS RATIO = (Motor Nameplate Field Volts ÷ AC Supply) × 100 For example, 300 VDC ÷ 460 VAC × 100 = 65%

Field Voltage Control:

- Measure the field voltage on terminals F- and F+ and verify that it equals the motor nameplate rating.
- Adjust CONFIGURE DRIVE::FLD. VOLTS RATIO until the voltage equals field voltage rating on the motor nameplate label.

Note: The DC motor field impedance increases with temperature, therefore the field current of a motor in voltage control can read higher than the nameplate rating when the field is initially powered. The current should fall to its nominal value as the motor warms up.

Field Current Control:

Note: FLD CTRL MODE IS must be set to CURRENT CONTROL when operating the motor in field weakening mode.

- Measure the motor field current if a Hall effect current meter and adjust SETUP PARAMETERS::CALIBRATION::FIELD I CAL until the measured field current equals the field current rating on the motor nameplate label.
- Stop the drive.
 - If any changes were made to the drive's parameters settings, PARAMETER SAVE.

Set Up Speed Feedback

At this point, the drive/motor combination is operating in armature voltage control. The other speed feedback devices were checked and functioning properly. This section lists the procedure for setting up tachometer generator or encoder speed feedback.

- Set SPEED FBK SELECT to the proper selection (see the following procedure).

Press	Keypad Display	Description
E	DC 4Q 35A MENU LEVEL	The DC 4Q 35A line may vary depending on your drive. This is the top of the menu tree.
M	MENU LEVEL DIAGNOSTICS	You are now viewing the level 1 menu headings.
▲	MENU LEVEL CONFIGURE DRIVE	You have navigated to the CONFIGURE DRIVE menu at level 1.
M	CONFIGURE DRIVE CONFIGURE ENABLE	This is the CONFIGURE DRIVE menu.
▼	CONFIGURE DRIVE SPEED FBK SELECT	Navigate to the SPEED FBK SELECT parameter by repeatedly pressing the ▼ key. Press M to edit the parameter. Press ▲ or ▼ to select ARM VOLTS FBK, ANALOG TACH or ENCODER. Press E to exit.

2. Start the drive; gradually increase the speed demand signal to 50% and monitor DIAGNOSTICS::TERMINAL VOLTS. Measure the armature voltage on the drive output with a DC voltmeter. TERMINAL VOLTS should read within 10% of the measured value. For example, when measuring armature volts at terminals A+ and A- with a voltmeter, a 500 VDC armature should read 250 VDC at 50% speed demand and TERMINAL VOLTS should be within 45 to 55%. If the reading is outside this range, check the drive's voltage calibration before continuing.

Increase the speed demand to 100% and check the shaft speed accuracy with a hand tachometer. Measure the armature voltage. If fine adjustment is needed, adjust the drive's calibration according to the speed feedback selection.

3. ARMATURE VOLTAGE FEEDBACK

Armature voltage feedback uses the motor's back EMF as speed feedback and is the drive's default feedback setting. It requires no feedback device, isolator or additional external connections. The scaling parameter, SETUP

PARAMETERS::CALIBRATION::ARMATURE V CAL, fine tunes the drive's armature voltage calibration and has a range of 1.1000 to 0.9800, corresponding to -10% to +2% trim. Changes outside this range require re-calibration as described earlier in this Chapter.

IR COMPENSATION SETUP

Properly setting the PARAMETERS::CALIBRATION::IR COMPENSATION parameter, or motor loss compensation, improves the speed accuracy when running in armature voltage feedback.

- Run the motor without a load. Monitor the actual speed with a hand tachometer.
- With the same speed setpoint, run the motor at full load and monitor the actual speed again with a hand tachometer.
- Adjust IR COMPENSATION until the full load speed is the same as the no load speed.

Note: *Too much IR COMPENSATION causes instability.*

4. MICROTACH or WIRE-ENDED ELECTRICAL ENCODERS

- You can monitor the encoder speed under DIAGNOSTICS::ENCODER in the keypad.
- Either encoder gives rotational speed for which adjustment is unnecessary; however, the process may require an accurately set speed calibration. If required, adjust the calibration parameter CONFIGURE DRIVE::ENCODER RPM to match the motor rotational speed to the roll speed with a hand tachometer. Speed match the motor through the ratio calculation:

$$\text{New ENCODER RPM Setting} = \frac{\text{Present ENCODER RPM Setting} \times \text{Desired RPM}}{\text{Measured RPM}}$$

5. AC/DC ANALOG TACHOMETER GENERATOR

- Settings on the analog tachometer generator feedback option card give a coarse scaling of the analog tachometer generator feedback voltage. Fine-tune the feedback by adjusting drive software parameters.

Note: *The option card settings for AC tachometer generators are $1.3 \times$ Calculated Value.*

Use a hand tachometer to measure the motor speed and adjust SETUP PARAMETERS::CALIBRATION::ANALOG TACH CAL to scale the overall feedback. Speed match the motor through the ratio calculation:

$$\text{New ANALOG TACH CAL Setting} = \frac{\text{Present ANALOG TACH CAL Setting} \times \text{Desired RPM}}{\text{Measured RPM}}$$

The gain range varies from 1.1000 to 0.9800, or -10% to +2% trim. Changes outside this range require a re-calibration of the feedback calibration card as described in Chapter 4.

If a tachometer's observed operation is within its rated accuracy, adjustment is not recommended and will complicate speed calibration.

6. SAVE PARAMETERS when finished.

4-10 Calibration and Start-up

Setup For Field Weakening

If the motor requires field weakening to achieve top speed, follow these steps.

Note: *Field weakening requires tachometer generator, or wire-ended or Microtach encoder speed feedback.*

1. Verify that the field current calibration is set as described earlier in this chapter. Many field weakened motor list the field current as two values, a minimum and a maximum, indicating the field weakened range of the motor. Calibrate the motor field for the larger of these two values.

1b. and verify the field is enabled by monitoring parameter SETUP PARAMETERS::FIELD CONTROL::FIELD ENABLE.

2. Set the following parameters as listed below.

SETUP PARAMETERS::FIELD CONTROL::FIELD CTRL MODE = CURRENT CONTROL

SETUP PARAMETERS::FIELD CONTROL::FLD. CURRENT VARS::FLD. WEAK VARS::FLD. WEAK ENABLE = ENABLED

SETUP PARAMETERS::FIELD CONTROL::FLD CURRENT VARS::FLD. WEAK VARS::MAX VOLTS = 100%

Note: *This sets the switchover point where field weakening begins.*

3. Ensure that SETUP PARAMETERS::FIELD CONTROL::FLD CURRENT VARS::FLD WEAK VARS::MIN FLD. CURRENT is set correctly for the motor to reach top speed. Calculated MIN FLD. CURRENT using the formula:

$$(\text{Minimum Field Current} \div \text{Maximum Field Current}) \times 90\%$$

This sets MIN FLD. CURRENT 10% lower than the field calculated to reach full speed. The minimum and maximum field currents are found on the motor nameplate label. The 10% cushion should overcome any inaccuracies in the nameplate data.

4. Run the drive up to base speed. Monitor DIAGNOSTICS::TERMINAL VOLTS to verify that the armature voltage is approximately equal to the MAX VOLTS value set in the previous step.
5. While slowly increasing the speed above base speed, monitor TERMINAL VOLTS. It should remain constant. Monitor the FIELD I FBK diagnostic and observe it decrease toward the MIN FLD. CURRENT calculated earlier.

Gradually increase to maximum speed, monitoring TERMINAL VOLTS at maximum speed. If the TERMINAL VOLTS increases or the drive trips on an OVERVOLTS alarm, the MIN FLD. CURRENT setting is too high. Reduce the parameter slightly in order to reach maximum speed. Do not reduce this parameter below 10% or you risk the motor running away.

When using an analog tachometer make fine adjustments to the speed feedback calibration by adjusting SETUP PARAMETERS::CALIBRATION::ANALOG TACH CAL.

6. For regenerative, reversing drives, check the maximum reverse speed. Correct any asymmetry in a reversing drive by adjusting SETUP PARAMETERS::CALIBRATION::ZERO SPD. OFFSET.
7. Stop the drive and SAVE PARAMETERS.

Note: *If the standard settings don't provide adequate performance, contact Eurotherm Drives Product Support for information on manually tuning the drive for field weakening.*

Adjust Speed Loop

For most applications, the default values for speed loop parameters SPD.PROP.GAIN and SPD.INT. TIME provide stable performance. In a few cases, you may need to tune the speed loop for optimum speed response. The following procedures explain how to tune the speed loop.

For this procedure, monitor the speed feedback with an oscilloscope between terminals A7 (SPEED FEEDBACK) and A0 (0V).

Note: Adjust the speed loop only after tuning the current loop with AUTOTUNE. Make certain the motor is connected to the load it will normally be running.

- SPD.PROP.GAIN scales the output based upon the input speed error. Increasing SPD.PROP.GAIN improves response time but also increases overshoot.
 - SPD.INT.TIME eliminates steady-state error. Reducing SPD.INT.TIME improves response, but will cause instability if set too short.
1. Connect terminal B3 (+10 VDC) through a switch to terminal A3. This will provide the step change input for verifying speed loop performance.
 2. Calibrate terminal A3 for 10% output by setting SETUP PARAMETERS::SPEED LOOP::SETPOINTS::RATIO 2 (A3) to 0.1000.
 3. Set SETUP PARAMETERS::SPEED LOOP::INT. DEFEAT to ON. This disables the integral gain.
 4. Run the motor at a typical operating speed through the speed ramp input, terminal A4. Do not set the speed above 50 percent.
 5. Check the speed loop performance by making step changes using the switch at terminal A3. Increase SETUP PARAMETERS::SPEED LOOP:: PROP. GAIN until the response is critically damped, generally no more than 4% overshoot, as illustrated (refer to Chapter 9).
 6. Once stable, proportional control is attained, set SETUP PARAMETERS::SPEED LOOP::INT. DEFEAT to OFF.
 7. Check the speed loop performance by making step changes using the switch at terminal A3. Reduce SETUP PARAMETERS::SPEED LOOP::SPD.INT.TIME until the response is critically damped.

Note: The default value for SPD.INT.TIME is 0.5 seconds. That value may be too small for large inertia loads and cause the system to be unstable from the start.
 8. Stop the drive and remove the switched signal from terminal A3.
 9. Set SETUP PARAMETERS::SPEED LOOP::SETPOINTS::RATIO 2 (A3) back to 1.0000, then run normally.
 10. SAVE PARAMETERS prior to disconnecting power.

4-12 Calibration and Start-up

Other Important Parameters

Other parameters, for example ramp rates, may be important for the process. Different ramp rates are available for various conditions:

Condition	Parameter Name	Menu
Speed Setpoint Change	RAMP ACCEL TIME and RAMP DECEL TIME	RAMPS
Jog Acceleration/Deceleration	RAMP RATE	JOE/SLACK
Controlled Stop Deceleration	STOP TIME	STOP RATES
Fast Stop Deceleration	PROGRAM STOP TIME	STOP RATES
Electronic MOP Control	INCREASE RATE and DECREASE RATE	RAISE/LOWER

Chapter 6 fully discusses the functionality and scaling of all drive parameters.

Recording Parameters

It is important to have a backup copy of your drive parameters. This copy might consist of writing down the information on a chart, saving the parameters to a computer disk, or printing the parameters using an external computer.

To save the parameters as either a hexadecimal ASCII file or as a text file ready for printing, connect a computer to the P3 serial port. Use a telecommunications program, such as Windows Terminal™, or other terminal emulation programs. Refer to "Using Microsoft® Windows™ to Document and Clone 590 DRV Digital Drives" (HA352155) for detailed instructions using Windows Terminal™ for uploading and downloading drive parameters. Refer to Chapter 14 for general information on using the P3 port to upload and download drive parameters.

Configured Lite is available from Eurotherm Drives. This software allows you to easily configure, download, and upload the drive parameters using a computer.

Password Protection

To safeguard the parameters you have set with the keypad, you can configure the 590+ DRV Digital drive in a password-protected mode. At the initial power up, the DISPLAY PASSWORD command is automatically cleared to zero. If the controller password is set at any value other than zero, the keypad is in a restricted mode and the keypad display can be displayed but not altered.

Entering a Password

To access the password configuration procedure from the main menu:

- PASSWORD
- M to enter the Password sub-menu
- M to enter the ENTER PASSWORD sub-menu
- ▲ to enter the password on the screen.

Changing a Password

All 590+ DRV Digital drives are shipped with the default password 0x0000, which is displayed in the keypad. If the default password does not work, contact your supplier for the new password. Once you have entered the correct code, you may use the CHANGE PASSWORD function to set your own restricted password.

- PASSWORD
- M to enter Password sub-menu
- ▲ to CHANGE PASSWORD
- M to enter the CHANGE PASSWORD sub-menu

- ▲ to enter a different value (password)
- E to back out one step
- ▲ to move to CLEAR PASSWORD display
- M to clear the password

This clears from view the password you have entered, protecting the settings from those without access to the password. With password protection installed in your 590+ DRV, the parameters available through the keypad can be viewed but not be altered without first entering that password. To edit parameters, you must reenter the password and repeat the procedure described above.

Note: *Be sure to record the new password. If you lose your password, you will be unable to change parameters.*

Restore Default Settings (2-Button Reset)

A 2-Button Reset loads the drive's default parameters into the drive's operating memory; erasing all customized settings and connections. It is often used to reset the drive when troubleshooting procedures fail. Refer to Chapter 5 for more information on using the keypad and performing a 2-Button Reset.

4-14 Calibration and Start-up

THE KEYPAD

Connecting the Keypad

The Keypad is a plug-in MMI (Man-Machine Interface) option that allows full use of the drive's features. It provides local drive control, monitoring, and complete access for programming.

Insert the Keypad into the front of the drive by plugging into the RS232 programming port; or mount it up to 3 metres away using the optional panel mounting kit with connecting lead. Refer to Chapter 3: "Installing the Drive" - Fitting the Remote 6901 Keypad.

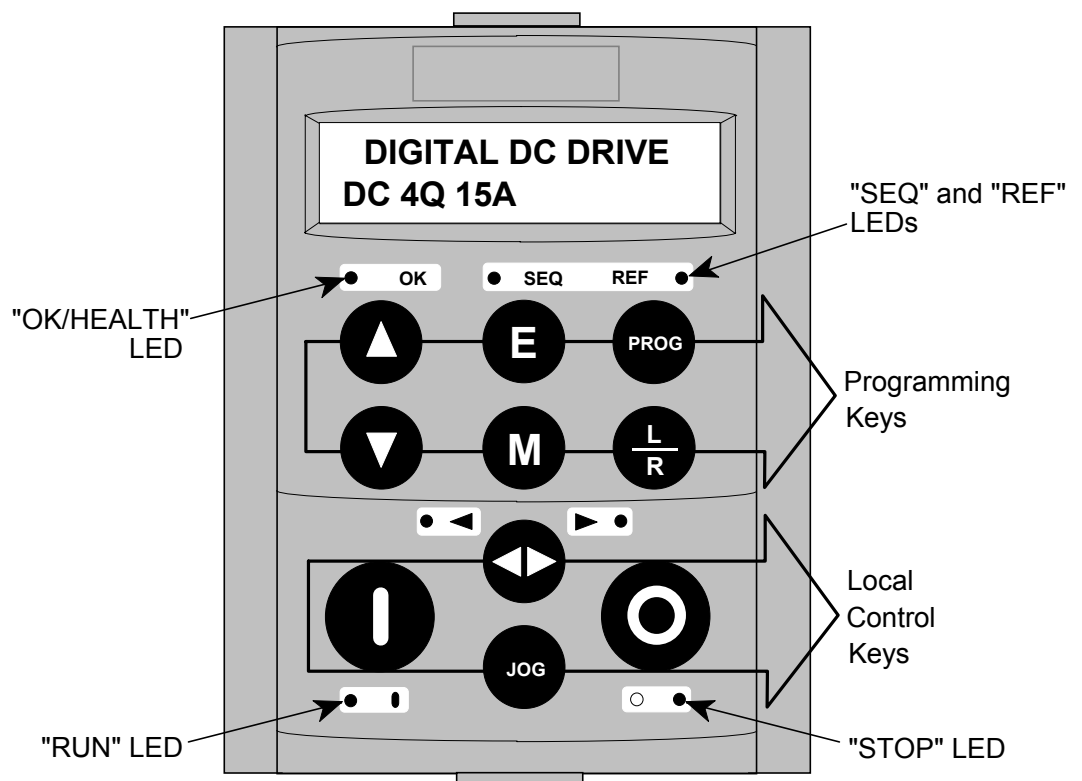


Figure 5-1 Keypad displaying Welcome screen

Using the Keypad

On power-up, a calibration message is displayed, followed quickly by a default Welcome screen showing the product description and Product Code (an example code is shown in Figure 5-1).

The drive can operate in one of two modes:

Remote Control: Allows drive monitoring and programming only

Local Control: Provides local drive control and monitoring

The drive always initialises in Remote control mode to prevent users from accidentally starting the motor using the Keypad.

Local control keys are only active when using Local control mode.

5-2 The Keypad

The L/R Key

The **L/R** key (Local/Remote) only operates when the motor is stopped.

It toggles the drive between Local and Remote control. An appropriate menu on the Keypad is displayed; either a Local menu when in Local control, or a main programming menu from the Menu System when in Remote control.

When in Local control, the Local LEDs, SEQ and REF, are illuminated and the RUN, STOP, JOG, FORWARD/REVERSE, UP and DOWN local control keys can be used to control the motor speed and direction.

Pressing the **L/R** key when in Local control mode selects Remote control mode and returns you to your previous menu in the Menu System.

The PROG Key

The **PROG** key only operates when in Local control mode.

It toggles the display between the Local menu and the main Menu System but the drive remains in Local control.






This key allows you to make changes to parameters normally available in Remote control mode whilst remaining in Local mode operation.

HINT: When operating the drive locally, it is quite useful to have a desired parameter selected in the main Menu System. Pressing the **PROG** key makes the display jump directly to that point.








Control Key Definitions

Using the Keys in Remote Mode

Note: See "Navigating the Menu", page 5-7 for a quick-start to using the menu.

UP 	<i>Navigation</i> - Moves upwards through the list of parameters. <i>Parameter</i> - Increments the value of the displayed parameter. <i>Command Acknowledge</i> - Confirms action when in a command menu.
DOWN 	<i>Navigation</i> - Moves downwards through the list of parameters. <i>Parameter</i> - Decrements the value of the displayed parameter.
ESCAPE 	<i>Navigation</i> - Displays the previous level's Menu. <i>Parameter</i> - Returns to the parameter list. <i>Trip Acknowledge</i> - Acknowledges displayed Trip or Error message.
MENU 	<i>Navigation</i> - Displays the next Menu level, or the first parameter of the current Menu. <i>Parameter</i> - Holding M down when a parameter is displayed shows that parameter's Tag No. Repeated pressing at a writable parameter moves a cursor across the value to allow rapid increment/decrement of the parameter value.
LOCAL/ REMOTE 	<i>Control</i> - Toggles between Remote and Local Control Modes for both Start/Stop (Seq) and Speed Control (Ref). When toggling, the display automatically goes to the relevant SETPOINT screen, and the SETPOINT (LOCAL) screen will have the ▲ and ▼ keys enabled to alter the setpoint.

Using the Keys in Local Mode




<p>PROG</p> 	<p><i>Navigation</i> - When in Local mode, displays the previous MMI menu whilst remaining in Local mode enabling changes to be made to parameters not available in Local menu. The key has no function in Remote mode.</p>
<p>FORWARD/ REVERSE</p> 	<p><i>Control</i> - Changes the direction of motor rotation when in Local mode, indicated by the display. Selects between two jog speeds when in Jog mode. This key has no function in Remote mode.</p>
<p>JOG</p> 	<p><i>Control</i> - Runs the motor at a speed determined by the JOG SPEED 1 parameter. When the key is released, the drive returns to "stopped". Only operates when the drive is "stopped" and in Local mode. This key has no function in Remote mode.</p>
<p>RUN</p> 	<p><i>Control</i> - Runs the motor at a speed determined by the LOCAL SETPOINT.</p> <p><i>Trip Reset</i> - Resets any trips and then runs the motor as above. Only operates when the drive is in Local mode.</p>
<p>STOP/RESET</p> 	<p><i>Control</i> - Stops the motor. Only operates when the drive is in Local mode.</p> <p><i>Trip Reset</i> - Resets any trips and clears displayed message if trip is no longer active.</p>
<p>UP</p> 	<p>Can set parameter values in Local mode</p>
<p>DOWN</p> 	<p>Can set parameter values in Local mode</p>

 5-4 The Keypad





 





 



 






Indications







 

Keypad LEDs





 There are seven LEDs on the front of the keypad that indicate the status of the drive. Each LED is considered to operate in three different ways:

-  OFF
-  FLASH
-  ON

  The LEDs are labelled HEALTH, LOCAL (as SEQ and REF), FWD, REV, RUN, and STOP. Combinations of these LEDs have the following meanings:

OK/HEALTH	RUN	STOP	Drive State
			Re-Configuration
			Tripped
			Stopped
			Stopping
			Running with zero reference
			Running
			Autotuning


FWD	REV	Forward / Reverse State
		Requested direction and actual direction are forward
		Requested direction and actual direction are reverse
		Requested direction is forward but actual direction is reverse
		Requested direction is reverse but actual direction is forward


LOCAL SEQ	LOCAL REF	Local / Remote Mode
		Start/Stop (Seq) and Speed Control (Ref) are controlled from the terminals
		Start/Stop (Seq) and Speed Control (Ref) are controlled using the Keypad keys

Keypad Alarm Messages

An alarm message will be displayed on the MMI when the unit is tripped.

- The drive has tripped. The top line indicates a trip has occurred while the bottom line gives the reason for the trip. See example opposite.

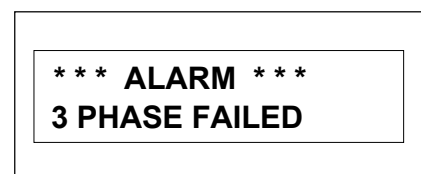

Acknowledge the trip message by pressing the **E** key. Press the STOP/RESET key  to restore the Health LED.

Refer to Chapter 7: “Trips and Fault Finding” for trip messages and reasons.

The Menu System

The menu system is divided into a 'tree' structure with 9 "MENU LEVEL" main menus. Consider these main menus to be at Menu Level 1 (refer to the Menu System Map on page 5-8). Parameters contained in Menu Level 1 are the most frequently used, as you descend the menu levels the parameters are less frequently used.

The Keypad has selectable "viewing levels" which can restrict the view of the Remote menu system, refer to "Changing the Menu", page 5-11.

Below is a simple description of the main menus:

- **DIAGNOSTICS:** a view of important diagnostic parameters contained in the FUNCTION BLOCKS menu.
- **SETUP PARAMETERS:** contains all the function block parameters for programming your application, including parameters for tuning the drive.
- **PASSWORD:** contains all the Password parameters required for security.
- **ALARM STATUS:** a view of the alarm diagnostic parameters contained in the FUNCTION BLOCKS menu.
- **MENUS:** allows full or reduced menu displays on the Keypad.
- **PARAMETER SAVE:** Save the application/parameters.
- **SERIAL LINKS:** contains all the parameters for external communications set-up and operation.
- **SYSTEM:** contains all the parameters for I/O configuration and connecting function blocks
- **CONFIGURE DRIVE:** this menu groups parameters from other menus to simplify set-up and calibration

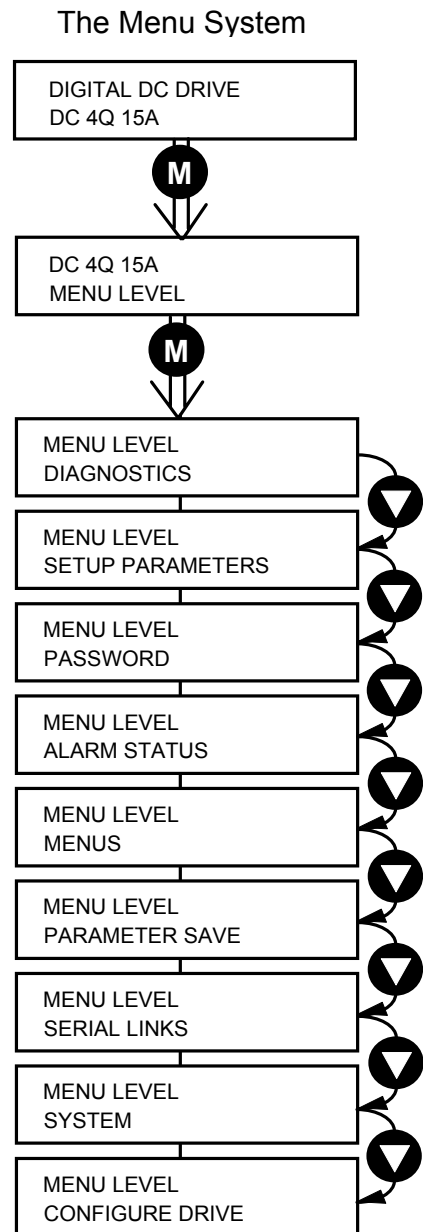


Figure 5-2 The Menu System showing Main Menus and Key Presses

5-6 The Keypad

The Local Menu

The Local menu shows the Local Setpoint and direction. This menu can be accessed from anywhere in the Menu System by pressing the **L/R** key. Holding the **M** key down shows the speed feedback.

A toggle to the Local menu displays whichever is in force, Forward or Reverse, previously selected by the **FWD/REV** key.


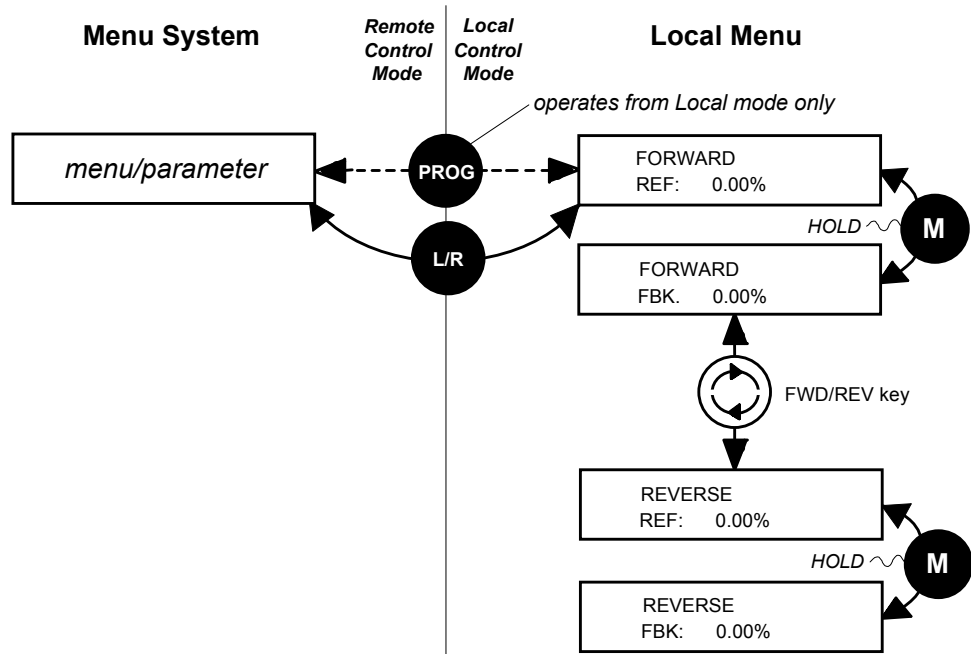


Figure 5-3 Viewing the Local Menu

Navigating the Menu System

The Menu System can be thought of as a map which is navigated using the four keys shown opposite.

- Keys *E* and *M* navigate through the menu levels.
- The up (▲) and down (▼) keys scroll through the Menu and Parameter lists.

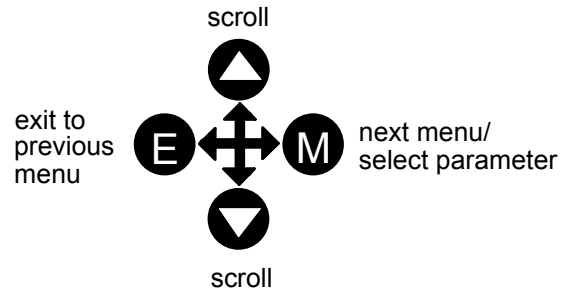

NAVIGATING THE MENU

Menus can contain other menus at a lower level in the tree structure, parameters, or a mixture of both.

The keys are used as above to select a parameter (a parameter has a selection (i.e. ON/OFF) or a value displayed on the bottom line).

HINT: Remember that because the Menu and Parameter lists are looped, the ▲ key can quickly move you to the last Menu or Parameter in the loop. The keys will repeat if you hold them down. This is an easy way to step through and view a menu's contents.


Changing a Parameter Value

With the Parameter you want on view, three of the keys now perform different functions:


- Change a selection (i.e. ON/OFF) using the up (▲) and down (▼) keys.
- Change a value as follows:

The up (▲) and down (▼) keys increment/decrement the value at a rate determined by the right hand character of the value, indicated by the appearance of a cursor.

- ◆ If the cursor is positioned as 100.0, then the value will change by tenths of a unit
- ◆ If the cursor is positioned as 100.0, then the value will change in whole units, etc.

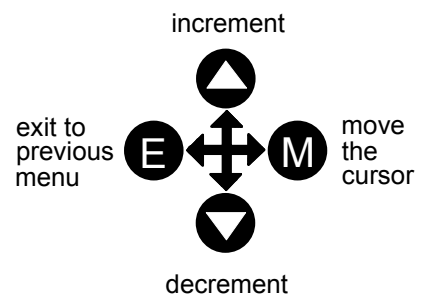

EDITING PARAMETERS

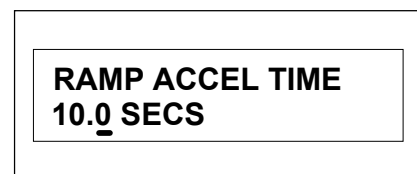

A Parameter showing a cursor under the value



The up (▲) and down (▼) keys will repeat if you hold them down and, at a preset point, the cursor will progressively move one character to the left and increment/decrement the value at an increased rate.

Alternatively, you can move the cursor manually by pressing the *M* key. Repeated pressing moves the cursor right to left along the value.

The cursor times-out after approximately half a second, so use the *M* key and up (▲) and down (▼) keys promptly once the cursor is in position.

Note: A cursor appears under all numerical values except for parameters in the Diagnostics and Alarm Status menus whose values provide information only.

The Menu System Map

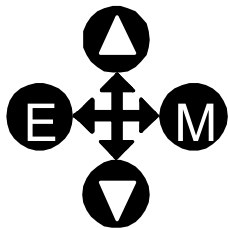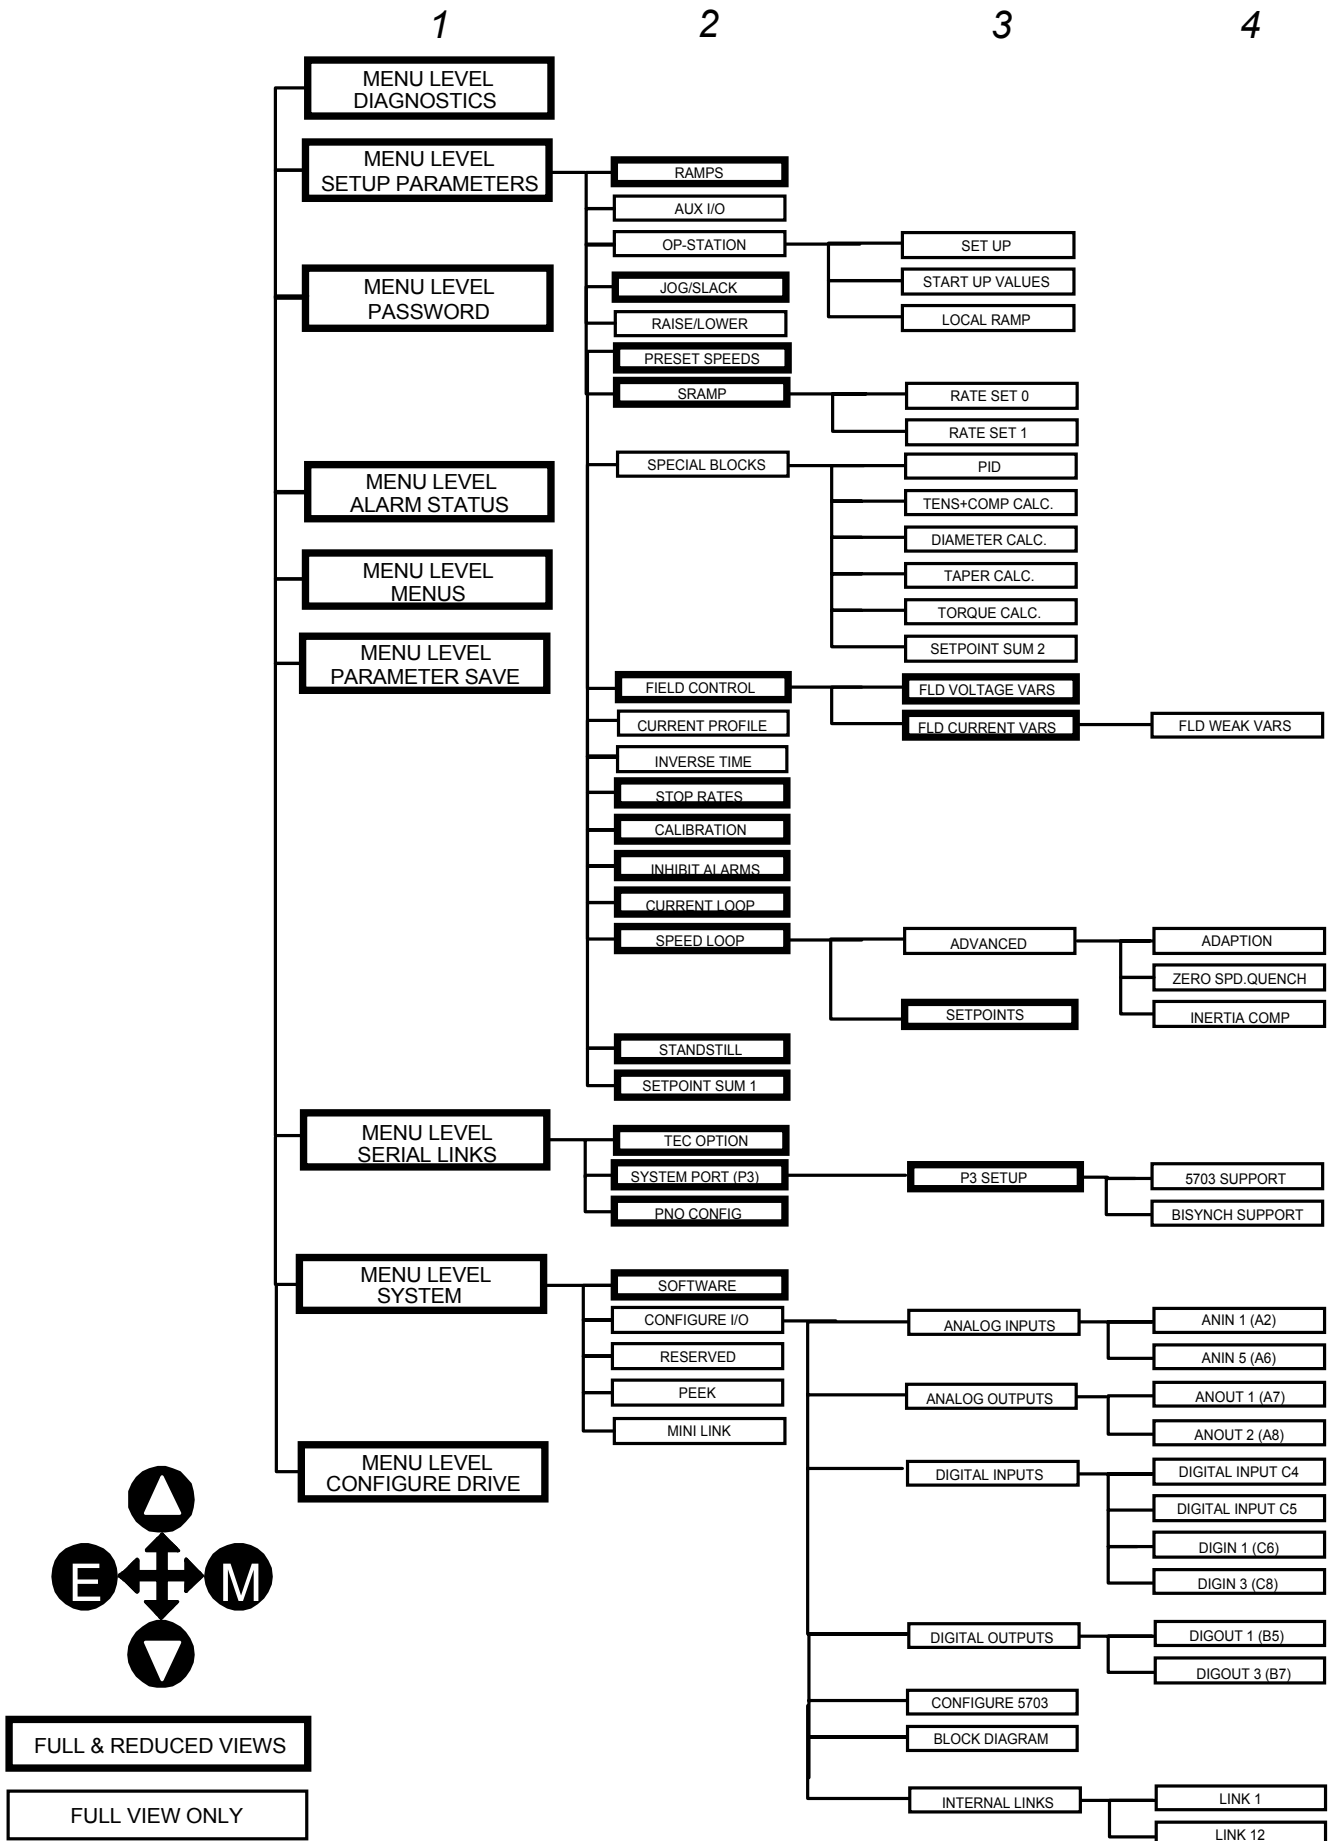


FULL & REDUCED VIEWS

FULL VIEW ONLY

Menu Shortcuts and Special Key Combinations

Quick Tag Information

Hold down the **M** key for approximately ½ second in any Menu System parameter to display the Tag number for that parameter.

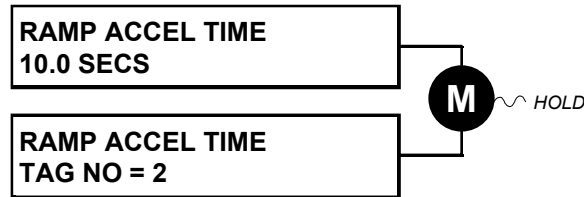

Changing the Product Code (3-button reset)


Note: This is only necessary if you are installing a new control board on an existing stack.

Power-up the drive holding three keys as described below.

Caution

At this point, the 590+ thinks that it is a 35A model. It is vitally important that it is configured for the correct power rating or irreparable damage may occur to the drive when it attempts to run the motor.

Continue to select the correct Product Code rating. Perform a PARAMETER SAVE now (refer to Saving Your Application, page 5-14).

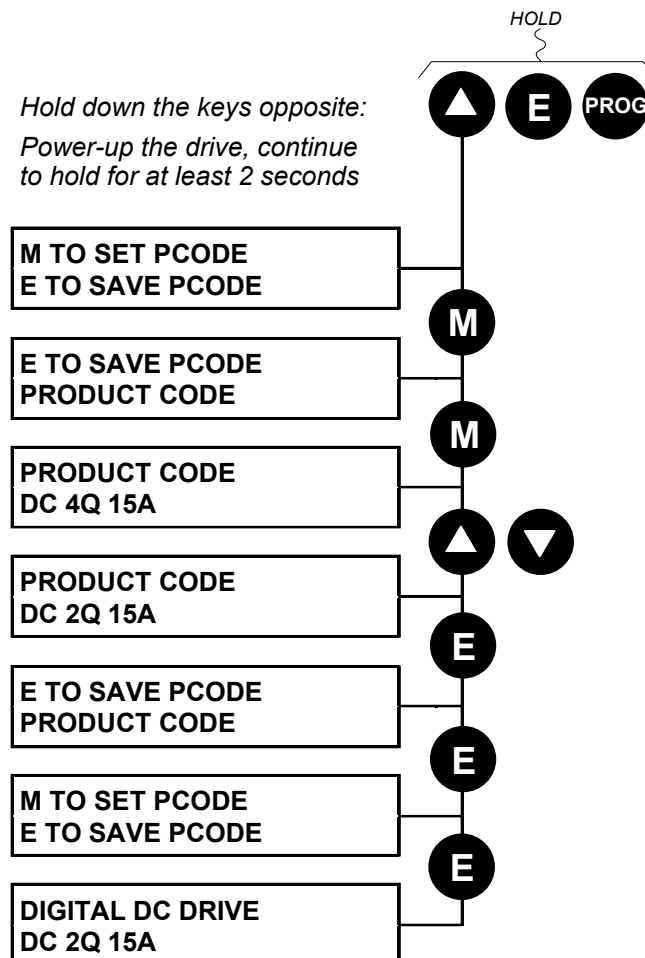

5-10 The Keypad

The available product codes are restricted to the set of codes that match the stack that the control board is fitted to.

If the product code is changed during the 3-button reset, the following parameters are set to their default value for the new product code:

Tag 523	ARMATURE CURRENT
Tag 524	FIELD CURRENT
Tag 201	REGEN MODE


Note: The 3-button reset does not cause the default configuration to be loaded.

Resetting to Factory Defaults (2-button reset)

Power-up the drive holding two keys as described below.

The drive is now configured with the default settings for the existing product code.

Note: The default configuration is not automatically saved. You must perform a **PARAMETER SAVE** (refer to *Saving Your Application*, page 5-14) to retain the default values.

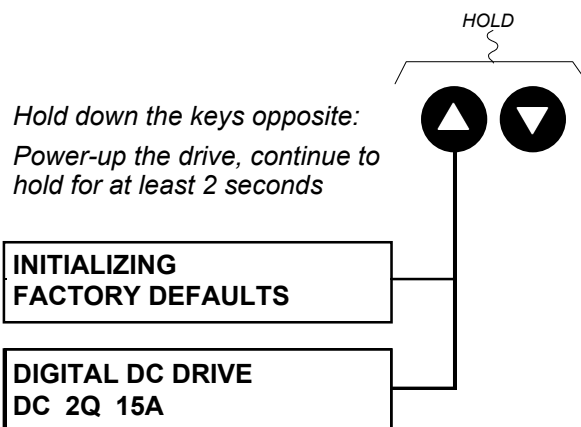



Special Menu Features

Changing the Menu Detail/Viewing Level

For ease of operation the drive can display full or reduced menus. Refer to the Menu System Map, page 5-8 to see how the setting changes the displayed menu.

To change the menu detail, go to MENUS::FULL MENUS and select:

- DISABLED to use the reduced menu system
- ENABLED to use the full menu system (default)

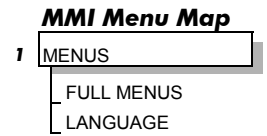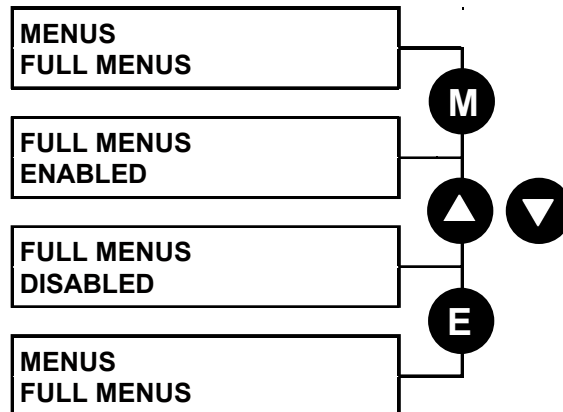

Selecting the Display Language



There is an option to select a different display language.

The choice of display language is selected by MENUS::LANGUAGE parameter.

Note: Remember to perform a PARAMETER SAVE if you need the new language to be saved on power-down.

ENGLISH is the default language and is permanently saved (in Read Only Memory).

Changing the parameter loads the second language (typically French); however, German, Italian and Spanish are available by contacting Eurotherm Drives. When a new language is downloaded it replaces the current second language.

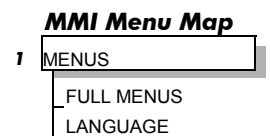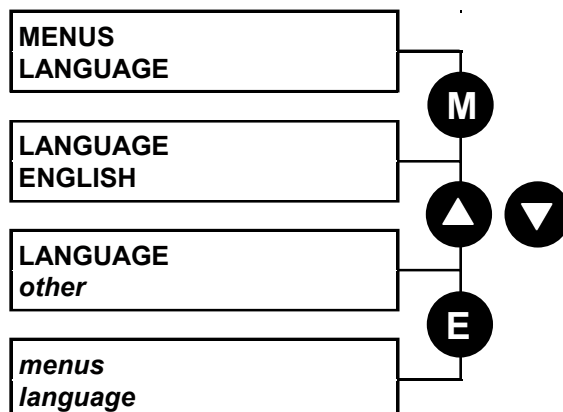

5-12 The Keypad

Password Protection

When in force, the password prevents unauthorised parameter modification by making all parameters “read-only”.


If you attempt to modify a password protected parameter, “PASSWORD ??” will flash on the display.

Password protection is activated/deactivated using the ENTER PASSWORD and CHANGE PASSWORD parameters.

Activated: ENTER PASSWORD and CHANGE PASSWORD values are different

Deactivated: ENTER PASSWORD and CHANGE PASSWORD values are the same


MMI Menu Map

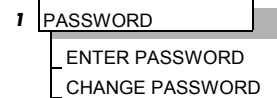

To Activate Password Protection

By default, the password feature is disabled, i.e. both parameters have the same value, 0x0000.


1. Set a new password (anything other than the default value of 0x0000) in the CHANGE PASSWORD parameter, for example 0x0002.
2. The ENTER PASSWORD parameter will now automatically display the new password (e.g. 0x0002). Enter any number other than the password in the ENTER PASSWORD parameter.

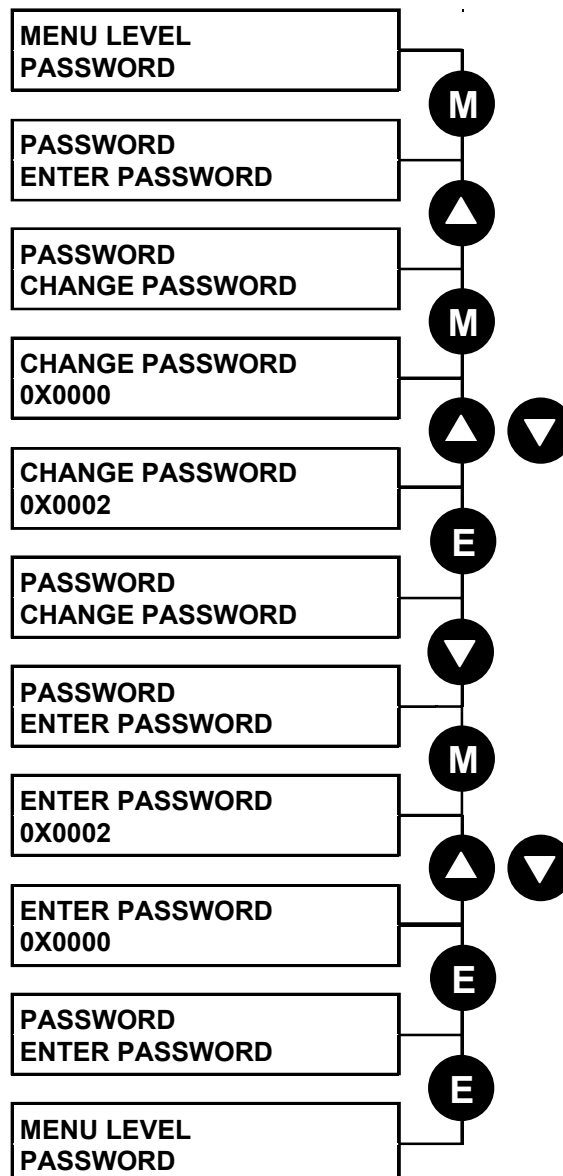

To Deactivate Password Protection

With password protection activated, you can no longer edit the CHANGE PASSWORD parameter until you deactivate the password protection (because the value is hidden by “****”).

1. Enter the current password (e.g. 0x0002) in the ENTER PASSWORD parameter.


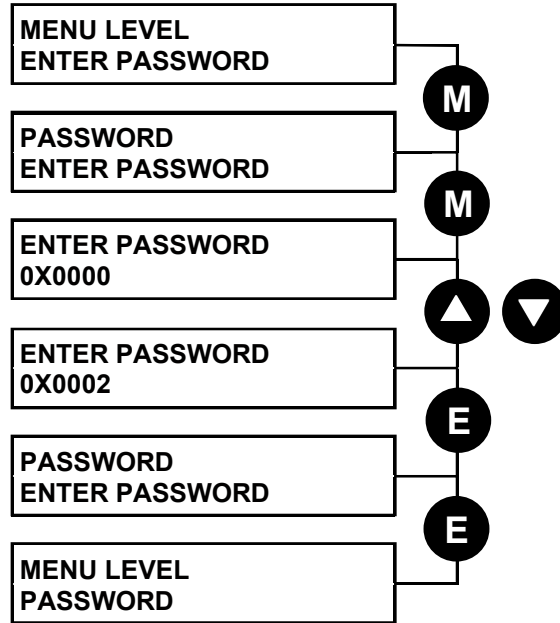


To permanently deactivate password protection, enter the password 0000.



How to Save, Restore and Copy your Settings

Saving Your Application

When saving your application, it is good practice to ensure that CONFIGURE I/O is saved as DISABLED, preventing changes to internal links.

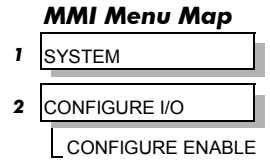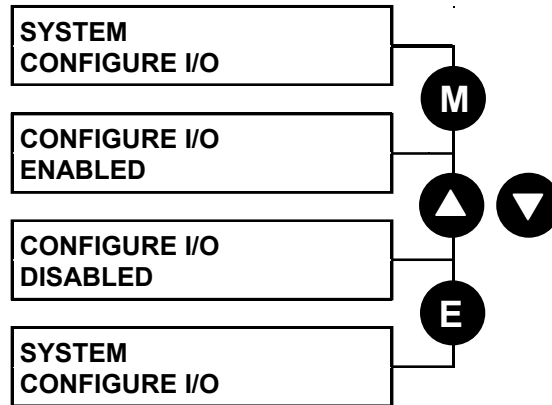

The PARAMETER SAVE menu, available in both the full and reduced view levels, is used to save any changes you make to the MMI settings.

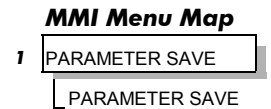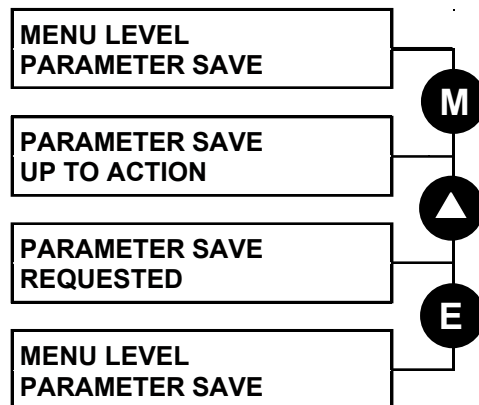

Pressing the ▲ (UP) key, as instructed, saves all parameter values (with one exception, below) in the drive's memory.

Note: The local setpoint parameter value is not saved on power-down.

Restoring Saved Settings

If you are unsure about any changes you have made and you have not yet performed a PARAMETER SAVE, simply switch the drive off, and power-up again. The “last saved” parameter settings will be restored.

Copying an Application

Copying an application requires a host computer connection to the drive’s System Port (P3). Information can then be downloaded to the computer (and uploaded to the drive).

Refer to Chapter 14: “Serial Communications” for further information.

PROGRAMMING YOUR APPLICATION

Programming with Block Diagrams

You can program the drive for specific applications using the MMI or suitable programming tool, such as “ConfigEd Lite” which is Eurotherm Drives’ block programming software.

The drive is supplied with a basic set-up that can be used as a starting point for application-specific programming. This programming could simply involve the inputting of parameter values, or it may require the making or breaking of programmable links/jumpers, which is a feature of this unit.

Block diagram programming provides a visual method of planning the software to suit your application. The basic block diagram is provided in Chapter 16 and shows the software connections consisting of *function blocks* and *links*:

- Each function block contains the parameters required for setting-up a particular processing feature. Sometimes more than one function block is provided for a feature, i.e. for multiple digital inputs.
- Software links are used to connect the function blocks. Each link transfers the value of an output parameter to an input parameter of another (or the same) function block.


Each individual block is a processing feature, i.e. it takes the input parameter, processes the information, and makes the result available as one or more output parameters.

Modifying a Block Diagram

Setup and Configuration Modes

There are two modes of operation used while modifying a block diagram: *Setup* and *Configuration* modes.

The CONFIGURE ENABLE command is used to toggle between these two modes of operation.

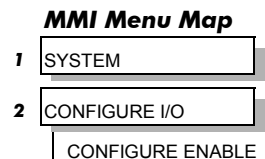

DEFAULT

Setup Mode (CONFIGURE ENABLE = DISABLED)

In setup mode you can change parameter values. The drive can be running or stopped. Note that some parameters can only be changed when the drive is stopped. It is not possible to modify the internal links when the drive is in setup mode.

Configuration Mode (CONFIGURE ENABLE = ENABLED)

In the configuration mode you can modify connections between function blocks in the drive. You can also change parameter values, as above. The drive cannot run in this mode. Output values are not updated.

Making and Breaking Function Block Connections

Note: *Link* ≡ Also known as a *jumper*; functions as a software “wire” to connect two parameters inside the drive.

Links can be changed, added or deleted from a block diagram whilst in the Configuration mode. There are 12 general-purpose links available, each has its own identification number (“link” number). You make a link by setting the link’s “source” and “destination” tags to be the two parameter tag numbers to be linked. The outputs of function blocks are not updated whilst in this mode.

Note: *Links 11 and 12 can be configured to perform one of a number of basic functions upon the source and/or auxiliary source tag values, to be output at the selected destination tag.*

Special Links

In addition to the 12 general-purpose links, there are some links permanently associated with particular input parameters. It is only necessary to enter the source tag number to activate these links. Similarly, there are some links permanently associated with particular output parameters. It is only necessary to enter the destination tag number to activate these links. All these links may be found in the SYSTEM::CONFIGURE I/O menu.

6-2 Programming Your Application

Programming Rules

The following rules apply when programming:

Setup Mode (CONFIGURE ENABLE = DISABLED)

- Function block output parameter values cannot be changed (because they are a result of the function block's processing)
- Function block input parameter values that receive their values from a link cannot be changed (the link will overwrite the value when the drive is running).

Configuration Mode (CONFIGURE ENABLE = ENABLED)

- A link's destination tag must be set to an input parameter (only one link per input parameter).
- A link's source tag may be set to any parameter. Both input and output parameters can be used as a source.
- Disable a link/function block by setting the "destination" and "source" tag to zero.

Saving Your Modifications

Ensure that CONFIGURE ENABLE = DISABLED before performing a PARAMETER SAVE.

If parameter values or links have been modified, the new settings must be saved. The drive will then retain the new settings during power-down. Refer to Chapter 5: "The Keypad" - Saving Your Application.

Understanding the Function Block Description

The following function blocks show the parameter information necessary for programming the drive.

Input parameters are shown on the left-hand side, and output parameters are shown on the right hand side of the block.

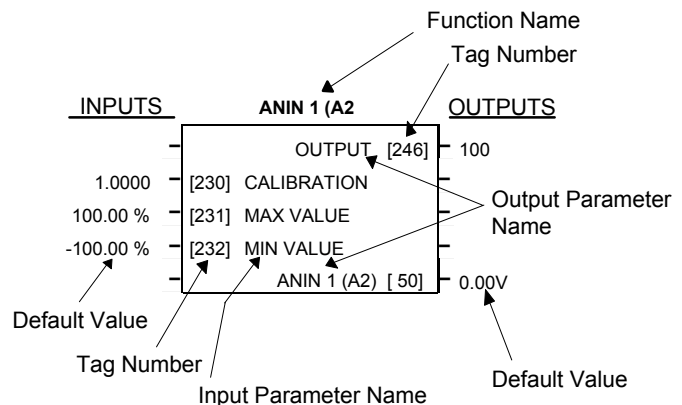


Figure 6-1 Function Block Parameter Information

Function Name	Names the function block
Default Value	The default value of the unmodified factory set-up
Input/Output Parameter Name	The name shown on ConfigEd Lite
Tag Number	Unique identification used for linking and communications

Note: *Decimal Places* - some parameters are held in memory with two decimal places but are displayed with one decimal place. These parameters are indicated in the Parameter Description tables. The Range parameter highlights these with a suffix "(h)".

MMI Menu Map

1	SYSTEM
2	CONFIGURE I/O
3	ANALOG INPUTS
4	ANIN 1 (A2)
4	ANIN 5 (A6)
	CALIBRATION
	MAX VALUE
	MIN VALUE
	DESTINATION TAG

MMI Menu Maps

The function block descriptions include an easy-find menu showing the menu levels and titles encountered to find the appropriate menu title, and the parameters contained in the menu(s).

The menu maps are shown as if the full view level is selected.

Where there is more than one sub-menu, i.e. ANALOG INPUTS as illustrated, the parameters shown will be for the last sub-menu. In many cases, these parameters will reflect the name and number of the last sub-menu.

By intuitively naming the MMI parameters, the Keypad is easier to use, however, the parameter names may vary slightly from function block names.

A function block may contain more than one MMI menu, e.g. FIELD CONTROL. In contrast, the DIAGNOSTICS function block has many fewer parameters than the MMI menu because they are distributed to related function blocks.

6-4 Programming Your Application

Function Block Descriptions


Note: Remember to select the correct mode, Setup or Configuration, whilst editing. Refer to "Modifying a Block Diagram", page 6-1. You must select the full view level to see all of the function blocks (go to the MENUS menu at level 1 on the MMI).

Function Block	Page	Function Block	Page
DIAGNOSTICS	6-23 *	SETUP PARAMETERS continued	
SETUP PARAMETERS		SPEED LOOP	6-72 *
RAMPS	6-63 *	↳ SETPOINTS	
AUX I/O	6-8 *	↳ CONFIGURE DRIVE	
OP STATION	6-52	ADVANCED	6-76
↳ SET UP		↳ ADAPTION	
↳ START UP VALUES		↳ ZERO SPD QUENCH	
↳ LOCAL RAMP		↳ INERTIA COMP	6-40
JOG/SLACK	6-48 *	SETPOINTS	6-72
RAISE/LOWER	6-61 *	STANDSTILL	6-81 *
PRESET SPEEDS	6-59	SETPOINT SUM 1	6-68 *
SRAMP	6-76	PASSWORD (MMI only)	6-54
SPECIAL BLOCKS		ALARM STATUS	6-41
PID	6-55 *	MENUS	6-50
TENS+COMP CALC.	6-91	SERIAL LINKS	6-90
↳ BLOCK DIAGRAM		TEC OPTION	6-90
DIAMETER CALC	6-29	SYSTEM PORT P3	6-86
TAPER CALC	6-88	↳ P3 SETUP	
TORQUE CALC.	6-94	↳ BISYNCH SUPPORT	
↳ BLOCK DIAGRAM		SYSTEM	
SETPOINT SUM 2	6-70	CONFIGURE I/O	
FIELD CONTROL	6-36 *	ANALOG INPUTS	6-5 *
↳ FLD VOLTAGE VARS		ANALOG OUTPUTS	6-7 *
↳ FLD CURRENT VARS		DIGITAL INPUTS	6-31 *
↳ FLD WEAK VARS		↳ DIGITAL INPUT	
↳ CONFIGURE DRIVE		C4 & C5	
CURRENT PROFILE	6-22	DIGITAL OUTPUTS	6-34 *
STOP RATES	6-83 *	CONFIGURE 5703	6-87
CALIBRATION	6-14 *	BLOCK DIAGRAM	6-13
↳ CONFIGURE DRIVE		(MMI only)	
INHIBIT ALARMS	6-41 *	INTERNAL LINKS	6-44
↳ ALARM STATUS		miniLINK	6-51
↳ CALIBRATION		CONFIGURE DRIVE	6-17
CURRENT LOOP	6-19 *	(MMI only)	
↳ CONFIGURE DRIVE		USER FILTER (Reserved)	6-95


* These function blocks contain parameters from the DIAGNOSTICS menu on the MMI.

ANALOG INPUTS

MMI Menu Map

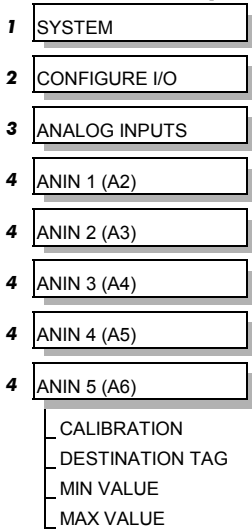

The analog input block is used to scale and clamp the inputs for terminals A2 to A6.

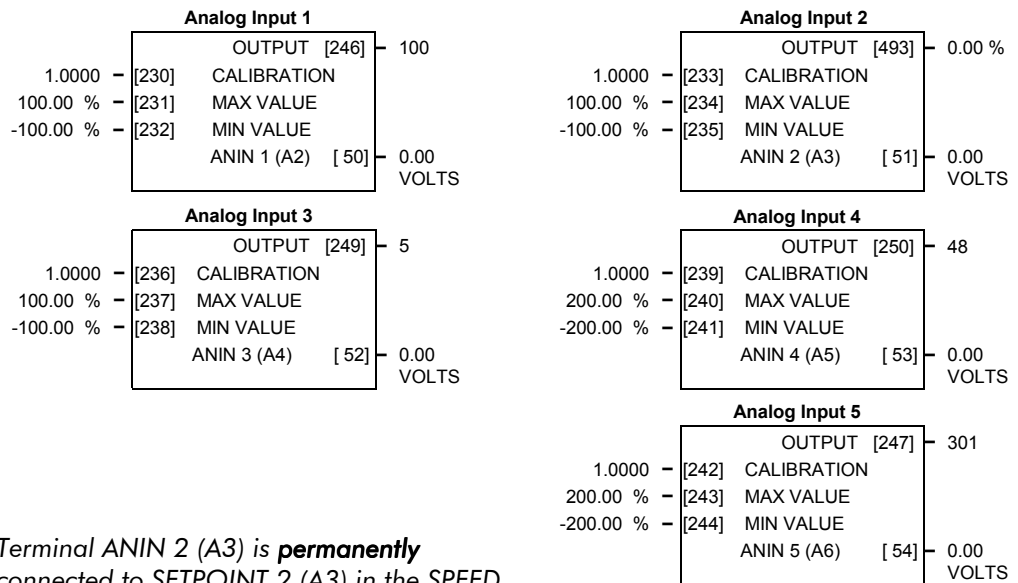

Note: Terminal ANIN 2 (A3) is **permanently** connected to SETPOINT 2 (A3) in the SPEED LOOP function block and to the Current Demand via I DEMAND ISOLATE (the current demand isolate switch) in the CURRENT LOOP function block.

To avoid interference with other drive functions when not required: the parameter RATIO 2 (A3) (Tag 7 in the SPEED LOOP function block) must be set to zero; and the I DM.D. ISOLATE parameter (Tag 119 in the CURRENT LOOP function block) must be set to DISABLED, i.e. selecting the Speed Loop as shown in the Main Block Diagram.

Because ANIN 2 (A3) is scanned synchronously with the current loop (typically every 3.3/2.6ms, 50/60Hz), it should be used for any signal whose response is critical e.g. a trim input from an external positioning system or load share.


Parameter	Tag	Range
OUTPUT (DESTINATION TAG)	246, 249, 250, 247	0 to 639
The destination Tag No. of the scaled analog input value. Refer to “Special Links”, page 6-1.		
OUTPUT	493	— .xx %
This parameter is the output diagnostic for terminal A3 (ANIN 2). Note by default 10V = 100%. To obtain a different range, adjust the CALIBRATION, MAX VALUE and MIN VALUE parameters. Use this parameter to access the calibrated value of ANIN 2 (via an internal link for example).		
CALIBRATION	230, 233, 236, 239, 242	-3.0000 to 3.0000
The analog input scaling ratio. For a value of 1.0, 10V = 100%.		
MAX VALUE	231, 234, 237, 240, 243	-300.00 to 300.00 %
The maximum value of the scaled analog input.		
MIN VALUE	232, 235, 238, 241, 244	-300.00 to 300.00 %
The minimum value of the scaled analog input.		
ANIN 1 (A2) to ANIN 5 (A6)	50, 51, 52, 53, 54	xxx.xx VOLTS
Refer to the DIAGNOSTICS function block description, page 6-23.		

6-6 Programming Your Application

ANALOG INPUTS

Functional Description

Configurable Analog Inputs

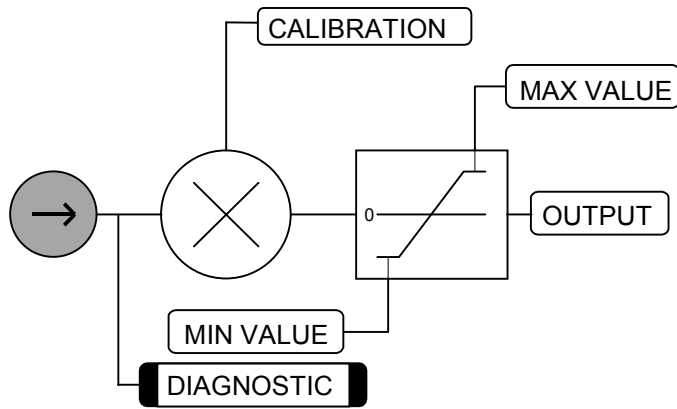


ANALOG OUTPUTS

MMI Menu Map

- 1 SYSTEM
- 2 CONFIGURE I/O
- 3 ANALOG OUTPUTS
- 4 ANOUT 1 (A7)
 - % TO GET 10V
 - SOURCE TAG
 - OFFSET
 - MODULUS

This function block converts the demand percentage into 0-10V, suitable for driving the analog output electronics of the drive.

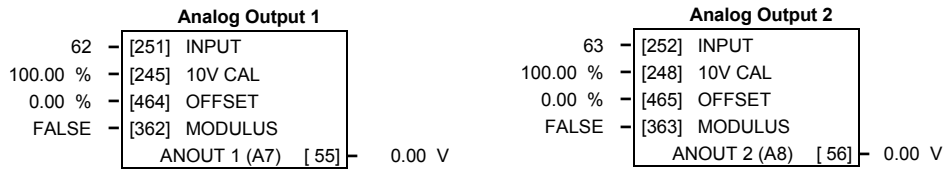


Parameter	Tag	Range
INPUT (SOURCE TAG) The source Tag No. of the output value.	251, 252	0 to 639
10V CAL (% TO GET 10V) Scaler value which produces 10V output. Set 10V CAL to be 50% to get ±10V out for ±50% in.	245, 248	-300.00 to 300.00 %
OFFSET Offset value added to the normal output value after the scaler and before the modulus.	464, 465	-100.00 to 100.00 %
MODULUS Unipolar analog output enable. If TRUE, then -10% gives +1V out.	362, 363	FALSE / TRUE
ANOUT 1 (A7) to ANOUT 2 (A8)	55, 56	xxx.xx V (h)

Refer to the *DIAGNOSTICS* function block description, page 6-23.

Functional Description

Configurable Analog Outputs

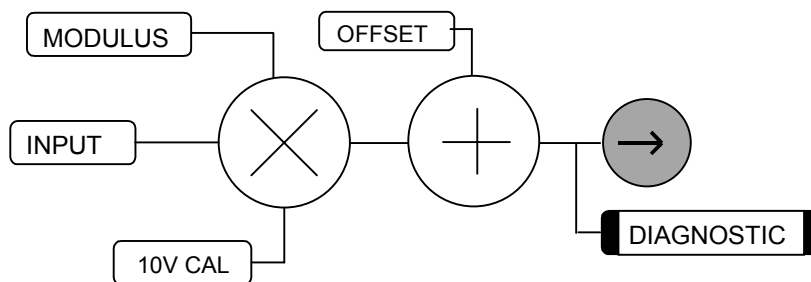

6-8 Programming Your Application

AUX I/O

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 AUX I/O
 - AUX START
 - AUX JOG
 - ENABLE
 - AUX DIGOUT 1
 - AUX DIGOUT 2
 - AUX DIGOUT 3
 - ANOUT 1
 - ANOUT 2
 - JOG/SLACK
 - AUX ENABLE
 - REM.SEQUENCE
 - REM.SEQ.ENABLE
 - SEQ STATUS

The auxiliary I/O parameters are primarily intended to extend the functionality of the serial links by allowing them access to the drive analog and digital terminals.

START, JOG and ENABLE from digital input terminals C3, C4 and C5 respectively connect directly to the AUX I/O block. Output signals are then sent to the drive start and drive enable logic and the JOG/SLACK function block.

Aux I/O		
	START (C3)	[68] OFF
	DIGIN (C4)	[69] OFF
	DIGIN (C5)	[70] OFF
	SEQ STATUS	[537] 0x0000
	REM SEQUENCE	[536] 0x0000
ON	[161] AUX START	
ON	[227] AUX JOG	
ON	[168] AUX ENABLE	
OFF	[94] AUX DIGOUT 1	
OFF	[95] AUX DIGOUT 2	
OFF	[96] AUX DIGOUT 3	
0.00 %	[128] ANOUT 1	
0.00 %	[129] ANOUT 2	
OFF	[496] JOG/SLACK	
OFF	[497] ENABLE CURRENT	
FALSE	[535] REM. SEQ. ENABLE	


Parameter	Tag	Range
START (C3)	68	OFF / ON
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
DIGIN (C4)	69	OFF / ON
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
DIGIN (C5)	70	OFF / ON
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
SEQ STATUS	537	0x0000 to 0xFFFF
An input data word that reports the status of the important system flags that can be read over a filed bus. (Refer to “Remote Sequencing Command” below).		
REM. SEQUENCE	536	0x0000 to 0xFFFF
(REM.SEQUENCE)		
A control word that allows the device to be operated remotely over a field bus. REM. SEQ. ENABLE must be TRUE to enable this function. (Refer to “Remote Sequencing Command” below).		
AUX START	161	OFF / ON
Software Start/Run command. Auxiliary Start is ANDed with the Start input , C3, to generate Drive Start. This should normally be left ON.		
AUX JOG	227	OFF / ON
Software Jog command. Auxiliary Jog is ANDed with the Jog input , Tag 496 (by default C4), to generate Drive Jog. This should normally be left ON.		
AUX ENABLE	168	OFF / ON
Software Enable command. Auxiliary Enable is ANDed with the Enable input , Tag 497 (by default C5), to generate Drive Enable. This should normally be left ON.		

Parameter	Tag	Range
AUX DIGOUT 1	94	OFF / ON
Software digital output 1. For example, to directly drive the configurable digital output DIGOUT1, connect the Source of DIGOUT1 to this parameter, Tag 94.		
AUX DIGOUT 2	95	OFF / ON
Software digital output 2. For example, to directly drive the configurable digital output DIGOUT2, connect the Source of DIGOUT2 to this parameter, Tag 95.		
AUX DIGOUT 3	96	OFF / ON
Software digital output 3. For example, to directly drive the configurable digital output DIGOUT3, connect the Source of DIGOUT3 to this parameter, Tag 96.		
ANOUT 1	128	-100.00 to 100.00 %
Software analog output 1. For example, to directly drive the configurable analog output ANOUT1, connect the Source of ANOUT1 to this parameter, Tag 128. ANOUT 1 can also be used as a general "staging post" for connecting inputs to outputs. For example, connect Analog Input 1 (A2) directly to Analog Output 1 (A7)		
ANOUT 2	129	-100.00 to 100.00 %
Software analog output 2. For example, to directly drive the configurable analog output ANOUT2, connect the Source of ANOUT2 to this parameter, Tag 129. ANOUT 2 can also be used as a general "staging post" for connecting inputs to outputs. For example, connect Analog Input 1 (A2) directly to Analog Output 2 (A8)		
JOG/SLACK	496	OFF / ON
Main jog input which is connected to DIGITAL INPUT C4 by default. The Jog input is ANDed with Auxiliary Jog input , Tag 227, to generate Drive Jog.		
ENABLE CURRENT	497	OFF / ON
(ENABLE) Enable input which is connected to DIGITAL INPUT C5 by default. The Enable input is ANDed with Auxiliary Enable input , Tag 168, to generate Drive Enable.		
REM. SEQ. ENABLE	535	FALSE / TRUE
(REM.SEQ.ENABLE) (Refer to "Remote Sequencing" below). When enabled, the drive will accept Sequencing commands exclusively from the REM. SEQUENCE parameter, Tag 536. FALSE - disables REM. SEQUENCE TRUE - enables REM. SEQUENCE		

6-10 Programming Your Application

AUX I/O

Functional Description

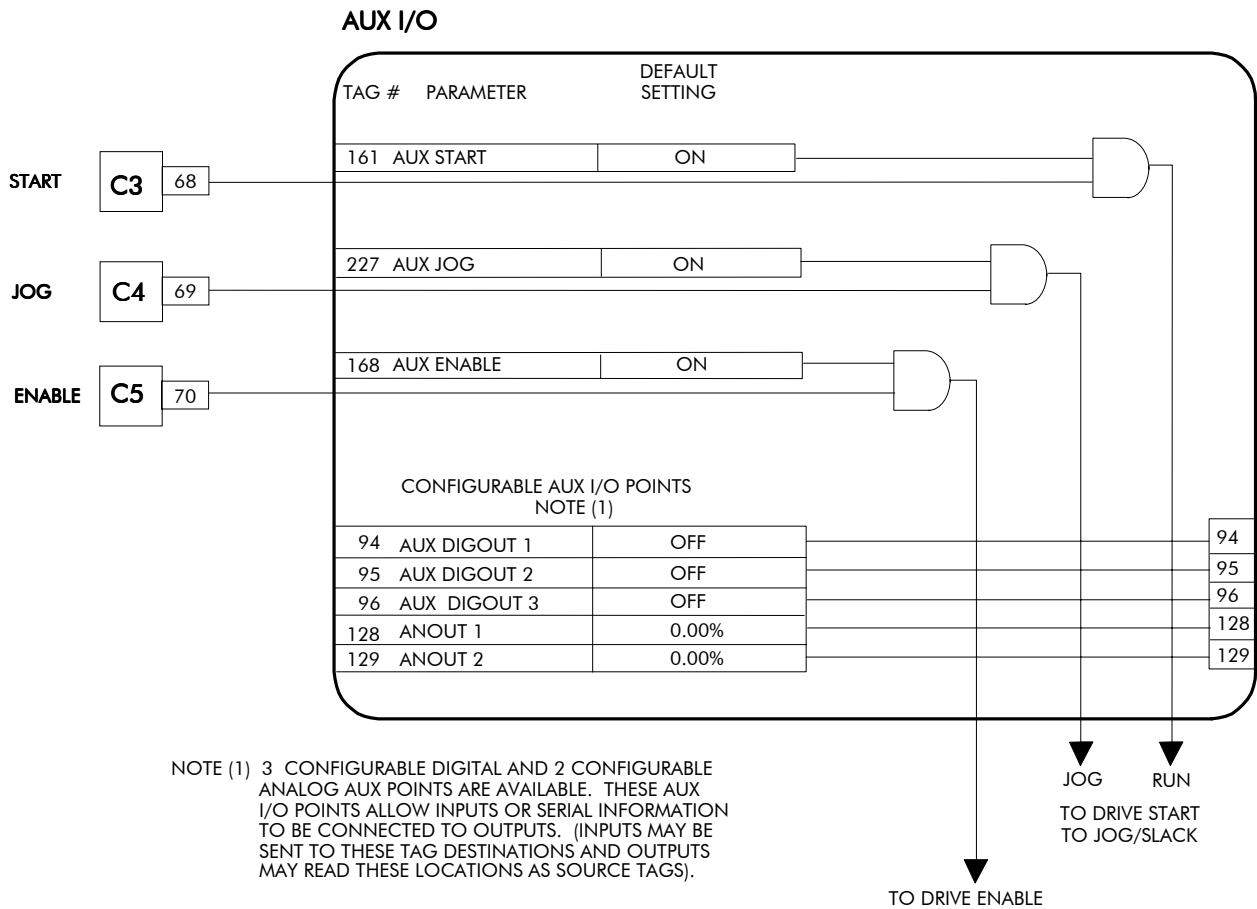

NOTE (1) 3 CONFIGURABLE DIGITAL AND 2 CONFIGURABLE ANALOG AUX POINTS ARE AVAILABLE. THESE AUX I/O POINTS ALLOW INPUTS OR SERIAL INFORMATION TO BE CONNECTED TO OUTPUTS. (INPUTS MAY BE SENT TO THESE TAG DESTINATIONS AND OUTPUTS MAY READ THESE LOCATIONS AS SOURCE TAGS).

Remote Sequencing Command

REM. SEQUENCE : Tag 536, Mnemonic "ow", Default = 0x0000 ("0x" denotes a Hexadecimal value)

Note: Refer to the RS485 Communications Interface Technical Manual, HA463560 on the website, for information about the EI Bisynch ASCII communications protocol.

Reserved bits are undefined when read and should be set Zero when written.

Bit Number	Mask	Name	Comment
0 (lsb)	0x0001	Remote Enable	
1	0x0002	Remote Start	
2	0x0004	Remote Jog	
3	0x0008	Remote Jog Mode	Selects Jog Speed
4	0x0010	Reserved	
5	0x0020	Reserved	
6	0x0040	Reserved	
7	0x0080	Reserved	
8	0x0100	Remote Alarm Ack	Alarm Acknowledge
9	0x0200	Remote/Remote Trip	Remote Trip (High for OK)
10	0x0400	Reserved	
11	0x0800	Reserved	
12	0x1000	Reserved	
13	0x2000	Reserved	
14 (msb)	0x4000	Reserved	
15 (msb)	0x8000	Reserved	

Useful Commands using EI Bisynch ASCII - REM. SEQUENCE

Tag 536, Mnemonic "ow", for example:

	/Remote Trip	Alarm Ack	Jog Mode	Jog	Start	Enable	Command
Start Drive	1	0	X	0	1	1	ow>0203
Stop Drive	1	0	X	0	0	1	ow>0201
Disable Drive	1	0	X	X	X	0	ow>0200
Jog Setpoint 1	1	0	0	1	0	1	ow>0205
Jog Setpoint 2	1	0	1	1	0	1	ow>020D
Remote Trip	0	0	X	X	X	X	ow>0000
Reset Alarm a)	1	1	0	0	0	0	ow>0300
Reset Alarm b)	1	0	X	0	0	0	ow>0200

Healthy Output Bit 11 goes high

Sequence Status

SEQ STATUS : Tag 537, Mnemonic "ox" (Read Only)

Reserved bits are undefined when read.

Bit Number	Mask	Name	Comment
0 (lsb)	0x0001	Coast Stop	Coast Stop demanded
1	0x0002	Program Stop	Program (Fast) Stop demanded
2	0x0004	Disable	/Enable demanded
3	0x0008	Run	Drive Start demanded
4	0x0010	Jog	Drive Jog demanded
5	0x0020	Reserved	Undefined
6	0x0040	Alarm	Unacknowledged alarm (Health Store != 0)
7	0x0080	Reserved	Undefined
8	0x0100	Running	Contactors in and drive ready to be enabled
9	0x0200	Enabled	Drive is enabled.
10	0x0400	Zero Speed	Zero speed Output TAG 17
11	0x0800	Healthy Output	Healthy Output TAG 12
12	0x1000	Ready	Ready Output TAG 559
13	0x2000	Reserved	Undefined
14	0x4000	Reserved	Undefined
15 (msb)	0x8000	Reserved	Undefined

Useful Bit Patterns using SEQ STATUS

Tag 537, Mnemonic "ox" (Read Only) - for example:

Sequence Status	Comment
0x1B0B	Running
0x044B	Tripped, Run High
0x0447	Tripped, Run Low, Enable Low
0x0C47	Trip Acknowledged, Healthy output TRUE Alarm stays high until drive is restarted.

AUX I/O

Drive Enable

To Enable the drive in remote mode the following diagnostic must be TRUE:

REM.SEQ.ENABLE[535] and REM SEQUENCE [536] BIT 1.

Drive Start

To Start the drive in remote mode the following diagnostic must be TRUE:

REM.SEQ.ENABLE[535] and REM SEQUENCE [536] BIT 0.

Drive Jog

To Jog the drive in remote mode the following diagnostic must be TRUE:

REM.SEQ.ENABLE[535] and REM SEQUENCE [536] BIT 3.

Jog Mode

To select the jog setpoint in remote mode the following diagnostic must be TRUE:

REM.SEQ.ENABLE[535] and REM SEQUENCE [536] BIT 4.

ACK Alarm

Alarms are latched while ACK ALARM is FALSE.

To Acknowledge an alarm when in Remote Sequencing, use REM . SEQUENCE [536] BIT 8.

Remote Trip Alarm

The Remote trip alarm is designed to signal a network fault to the drive. When using the Profibus interface, all outputs are set to zero on link fail. If one of the outputs is REM SEQUENCE [536] the drive will trip after a delay specified by REM TRIP DELAY (541). The Drive will then need a low -> high transition on ACK Alarm and Start before the drive may run again.

REM TRIP INHIBIT [540]	REM TRIP DELAY [541]	REMOTE TRIP [542]
Disable remote trip.	Delay before trip becomes active after bit being cleared.	Status of the Remote trip alarm, OK, Warning (Remote Seq Bit 9 FALSE and delay not expired), Active (Trip active, timer expired and remote not inhibited).

BLOCK DIAGRAM (MMI only)

MMI Menu Map

- 1 SYSTEM
- 2 CONFIGURE I/O
- 3 BLOCK DIAGRAM
 - RAMP O/P DEST
 - SPT SUM 1 DEST
 - PID O/P DEST
 - DIAMETER
 - TAPER
 - SETPOINT SUM 2
 - POS. I CLAMP
 - NEG. I CLAMP
 - TENS+COMP CALC.
 - RAISE/LOWER DEST
 - PRESET DEST
 - SRAMP DEST

Use this menu to execute the named function blocks.

The parameters in Block Diagram connect the outputs of RAISE/LOWER, RAMPS, SETPOINT SUM 1, and the Special Blocks (MMI menu) function blocks to destinations as required.

These function blocks are only executed when the destinations are connected to a non-zero tag. If a function block is not required, set its destination tag to zero. This causes the processor to ignore the function and reduces processor loading.

Parameter	Tag	Range
RAMP O/P DEST	293	0 to 639
Refer to RAMPS, page 6-63.		
SPT SUM 1 DEST	294	0 to 639
Refer to SETPOINT SUM 1, page 6-68.		
PID O/P DEST	400	0 to 639
Refer to PID, page 6-55.		
DIAMETER	431	0 to 639
Refer to DIAMETER CALC., page 6-29.		
TAPER	442	0 to 639
Refer to TAPER CALC., page 6-88.		
SETPOINT SUM 2	450	0 to 639
Refer to , SETPOINT SUM 2, page 6-70.		
POS. I CLAMP	435	0 to 639
Refer to CURRENT LOOP, page 6-19.		
NEG. I CLAMP	436	0 to 639
Refer to CURRENT LOOP, page 6-19.		
TENS+COMP CALC.	478	0 to 639
Refer to TENS+COMP CALC., page 6-91.		
RAISE/LOWER DEST	260	0 to 639
Refer to RAISE/LOWER, page 6-61.		
PRESET DEST	573	0 to 639
Refer to PRESET, page 6-59.		
SRAMP DEST	590	0 to 639
Refer to SRAMP, page 6-78.		

CALIBRATION

MMI Menu Map

1	SETUP PARAMETERS
2	CALIBRATION
	CONFIGURE ENABLE
	NOM MOTOR VOLTS
	ARMATURE CURRENT
	FIELD CURRENT
	ARMATURE V CAL.
	IR COMPENSATION
	ENCODER RPM
	ENCODER LINES
	ANALOG TACH CAL
	ZERO SPD. OFFSET
	ARMATURE I (A9)
	SPDFBK ALM LEVEL
	STALL THRESHOLD
	STALL TRIP DELAY
	REM TRIP DELAY
	OVERSPEED LEVEL
	FIELD I CAL.

This function block contains motor-specific parameters.

When CONFIGURE ENABLE = TRUE, the operation of the Block Diagram is suspended and all Operator Station LEDs will flash.

Calibration

	TERMINAL VOLTS [57]	0.00%
	TACH INPUT (B2) [58]	0.0%
	ENCODER [59]	0 RPM
	BACK EMF [60]	0.00%
	FIELD FBK. [181]	0.0%
1.0000	[20] ARMATURE V CAL.	
0.00 %	[21] IR COMPENSATION	
1.0000	[23] ANALOG TACH CAL	
0.00 %	[10] ZERO SPD. OFFSET	
BIPOLAR	[25] ARMATURE I (A9)	
50.0 %	[180] SPDFBK ALM LEVEL	
95.00 %	[263] STALL THRESHOLD	
480.0 s	[224] STALL TRIP DELAY	
125.00 %	[188] OVERSPEED LEVEL	
1.0000	[182] FIELD I CAL	
0x0000	[267] POSITION COUNT	
1	[275] POSITION DIVIDER	


MMI Menu Map

1	CONFIGURE DRIVE
	CONFIGURE ENABLE
	NOM MOTOR VOLTS
	ARMATURE CURRENT
	FIELD CURRENT
	ENCODER LINES
	ENCODER RPM

Parameter	Tag	Range
TERMINAL VOLTS	57	xxx.xx % (h)
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
TACH INPUT (B2)	58	xxx.xx % (h)
(RAW TACH INPUT)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
ENCODER	59	xxxxx RPM
(RAW ENCODER RPM)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
BACK EMF	60	xxx.xx % (h)
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
FIELD FBK.	181	xxx.xx %
(RAW FIELD FBK)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
ARMATURE V CAL.	20	0.9800 to 1.1000
Trim adjustment of the motor armature volts to give exactly 100% at the required actual voltage value (e.g. 460V etc.).		
Note: - Primary voltage calibration is achieved by adjusting the NOM MOTOR VOLTS parameter (CONFIGURE DRIVE function block).		
IR COMPENSATION	21	0.00 to 100.00 %
Compensation for motor IR drop to improve regulation when using armature voltage feedback as the speed feedback. This is also used in field weakening applications to improve dynamic response and speed holding stability, refer to "Initial Start-up Routine" in Chapter 4, Item 16.		
ANALOG TACH CAL	23	0.9800 to 1.1000
Trim adjustment of the motor speed to give exactly 100% at the required actual speed value (e.g. 1500 RPM etc). <i>Note: Primary tacho calibration is achieved by adjusting SW1 - 3 on the tacho calibration board.</i>		
ZERO SPD. OFFSET	10	-5.00 to 5.00 %
If the speed feedback is not zero when the drive is stationary (possibly due to hardware offsets etc.) the setting of this parameter to the value of the offset will result in a zero reading from the speed feedback.		

CALIBRATION

Parameter	Tag	Range
ARMATURE I (A9)	25	UNIPOLAR / BIPOLAR
Selects operation of the current meter output (terminal A9), either bipolar or unipolar.		
SPDFBK ALM LEVEL	180	0.0 to 100.0 % (h)
The speed feedback alarm compares speed feedback to armature voltage. The alarm level is the threshold which the difference between the two signals should exceed for the alarm to activate.		
STALL THRESHOLD	263	0.00 to 200.00 %
Stall comparator current feedback threshold level.		
STALL TRIP DELAY	224	0.1 to 600.0 s
Stall comparator time-out delay before stall output becomes true.		

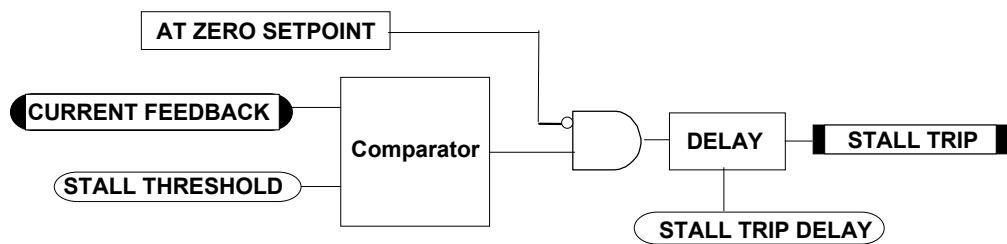


OVERSPEED LEVEL	188	0.00 to 200.00 %
Overspeed alarm threshold. Note: SPEED FEEDBACK is internally clamped to 110%. when ARM VOLTS FBK or ANALGO TACH are selected.		
FIELD I CAL	182	0.9800 to 1.1000
(FIELD I CAL.) Trim adjustment of the motor field current to give exactly 100% at the required actual current value (e.g. 1.5A etc.). Note:- Primary field calibration is achieved by adjusting the FIELD CURRENT parameter (CONFIGURE DRIVE function block).		
POSITION COUNT	267	0x0000 to 0xFFFF
<i>Reserved parameter for use by Eurotherm Drives.</i> The POSITION COUNT and POSITION DIVIDER parameters allow basic position control using a PLC (programmable logic controller), the optional COMMS techbox, and a speed feedback encoder mounted on the motor shaft. The position counter counts pulses is hexadecimal format. It begins incrementing from 0000 when you start the drive in the forward direction, then rolls over to 0000 on the count after FFFF. If you start and run the drive in reverse, the counter begins at 0000, rolls over to FFFF and then counts down to 0000. On reaching 0000, the counter rolls over to FFFF on the next count. After the drive is stopped and/or restarted, the counter retains its count. To read the position count using a PLC, enable CONFIGURE ENABLE and connect the POSITION COUNT output in the CALIBRATION function block to a free serial PNO slot (PNO 112 to 120) using ConfigEd Lite or the MMI. The PNO parameters are located in the SERIAL LINKS::PNO CONFIG menu.		
POSITION DIVIDER	275	1 to 3000
<i>Reserved parameter for use by Eurotherm Drives.</i> The divider provides scaling capability. The divider scales the 1000 pulses per revolution provided by the encoder before the pulses reach the position counter. A separate register accumulates the remainders.		

CALIBRATION

Functional Description

CALIBRATION

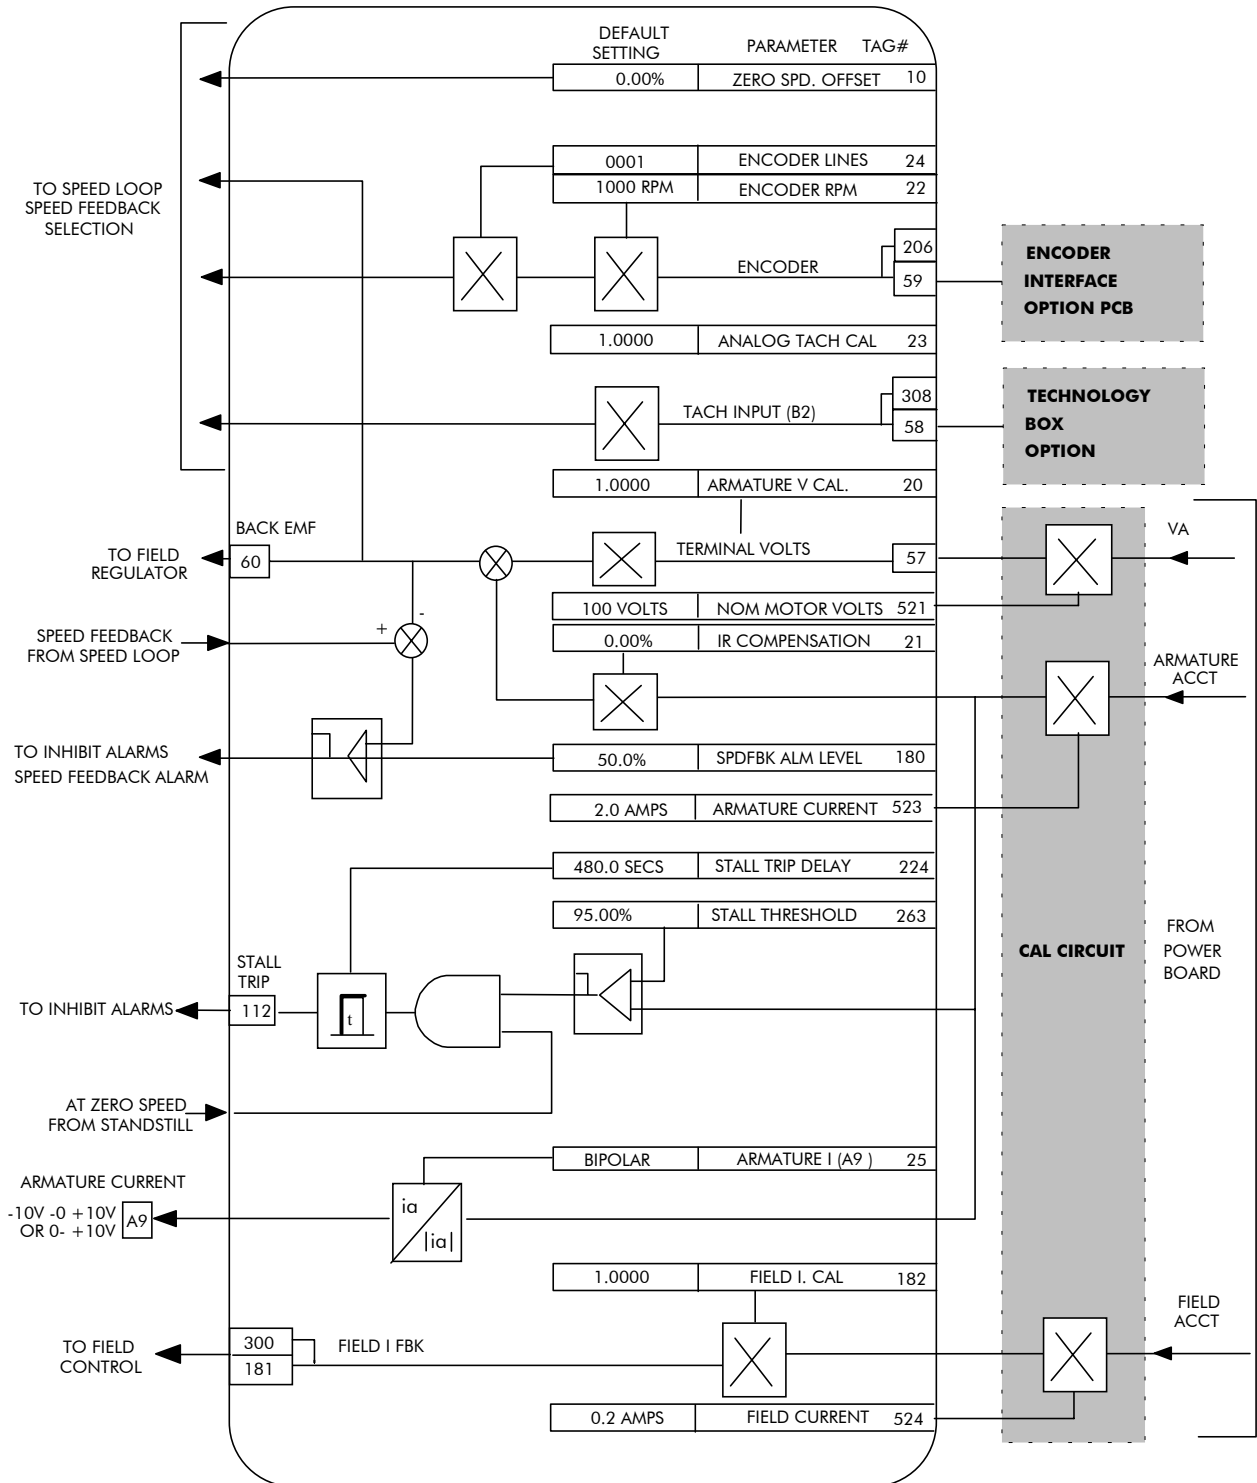

CONFIGURE DRIVE

MMI Menu Map

1 CONFIGURE DRIVE
CONFIGURE ENABLE
NOM MOTOR VOLTS
ARMATURE CURRENT
FIELD CURRENT
FLD.CTRL MODE
FLD.VOLTS RATIO
MAIN CURR. LIMIT
AUTOTUNE
SPD FBK SELECT
ENCODER LINES
ENCODER RPM
ENCODER SIGN
SPD.INT.TIME
SPD.PROP.GAIN

This block contains many of the parameters required for configuring the drive.

CONFIGURE ENABLE: The operation of the Block Diagram is suspended and all Operator Station LEDs will flash whilst CONFIGURE ENABLE = TRUE.

Note: The CONFIGURE ENABLE parameter is also available in the following MMI menus for ease of use:

CALIBRATION
CONFIGURE I/O

Configure Drive	
100 VOLTS	[521] NOM MOTOR VOLTS
2.0 AMPS	[523] ARMATURE CURRENT
0.2 AMPS	[524] FIELD CURRENT
VOLTAGE	[209] FIELD CONTROL MODE
90.00%	[210] FIELD VOLTAGE RATIO
ARM VOLTS FBK	[47] SPEED FBK SEL
1000 RPM	[22] ENCODER RPM
1000	[24] ENCODER LINES
POSITIVE	[49] ENCODER SIGN

Parameter	Tag	Range
NOM MOTOR VOLTS	521	100 to 875 VOLTS
Sets the 100% value for Armature Volts VA. Set this value to match the motor in use. (Refer to ARMATURE V CAL in the CALIBRATION function block).		
ARMATURE CURRENT	523	drive dependent AMPS
Sets the 100% value for Armature Current IA. Set this value to match the motor in use.		
FIELD CURRENT	524	drive dependent AMPS
Sets the 100% value for Field Current IF. Set this value to match the motor in use. Note: this should be set to a minimum value if in Field Voltage control - see FLD. CTRL MODE.		
FLD. CTRL MODE	209	See below
(FLD.CTRL MODE)		
There are two field control modes:		
(a) Field Voltage Control is an open loop phase angle control to give a certain voltage output.		
(b) Field Current Control is a closed loop current control for accurate field control or expansion to field weakening.		
VOLTAGE CONTROL CURRENT CONTROL		
FIELD VOLTAGE RATIO	210	0.00 to 100.00 % (h)
(FLD. VOLTS RATIO)		
This parameter controls the output voltage from the open loop voltage control. The ratio is defined as the DC output voltage over the AC RMS input voltage.		
The default setting is equivalent to a single-phase diode rectifier.		
SPEED FBK SEL	47	See below
(SPEED FBK SELECT)		
Determines the source of the speed feedback signal. The default, ARM VOLTS FBK, uses internal circuitry to derive the speed feedback. The other selections require the appropriate external device to provide the feedback signal.		
0 : ARM VOLTS FBK 1 : ANALOG TACH 2 : ENCODER 3 : ENCODER/ANALOG - for Eurotherm Drives use		
ENCODER RPM	22	0 to 6000 RPM
Motor top speed setting (100%) when using encoder feedback.		
ENCODER LINES	24	10 to 5000
The 5901 Microtach has 1000 lines per revolution as standard. Proprietary encoders of other specifications can be normalised by setting this parameter as appropriate.		
ENCODER SIGN	49	NEGATIVE / POSITIVE
Since the encoder feedback cannot be reversed electrically, the signal polarity can be reversed by the control software.		

6-18 Programming Your Application

CONFIGURE DRIVE

Parameter	Tag	Range
CONFIGURE ENABLE	39	DISABLED / ENABLED
Selects Setup Mode (DISABLED) or Configuration Mode (ENABLED). Refer to “Modifying a Block Diagram”, page 6-1.		
MAIN CURR. LIMIT	421	
Refer to CURRENT LOOP, page 6-19.		
AUTOTUNE	18	
Refer to CURRENT LOOP, page 6-19.		
INT. TIME CONST.	13	
(SPD. INT. TIME)		
Refer to SPEED LOOP, page 6-72.		
PROP. GAIN	14	
(SPD.PROP.GAIN)		
Refer to SPEED LOOP, page 6-72.		

CURRENT LOOP

MMI Menu Map

- 1 SETUP PARAMETERS
 - 2 CURRENT LOOP
 - _ MAIN CURR. LIMIT
 - _ PROP. GAIN
 - _ INT. GAIN
 - _ AUTOTUNE
 - _ FEED FORWARD
 - _ DISCONTINUOUS
 - _ ADDITIONAL DEM
 - _ BIPOLAR CLAMPS
 - _ REGEN MODE
 - _ MASTER BRIDGE
 - _ POS. I CLAMP
 - _ NEG. I CLAMP
 - _ I DMD. ISOLATE
 - _ CUR. LIMIT/SCALER

Use this to setup the drive's conventional current/torque loop.

It takes the current demand, imposes limits through four clamps, and then uses a PI loop to control the output.

The four separate clamps - current profile, inverse time overload, bipolar clamps and main current clamp - the clamps are in series and lowest clamp takes effect. The resultant clamp value can be seen in the diagnostics ACTUAL POS I LIM and ACTUAL NEG I LIM.

The inputs to this block are: the current demand from the speed loop or terminal A3 (selected via I DMD. ISOLATE); the current limit clamps from CURRENT PROFILE and INVERSE TIME (note that the bipolar clamps and main current clamp are resident in the CURRENT LOOP block); current feedback from CALIBRATION.

The default configuration uses DIGIN 1 and DIGIN 3 for switching modes (BIPOLAR CLAMPS and I DMD. ISOLATE respectively), ANIN 4 and ANIN 5 for setting current clamps (NEG. I CLAMPS and POS. I CLAMPS respectively).

A non-regenerative controller should have REGEN MODE set to DISABLED for proper motor control.

Current Loop		
AT CURRENT LIMIT	[42]	FALSE
IA DEMAND	[66]	0.00 %
IA FEEDBACK	[65]	0.00 %
IA FEEDBACK	[538]	0.0 AMPS
IF FEEDBACK	[539]	0.0 AMPS
AUTOTUNE	[18]	OFF
ILOOP SUSPEND	[46]	FALSE
MASTER BRIDGE	[527]	OFF
100.00 %	[15] CUR. LIMIT/SCALER	
110.00 %	[421] MAIN CURR. LIMIT	
45.00	[16] PROP GAIN	
3.50	[17] INT. GAIN	
2.00	[136] FEED FORWARD	
12.00 %	[137] DISCONTINUOUS	
0.00 %	[30] ADDITIONAL DEM	
DISABLED	[90] BIPOLAR CLAMPS	
ENABLED	[201] REGEN MODE	
100.00 %	[301] POS. I CLAMP	
-100.00 %	[48] NEG. I CLAMP	
DISABLED	[119] I DMD. ISOLATE	

MMI Menu Map

- 1 CONFIGURE DRIVE
 - _ MAIN CURR. LIMIT
 - _ AUTOTUNE

Parameter	Tag	Range
AT CURRENT LIMIT	42	FALSE / TRUE
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
IA DEMAND	66	xxx.xx % (h)
(IaDmd UNFILTERED)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
IA FEEDBACK	65	xxx.xx % (h)
(IaFbk UNFILTERED)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
IA FEEDBACK	538	xxxx.x AMPS
(CURRENT FBK.AMPS)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
IF FEEDBACK	539	xxxx.x AMPS
(FIELD I FBK.AMPS)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
AUTOTUNE	18	OFF / ON
Turns the AUTOTUNE procedure on. Refer to Chapter 4: "Operating the Converter" - Performance Adjustment.		
ILOOP SUSPEND	46	FALSE / TRUE
<i>Reserved parameter for use by Eurotherm Drives.</i>		
MASTER BRIDGE	527	OFF / ON
A diagnostic indicating currently active bridge; master = ON, slave = OFF.		
MAIN CURR. LIMIT	421	0.00 to 200.00 %
Independent symmetric current clamp. Sets symmetric clamps outside scaling from the CUR. LIMIT/SCALER parameter.		
PROP GAIN	16	0.00 to 200.00
(PROP. GAIN)		
Proportional gain control for armature current PI loop. This parameter is set during the autotune function.		


CURRENT LOOP

Parameter	Tag	Range
INT. GAIN	17	0.00 to 200.00
Integral gain control for armature current PI loop, set during the autotune function.		
FEED FORWARD	136	0.10 to 50.00
Set by Autotune but not used by the default I-Loop mode.		
DISCONTINUOUS	137	0.00 to 200.00 %
Sets the boundary between the discontinuous and continuous regions of the current signal. This is set during the autotune function and affects the performance of the adaptive algorithm.		
ADDITIONAL DEM	30	-200.00 to 200.00 %
Additional current demand input.		
BIPOLAR CLAMPS	90	DISABLED / ENABLED
Selects between bipolar (asymmetric) or unipolar (symmetric) current clamps for the 4 quadrants of operation. Default setting of DISABLED means UNIPOLAR clamps selected.		
DISABLED - unipolar (symmetric) ENABLED - bipolar (asymmetric)		
With BIPOLAR CLAMPS disabled, the clamps are symmetrical and are set by POS. I CLAMP. With BIPOLAR CLAMPS enabled, the clamps are assymetrical, bipolar. In bipolar mode, POS. I CLAMP sets the maximum positive current and NEG. I CLAMP sets the maximum negative current. POS. I CLAMP must always be set algebraically higher than NEG. I CLAMP. As a result, NEG. I CLAMP can be set to a positive value. CUR. LIMIT/SCALER scales both POS. I CLAMP and NEG. I CLAMP.		
REGEN MODE	201	DISABLED / ENABLED
When disabled, sets the drive for non-regenerative (2-quadrant) operation.		
<i>Note: We recommend that this parameter is not changed whilst the machine is running.</i>		
DISABLED - non-regenerative (2-quadrant) ENABLED - regenerative (4-quadrant)		
When REGEN MODE is DISABLED, negative current demands are clamped to zero. Current feedback is subtracted from the current demand and the result is controlled by the PI loop. The result provides SCR phase angle control.		
POS. I CLAMP	301	-100.00 to 100.00 %
Positive current clamp when BIPOLAR CLAMPS is ENABLED.		
NEG. I CLAMP	48	-100.00 to 100.00 %
Negative current clamp when BIPOLAR CLAMPS is ENABLED.		
<i>Note on bipolar current clamps: these clamps in bipolar mode can cross-over onto the same quadrant as long as the POS. I CLAMP is always greater (algebraically) than the NEG. I CLAMP.</i>		

I DMD. ISOLATE **119** **DISABLED / ENABLED**

Speed loop bypass; the current demand is taken from ANIN 2 (A3).

With I DMD. ISOLATE disabled, the current loop uses the current demand from the speed loop. With I DMD. ISOLATE enabled, ANALOG I/P 2, terminal A3, supplies the current demand. With default scaling, 10V dc on terminal A3 is 100% current demand. An additional current input, ADDITIONAL DEM, can be added to the current demand. The simplified diagram below shows how the I DMD ISOLATE parameter selects the controlling loop.

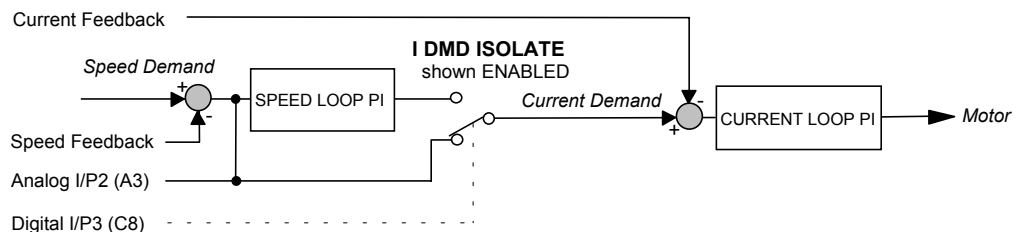


CURRENT LOOP

Parameter	Tag	Range
CUR. LIMIT/SCALER	15	0.00 to 200.00 %

(CUR.LIMIT/SCALER)

Current limit scaler. It scales bipolar/unipolar clamps. To achieve 200% current limit, the current limit scaler should be set to 200%.

CURRENT LOOP

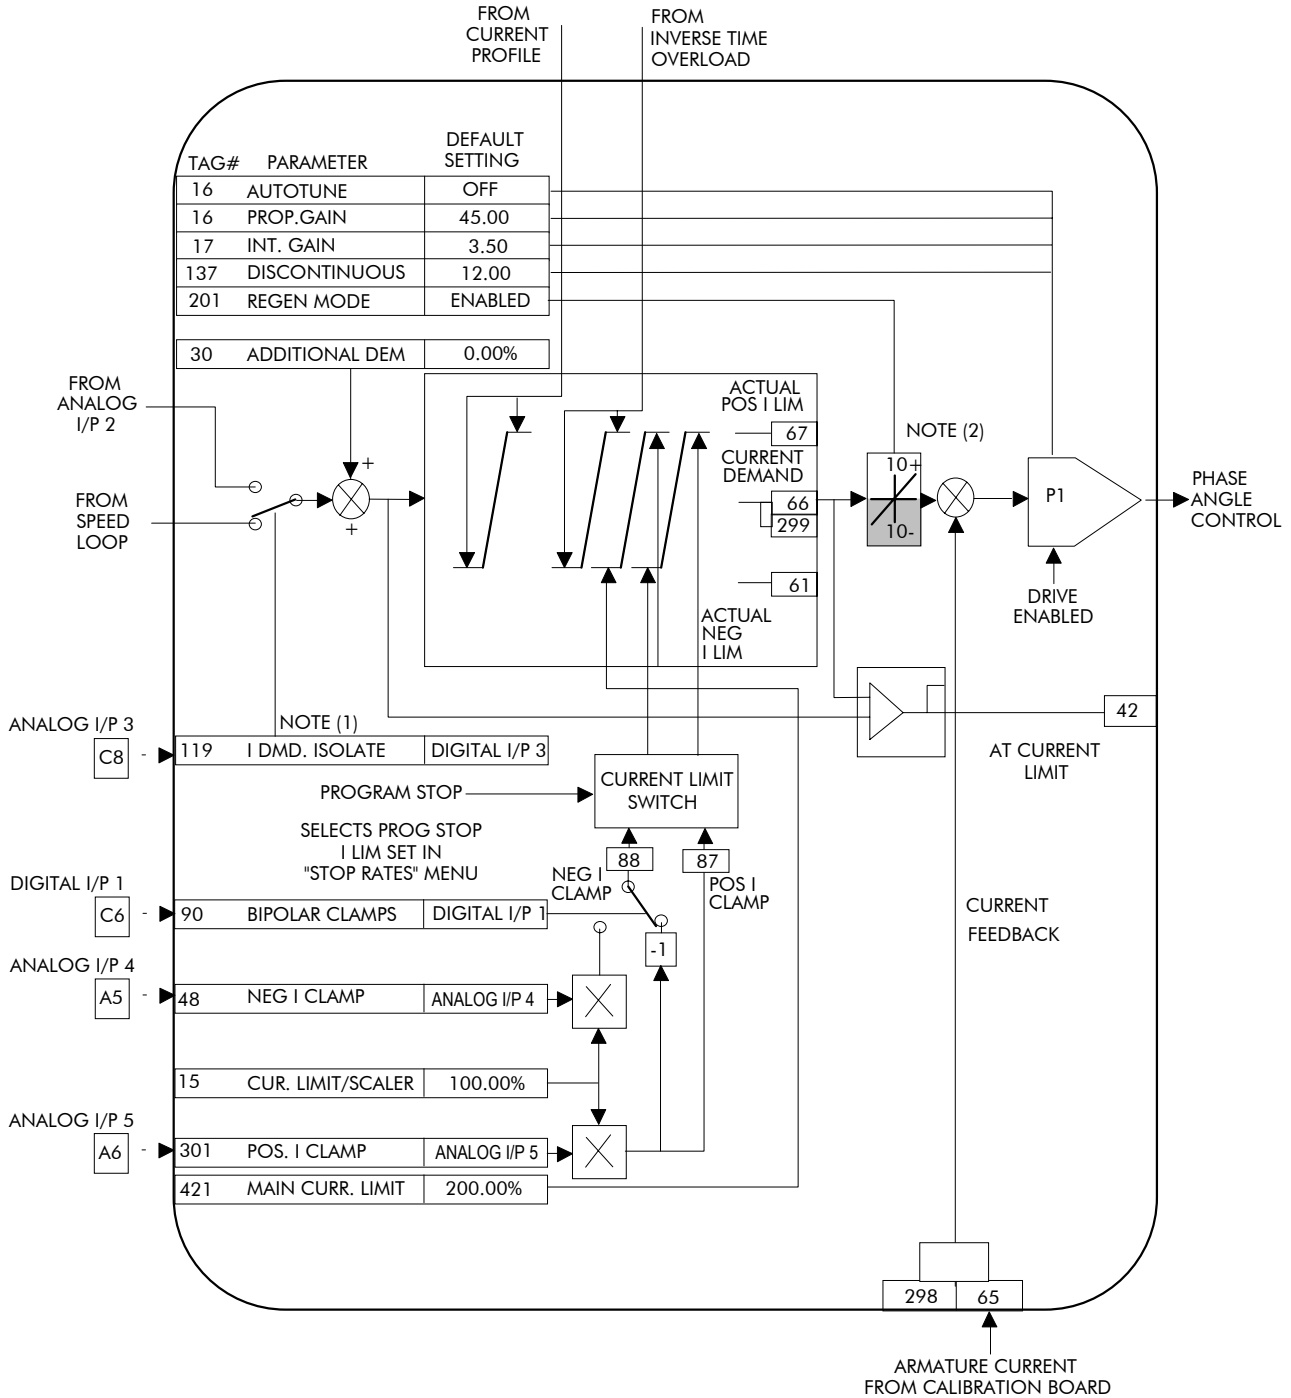

- Note 1: I DMD. ISOLATE removes speed loop demand and selects analog I/P 2 as current regulator demand. I DMD. ISOLATE is overridden by program stop and stop to return drive to speed regulation.
- Note 2: Regen mode disable prevents negative current demand. Non-regenerative drives should have regen mode disabled.

CURRENT PROFILE

MMI Menu Map

1	SETUP PARAMETERS
2	CURRENT PROFILE
	SPD BRK1 (LOW)
	SPD BRK2 (HIGH)
	IMAX BRK1 (SPD1)
	IMAX BRK2 (SPD2)


Use this to clamp the current limit for applications where motors have a reduced ability to commutate armature current at low field currents.

Normally this is required when using Field Weakening, although some motors exhibit commutation limitations at higher speeds even with rated field current.

The input to the block is SPEED FEEDBACK from the SPEED LOOP function block. The output of the block changes the current limit clamp in the current loop.

- When SPEED FEEDBACK exceeds SPD BRK 1 (LOW), the current profile begins scaling the current limit as set by IMAX BRK 1 (SPD1).
- As the SPEED FEEDBACK increases toward SPD BRK2 (HIGH), the current limit is reduced linearly toward IMAX BRK2 (SPD2).
- When the speed exceeds SPD BRK2 (HIGH), the current limit remains at the IMAX BRK2 (SPD2) setting.

Current Profile	
100.0 %	[32] SPD BRK 1 (LOW)
100.0 %	[31] SPD BRK 2 (HIGH)
200.0 %	[93] IMAX BRK 1 (SPD1)
200.0 %	[33] IMAX BRK 2 (SPD2)

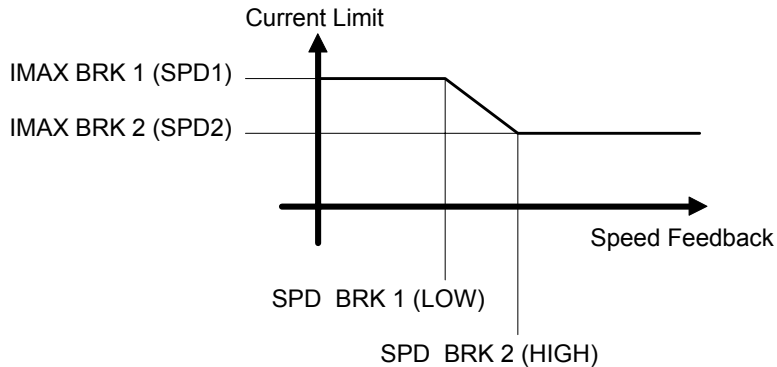

Parameter	Tag	Range
SPD BRK 1 (LOW) (SPD BRK1 (LOW))	32	0.0 to 100.0 % (h)
This is the motor speed at which current limit profiling begins.		
SPD BRK 2 (HIGH) (SPD BRK2 (HIGH))	31	0.0 to 100.0 % (h)
This is the upper speed limit at which current limit profiling ends.		
IMAX BRK 1 (SPD1) (IMAX BRK1 (SPD1))	93	0.0 to 200.0 % (h)
This sets the current limit value at or below speed break-point 1, provided the other current limit clamps (inverse time overload, bipolar clamps and main current clamps) are greater than this setting.		
IMAX BRK 2 (SPD2) (IMAX BRK2 (SPD2))	33	0.0 to 200.0 % (h)
This sets the current limit value at or above speed break-point 2, provided the other current limit clamps setting (inverse time overload, bipolar clamps and main current clamps) are greater than this.		

DIAGNOSTICS

MMI Menu Map

MMI Menu Map cont.

This block contains parameters used to monitor the status of the drive, internal variables, and its inputs and outputs.

The Parameter Descriptions table on this page describes the parameters contained in the DIAGNOSTICS function block.

The MMI DIAGNOSTICS Menu listing on the next page describes all the parameters in the MMI's DIAGNOSTICS menu, with references in brackets where parameters appear in other function blocks.

Diagnostics		
SPEED FEEDBACK	[207]	0.00 %
SPEED ERROR	[297]	0.00 %
CURRENT DEMAND	[299]	0.00 %
CURRENT FEEDBACK	[298]	0.00 %
POS. I CLAMP	[87]	0.0 %
NEG. I CLAMP	[88]	0.0 %
ACTUAL POS I LIM	[67]	0.0 %
ACTUAL NEG I LIM	[61]	0.0 %
DRIVE START	[82]	OFF
DRIVE ENABLE	[84]	DISABLED
FIELD I FBK.	[300]	0.00 %
TACH INPUT (B2)	[308]	0.0 %
ENCODER	[206]	0 RPM
DRIVE RUNNING	[376]	FALSE
CONTACTOR CLOSED	[83]	OFF

- 1 **DIAGNOSTICS**
- SPEED DEMAND
- SPEED FEEDBACK
- SPEED ERROR
- SPD LOOP OUTPUT
- CURRENT DEMAND
- CURRENT FEEDBACK
- CURRENT FBK AMPS
- IAFBK UNFILTERED
- IADMD UNFILTERED
- POS. I CLAMP
- NEG. I CLAMP
- ACTUAL POS I LIM
- ACTUAL NEG I LIM
- INVERSE TIME O/P
- AT CURRENT LIMIT
- AT ZERO SPEED
- AT ZERO SETPOINT
- AT STANDSTILL
- RAMPING
- PROGRAM STOP
- COAST STOP
- DRIVE START
- DRIVE ENABLE
- OPERATING MODE
- FIELD ENABLED
- FIELD DEMAND
- FIELD I FBK.
- FIELD I FBK. AMPS
- UNFIL.FIELD FBK
- FLD. FIRING ANGLE
- ANIN 1 (A2)
- ANIN 2 (A3)
- ANIN 3 (A4)
- ANIN 4 (A5)
- ANIN 5 (A6)
- ANOUT 1 (A7)
- ANOUT 2 (A8)
- START (C3)
- DIGITAL INPUT C4
- DIGITAL INPUT C5
- DIGIN 1 (C6)
- DIGIN 2 (C7)
- DIGIN 3 (C8)
- DIGOUT 1 (B5)
- DIGOUT 2 (B6)
- DIGOUT 3 (B7)
- RAISE/LOWER O/P
- PID OUTPUT
- PID CLAMPED
- PID ERROR
- SPT SUM OUTPUT
- RAMP OUTPUT
- PRESET O/P
- SRAMP OUTPUT
- OUTPUT FPM
- SPEED SETPOINT
- TERMINAL VOLTS
- BACK EMF
- ARM VOLTS FBK
- TACH INPUT (B2)

- 1 **DIAGNOSTICS**
- UNFIL.TACH INPUT
- ENCODER
- UNFIL.ENCODER
- UNFIL.SPD.FBK
- UNFIL.SPD.ERROR
- CONTACTOR CLOSED
- HEALTH LED
- READY
- DRIVE RUNNING
- SYSTEM RESET

Parameter	Tag	Range
SPEED FEEDBACK	207	xxx.xx %
Speed loop feedback. (Refer to SPEED LOOP , page 6-72)		
SPEED ERROR	297	xxx.xx %
Speed loop error.		
CURRENT DEMAND	299	xxx.xx %
Current loop demand (speed error PI output or external current demand clamped by all the current limits).		
CURRENT FEEDBACK	298	xxx.xx %
Scaled and filtered armature current.		
POS. I CLAMP	87	xxx.x % (h)
Positive current clamp.		
NEG. I CLAMP	88	xxx.x % (h)
Negative current clamp.		
ACTUAL POS I LIM	67	xxx.x % (h)
Overall positive current limit value.		
ACTUAL NEG I LIM	61	xxx.x % (h)
Overall negative current limit value.		
DRIVE START	82	OFF / ON
Controller start/run command.		
DRIVE ENABLE	84	DISABLED / ENABLED
Drive speed and current loop are enabled/quenched.		
FIELD I FBK.	300	xxx.xx %
Scaled field current feedback.		
TACH INPUT (B2)	308	xxx.x % (h)
Scaled analog tachogenerator feedback.		
ENCODER	206	xxxxx RPM
Encoder speed feedback in RPM.		
DRIVE RUNNING	376	FALSE / TRUE
When TRUE, the stack is switched on and enabled.		
CONTACTOR CLOSED	83	ON / OFF
When ON, the main contactor coil is energised. Refer to Terminal Information for D5 & D6 in Chapter 11.		

DIAGNOSTICS**The MMI DIAGNOSTICS Menu**

Many more signals can be monitored using the MMI display. The diagnostic parameters are "read-only" and are very useful for tracing configuration problems.

Parameter	Tag	Range
SPEED DEMAND Speed loop total setpoint after the ramp-to-zero block.	89	xxx.xx% <i>(Refer to STOP RATES, page 6-83)</i>
SPEED FEEDBACK Speed loop feedback.	207	xxx.xx% <i>(Refer to SPEED LOOP, page 6-72)</i>
SPEED ERROR Speed loop error.	297	xxx.xx% <i>(Refer to SPEED LOOP, page 6-72)</i>
SPEED LOOP OUTPUT Output from speed loop PI.	356	xxx.xx% <i>(Refer to SPEED LOOP, page 6-72)</i>
CURRENT DEMAND Current loop demand (speed error PI output or external current demand clamped by all the current limits).	299	xxx.xx% <i>(DIAGNOSTIC only)</i>
CURRENT FEEDBACK Scaled and filtered current feedback.	298	xxx.xx% <i>(DIAGNOSTIC only)</i>
IA FEEDBACK (AMPS) Scaled and filtered armature current in Amps.	538	xxx.xx AMPS <i>(Refer to CURRENT LOOP, page 6-19)</i>
IA FEEDBACK Scaled current feedback (unfiltered).	65	xxx.xx% <i>(Refer to CURRENT LOOP page 6-19)</i>
IA DEMAND Scaled current demand (unfiltered).	66	xxx.xx% <i>(Refer to CURRENT LOOP page 6-19)</i>
POS I CLAMP Positive current clamp.	87	xxx.xx% <i>(DIAGNOSTIC only)</i>
NEG I CLAMP Negative current clamp.	88	xxx.xx% <i>(DIAGNOSTIC only)</i>
ACTUAL POS I LIM Overall positive current limit value.	67	xxx.xx% <i>(DIAGNOSTIC only)</i>
ACTUAL NEG I LIM Overall negative current limit value.	61	xxx.xx% <i>(DIAGNOSTIC only)</i>
INVERSE TIME O/P Inverse time clamp output level.	203	xxx.xx% <i>(Reference to INVERSE TIME - reserved menu)</i>
AT CURRENT LIMIT Current demand is being restrained by the overall current clamp.	42	FALSE / TRUE <i>(Refer to CURRENT LOOP page 6-19)</i>
AT ZERO SPEED At zero speed feedback.	77	FALSE / TRUE <i>(Refer to STANDSTILL page 6-81)</i>
AT ZERO SETPOINT At zero speed demand.	78	FALSE / TRUE <i>(Refer to STANDSTILL page 6-81)</i>
AT STANDSTILL AT ZERO SPEED and AT ZERO SETPOINT.	79	FALSE / TRUE <i>(Refer to STANDSTILL, page 6-81)</i>

DIAGNOSTICS

Parameter	Tag	Range
RAMPING	113	FALSE / TRUE
The SETPOINT ramp function block is limiting the rate of change of Speed Setpoint. <i>(Refer to RAMPS, page 6-63)</i>		
PROGRAM STOP	80	FALSE / TRUE
State of program stop (Terminal B8). When B8 is at 24V, then PROGRAM STOP is FALSE. <i>(Refer to STOP RATES, page 6-83)</i>		
COAST STOP	525	FALSE / TRUE
State of coast stop (Terminal B9). When B9 is at 24V, then COAST STOP is FALSE. <i>(DIAGNOSTIC only)</i>		
DRIVE START	82	ON / OFF
Controller start/run command. <i>(DIAGNOSTIC only)</i>		
DRIVE ENABLE	84	ENABLED / DISABLED
Drive speed and current loop are enabled/quenched. <i>(DIAGNOSTIC only)</i>		
OPERATING MODE	212	0 to 7
Indicates whether the drive is in RUN, JOG 1...STOP etc. <i>(Refer to INERTIA COMP, page 6-40)</i>		
0 : STOP 1 : STOP 2 : JOG SP. 1 3 : JOG SP. 2 4 : RUN 5 : TAKE UP SP. 1 6 : TAKE UP SP. 2 7 : CRAWL		
FIELD ENABLED	169	ENABLED / DISABLED
Drive field loop is enabled/quenched. <i>(Refer to FIELD CONTROL, page 6-36)</i>		
FIELD DEMAND	183	xxx.xx%
The meaning of field demand depends upon which mode of field control is in force; in current control FIELD DEMAND is the current setpoint to the field loop, in voltage mode FIELD DEMAND is the voltage ratio to the field controller. <i>(Refer to FIELD CONTROL, page 6-36)</i>		
FIELD I FBK	300	xxx.xx%
Scaled and filtered field current feedback. <i>(Refer to FIELD CONTROL, page 6-36)</i>		
FIELD I FBK AMPS	539	xxxx.x AMPS
Scaled and filtered field current feedback in Amps. <i>(Refer to FIELD CONTROL, page 6-36)</i>		
UNFIL.FIELD FBK	81	xxx.xx%
Scaled field current (unfiltered). <i>(Refer to CALIBRATION, page 6-14)</i>		
FLD. FIRING ANGLE	184	xxx.xx DEG
Field firing angle in degrees: 155 degrees is the value for back stop (min field) and 5 degrees is the value for front stop (max field). <i>(Refer to FIELD CONTROL, page 6-36)</i>		
ANIN 1 (A2)	50	xxx.xx VOLTS
Speed setpoint no. 1. <i>(Refer to ANALOG INPUTS, page 6-5)</i>		

DIAGNOSTICS

Parameter	Tag	Range
ANIN 2 (A3) Hardwired. Speed setpoint no. 2 or current demand if C8 = ON.	51	xxx.xx VOLTS <i>(Refer to ANALOG INPUTS, page 6-5)</i>
ANIN 3 (A4) Speed setpoint no. 3 (ramped).	52	xxx.xx VOLTS <i>(Refer to ANALOG INPUTS, page 6-5)</i>
ANIN 4 (A5) Speed setpoint no. 4 or negative current clamp if C6 = ON.	53	xxx.xx VOLTS <i>(Refer to ANALOG INPUTS, page 6-5)</i>
ANIN 5 (A6) Main current limit or positive current clamp if C6 = ON.	54	xxx.xx VOLTS <i>(Refer to ANALOG INPUTS, page 6-5)</i>
ANOUT 1 (A7) Scaled speed feedback.	55	xxx.xx VOLTS <i>(Refer to ANALOG OUTPUTS page 6-7)</i>
ANOUT 2 (A8) Total speed setpoint.	56	xxx.xx VOLTS <i>(Refer to ANALOG OUTPUTS, page 6-7)</i>
START (C3) Start/Run terminal.	68	ON / OFF <i>(Refer to AUX I/O, page 6-8)</i>
DIGITAL INPUT C4 Jog/Take-up Slack terminal.	69	ON / OFF <i>(Refer to DIGITAL INPUTS, page 6-31 and AUX I/O, page 6-8)</i>
DIGITAL INPUT C5 Electronic enable/disable (quench) terminal (ON = Enabled).	70	ON / OFF <i>(Refer to DIGITAL INPUTS, page 6-31 and AUX I/O, page 6-8)</i>
DIGIN 1 (C6) Symmetrical current clamps/Asymmetrical (bipolar) current clamps (ON = Bipolar).	71	ON / OFF <i>(Refer to DIGITAL INPUTS, page 6-31)</i>
DIGIN 2 (C7) Ramp hold input (ON = Hold).	72	ON / OFF <i>(Refer to DIGITAL INPUTS, page 6-31)</i>
DIGIN 3 (C8) Current demand isolate; giving speed or current mode of operation. (ON = Current mode).	73	ON / OFF <i>(Refer to DIGITAL INPUTS, page 6-31)</i>
DIGOUT 1 (B5) At zero speed.	74	ON / OFF <i>(Refer to DIGITAL OUTPUTS, page 6-34)</i>
DIGOUT 2 (B6) Drive healthy. Health is also displayed on the front panel LED, always ON when the start is low.	75	ON / OFF <i>(Refer to DIGITAL OUTPUTS, page 6-34)</i>
DIGOUT 3 (B7) Drive ready to run (all alarms healthy and mains synchronisation achieved).	76	ON / OFF <i>(Refer to DIGITAL OUTPUTS, page 6-34)</i>
RAISE/LOWER O/P (OUTPUT) Value of the raise/lower ramp function.	264	xxx.xx% <i>(Refer to PRESET, page 6-59)</i>

DIAGNOSTICS

Parameter	Tag	Range
PID OUTPUT Output of the PID function block.	417	xxx.xx% <i>(Refer to PID, page 6-55)</i>
PID CLAMPED Indicates the PID output has reached either the positive or negative limit.	416	FALSE / TRUE <i>(Refer to PID, page 6-55)</i>
PID ERROR Displays the difference between the setpoint (INPUT 1) and the feedback signal (INPUT 2) in the PID function block.	415	xxx.xx% <i>(Refer to PID, page 6-55)</i>
SPT SUM OUTPUT Setpoint summation output.	86	xxx.xx% <i>(Refer to SETPOINT SUM 1, page 6-68)</i>
RAMP OUTPUT Setpoint ramp output.	85	xxx.xx% <i>(Refer to RAMPS, page 6-63)</i>
SPEED SETPOINT Speed loop total setpoint including the ramp output before the ramp-to-zero function.	63	xxx.xx% <i>(Refer to SPEED LOOP, page 6-72)</i>
TERMINAL VOLTS Scaled armature terminal volts.	57	xxx.x% <i>(Refer to CALIBRATION, page 6-14)</i>
BACK EMF Calculated motor back EMF including IR compensation. (Armature Volts Feedback)	60	xxx.x% <i>(Refer to CALIBRATION, page 6-14)</i>
ARM VOLTS FBK Back EMF scaled by NOM MOTOR VOLTS (CALIBRATION function block).	605	xxxV
TACH INPUT (B2) Scaled analog tachogenerator feedback.	308	xxx.x% <i>(DIAGNOSTIC only)</i>
UNFIL.TACH INPUT Analog tachogenerator feedback (unfiltered).	58	xxx.xx% <i>(Refer to CALIBRATION, page 6-14)</i>
ENCODER Encoder speed feedback in RPM.	206	xxxxx RPM <i>(DIAGNOSTIC only)</i>
UNFIL.ENCODER Encoder speed feedback in RPM (unfiltered).	59	xxxxx RPM <i>(Refer to CALIBRATION, page 6-14)</i>
UNFIL.SPD.FBK Unfiltered speed feedback.	62	xxx.xx% <i>(Refer to SPEED LOOP, page 6-72)</i>
UNFIL.SPD.ERROR Unfiltered speed error.	64	xxx.xx% <i>(Refer to SPEED LOOP, page 6-72)</i>
CONTACTOR CLOSED Main contactor control signal.	83	ON / OFF <i>(DIAGNOSTIC only)</i>
HEALTH LED State of Health LED on Operator Station.	122	FALSE / TRUE <i>(Refer to INHIBIT ALARMS, page 6-41)</i>
READY The drive is ready to accept an enable signal.	125	FALSE / TRUE <i>(Refer to INHIBIT ALARMS, page 6-41)</i>

6-28 Programming Your Application

DIAGNOSTICS

Parameter	Tag	Range
DRIVE RUNNING Drive is enabled and may make current when TRUE. A diagnostic for those parameters that can only be written to when the drive is stopped (parameters marked with Note 2 in the Parameter Specification Table).	376	FALSE / TRUE <i>(DIAGNOSTIC only)</i>
SYSTEM RESET Set for one cycle as the drive is enabled.	374	FALSE / TRUE <i>(DIAGNOSTIC only)</i>

DIAMETER CALC.

MMI Menu Map

1	SETUP PARAMETERS
2	SPECIAL BLOCKS
3	DIAMETER CALC.
	LINE SPEED
	REEL SPEED
	MIN DIAMETER
	MIN SPEED
	RESET VALUE
	EXTERNAL RESET
	RAMP RATE
	DIAMETER
	MOD OF LINE SPD
	MOD OF REEL SPD
	UNFILT DIAMETER

This block is used to calculate roll diameters in winder applications.

The block is ignored by the drive unless the DIAMETER parameter (Tag 431) in the "BLOCK DIAGRAM" MMI menu is set to a non-zero tag value. This is performed automatically using ConfigEd Lite: when the DIAMETER parameter in the "DIAMETER CALC" block is connected to another block, the destination tag value is written to Tag 431.

DIAMETER CALC calculates the diameter of a reel as a function of the reel speed and the line speed. The resulting diameter is a percentage of the maximum full roll diameter. A lead section, adjacent line section, or surface driven speed sensing device is required to supply the line speed signal. The winder or unwind drive's motor speed feedback provides the reel speed input.

The ratio of the minimum core diameter to the maximum roll diameter determines the operating range of the diameter calculator. Set MIN DIAMETER to that ratio using the expression:

$$\text{Minimum Core Outside Diameter} \div \text{Maximum Full Roll Diameter} \times 100\%$$

The magnitude of LINE SPEED is compared with MIN SPEED to determine when the diameter calculator will operate:

- When LINE SPEED is above MIN SPEED the calculator is on
- When LINE SPEED is below MIN SPEED, DIAMETER is held at the last calculated diameter

When EXTERNAL RESET is ENABLED, RESET VALUE is used as the diameter output.

Note: In turret winder applications, LINE SPEED will usually be above MIN SPEED. During roll changes, EXTERNAL RESET must be held ENABLED for the new spindle until the web has been transferred and the diameter is calculated properly. RESET VALUE must be set to the appropriate new core value for a rewind, or new roll diameter for an unwind.

RAMP RATE adjusts the filtering of the diameter output. Its setting is the time it takes for a 100% change in DIAMETER. For example, at the default setting of 5.0 seconds, a 50% step change in diameter would take 2.5 seconds for the output diameter output to display the change.

Diameter Calc.	
DIAMETER	[427] 0.00 %
MOD OF LINE SPEED	[428] 0.00 %
MOD OF REEL SPEED	[429] 0.00 %
UNFILTERED DIAMETER	[430] 0.00 %
[424] LINE SPEED	0.00 %
[437] REEL SPEED	0.00 %
[425] MIN DIAMETER	10.00 %
[426] MIN SPEED	5.00 %
[462] RESET VALUE	10.00 %
[463] EXTERNAL RESET	DISABLED
[453] RAMP RATE	5.0 s

Parameter	Tag	Range
DIAMETER	427	xxx.xx %
This is the output of the block and it can be connected to the appropriate points in the winder block.		
MOD OF LINE SPEED	428	xxx.xx %
(MOD OF LINE SPD) Modulus of line speed.		
MOD OF REEL SPEED	429	xxx.xx %
(MOD OF REEL SPD) Modulus of reel speed.		
UNFILTERED DIAMETER	430	xxx.xx %
(UNFILT DIAMETER) Unfiltered value of "diameter" (before RAMP RATE filter).		
LINE SPEED	424	-105.00 to 105.00 %



This will usually be configured to be the analog tacho input and scaled appropriately during calibration.

DIAMETER CALC.

Parameter	Tag	Range
REEL SPEED	437	-105.00 to 105.00 %
This will usually be configured to be the drive's own speed feedback, i.e. encoder or armature volts feedback.		
MIN DIAMETER	425	0.00 to 100.00 %
Set to the minimum core diameter (normally the empty core diameter) as a percentage of the maximum roll diameter.		
MIN SPEED	426	0.00 to 100.00 %
This is the minimum LINE SPEED level below which the diameter calculation is frozen.		
RESET VALUE	462	0.00 to 100.00 %
Normally for winders this will be set to the MIN DIAMETER value. It is the diameter preset used when changing rolls. This value will be preloaded into the ramp (filter) output when EXTERNAL RESET is enabled.		
EXTERNAL RESET	463	DISABLED / ENABLED
Sets and holds the diameter to the RESET VALUE when ENABLED.		
RAMP RATE	453	0.1 to 600.0 s
This is used to smooth the output of the diameter calculator.		

Functional Description

DIAMETER CALC.

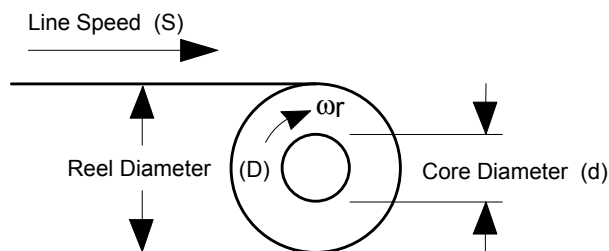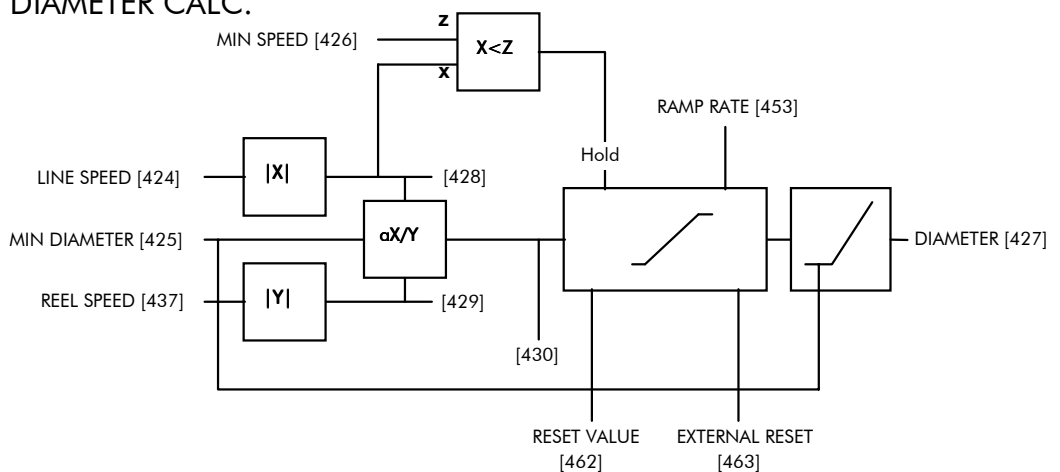

$$\text{Circumference} = \pi D \text{ or } \text{Line Speed (S)} = \text{Reel Speed } (\omega r) \times D$$


$$\text{Thus } D = \frac{S}{\omega r}$$

$$\text{i.e. } D \propto \frac{\text{Line Speed (S)}}{\text{Reel Speed } (\omega r)}$$



Therefore with the web intact we can calculate the diameter from the two speeds.

DIGITAL INPUTS


MMI Menu Map

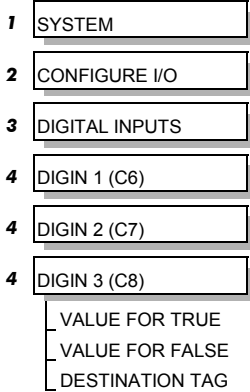


Use this block to control the digital operating parameters of the software.

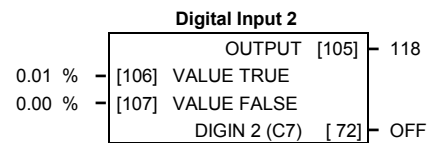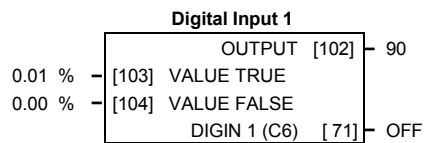

The digital input can be configured to point to a destination location, and to set that destination TRUE or FALSE depending upon programmable values.

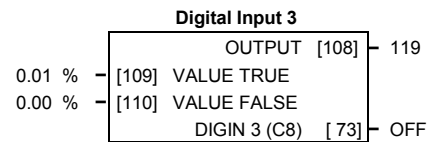

MMI Menu Map

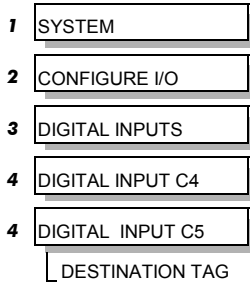

Parameter	Tag	Range
OUTPUT (DESTINATION TAG)	102, 105, 108	0 to 639
The destination Tag Number of the assumed value. Refer to “Special Links”, page 6-1.		
VALUE TRUE (VALUE FOR TRUE)	103, 106, 109	-300.00 to 300.00 %
The assumed value sent to the destination Tag Number when input is TRUE, that is: Digital Input 1, terminal C6 = 24V (True) Digital Input 2, terminal C7 = 24V (True) Digital Input 3, terminal C8 = 24V (True)		
VALUE FALSE (VALUE FOR FALSE)	104, 107, 110	-300.00 to 300.00 %
The assumed value sent to the destination Tag Number when input is FALSE, that is: Digital Input 1, terminal C6 = 0V (False) Digital Input 2, terminal C7 = 0V (False) Digital Input 3, terminal C8 = 0V (False)		
DIGIN 1 (C6) to DIGIN 3 (C8)	71, 72, 73	OFF / ON

Refer to the *DIAGNOSTICS* function block description, page 6-23.

Digital Input Examples

Using Digital Inputs with LOGIC Parameters

Logic parameters have values of 1/0: TRUE/FALSE, ON/OFF, ENABLED/DISABLED etc.

For example, the default connections in the drive allow the Digital Inputs to switch LOGIC parameters. These are the connections from:

- Terminal C6 to Tag 90 (BIPOLAR CLAMPS)
- Terminal C7 to Tag 118 (RAMP HOLD)
- Terminal C8 to Tag 119 (I DMD. ISOLATE)

In each case, the state of the terminal (24V or 0V) switches the destination parameter by sending a 1 or 0.

The format for the VALUE TRUE and VALUE FALSE parameters is in percent, thus 0.00% = 0 and 0.01% (or any other non-zero number) = 1.

DIGITAL INPUTS

Inverting the Input Signal

The default setting is for VALUE TRUE to be 0.01% and VALUE FALSE to be 0.00%. Inverting the digital input is therefore simple; set VALUE TRUE to 0.00% and VALUE FALSE to 0.01% (or any other non-zero number).

To do this:

1. Set CONFIGURE I/O::CONFIGURE ENABLE to ENABLE
2. Set DIGIN 1 (C6)::VALUE FOR TRUE to 0.00%
3. Set VALUE FOR FALSE to 0.01%
4. Reset CONFIGURE I/O::CONFIGURE ENABLE to DISABLE

Digital Input 1 now sends a 0 when the input signal is TRUE, and 1 when it is FALSE.

Using Digital Inputs with VALUE Parameters

Value parameters have values such as 100.00, or with units like 50.00%, 10.0 SECS etc.

You can use a Digital Input to send two fixed values to a VALUE parameter depending upon the state of the input terminal, 24V or 0V. You set the two fixed values you require in the VALUE TRUE and VALUE FALSE parameters.

For example, to connect Digital Input 1 to SPEED LOOP::SPD.PROP.GAIN :

1. Set CONFIGURE I/O::CONFIGURE ENABLE to ENABLE
2. Find the tag number for SPD.PROP.GAIN either from the function block detail in this chapter, or from the Parameter Table: MMI Order - refer to Chapter 10. (It is 14).
3. Set DIGIN 1 (C6)::DESTINATION TAG to 14
4. Set VALUE FOR TRUE to 10.00%
5. Set VALUE FOR FALSE to 30.00%
6. Reset CONFIGURE I/O::CONFIGURE ENABLE to DISABLE

Digital Input 1 will now set SPD.PROP.GAIN to two values depending upon the state of the input signal:

- When the input terminal is at 24V, SPD.PROP.GAIN is set to 10.00
- When the input terminal is at 0V, SPD.PROP.GAIN is set to 30.00

DIGITAL INPUT C4 and DIGITAL INPUT C5

You can configure digital input terminals C4 (Jog) and C5 (Enable) for your own use when you do not need the external jog or current loop enable functions.

You can only configure the DESTINATION parameter for each of these blocks. Internally, VALUE TRUE is fixed at 0.01% (+24V dc), and VALUE FALSE is fixed at 0.00% (0V). This makes them suitable for switching LOGIC parameters only.

DIGITAL INPUT C4

Refer to the DIAGNOSTICS function block description, page 6-23.

To use terminal C4 as a spare digital input, remove the link between the output JOG INPUT (C4) and the input JOG/SLACK in the AUX I/O function block, using ConfigEd Lite. You can then tag the block's output JOG INPUT (C4) to a digital parameter. Or, you may re-tag the parameter using the MMI.. The destination tag for DIGITAL INPUT (C4) can be found in the SYSTEM::CONFIGURE I/O::DIGITAL INPUTS menu in the MMI.

OUTPUT (DESTINATION TAG), Tag Number 494

Destination of DIGITAL INPUT C4

Range: 0 to 639

Default: 496 (AUX I/O::JOG/SLACK)

DIGITAL INPUT C5

Refer to the *DIAGNOSTICS* function block description, page 6-23.

Caution

If you are isolating power on the drive output using a DC contactor, you must use an auxiliary, normally-open contact connected to terminal C5 to immediately disable the drive's current loop when the contactor coil de-energises. Free-up terminal C5 for other uses **only** when isolating main power on the input side of the drive using an AC contactor.

Note: Some 590 DRV models isolate power on the 590 drive output using a DC contactor, so you cannot use terminal C5 as an additional digital input.

To use terminal C5 as a spare digital input you must release it from its default duty. To do this, remove the link between the output ENABLE (C5) and the input ENABLE, both in the AUX I/O function block, using ConfigEd Lite. If using the MMI, set the ENABLE parameter in the AUX I/O function block to ON. The drive is now permanently enabled, other than for a normal stop, coast stop or drive fault override. ENABLE (C5) can then be tagged to any digital parameter. The destination tag for ENABLE (C5) can be found in the SYSTEM::CONFIGURE I/O::DIGITAL INPUTS menu in the MMI.

OUTPUT (DESTINATION TAG), Tag Number 495

Destination of DIGITAL INPUT C5


Range: 0 to 639

Default: 497 (AUX I/O::ENABLE)

Additional Digital Inputs

It is possible to use an Analog Input as a Digital Input to extend the number of Digital Inputs available. Again, 0.00% is regarded as Logic 0 and 0.01% (or any other non-zero value) is regarded as Logic 1.

Using Analog I/P as Digital I/P


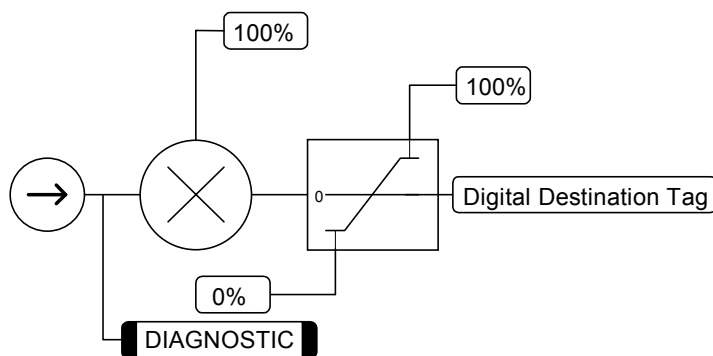


DIGITAL OUTPUTS


MMI Menu Map

- 1 SYSTEM
- 2 CONFIGURE I/O
- 3 DIGITAL OUTPUTS
- 4 DIGOUT 1 (B5)
- 4 DIGOUT 2 (B6)
- 4 DIGOUT 3 (B7)
 - THRESHOLD (>)
 - MODULUS
 - SOURCE TAG
 - INVERTED

This function block allows you to output digital parameters within the software to other equipment.

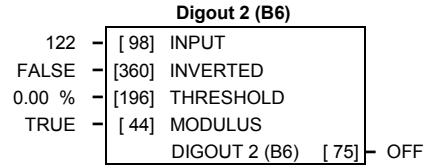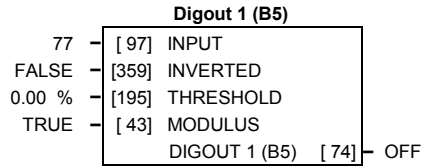


A digital output can be configured to point to any digital value within the software system and output information depending upon the status of that value.

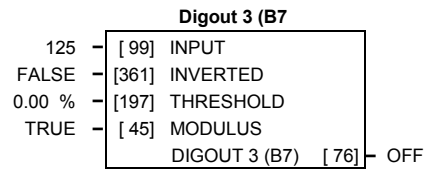

Parameter	Tag	Range
INPUT (SOURCE TAG)	97, 98, 99	0 to 639
Enter the tag number providing the source of the variable to control the digital output. Refer to "Special Links", page 6-1.		
INVERTED	359, 360, 361	FALSE / TRUE
Selects to invert the output when TRUE.		
THRESHOLD (THRESHOLD (>))	195, 196, 197	-300.00 to 300.00 %
The threshold which the input value must exceed to set the output to TRUE.		
MODULUS	43, 44, 45	FALSE / TRUE
When TRUE, the absolute value of the source value is used for the threshold test.		
DIGOUT 1 (B5) to DIGOUT 3 (B7)	74, 75, 76	OFF / ON

Refer to the *DIAGNOSTICS* function block description, page 6-23.

Functional Description

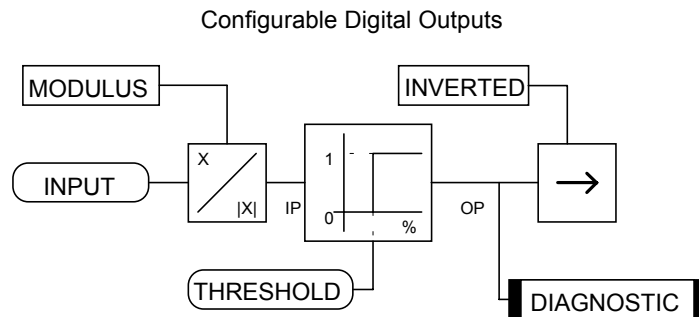

Digital Output Examples

Using Digital Outputs with LOGIC Parameters

Logic parameters have values of 1/0: TRUE/FALSE, ON/OFF, ENABLED/DISABLED etc.

For example, the (logic) default connections in the drive allow the Digital Outputs to provide (source) 24V or 0V dc depending upon the state of following tag connections:

- Terminal B5, Digital Output 1 is linked to Tag Number 77 (AT ZERO SPEED)
- Terminal B6, Digital Output 2 is linked to Tag Number 122 (HEALTH LED)
- Terminal B7, Digital Output 3 is linked to Tag Number 125 (READY)

In each case, the state of the source parameter defines the voltage available at the terminal (TRUE = 24V, FALSE = 0V when INVERTED = FALSE). Inverting the digital output is simple; set INVERTED to TRUE.

Using Digital Outputs with VALUE Parameters (Up-to-speed Detector)

Value parameters have values such as 100.00, or with units like 50.00%, 10.0 SECS etc.

For example, to connect Digital Output 1 to read UNFIL.SPD.FBK:

1. Set CONFIGURE I/O::CONFIGURE ENABLE to ENABLE
2. Find the tag number for UNFIL.SPD.FBK either from the function block detail in this chapter, or from the Parameter Table: MMI Order - refer to Chapter 10. (It is 62).
3. Set DIGITAL OUTPUTS::DIGOUT 1 (B5)::SOURCE TAG to 62
4. Set DIGITAL OUTPUTS::DIGOUT 1 (B5)::THRESHOLD(>) to 50.00%
5. Set DIGITAL OUTPUTS::DIGOUT 1 (B5)::MODULUS to TRUE
6. Set DIGITAL OUTPUTS::DIGOUT 1 (B5)::INVERTED to FALSE
7. Set CONFIGURE I/O::CONFIGURE ENABLE to DISABLE

This option is useful for generating an "up-to-speed" output. The MODULUS removes the sign from the value (so -100 becomes 100). The THRESHOLD(>) parameter determines when the output is 24V or 0V dc (the input signal must exceed this setting for the output to go high). Set INVERTED to TRUE to invert the result of the output.

FIELD CONTROL

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 FIELD CONTROL
 - FIELD ENABLE
 - FLD. CTRL MODE
 - FIELD I THRESH
 - UP TO FIELD
 - FLD.QUENCH DELAY
 - FLD. QUENCH MODE

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 FIELD CONTROL
- 3 FLD.VOLTAGE VARS
 - FLD.VOLTS RATIO

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 FIELD CONTROL
- 3 FLD.CURRENT VARS
 - SETPOINT
 - PROP. GAIN
 - INT. GAIN

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 FIELD CONTROL
- 3 FLD.CURRENT VARS
- 4 FLD.WEAK VARS
 - FLD. WEAK ENABLE
 - EMF LEAD
 - EMF LAG
 - EMF GAIN
 - MIN FLD.CURRENT
 - MAX VOLTS
 - BEMF FBK LEAD
 - BEMF FBK LAG

MMI Menu Map

- 1 CONFIGURE DRIVE
 - FLD.CTRL MODE
 - FLD.VOLTS RATIO

This function block contains all the parameters for the field operating mode.

It controls the drive's full wave, single phase, motor field thyristor bridge circuit.

The FIELD CONTROL function block is viewed in three sub-menus on the MMI: FLD VOLTAGE VARS, FLD CURRENT VARS and FLD WEAK VARS.

In the FIELD CONTROL menu, you select the field operating mode: open loop voltage control or closed loop current control.

The inputs to the FIELD CONTROL block come from FLD VOLTAGE VARS and FLD CURRENT VARS.

The input to FLD VOLTAGE VARS is the AC field voltage.

FIELD ENABLE disables the field thyristor bridge and is used in permanent motor applications. Disabling the field automatically overrides the field fail alarm. If FIELD ENABLE is enabled, you can select between voltage and current control using the FLD CTRL MODE parameter. The default is VOLTAGE CONTROL.

The diagnostic DRIVE ENABLE (Tag 84) is also used by the FLD. QUENCH DELAY to delay disabling the field when Run is removed.

FLD VOLTAGE VARS : MMI Sub-Menu

Contains the parameter for the open loop VOLTAGE CONTROL mode.

In VOLTAGE CONTROL mode, set the value of RATIO OUT/IN (FLD.VOLTS RATIO) to provide the correct field voltage. This control mode provides open-loop phase angle control of the thyristor bridge. To calculate RATIO OUT/IN, divide the desired DC field voltage by the AC input voltage and multiply by 100.

FLD CURRENT VARS : MMI Sub-Menu

Contains the parameters for the closed loop current control mode.

CURRENT CONTROL mode uses actual field current feedback for closed-loop control giving accurate motor field control independent of motor temperature. This is a pre-requisite for field weakening.

FLD WEAK VARS : MMI Sub-Menu

In certain applications of a DC motor controller, high speeds can only be achieved by reducing the field current and therefore the resultant torque. This is termed as the Constant-Horsepower region or Field-Weakening region, and the speed at which it begins is known as the Base Speed.

Field Control	
FIELD ENABLED [169]	DISABLED
FIELD DEMAND [183]	0.00 %
FLD. FIRING ANGLE [184]	0 DEG
FIELD I FBK [300]	0 %
FIELD I FBK.AMPS [539]	0 AMPS
UP TO FIELD [618]	FALSE
ENABLED - [170]	FIELD ENABLE
VOLTAGE CONTROL - [209]	FLD. CTRL MODE IS
90.00% - [210]	RATIO OUT/IN
100.00 % - [171]	SETPOINT
0.10 - [173]	PROP. GAIN
1.28 - [172]	INT. GAIN
DISABLED - [174]	FLD. WEAK ENABLE
2.00 - [175]	EMF LEAD
40.00 - [176]	EMF LAG
0.30 - [177]	EMF GAIN
10.00 % - [179]	MIN FIELD CURRENT
100.00 % - [178]	MAX VOLTS
100 - [191]	BEMF FBK LEAD
100 - [192]	BEMF FBK LAG
0.0 s - [185]	FLD. QUENCH DELAY
QUENCH - [186]	FLD. QUENCH MODE
80.00 % - [617]	FIELD I THRESHOLD




FIELD CONTROL

Parameter	Tag	Range
FIELD ENABLED	169	DISABLED / ENABLED
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
FIELD DEMAND	183	xxx.xx %
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
FLD. FIRING ANGLE (FLD.FIRING ANGLE)	184	xxx.xx DEG
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
FIELD I FBK	300	xxx.xx %
Calibrated field current feedback.		
Note: if the current feedback is calibrated correctly the FIELD I FBK and UP TO FIELD diagnostics will operate.		
FIELD I FBK.AMPS	539	xxx.xx A
FIELD I FBK calibrated in Amps.		
UP TO FIELD	618	FALSE / TRUE
Field current feedback is above FIELD I THRESHOLD when TRUE. This may be used as part of a mechanical brake release strategy.		
FIELD ENABLE	170	DISABLED / ENABLED
Enables and disables the drive motor Field Control.		
FLD CTRL MODE IS (FLD CTRL MODE)	209	See below
Selects between open-loop VOLTAGE CONTROL or closed-loop CURRENT CONTROL.		
RATIO OUT/IN (FLD.VOLTS RATIO)	210	0.00 to 100.00 % (h)
Sets the output dc field voltage as a ratio of the RMS FIELD supply voltage when FLD CTRL MODE is set to VOLTAGE CONTROL.		
SETPOINT	171	0.00 to 100.00 %
Field current setpoint as percentage of calibrated value.		
PROP. GAIN	173	0.00 to 100.00
This is the proportional gain adjustment of the field current PI loop. The default of 0.10 is equivalent to a real gain of 10.		
INT. GAIN	172	0.00 to 100.00
This is the integral gain adjustment of the field current PI loop.		
FLD. WEAK ENABLE	174	DISABLED / ENABLED
Activates the additional motor back emf PID loop for field weakening (field spillover) control.		
EMF LEAD	175	0.10 to 50.00
With field weakening control enabled, a PID loop is brought into operation. This is the lead time constant adjustment of the field weakening PID loop.		
With a default of 2.00, real time constant = 200ms.		

FIELD CONTROL

Parameter	Tag	Range
EMF LAG	176	0.00 to 200.00
This is the lag time constant adjustment of the field weakening PID loop With a default of 4.00, real time constant = 4000ms.		
EMF GAIN	177	0.00 to 100.00
This is the gain adjustment of the field weakening PID loop. With a default of 3.00, real gain = 30.		
MIN FIELD CURRENT	179	0.00 to 100.00 %
(MIN FLD.CURRENT) The field weakening loop reduces the field current to achieve speed control above base speed. At top speed the field reaches a minimum value. MIN FIELD CURRENT should be set below this minimum value to allow reasonable margin for transient control near the top speed but not lower than 6% as this could then cause the "Field Fail" alarm to operate.		
MAX VOLTS	178	0.00 to 100.00 %
Maximum volts is the voltage level at which field weakening begins. It is also known as "Spillover Bias". The default value is 100% of the nominal value as set by the armature voltage calibration value. For commissioning purposes this value can be set to another (lower) desirable level. Subsequently, it is advisable to return it to 100% for normalisation.		
BEMF FBK LEAD	191	10 to 5000
This is the lead time constant of the back emf feedback filter which is used for reducing armature voltage overshoots when accelerating fast through base speed.		
BEMF FBK LAG	192	10 to 5000
This is the lag time constant of the above feedback filter. If the filter is active, the ratio of lead / lag should always be greater than 1 to give an overall lead action which reduces the voltage overshoot and less than, typically, 3 for stable control. The default values 100/100 = 1 cancel each other and make the filter inactive.		
FLD. QUENCH DELAY	185	0.0 to 600.0 s
(FLD.QUENCH DELAY) If dynamic breaking is used the field must be maintained for a period after the drive is disabled until the motor reaches zero speed. The field quench delay is the period of time that the field is maintained for when the drive is disabled.		
FLD. QUENCH MODE	186	QUENCH / STANDBY
After the field quench delay has expired, the field can be entirely quenched or put into a standby mode at 50% of rated current or volts depending whether in current or voltage control mode respectively. (The default standby value of 50% can be modified through the "SYSTEM / Reserved" Menu which is primarily for factory use only and requires the "super" password.)		
FIELD I THRESHOLD	617	0.00 to 100.00 %
Threshold for UP TO FIELD diagnostic.		

FIELD CONTROL

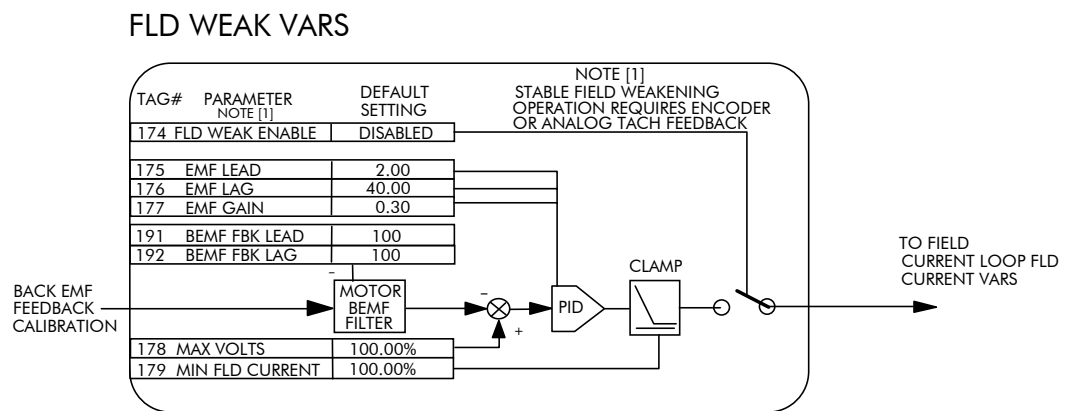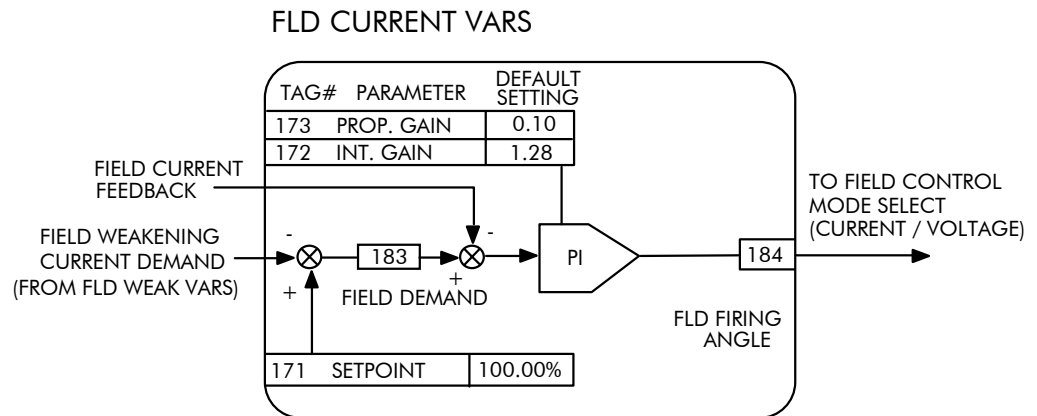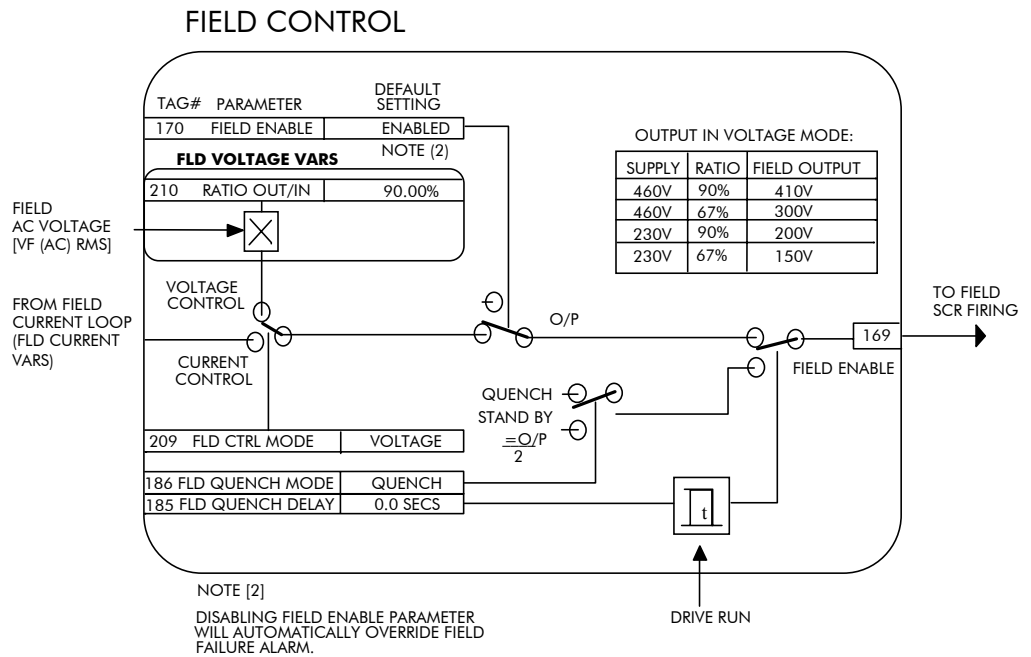

INERTIA COMP


MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPEED LOOP
- 3 ADVANCED
- 4 INERTIA COMP
 - INERTIA
 - FILTER
 - RATE CAL
 - DELTA
 - UNSCALED OUTPUT
 - INERTIA COMP O/P

This function block directly compensates for load inertia during acceleration.


This is particularly useful in high accuracy applications such as positioning systems and elevators.

The block calculates its output at the same rate as the current loop for maximum performance.

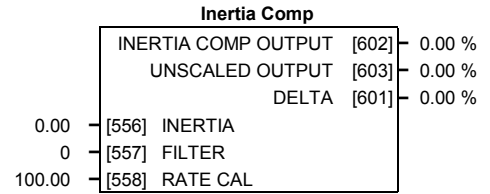

Parameter	Tag	Range
INERTIA COMP OUTPUT	602	x.xx %
Inertia compensation directly added to the speed loop output.		
UNSCALED OUTPUT	603	x.xx %
Unscaled inertia compensation.		
DELTA	601	x.xx %
Rate of change of speed demand in %/s ² .		
INERTIA	556	0.00 to 200.00 %
The value of current necessary to accelerate load to 100% speed in 1 second.		
FILTER	557	0 to 20000
Low pass filter acting on the DELTA parameter.		
RATE CAL	558	0.00 to 200.00
Inertia compensation scaling factor.		

Functional Description

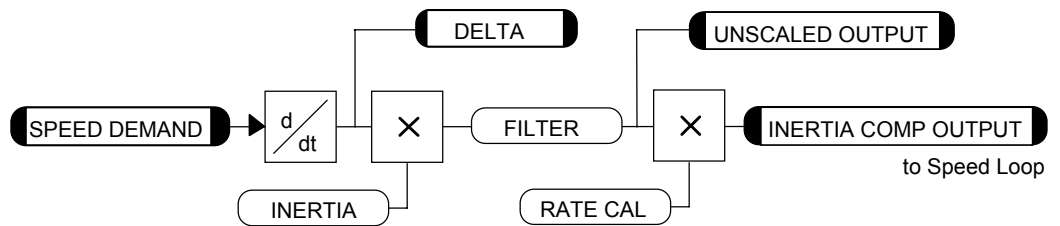

INHIBIT ALARMS

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 INHIBIT ALARMS
 - FIELD FAIL
 - 5703 RCV ERROR
 - STALL TRIP
 - TRIP RESET
 - SPEED FBK ALARM
 - ENCODER ALARM
 - REM TRIP INHIBIT

This allows you to disable certain alarms and leave drive operation un-interrupted if the related fault occurs.

It also provides a view into current and past trip conditions.

Caution

Do **NOT** inhibit any alarms if this might result in danger to personnel or equipment.

Alarms

	READY	[125]	FALSE	
	HEALTHY	[122]	TRUE	
	HEALTH WORD	[115]	0x0000	
	HEALTH STORE	[116]	0x0000	
	REMOTE TRIP	[542]	FALSE	
	STALL TRIP	[112]	OK	
	LAST ALARM	[528]	NO ACTIVE ALARMS	
ENABLED	-	[19]	FIELD FAIL	
ENABLED	-	[111]	5703 RCV ERROR	
ENABLED	-	[28]	STALL TRIP INHIBIT	
TRUE	-	[305]	TRIP RESET	
ENABLED	-	[81]	SPEED FBK ALARM	
ENABLED	-	[92]	ENCODER ALARM	
ENABLED	-	[540]	REM TRIP INHIBIT	
10.0 SECS	-	[541]	REM TRIP DELAY	

The function block is contained in three menus on the MMI: INHIBIT ALARMS, ALARM STATUS and CALIBRATION.

MMI Menu Map

- 1 ALARM STATUS
 - LAST ALARM
 - HEALTH WORD
 - HEALTH STORE
 - THERMISTOR STATE
 - SPEED FBK STATE
 - STALL TRIP
 - REMOTE TRIP

Parameter	Tag	Range
READY	125	FALSE / TRUE

Refer to the DIAGNOSTICS function block description, page 6-23.

HEALTHY	122	FALSE / TRUE
----------------	------------	---------------------

(HEALTH LED)

Refer to the DIAGNOSTICS function block description, page 6-23.

HEALTH WORD	115	0x0000 to 0xFFFF
--------------------	------------	-------------------------

The hexadecimal sum of any alarms present. Refer to Chapter 7: “Trips and Fault Finding” - Alarm Messages.

HEALTH STORE	116	0x0000 to 0xFFFF
---------------------	------------	-------------------------

The hexadecimal value of the first (or only) alarm. Refer to Chapter 7: “Trips and Fault Finding” - Alarm Messages.

REMOTE TRIP	542	FALSE / TRUE
--------------------	------------	---------------------

The state of Remote Trip.

STALL TRIP	112	OK / FAILED
-------------------	------------	--------------------

Armature current is above STALL THRESHOLD and AT ZERO SPEED but not AT ZERO SETPOINT.


INHIBIT ALARMS

Parameter	Tag	Range
LAST ALARM	528	See below
The hexadecimal value of the last (or only) alarm. Refer to Chapter 7: “Trips and Fault Finding” - Alarm Messages.		
0x0000 : NO ACTIVE ALARMS		
0x0001 : OVER SPEED		
0x0002 : MISSING PULSE		
0x0004 : FIELD OVER I		
0x0008 : HEATSINK TRIP		
0x0010 : THERMISTOR		
0x0020 : OVER VOLTS (VA)		
0x0040 : SPD FEEDBACK		
0x0080 : ENCODER FAILED		
0x0100 : FIELD FAILED		
0x0200 : 3 PHASE FAILED		
0x0400 : PHASE LOCK		
0x0800 : 5703 RCV ERROR		
0x1000 : STALL TRIP		
0x2000 : OVER I TRIP		
0xF005 : EXTERNAL TRIP		
0x8000 : ACCTS FAILED		
0xF001 : AUTOTUNE ERROR		
0xF002 : AUTOTUNE ABORTED		
0xF200 : CONFIG ENABLED		
0xF400 : NO OP-STATION		
0xF006 : REMOTE TRIP		
0xFF05 : PCB VERSION		
0xFF06 : PRODUCT CODE		
FIELD FAIL	19	ENABLED / INHIBITED
Inhibits the field fail alarm.		
5703 RCV ERROR	111	ENABLED / INHIBITED
Inhibits 5703 serial communications receive error. Only active in Slave Mode.		
STALL TRIP INHIBIT	28	ENABLED / INHIBITED
(STALL TRIP)		
Inhibits the stall trip alarm from tripping out the contactor. This is useful in applications requiring extended operation at zero speed.		
TRIP RESET	305	FALSE / TRUE
When FALSE: the faults are latched permanently and the HEALTHY output remains inactive, even when toggling the Start/Run input (C3) off/on. This feature can be used in applications where you want to reset the faults under your own control, rather than automatically with the Start/Run command To reset the drive, TRIP RESET must be set TRUE.		
When TRUE: faults are cleared whenever a Run signal is given to terminal C3.		
SPEED FBK ALARM	81	ENABLED / INHIBITED
Inhibits the speed feedback alarm.		

INHIBIT ALARMS

Parameter	Tag	Range
ENCODER ALARM	92	ENABLED / INHIBITED
Inhibits the encoder option board alarm.		
REM TRIP INHIBIT	540	ENABLED / INHIBITED
Inhibits the remote trip.		
REM TRIP DELAY	541	0.1 to 600.0 SECS
The delay between the remote trip alarm being activated and the drive tripping.		

Functional Description

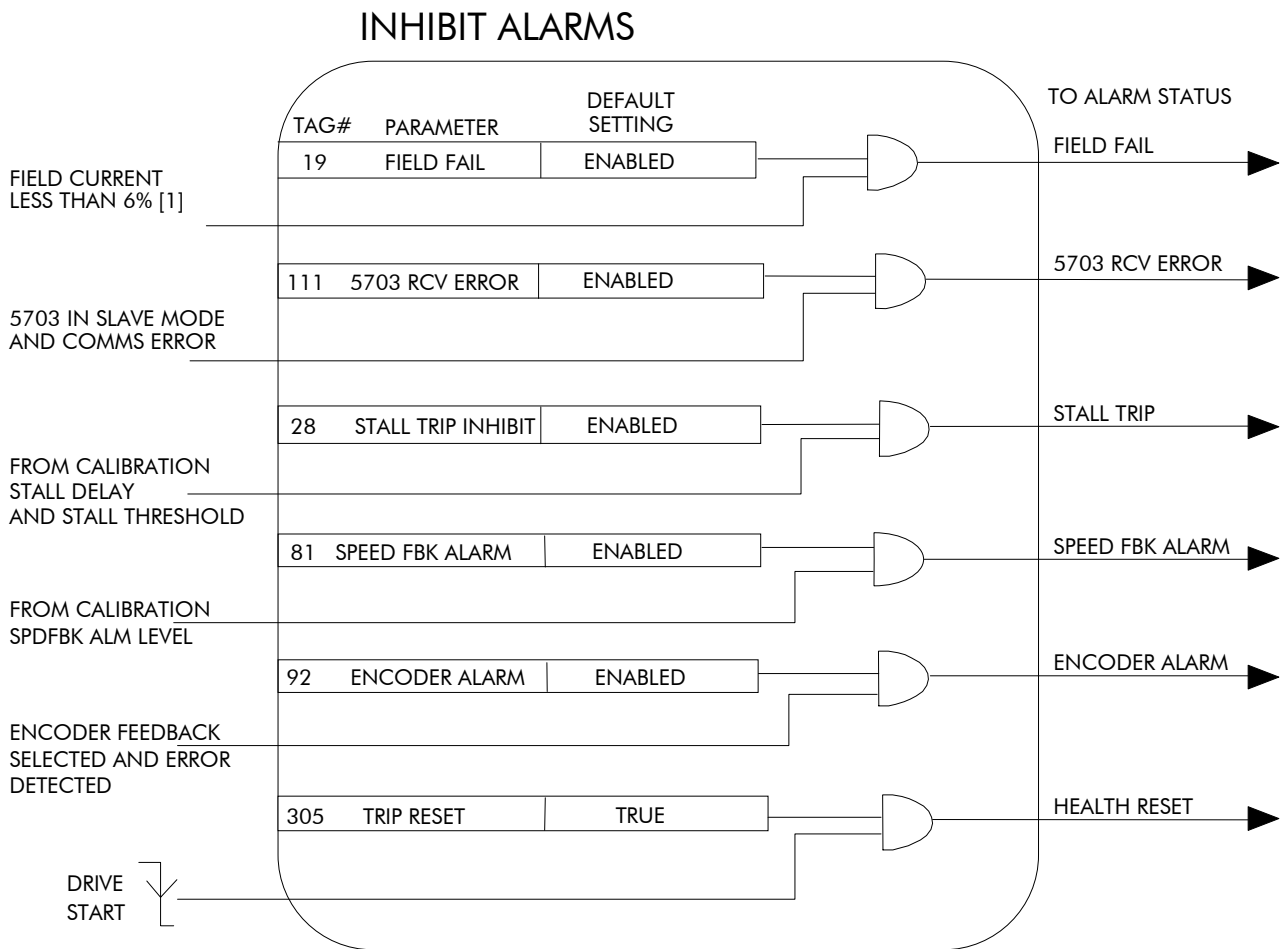


NOTE [1]:


FIELD FAIL THRESHOLD IS 6% IN CURRENT CONTROL
12% IN VOLTAGE CONTROL

INTERNAL LINKS

MMI Menu Map

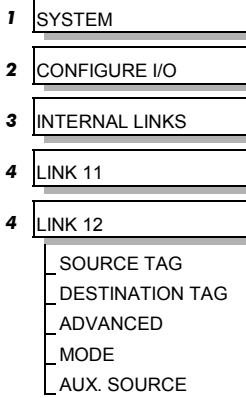

Use internal links to connect an internal input to an internal output, and to connect an input terminal to multiple destinations.

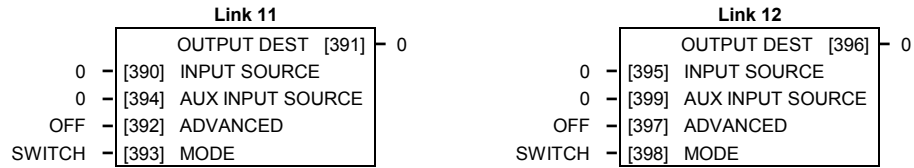

None of the links are connected in the default configuration.

LINKS 1 to 10

Each link has a SOURCE TAG and DESTINATION TAG parameter. The default value for all parameters is 0 (zero).

Parameter	Tag	Range
LINK 1		
OUTPUT DEST (DESTINATION TAG)	365	0 to 639
Enter the tag number for the destination output value. Refer to "Special Links", page 6-1.		
INPUT SOURCE (SOURCE TAG)	364	0 to 639
Enter the tag number of the source input value. Refer to "Special Links", page 6-1.		
LINK 2		
OUTPUT DEST	367	0 to 639
INPUT SOURCE	366	0 to 639
LINK 3		
OUTPUT DEST	369	0 to 639
INPUT SOURCE	368	0 to 639
LINK 4		
OUTPUT DEST	371	0 to 639
INPUT SOURCE	370	0 to 639
LINK 5		
OUTPUT DEST	455	0 to 639
INPUT SOURCE	454	0 to 639
LINK 6		
OUTPUT DEST	457	0 to 639
INPUT SOURCE	456	0 to 639
LINK 7		
OUTPUT DEST	459	0 to 639
INPUT SOURCE	458	0 to 639
LINK 8		
OUTPUT DEST	461	0 to 639
INPUT SOURCE	460	0 to 639
LINK 9		
OUTPUT DEST	468	0 to 639
INPUT SOURCE	467	0 to 639
LINK 10		
OUTPUT DEST	470	0 to 639
INPUT SOURCE	469	0 to 639

INTERNAL LINKS

LINKS 11 & 12

Special links 11 and 12 allow further functionality within the block diagram by using three additional parameters: ADVANCED, AUX SOURCE and MODE. They can perform seven functions, depending upon the values of the MODE and ADVANCED parameters.

Parameter	Tag	Range
OUTPUT DEST (DESTINATION TAG) Enter the tag number for the destination output value. Refer to “Special Links”, page 6-1.	391, 396	0 to 639
INPUT SOURCE (SOURCE TAG) Enter the tag number of the source input value. Refer to “Special Links”, page 6-1.	390, 395	0 to 639
AUX INPUT SOURCE (AUX.SOURCE) Enter the tag number of a source input value to provide a second input for the two-input functions of the MODE selection. Refer to “Special Links”, page 6-1.	394, 399	0 to 639
ADVANCED When OFF the link operates as a standard link (links 1 to 10), i.e. it copies INPUT to OUTPUT. When ON the link's functionality changes depending on the MODE parameter setting.	392, 397	OFF / ON
MODE This determines which operation is performed on the INPUT (and sometimes also the AUX INPUT) before copying the result into the OUTPUT. It can be combined with ADVANCED to dynamically switch the OUTPUT between two inputs (INPUT and AUX INPUT). The functionality of the various MODE selections are shown in the table.	393, 398	See below

- 0 : SWITCH
- 1 : INVERTER
- 2 : AND (logic)
- 3 : OR (boolean)
- 4 : SIGN CHANGER
- 5 : MODULUS
- 6 : COMPARATOR


MODE	Description
SWITCH - switches the signal source between auxilliary and source analog or logic tags	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON DESTINATION = AUX SOURCE
INVERTER - inverts the source logic signal	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON DESTINATION = Logic Inversion of SOURCE
AND - gives AND-ed result of source logic signal and an auxilliary source logic signal	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON DESTINATION = SOURCE AND AUX SOURCE
OR - gives OR-ed result of source logic signal and an auxilliary source logic signal	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON DESTINATION = SOURCE OR AUX SOURCE
SIGN CHANGER - reverses the sign of the source logic signal	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON DESTINATION = Value sign change of SOURCE
MODULUS - produces the modulus of the source logic signal	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON DESTINATION = Modulus of SOURCE
COMPARATOR - changes destination logic signal to TRUE when source analog signal is greater than auxilliary analog signal	If ADVANCED = OFF DESTINATION = SOURCE If ADVANCED = ON If SOURCE < AUX SOURCE DESTINATION = 0 If SOURCE > AUX SOURCE DESTINATION = 1

INTERNAL LINKS

Functional Description

The following diagram shows the internal schematic for a special link.

Link 11 & Link 12

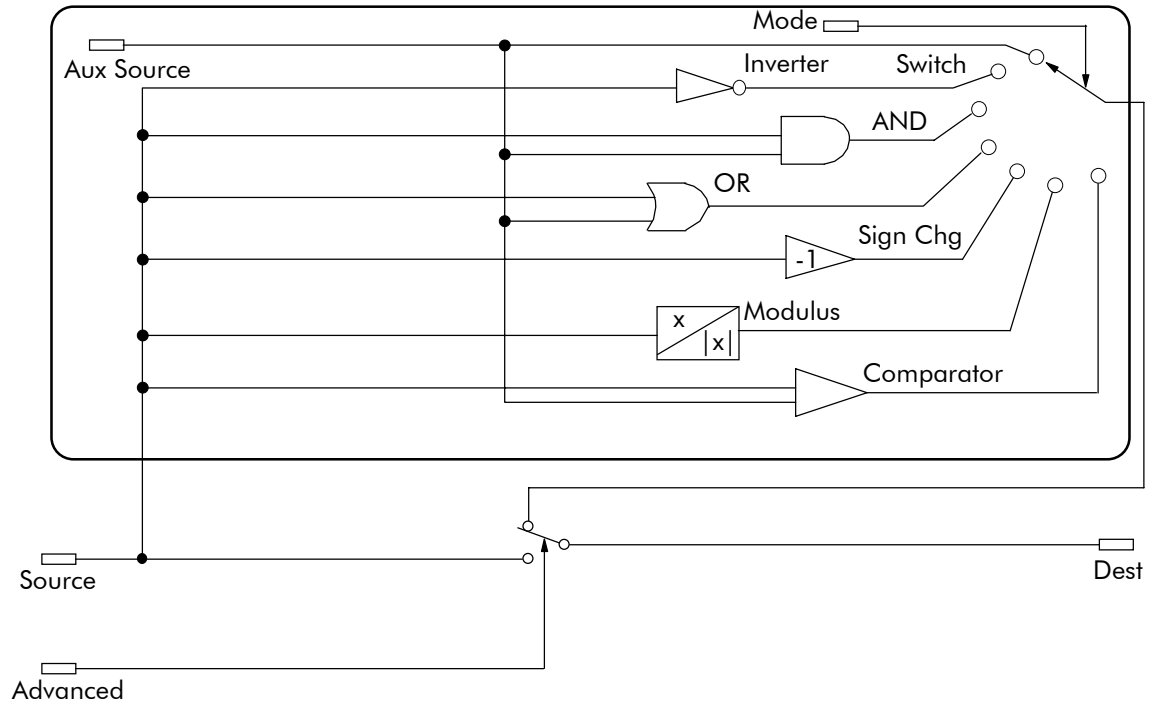

INTERNAL LINKS

Internal Links - Example

Controlling both the acceleration and deceleration times of the drive ramp through analog input 1 (default terminal A2)

This example is similar to the first example in ANALOG INPUTS, page 6-5.


As before, the ends of the external potentiometer are connected to the drive's 0V and +10V dc supply (terminals A1 and B3). The wiper of the potentiometer is connected to terminal A2. The CALIBRATION parameter of ANALOG INPUT 1 (Tag 230) is set to 5.00%. This scales the input signal (from 0.1 to 600 seconds) to 30 seconds maximum.

However, in this example INTERNAL LINK is used to allow the external potentiometer to control *both* the acceleration and deceleration times of the ramp.

To do this:

1. Set CONFIGURE I/O::CONFIGURE ENABLE to ENABLE.
2. Find the tag number for RAMP ACCEL TIME and RAMP DECEL TIME either from the RAMPS function block detail in this chapter, or from the Parameter Table: MMI Order - refer to Chapter 10. (They are 2 and 3 respectively).
3. Set ANIN 1 (A2)::DESTINATION TAG (OUTPUT) to 2 (for RAMP ACCEL TIME).
4. Set ANIN 1 (A2)::CALIBRATION to 0.500 (5.00%).
5. Set ANIN 1 (A2)::MAX VALUE to 100.00%.
6. Set ANIN 1 (A2)::MIN VALUE to 0.00%.
7. Exit the ANALOG INPUTS sub-menu and scroll down to INTERNAL LINKS. Enter the INTERNAL LINKS sub-menu.
8. Set LINK 1::SOURCE TAG to 2 (for RAMP ACCEL TIME), which is also the destination tag for the output of the ANIN 1 (A2) function block.
9. Set LINK1::DESTINATION TAG to 3 (for RAMP DECEL TIME).
10. Set CONFIGURE I/O::CONFIGURE ENABLE to DISABLE.

Analog Input 1 (terminal A2) now controls both the speed ramp acceleration and deceleration times, over a range of 0 to 30 seconds. An input of 10V dc sets the ramp up and down times to 30 seconds.

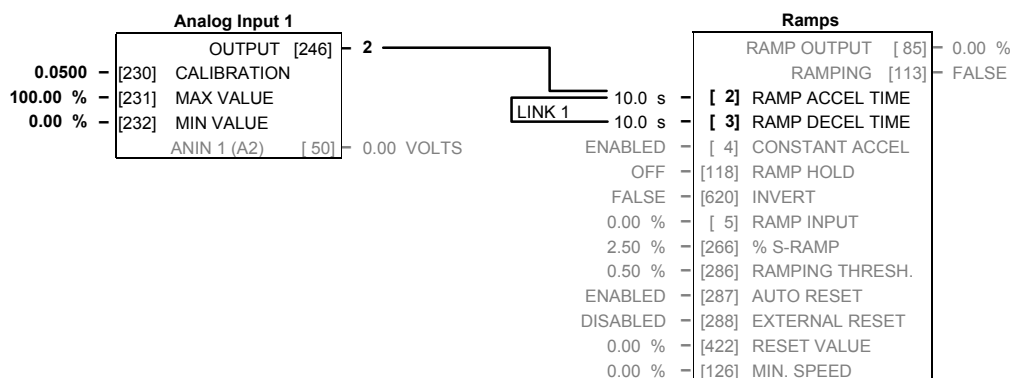

JOG/SLACK

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 JOG/SLACK
 - JOG SPEED 1
 - JOG SPEED 2
 - TAKE UP 1
 - TAKE UP 2
 - CRAWL SPEED
 - MODE
 - RAMP RATE


This block can be used to provide jog, take up slack and crawl speed functions.

The inputs to this block are the Start and Jog signals via AUX I/O, and the speed demand from the RAMPS function block. The output of this block is connected to the RAMPS function block.

The JOG/SLACK parameters modify or replace the ramp input speed demand. You should use a spare digital input to switch between modes to achieve full functionality.

The ramp input speed demand from RAMPS is modified as required by MODE, Start, and Jog. These settings are shown in the Setpoint Selection table.

- **Jog:** With the Start signal OFF, the jog speed demand replaces the ramp input speed demand. MODE selects between jog setpoints 1 and 2. The jog RAMP RATE replaces the RAMP ACCEL TIME and RAMP DECEL TIME in the RAMPS function block. % S-RAMP is also set to 0.00%.
- **Take Up Slack:** With the Start signal ON, the jog signal performs a "take up slack" function. When a jog signal is received, the take up slack setpoint is added to the ramp input speed demand. MODE and Jog settings, from the table, select between the two take-up slack setpoints.
- **Crawl:** CRAWL SPEED replaces the ramp input speed demand as the output signal when both Start and Jog signals are ON, and MODE is TRUE.

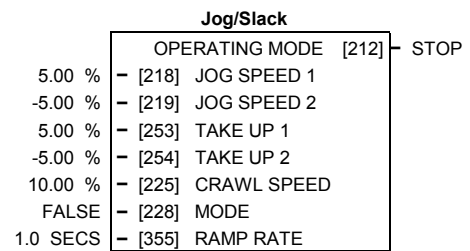

Parameter	Tag	Range
OPERATING MODE	212	See below
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
	0 : STOP	
	1 : STOP	
	2 : JOG SP. 1	
	3 : JOG SP. 2	
	4 : RUN	
	5 : TAKE UP SP. 1	
	6 : TAKE UP SP. 2	
	7 : CRAWL	
JOG SPEED 1	218	-100.00 to 100.00 %
Jog speed setpoint 1.		
JOG SPEED 2	219	-100.00 to 100.00 %
Jog speed setpoint 2.		
TAKE UP 1	253	-100.00 to 100.00 %
Take-up slack speed setpoint 1.		
TAKE UP 2	254	-100.00 to 100.00 %
Take-up slack speed setpoint 2.		
CRAWL SPEED	225	-100.00 to 100.00 %
Crawl speed setpoint.		
MODE	228	FALSE / TRUE
Selects jog speed setpoints, take up setpoints, and the crawl setpoint. To achieve full functionality, connect MODE to a spare digital input.		
RAMP RATE	355	0.1 to 600.0 SECS


The ramp rate used while jogging. This is independent of the main ramp rate during normal running. The acceleration and deceleration times in jog are always equal.

Functional Description


Note: The setpoint column in the table below refers to the Ramp Input ONLY, as indicated in the table. Any "direct" setpoints present will also add to this setpoint to make the total speed setpoint. If you don't want this to happen, for example during jogging, then disconnect the direct setpoint(s) during the appropriate conditions.

Setpoint Selection Table

Operating Mode	Start C3	Jog C4	Mode Tag No 228	Ramp Input (see Note above)	Ramp Time	Contactor
0 : Stop	OFF	OFF	False	Setpoint	Default	OFF
1 : Stop	OFF	OFF	True	Setpoint	Default	OFF
2 : Inch / Jog 1	OFF	ON	False	Jog Speed 1	Jog Ramp Rate	ON
3 ; Inch / Jog 2	OFF	ON	True	Jog Speed 2	Jog Ramp Rate	ON
4 : Run	ON	OFF	False	Setpoint	Default	ON
5 : Take-Up Slack 1	ON	ON	False	Setpoint + Take-Up Slack 1	Default	ON
6 : Take-Up Slack 2	ON	OFF	True	Setpoint + Take-Up Slack 2	Default	ON
7 : Crawl	ON	ON	True	Crawl Speed	Default	ON

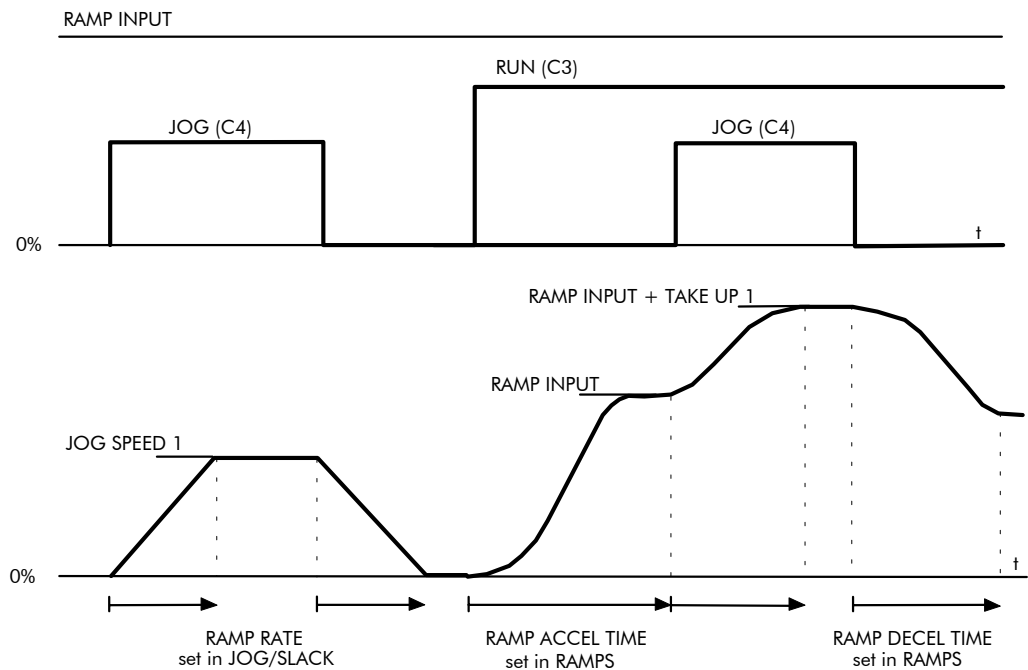


Block Diagram

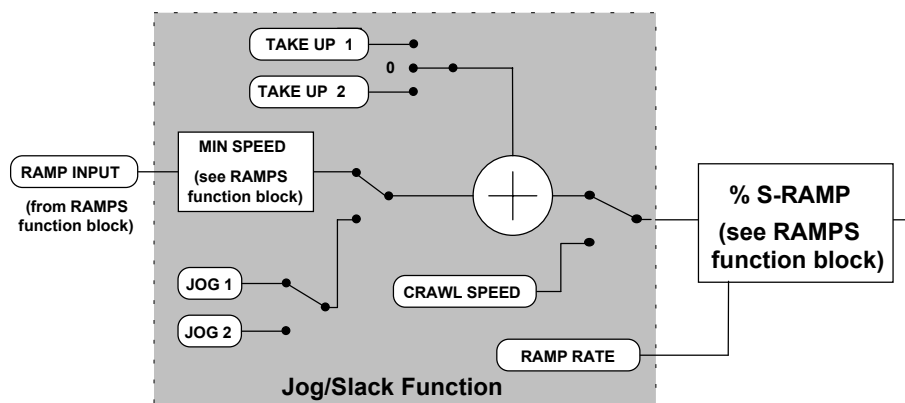

MENUS

MMI Menu Map

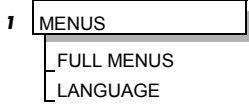

Use this block to select either the full MMI menu structure, or a reduced menu structure for easier navigation.

You can also select the display language for the MMI.

	Menu
ENABLED	[37] FULL MENU
ENGLISH	[304] LANGUAGE

Parameter	Tag	Range
FULL MENU	37	DISABLED / ENABLED

When enabled, the full MMI menu structure is displayed on the MMI.

LANGUAGE	304	ENGLISH / OTHER
-----------------	------------	------------------------

Selects the MMI display language. Other languages are available, please contact Eurotherm Drives. Refer also to Chapter 5: "The Operator Station" - Selecting the Display Language.

MMI Menu Map

- 1 SYSTEM
- 2 miniLINK
 - VALUE 1
 - VALUE 2
 - VALUE 3
 - VALUE 4
 - VALUE 5
 - VALUE 6
 - VALUE 7
 - VALUE 8
 - VALUE 9
 - VALUE 10
 - VALUE 11
 - VALUE 12
 - VALUE 13
 - VALUE 14
 - LOGIC 1
 - LOGIC 2
 - LOGIC 3
 - LOGIC 4
 - LOGIC 5
 - LOGIC 6
 - LOGIC 7
 - LOGIC 8

These parameters are general purpose tags.

By using a VALUE or LOGIC as a staging post, a function block destination may be connected to a function block source.


These parameters are used extensively by Tech Boxes in order to map the field bus parameters into the drive. Refer to the appropriate Tech Box manual.

miniLINK	
0.00 %	[339] VALUE 1
0.00 %	[340] VALUE 2
0.00 %	[341] VALUE 3
0.00 %	[342] VALUE 4
0.00 %	[343] VALUE 5
0.00 %	[344] VALUE 6
0.00 %	[345] VALUE 7
0.00 %	[379] VALUE 8
0.00 %	[380] VALUE 9
0.00 %	[381] VALUE 10
0.00 %	[382] VALUE 11
0.00 %	[383] VALUE 12
0.00 %	[384] VALUE 13
0.00 %	[385] VALUE 14
OFF	[346] LOGIC 1
OFF	[347] LOGIC 2
OFF	[348] LOGIC 3
OFF	[349] LOGIC 4
OFF	[350] LOGIC 5
OFF	[351] LOGIC 6
OFF	[352] LOGIC 7
OFF	[353] LOGIC 8

Parameter	Tag	Range
VALUE 1 to VALUE 14	339 to 385	-300.00% to 300.00%
LOGIC 1 to LOGIC 8	346 to 353	OFF / ON

Functional Description

For example, an ANALOG I/P may be connected directly to an ANALOG O/P via VALUE 1.

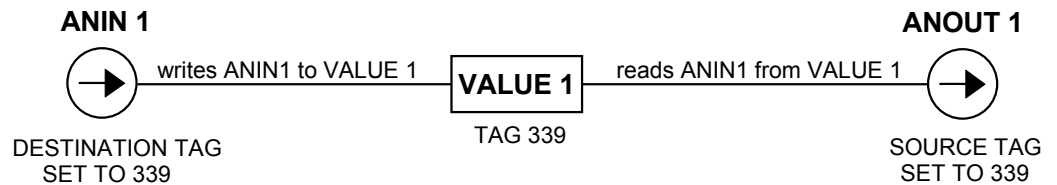

OP STATION

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 OP-STATION
- 3 SET UP
 - SETPOINT
 - JOG SETPOINT
 - LOCAL KEY ENABLE

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 OP-STATION
- 3 START UP VALUES
 - SETPOINT
 - JOG SETPOINT
 - FORWARD
 - PROGRAM
 - LOCAL

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 OP-STATION
- 3 LOCAL RAMP
 - RAMP ACCEL TIME
 - RAMP DECEL TIME


MMI Set-up options and Local setpoint information.

This function block is viewed in three separate menus on the MMI: SET UP, START UP VALUES and LOCAL RAMP.

Op Station	
TRUE	[511] LOCAL KEY ENABLE
0.00 %	[512] SETPOINT
5.00 %	[513] JOG SETPOINT
10.0 SECS	[514] RAMP ACCEL TIME
10.0 SECS	[515] RAMP DECEL TIME
TRUE	[516] INITIAL FWD DIRECTION
FALSE	[517] INITIAL LOCAL
FALSE	[518] INITIAL PROGRAM
0.00 %	[519] INITIAL SETPOINT
5.00 %	[520] INITIAL JOG SETPOINT

Parameter	Tag	Range
ERROR REPORT (OP STATION ERROR) The last communication error. <i>Reserved parameter for use by Eurotherm Drives.</i>	158	0x0000 to 0xFFFF
LOCAL KEY ENABLE Enables the LOCAL/REMOTE control key on the op-station. Set to TRUE to allow the operator to toggle between local and remote modes.	511	FALSE / TRUE
SETPOINT SET UP menu - Actual value of local setpoint. This value is not persistent.	512	0.00 to 100.00 %
JOG SETPOINT SET UP menu - Actual value of local jog setpoint. This value is not persistent.	513	0.00 to 100.00 %
RAMP ACCEL TIME Acceleration time used while in Local mode.	514	0.1 to 600.0 SECS
RAMP DECEL TIME Deceleration time used while in Local mode.	515	0.1 to 600.0 SECS
INITIAL FWD DIRECTION (FORWARD) Start-up mode of local direction on power-up. Set to TRUE for Forward.	516	FALSE / TRUE
INITIAL LOCAL (LOCAL) Start-up mode of Operator Station LOCAL/REMOTE control key on power-up. Set to TRUE for Local mode.	517	FALSE / TRUE
INITIAL PROGRAM (PROGRAM) Start-up mode of Operator Station PROG key on power-up. Set to TRUE for Program mode to see the local setpoint.	518	FALSE / TRUE
INITIAL SETPOINT (SETPOINT) START UP VALUES menu - Default value of local setpoint on power-up.	519	0.00 to 100.00 %
INITIAL JOG SETPOINT (JOG SETPOINT) START UP VALUES menu - Default Value of local jog setpoint on power up.	520	0.00 to 100.00 %

Functional Description

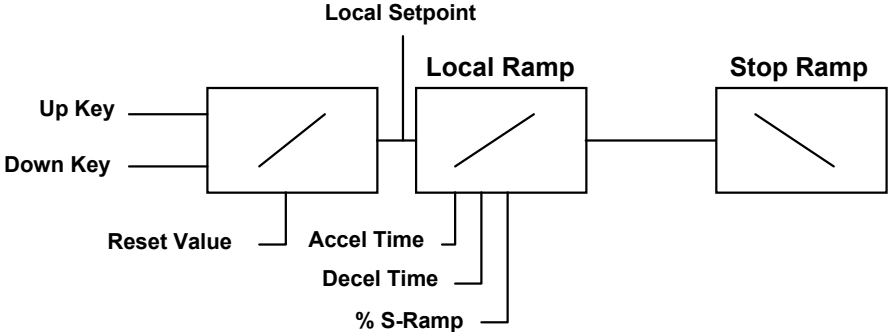

Local Setpoint (only active when the drive is in Local mode)

6-54 Programming Your Application

PASSWORD (MMI only)

MMI Menu Map

1

PASSWORD
ENTER PASSWORD
BY-PASS PASSWORD
CHANGE PASSWORD

Use this MMI menu to activate or deactivate the password protection feature.

Refer to Chapter 5: “The Operator Station” - Password Protection for further instruction.

Parameter	Tag	Range
ENTER PASSWORD Default = 0x0000.	120	0x0000 to 0xFFFF
BY-PASS PASSWORD Default = FALSE <i>Reserved parameter for use by Eurotherm Drives.</i>	526	FALSE / TRUE
CHANGE PASSWORD Default = 0x0000.	121	0x0000 to 0xFFFF

PID

MMI Menu Map

1	SETUP PARAMETERS
2	SPECIAL BLOCKS
3	PID
	PROP. GAIN
	INT.TIME.CONST
	DERIVATIVE TC
	POSITIVE LIMIT
	NEGATIVE LIMIT
	O/P SCALER(TRIM)
	INPUT 1
	INPUT 2
	RATIO 1
	RATIO 2
	DIVIDER 1
	DIVIDER 2
	ENABLE
	INT. DEFEAT
	FILTER T.C.
	MODE
	MIN PROFILE GAIN
	PROFILED GAIN

This is a general purpose PID block which can be used for many different closed loop control applications.

The PID feedback can be loadcell tension, dancer position or any other transducer feedback such as pressure, flow etc.

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::PID O/P DEST is connected to a non-zero tag.

Features:

- Independent adjustment of gain and time constants.
- Additional first-order filter (F).
- Functions P, PI, PD, PID with/without F individually selected.
- Ratio and divider for scaling each input.
- Independent positive and negative limits.
- Output scaler (Trim).
- Gain profiled by diameter for centre-driven winder control.

Pid	
PID OUTPUT	[417] 0.00 %
PID CLAMPED	[416] FALSE
PID ERROR	[415] 0.00 %
1.0	[404] PROP. GAIN
5.00 s	[402] INT. TIME CONST.
0.000 s	[401] DERIVATIVE TC
100.00 %	[405] POSITIVE LIMIT
-100.00 %	[406] NEGATIVE LIMIT
0.2000	[407] O/P SCALER (TRIM)
0.00 %	[410] INPUT 1
0.00 %	[411] INPUT 2
1.0000	[412] RATIO 1
1.0000	[413] RATIO 2
1.0000	[418] DIVIDER 1
1.0000	[414] DIVIDER 2
ENABLED	[408] ENABLE
OFF	[409] INT. DEFEAT
0.100 s	[403] FILTER T.C.
0	[473] MODE
20.00 %	[474] MIN PROFILE GAIN
	PROFILED GAIN [475] 0.0

Parameter	Tag	Range
PID OUTPUT	417	xxx.xx %

Refer to the DIAGNOSTICS function block description, page 6-23.

PID CLAMPED	416	FALSE / TRUE
--------------------	------------	---------------------

Refer to the DIAGNOSTICS function block description, page 6-23.

PID ERROR	415	xxx.xx %
------------------	------------	-----------------

Refer to the DIAGNOSTICS function block description, page 6-23.

PROP. GAIN	404	0.0 to 100.0
-------------------	------------	---------------------

The maximum limit of the proportional gain. This is a pure gain factor which shifts up or down the whole Bode PID transfer function leaving the time constants unaffected. A value of P = 10.0 means that, for an error of 5%, the proportional part (initial step) of the PID output will be: $10 \times [1 + (Td/Ti)] \times 5\%$, i.e. approx. 50% for $Td \ll Ti$.

INT. TIME CONST.	402	0.01 to 100.00 s
-------------------------	------------	-------------------------

The integral time constant (Ti)

DERIVATIVE TC	401	0.000 to 10.000 s
----------------------	------------	--------------------------

The derivative time constant (Td). Set this value to 0.000 to remove the derivative term.

POSITIVE LIMIT	405	0.00 to 105.00 %
-----------------------	------------	-------------------------

The upper limit of the PID algorithm.

NEGATIVE LIMIT	406	-105.00 to 0.00 %
-----------------------	------------	--------------------------

The lower limit of the PID algorithm.

PID

Parameter	Tag	Range
O/P SCALER (TRIM) (O/P SCALER(TRIM))	407	-3.0000 to 3.0000
The ratio that the limited PID output is multiplied by in order to give the final PID Output. Normally this ratio would be between 0 and 1.		
INPUT 1	410	-300.00 to 300.00 %
PID setpoint input. This can be either a position/tension feedback or a reference/offset.		
INPUT 2	411	-300.00 to 300.00 %
PID feedback input. This can be either a position/tension feedback or a reference/offset		
RATIO 1	412	-3.0000 to 3.0000
This multiplies Input 1 by a factor (Ratio 1).		
RATIO 2	413	-3.0000 to 3.0000
This multiplies Input 2 by a factor (Ratio 2).		
DIVIDER 1	418	-3.0000 to 3.0000
This divides Input 1 by a factor (Divider 1).		
DIVIDER 2	414	-3.0000 to 3.0000
This divides Input 2 by a factor (Divider 2).		
ENABLE	408	DISABLED / ENABLED
Enables or disables the PID output.		
INT. DEFEAT	409	OFF / ON
When ON, the Integral term is disabled. The block transfer function then becomes P+D only.		
FILTER T.C.	403	0.000 to 10.000 s
A first-order filter for removing high frequency noise from the PID output. When set to 0.000 the filter is removed. The high frequency lift of the transfer function is determined by the ratio k of the Derivative Time Const (Td) over the Filter Time Constant (Tf) - typically 4 of 5.		
MODE	473	0 to 4
This determines the shape of the proportional gain profile. The higher the setting, the steeper the curve of the profiled gain. For Mode = 0, Profiled Gain = constant = P. For Mode = 1, Profiled Gain = A * (diameter - min diameter) + B. For Mode = 2, Profiled Gain = A * (diameter - min diameter) ² + B. For Mode = 3, Profiled Gain = A * (diameter - min diameter) ³ + B. For Mode = 4, Profiled Gain = A * (diameter - min diameter) ⁴ + B.		
MIN PROFILE GAIN	474	0.00 to 100.00 %
This expresses the minimum gain required at minimum diameter (core) as a percentage of the (maximum) P gain at full diameter (100%), when MODE > 0.		
PROFILED GAIN	475	xxxx.x
The proportional gain after profiling by a profiler block which varies the gain versus diameter. This is primarily to be used with Speed Profiled Winders for compensation against varying diameter and therefore inertia.		
<ul style="list-style-type: none"> • When MODE is not ZERO (see above) this overrides the P gain above. • When MODE = 0, then PROFILED GAIN = PROP. GAIN. 		

Functional Description

The following block diagram shows the internal structure of the PID block.

PID is used to control the response of any closed loop system. It is used specifically in system applications involving the control of drives to allow zero steady state error between Reference and Feedback, together with good transient performance.

The block executes a Proportional Gain + Integral + Derivative control algorithm, with an added filter to attenuate high-frequency noise. You can select P, PD, PI or PID as required.

Proportional Gain (PROP. GAIN)

This is used to adjust the basic response of the closed loop control system. It is defined as the portion of the loop gain fed back to make the complete control loop stable. The PID error is multiplied by the Proportional Gain to produce an output.

Integral (INT. TIME CONST.)

The Integral term is used to give zero steady state error between the setpoint and feedback values of the PID. If the integral is set to a small value, this will cause an underdamped or unstable control system.

Derivative (DERIVATIVE TC)

This is used to correct for certain types of control loop instability, and therefore improve response. It is sometimes used when heavy or large inertia rolls are being controlled. The derivative term has an associated filter to suppress high frequency signals.

The algorithm modifies the error between the setpoint and the feedback with the proportional, integral, and derivative terms. The error is clamped internally to $\pm 105\%$ maximum.


The proportional, integral, and derivative terms are scaled by PROP. GAIN, INT. TIME CONST., and DERIVATIVE TC respectively. An additional gain profiler can modify the proportional gain as the roll diameter changes. The block diagram shows how the proportional gain changes when using the profiler.

Proportional Gain

Proportional gain scales the output based upon the input error. Increasing PROP. GAIN will improve the response time while increasing overshoot. MODE selects the proportional gain profile. When set to 0, the proportional gain remains constant over the entire roll. Changing the value of MODE increases the profile as shown opposite.

You should try to achieve a critically damped response which allows the mechanics to track as precisely as possible a step change on the setpoint.

Critically Damped Response

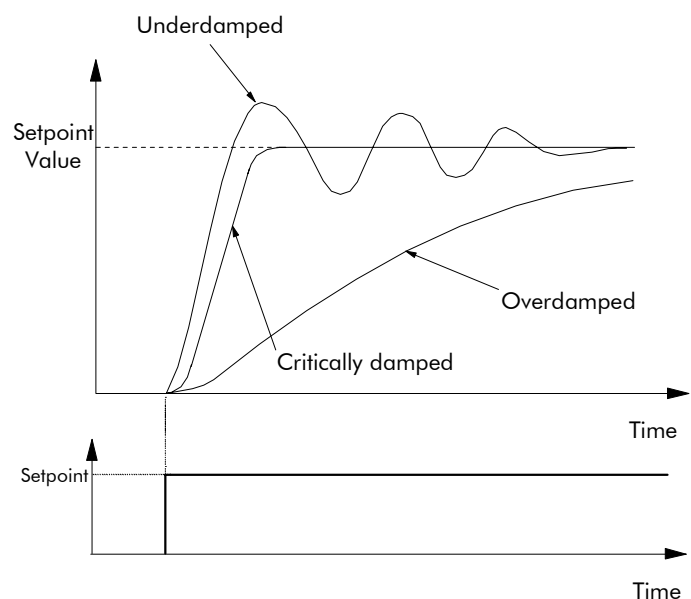

Integral Gain

Integral eliminates steady-state error. Reducing INT. TIME CONST. improves the response, however, if it is set too short it will cause instability. The integral value is clamped internally by the settings of POSITIVE LIMIT and NEGATIVE LIMIT. It is also held at the last value when the PID CLAMPED output is TRUE. Setting INT. DEFEAT to ON will disable the integral gain term.

PID

Derivative Gain


Derivative gain instantaneously boosts the PID output signal. Increasing DERIVATIVE TC decreases the damping, which in most cases causes overshoot and oscillations resulting in an unacceptable system response.

Note: For most applications, derivative gain is never used and is usually left at its default value of 0.000 seconds.

Derivative gain can improve response in some dancer tension controlled systems, particularly those systems with high inertia dancers which need an instantaneous response to overcome the weight of the dancer roll. For loadcell controlled tension systems, derivative gain is almost never used.

The block diagram below shows the types of system responses possible, MODE = 0 to MODE = 4.

- In underdamped systems, the output oscillates and the settling time increases.
- Critically damped systems have no overshoot or oscillations. They reach the setpoint within the desired response time.
- Overdamped systems do not oscillate but do not reach the setpoint within the desired response time.

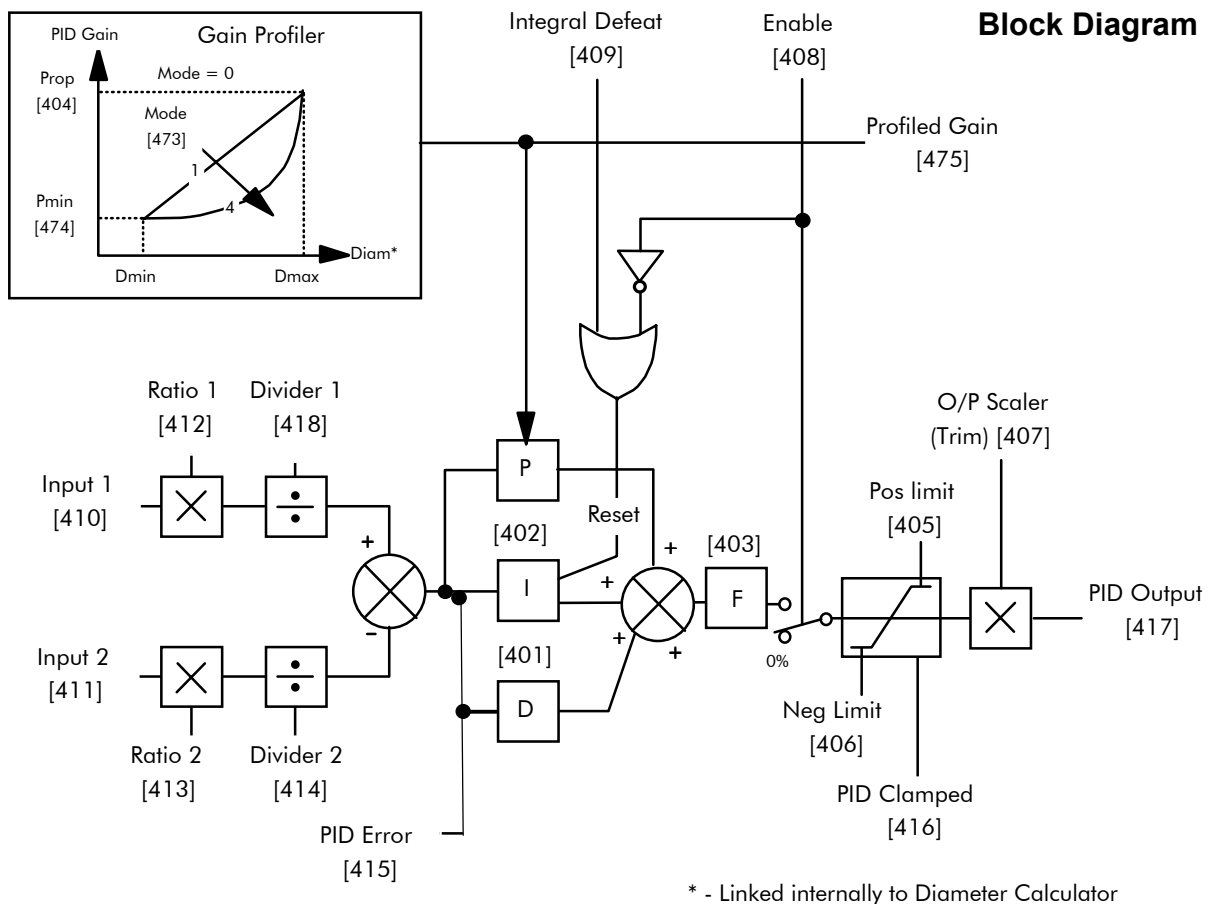

Operators can read the PID error, PID output, setpoint and feedback on the drive's MMI by monitoring the following values:


- PID ERROR : displayed in the DIAGNOSTICS menu
- PID OUTPUT : displayed in the DIAGNOSTICS menu
- SETPOINT : monitored at SETUP PARAMETERS::SPECIAL BLOCKS::PID::INPUT 1
- FEEDBACK : monitored at SETUP PARAMETERS::SPECIAL BLOCKS::PID::INPUT 2

PRESET

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 PRESET SPEEDS
 - SELECT 1
 - SELECT 2
 - SELECT 3
 - INVERT O/P
 - MAX SPEED
 - LIMIT
 - GRAY SCALE
 - INPUT 0
 - INPUT 1
 - INPUT 2
 - INPUT 3
 - INPUT 4
 - INPUT 5
 - INPUT 6
 - INPUT 7
 - PRESET O/P
 - OUTPUT

The Preset block allows you to select one of eight preset inputs, which in turn may be connected to other blocks of inputs.

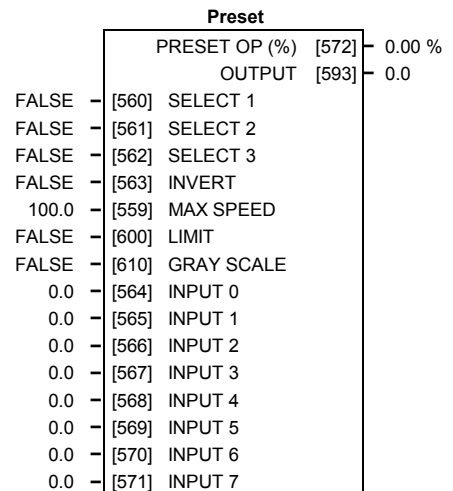


Parameter	Tag	Range
PRESET OP (%)	572	x.xx %
Scales the selected preset input by MAX SPEED.		
OUTPUT	593	x.x
Outputs the selected INPUT value.		
SELECT 1	560	FALSE / TRUE
Select inputs 1		
SELECT 2	561	FALSE / TRUE
Select inputs 2		
SELECT 3	562	FALSE / TRUE
Select inputs 3		
INVERT	563	FALSE / TRUE
Changes the sign of the output. If TRUE, the output is of the opposite sign to the selected input.		
MAX SPEED	559	0.1 to 3000.0
Scaler for PRESET OP (%).		
LIMIT	600	FALSE / TRUE
Clamp output to MAX SPEED if TRUE.		
GRAY SCALE	610	FALSE / TRUE
Selects Gray Scale encoding when TRUE, Binary encoding when FALSE. When gray scale is selected, only one input changes between state preventing the mis-selection of intermediate states.		
INPUT 0 to INPUT 7	564, 565, 566, 567, 568, 569, 570, 571	-3000.0 to 3000.0

Pre-set input variables.

PRESET

Functional Description

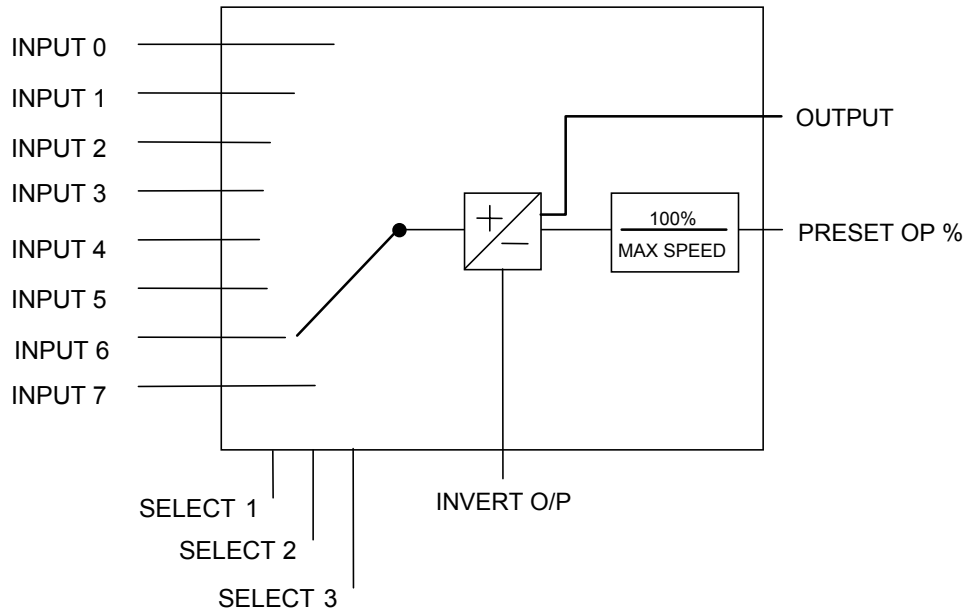

Selection Table

Three Boolean variables used to select between one of the 8 preset values.

BINARY ENCODING			
Select 3	Select 2	Select 1	Input
FALSE	FALSE	FALSE	1
FALSE	FALSE	TRUE	2
FALSE	TRUE	FALSE	3
FALSE	TRUE	TRUE	4
TRUE	FALSE	FALSE	5
TRUE	FALSE	TRUE	6
TRUE	TRUE	FALSE	7
TRUE	TRUE	TRUE	8

GRAY SCALE ENCODING			
Select 3	Select 2	Select 1	Input
FALSE	FALSE	FALSE	1
FALSE	FALSE	TRUE	2
FALSE	TRUE	TRUE	3
FALSE	TRUE	FALSE	4
TRUE	TRUE	FALSE	5
TRUE	TRUE	TRUE	6
TRUE	FALSE	TRUE	7
TRUE	FALSE	FALSE	8

RAISE/LOWER

MMI Menu Map


- 1 SETUP PARAMETERS
- 2 RAISE/LOWER
 - RESET VALUE
 - INCREASE RATE
 - DECREASE RATE
 - RAISE INPUT
 - LOWER INPUT
 - MIN VALUE
 - MAX VALUE
 - EXTERNAL RESET

This function block acts as an internal motorised potentiometer (MOP).

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::RAISE/LOWER DEST is connected to a non-zero tag

The OUTPUT is not preserved when the drive is powered-down.

By default, this block has no inputs or outputs connected.

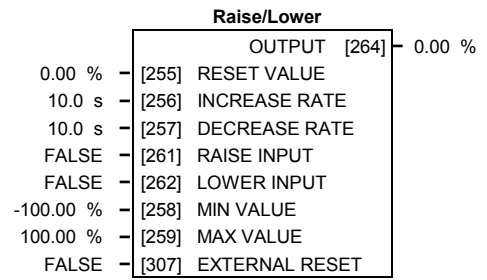

Parameter	Tag	Range
OUTPUT	264	xxx.xx %

(RAISE/LOWER O/P)

Refer to the DIAGNOSTICS function block description, page 6-23.

RESET VALUE	255	-300.00 to 300.00 %
--------------------	------------	----------------------------

This reset value is pre-loaded directly into the output when EXTERNAL RESET is TRUE, or at power-up. It is clamped by MIN VALUE and MAX VALUE.

INCREASE RATE	256	0.1 to 600.0 s
----------------------	------------	-----------------------

Rate of change of an increasing output value.

DECREASE RATE	257	0.1 to 600.0 s
----------------------	------------	-----------------------

Rate of change of a decreasing output value.

RAISE INPUT	261	FALSE / TRUE
--------------------	------------	---------------------

Command to raise the output value. When TRUE, increases the output at the rate determined by INCREASE RATE.

LOWER INPUT	262	FALSE / TRUE
--------------------	------------	---------------------

Command to lower the output value. When TRUE, decreases the output at the rate determined by DECREASE RATE.

MIN VALUE	258	-300.00 to 300.00 %
------------------	------------	----------------------------

Minimum ramp output clamp. This is a plain clamp, not a ramped "min speed" setting.

MAX VALUE	259	-300.00 to 300.00 %
------------------	------------	----------------------------


Maximum ramp output clamp.

EXTERNAL RESET	307	FALSE / TRUE
-----------------------	------------	---------------------

When TRUE, sets the output of the Raise/Lower block to the RESET VALUE.

RAISE/LOWER

Functional Description

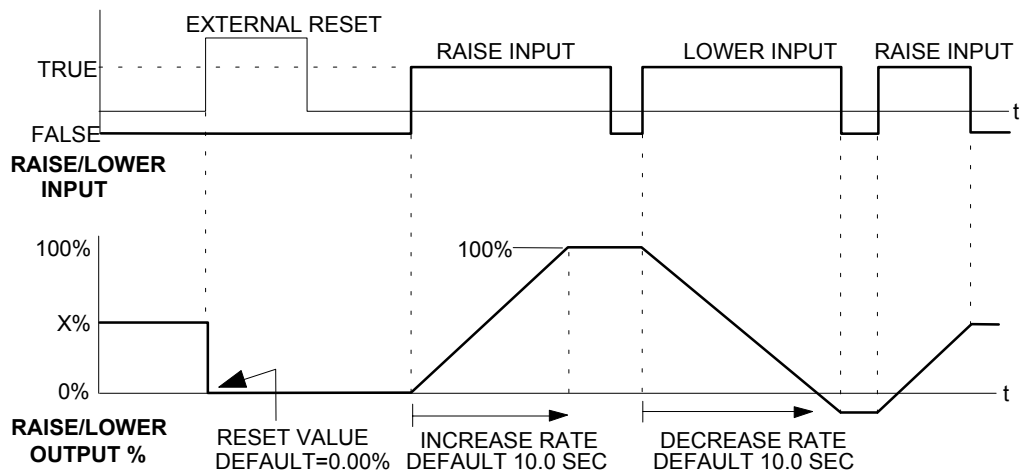

The diagram above illustrates the raise/lower functionality.


When EXTERNAL RESET is set TRUE, the raise/lower output resets to RESET VALUE (default = 0.00%).

When RAISE INPUT is TRUE, the output increases at INCREASE RATE. The output cannot exceed MAX VALUE.

The reverse is true when LOWER INPUT is TRUE: LOWER INPUT reduces the output at DECREASE RATE. The output cannot drop below MIN VALUE.

The ramp is held at its last value when the RAISE and LOWER INPUT are removed.

Setting both RAISE INPUT and LOWER INPUT to TRUE at the same time creates a ramp hold condition.

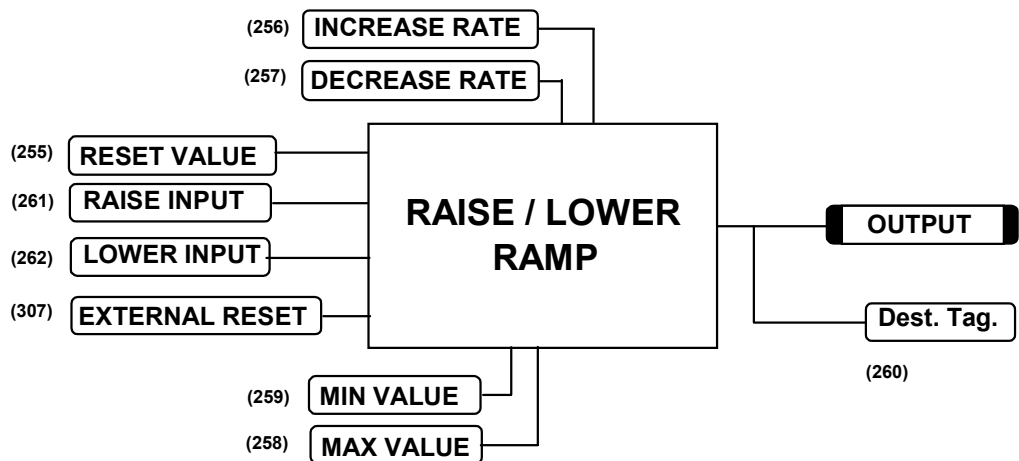

If Reset, Output = Reset Value (Clamped)

RAMPS

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 RAMPS
 - RAMP ACCEL TIME
 - RAMP DECEL TIME
 - RAMP HOLD
 - INVERT
 - RAMP INPUT
 - % S-RAMP
 - RAMPING THRESH.
 - AUTO RESET
 - EXTERNAL RESET
 - RESET VALUE
 - MIN SPEED

The RAMPS parameters set the shape and duration of the ramp used for starting and changing speeds.

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::RAMP O/P DEST is connected to a non-zero tag

Note: The STOP RATES menu contains a separate deceleration rate for controlled stopping of the drive.

The default inputs are ANIN 3 (A4) for a ramped speed input, and DIGIN 2 (C7) to switch RAMP HOLD. The default output connection is to SPEED LOOP::SETPOINT 3.

The input signal to the block is clamped by MIN SPEED, which sets the minimum ramp input speed when the drive is enabled.

RAMP INPUT is routed to the JOG/SLACK function block to be modified as determined by the JOG inputs. The RAMPS block then shapes the signal to produce the RAMP OUTPUT signal.

The RAMPING output becomes TRUE when the absolute value of the difference between RAMP OUTPUT and the JOG/SLACK function block output exceeds RAMPING THRESH.

RAMP ACCEL TIME and RAMP DECEL TIME set the acceleration and deceleration times taken for input changes. % S-RAMP adds a "S" shaped section to the linear ramp. When set to 0.00%, the ramp will be linear. As the percentage is increased, 350% of the ramp time is added to the linear ramp creating more gradual starting and stopping. The formula for the actual ramp time is shown below. Ramp time is the value of parameters RAMP ACCEL TIME or RAMP DECEL TIME.

$$\text{Actual Ramp Time} = \text{RAMP TIME} \times (3.5 \times \% \text{ S-RAMP} / 100 + 1)$$

RAMP HOLD stops the ramp from changing. When DIGIN 2 (C7) is ON, the ramp stays at the last ramp value.

The reset signal can have two sources, a RUN signal or an external reset signal. When AUTO RESET is ENABLED, the ramp resets whenever a Run signal is given at terminal C3. Connecting a digital input to EXTERNAL RESET allows an external source to reset the ramp.

Ramps		
	RAMP OUTPUT [85]	0.00 %
	RAMPING [113]	FALSE
10.0 s	[2] RAMP ACCEL TIME	
10.0 s	[3] RAMP DECEL TIME	
ENABLED	[4] CONSTANT ACCEL	
OFF	[118] RAMP HOLD	
FALSE	[620] INVERT	
0.00 %	[5] RAMP INPUT	
2.50 %	[266] % S-RAMP	
0.50 %	[286] RAMPING THRESH.	
ENABLED	[287] AUTO RESET	
DISABLED	[288] EXTERNAL RESET	
0.00 %	[422] RESET VALUE	
0.00 %	[126] MIN. SPEED	


RAMPS

Parameter	Tag	Range
RAMP OUTPUT	85	xxx.xx %
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
RAMPING	113	FALSE / TRUE
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
RAMP ACCEL TIME	2	0.1 to 600.0 s
The acceleration time for 100% change.		
RAMP DECEL TIME	3	0.1 to 600.0 s
The deceleration time for 100% change.		
CONSTANT ACCEL	4	DISABLED / ENABLED
<i>Reserved parameter for use by Eurotherm Drives.</i>		
RAMP HOLD	118	OFF / ON
When ON, the ramp output is held at its last value. This is overridden by a ramp reset.		
INVERT	620	FALSE / TRUE
Inverts the RAMP INPUT signal.		
RAMP INPUT	5	-105.00 to 105.00 %
Input value.		
% S-RAMP	266	0.00 to 100.00 %
Percentage of ramp with S-shaped rate of change. A value of zero is equivalent to a linear ramp. Changing this value affects the ramp times.		
RAMPING THRESH.	286	0.00 to 100.00 %
Ramping flag threshold level. The threshold is used to detect whether the ramp is active.		
AUTO RESET	287	DISABLED / ENABLED
When ENABLED, the ramp is reset whenever SYSTEM RESET is TRUE. (SYSTEM RESET Tag 374 is an internal flag that is set TRUE for one cycle after the Speed/Current loop is enabled, i.e. every time the drive is started).		


RAMPS

Parameter	Tag	Range
EXTERNAL RESET	288	DISABLED / ENABLED
When ENABLED, the ramp is reset to RESET VALUE. EXTERNAL RESET does not depend on AUTO RESET for its operation.		
RESET VALUE	422	-300.00 to 300.00 %
The ramp output value at power-up, or when the ramp is reset. In order to catch a spinning load smoothly ('bumpless transfer') connect SPEED FEEDBACK Tag No. 62 (source) to RESET VALUE Tag No. 422 (destination).		
MIN. SPEED (MIN SPEED)	126	0.00 to 100.00 %
The minimum speed clamp is fully bi-directional and operates with a 0.5% hysteresis. This clamp operates on the input to the ramp and it can therefore be overridden by the RESET VALUE as far as the ramp output is concerned.		

Minimum Speed

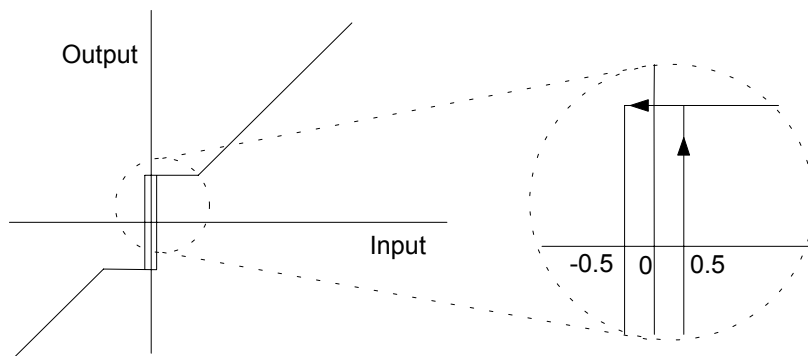


Functional Description

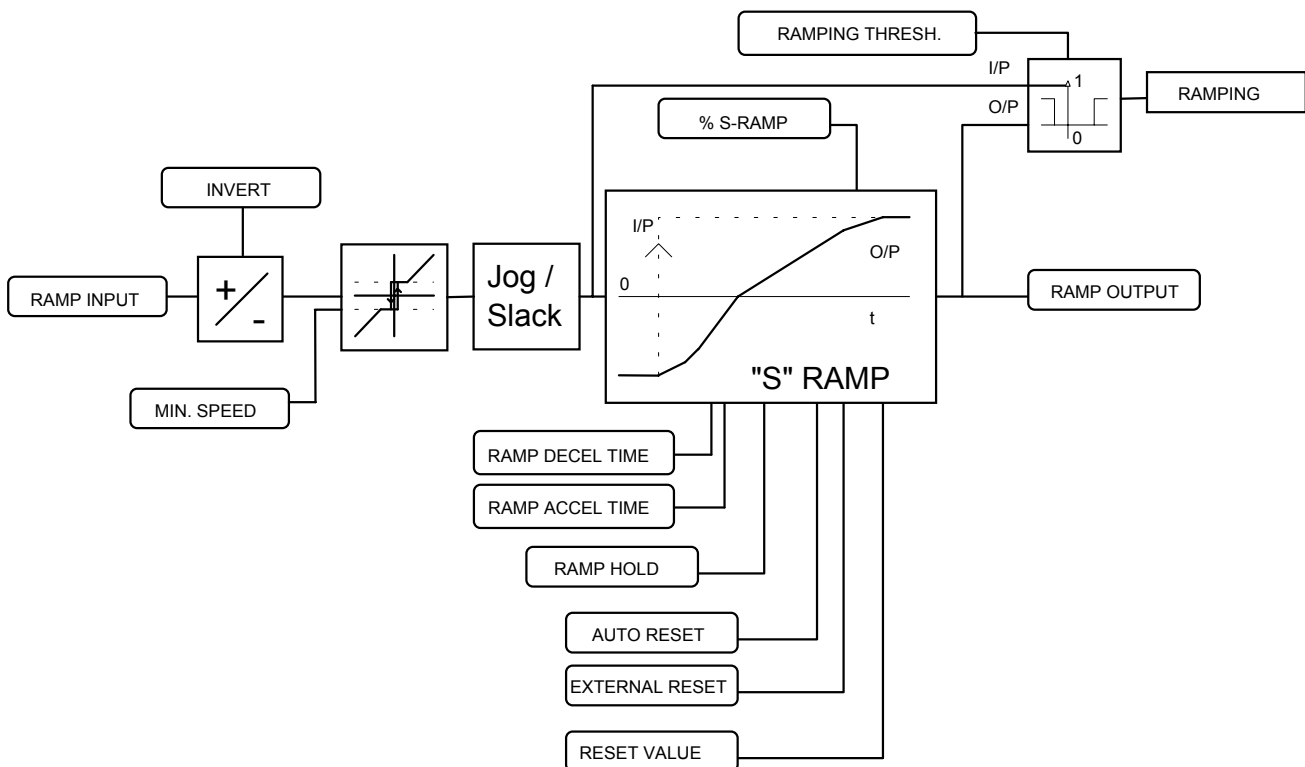


RAMPS


ACCELERATION/DECELERATION RATES

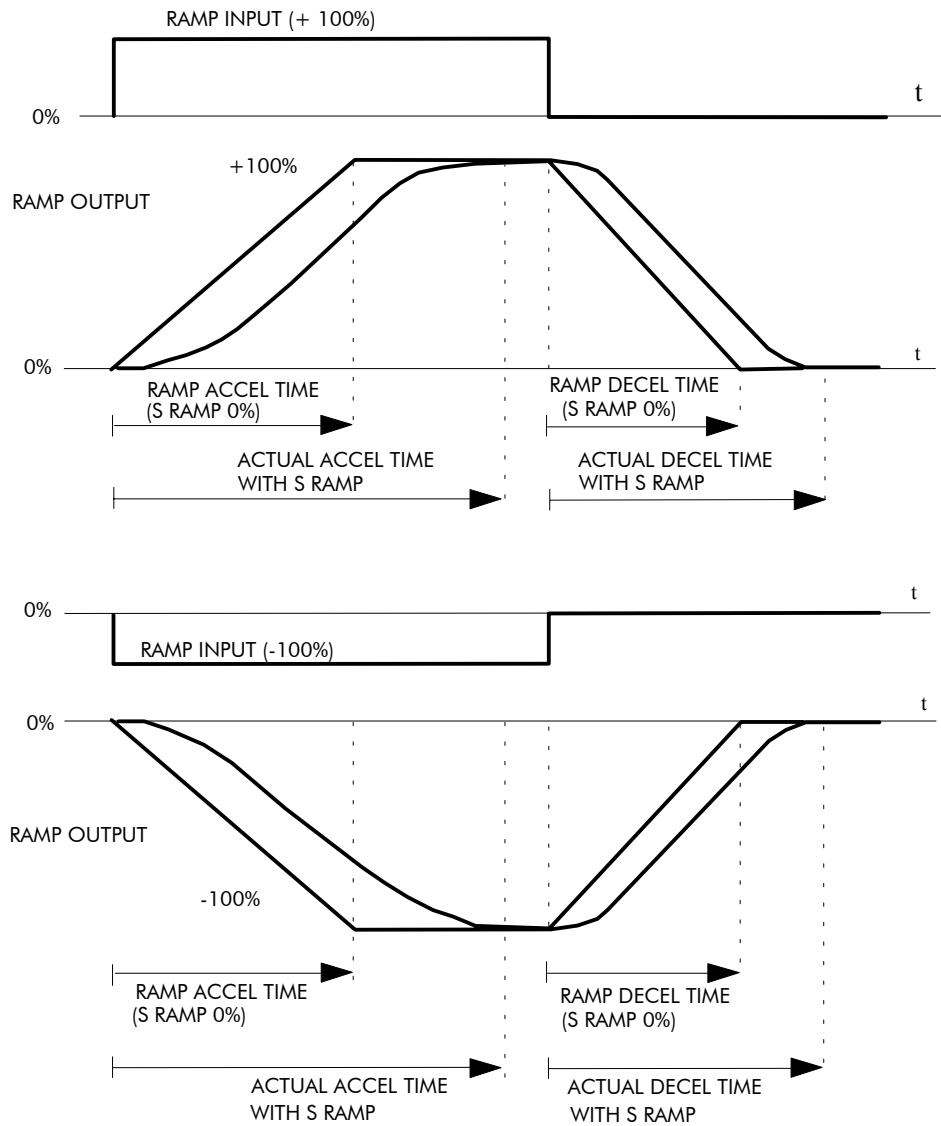


RAMP HOLD

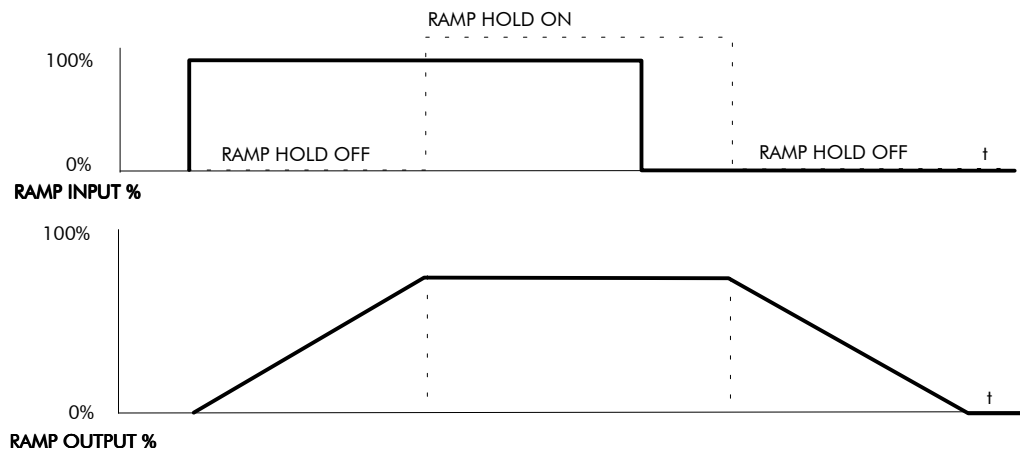


The ramp will function when a ramp input is present. When DIGIN 2 (C7) is ON, RAMP HOLD stops the ramp from changing. Even when the ramp input signal is removed, RAMP HOLD keeps the ramp output from changing. Once RAMP HOLD is OFF, the ramp resumes.

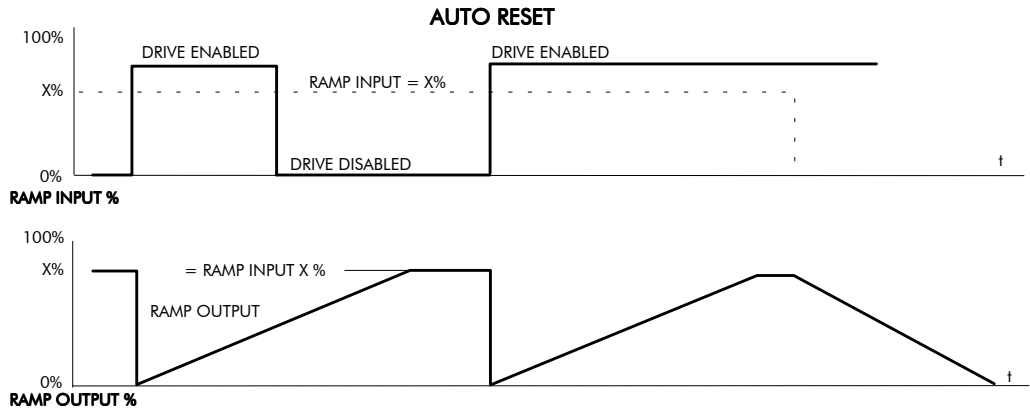

When AUTO RESET is ENABLED, ramp output resets to RESET VALUE each time the drive is enabled. In this example RESET VALUE is 0.00%. It does not reset if the drive is disabled.

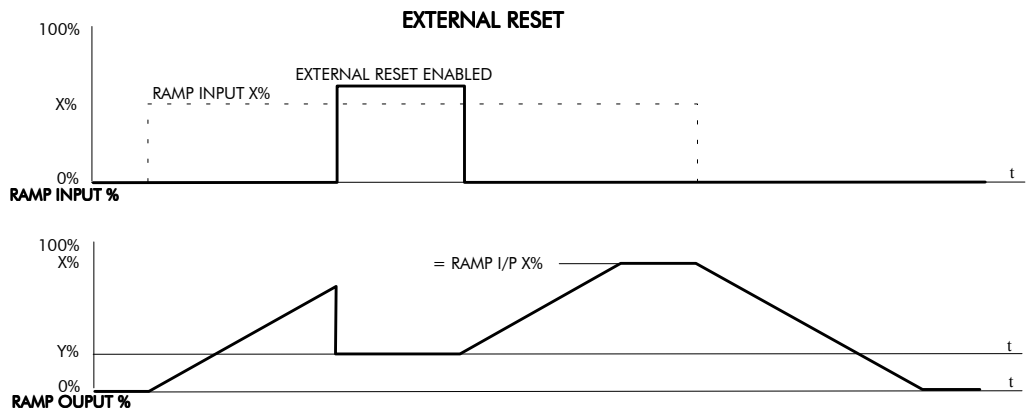

The ramp input is set to X% at time t_0 . The ramp output will increase at the ramp rate. While EXTERNAL RESET is ENABLED, the ramp output resets to RESET VALUE (Y%). When EXTERNAL RESET is DISABLED, the ramp output continues to follow the input signal.

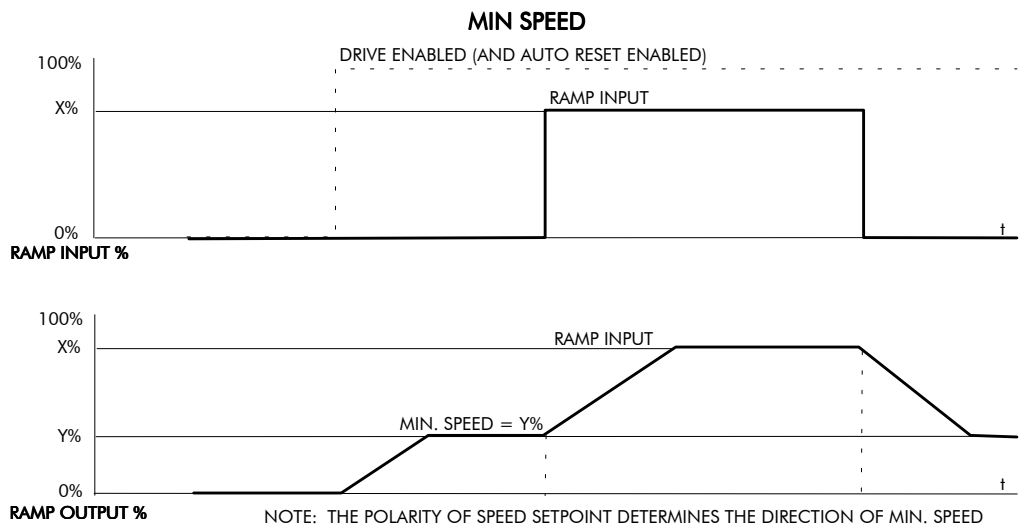

This figure shows the effect of setting MIN. SPEED above 0.00%. When the drive is enabled, the ramp output cannot fall below the value set by MIN. SPEED. Notice the ramp rates are used when changing the output from minimum speed to zero speed. Notice also that in this example the ramp output only increases to X% since the ramp input signal is limited to X%.

SETPOINT SUM 1

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SETPOINT SUM 1
 - RATIO 1
 - RATIO 0
 - SIGN 1
 - SIGN 0
 - DIVIDER 1
 - DIVIDER 0
 - DEADBAND WIDTH
 - LIMIT
 - INPUT 2
 - INPUT 1
 - INPUT 0


Use this block to sum and scale up to three analog inputs to produce the SPT. SUM output.

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::SPT SUM 1 DEST is connected to a non-zero tag. The default connection is to Tag 289, SETPOINT 1.

Analog Input 1, terminal A2 is the default input. By default, the output SPT. SUM connects to SETPOINT 1 in the speed loop.

INPUT 0 and INPUT 1 have individual ratio and divider scalers, and signs. INPUT 1 has an additional deadband function set by DEADBAND WIDTH. When the input is within the deadband, the output clamps to zero to ignore any noise. This parameter is useful when digital setpoints are used (for example from a 5703, serial communications, or the RAISE/LOWER function block). The inputs have symmetrical limits set by LIMIT. INPUT 2 has no scaling or limits.

The output, after INPUT 0, INPUT 1 and INPUT 2 are summed, is also clamped by LIMIT before producing the SPT. SUM output.

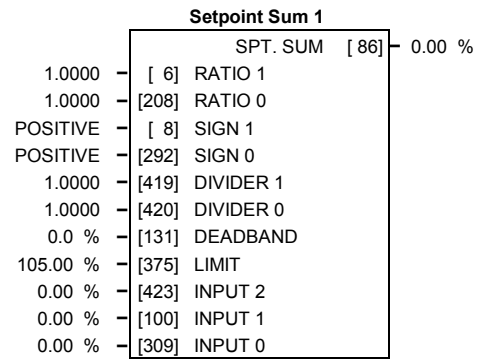

Parameter	Tag	Range
SPT. SUM	86	xxx.xx %

(SPT SUM OUTPUT)

Refer to the *DIAGNOSTICS* function block description, page 6-23.

RATIO 1	6	-3.0000 to 3.0000
----------------	----------	--------------------------

Multiplier term for INPUT 1.

RATIO 0	208	-3.0000 to 3.0000
----------------	------------	--------------------------

Multiplier term for INPUT 0.

SIGN 1	8	NEGATIVE / POSITIVE
---------------	----------	----------------------------

Polarity for INPUT 1.

SIGN 0	292	NEGATIVE / POSITIVE
---------------	------------	----------------------------

Polarity for INPUT 0.

DIVIDER 1	419	-3.0000 to 3.0000
------------------	------------	--------------------------

Divider scaling for INPUT 1. Dividing by 0 (zero) results in a zero output.

DIVIDER 0	420	-3.0000 to 3.0000
------------------	------------	--------------------------

Divider scaling for INPUT 0. Dividing by 0 (zero) results in a zero output.

DEADBAND	131	0.0 to 100.0 % (h)
-----------------	------------	---------------------------


(DEADBAND WIDTH)

Range within which the output is clamped at zero.

SETPOINT SUM 1

Parameter	Tag	Range
LIMIT	375	0.00 to 200.00 %

The Setpoint Sum programmable limit is symmetrical and has the range 0.00% to 200.00%. The limit is applied both to the intermediate results of the RATIO calculation and the total output.

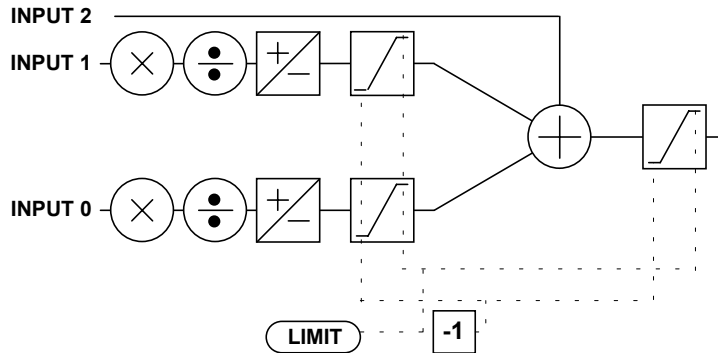

INPUT 2	423	-200.00 to 200.00 %
Input 2 value. By default this is not connected to any analog input.		
INPUT 1	100	-200.00 to 200.00 %
Input 1 value. By default this is connected to Analog Input 1 (terminal A2).		
INPUT 0	309	-200.00 to 200.00 %
Input 0 value. By default this is not connected to any analog input.		

SETPOINT SUM 2

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 SETPOINT SUM 2
 - INPUT 2
 - INPUT 1
 - INPUT 0
 - RATIO 1
 - RATIO 0
 - DIVIDER 1
 - DIVIDER 0
 - LIMIT
 - SPT SUM OUTPUT
 - STPT SUM 2 OUT 0
 - STPT SUM 2 OUT 1

Setpoint Sum 2 is a general purpose summing and ratio block that allows two scalable inputs and one unscalable input to be combined.

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::SETPOINT SUM 2 is connected to a non-zero tag.


This block may be used for friction compensations in Current Program Winders (CPW) and Speed Program Winders (SPW).

INPUT 0 and INPUT 1 can be scaled individually using their respective ratio and divider parameters. LIMIT sets the symmetrical clamps for INPUT 0, INPUT 1 and the final output.


Setpoint Sum 2	
SPT SUM OUTPUT [451]	0.00 %
OUTPUT 0 [491]	0.00 %
OUTPUT 1 [492]	0.00 %
0.00 % - [444] INPUT 0	
0.00 % - [443] INPUT 1	
0.00 % - [445] INPUT 2	
1.0000 - [447] RATIO 0	
1.0000 - [446] RATIO 1	
1.0000 - [448] DIVIDER 0	
1.0000 - [466] DIVIDER 1	
100.00 % - [449] LIMIT	

Parameter	Tag	Range
SPT SUM OUTPUT	451	xxx.xx %
Main output of Setpoint Sum 2.		
OUTPUT 0	491	xxx.xx %
(STPT SUM 2 OUT 0)		
An additional output provided to gain access to Input 0 channel sub-calculations. The result of (INPUT 0 x RATIO 0) / DIVIDER 0 clamped to within ± LIMIT.		
OUTPUT 1	492	xxx.xx %
(STPT SUM 2 OUT 1)		
An additional output provided to gain access to Input 1 channel sub-calculations. The result of (INPUT 1 x RATIO 1) / DIVIDER 1 clamped to within ± LIMIT.		
INPUT 0	444	-300.00 to 300.00 %
Input 0 scaled value. By default this is not connected to any analog input.		
INPUT 1	443	-300.00 to 300.00 %
Input 1 scaled value. By default this is connected to Analog Input 1 (A2).		
INPUT 2	445	-300.00 to 300.00 %
Input 2 unscaled value. By default this is not connected to any analog input.		
RATIO 0	447	-3.0000 to 3.0000
Multiplier term for INPUT 0.		
RATIO 1	446	-3.0000 to 3.0000
Multiplier term for INPUT 1		
DIVIDER 0	448	-3.0000 to 3.0000
Divider scaling for INPUT 0. Dividing by 0 (zero) results in a zero output.		
DIVIDER 1	466	-3.0000 to 3.0000
Divider scaling for INPUT 1. Dividing by 0 (zero) results in a zero output.		
LIMIT	449	0.00 to 200.00 %

The Setpoint Sum programmable limit is symmetrical and has the range 0.00% to 200.00%. The limit is applied both to the intermediate results of the RATIO calculation and the total output.

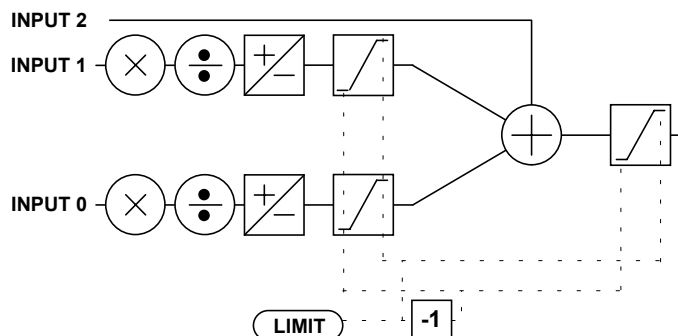

Functional Description

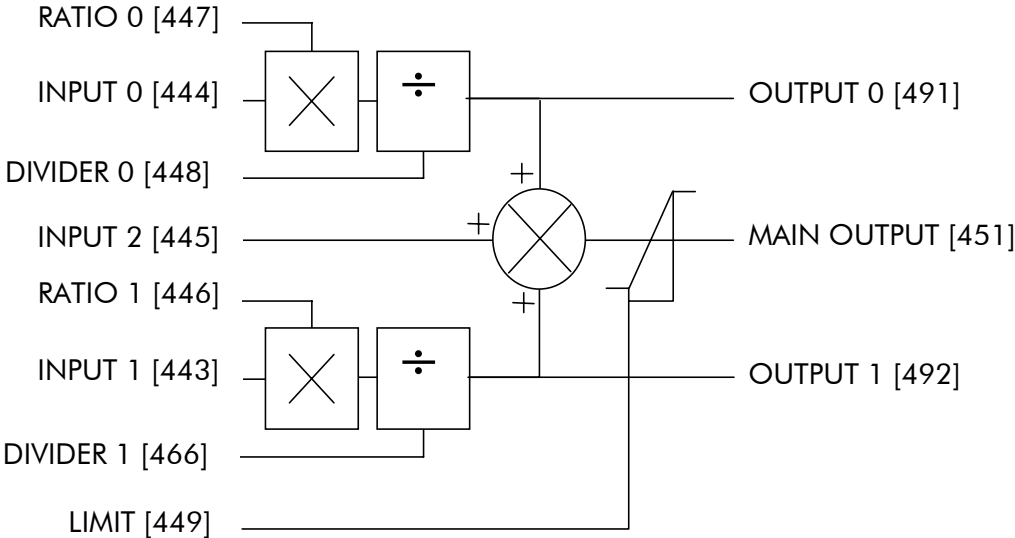

SPEED LOOP

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPEED LOOP
 - SPD.PROP.GAIN
 - SPD.INT.TIME
 - INT. DEFEAT
 - PRESET TORQUE
 - PRESET T SCALE
 - ENCODER SIGN
 - SPEED FBK SELECT
 - SPD.FBK.FILTER

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPEED LOOP
- 3 SETPOINTS
 - SETPOINT 1
 - SIGN 2 (A3)
 - RATIO 2 (A3)
 - SETPOINT 2 (A3)
 - SETPOINT 3
 - SETPOINT 4
 - MAX DEMAND
 - MIN DEMAND

MMI Menu Map

- 1 CONFIGURE DRIVE
 - SPEED FBK SELECT
 - ENCODER SIGN
 - SPD. INT. TIME
 - SPD PROP GAIN

Use this block to tune the speed loop PI to produce a current demand.

The speed loop has four inputs:

1. SPEED DEMAND from STOP RATES.
2. Speed feedback as either armature volts, analog tach, or ENCODER from CALIBRATION.
3. ZERO SPD. OFFSET from CALIBRATION.
4. DRIVE ENABLE from the drive enable logic.

The two outputs are the diagnostic parameter CURRENT DEMAND and SPEED ERROR.

The block is viewed in three menus on the MMI: SPEED LOOP, SETPOINTS and ADVANCED.

SETPOINTS: MMI Sub-Menu

This MMI menu contains the setpoint parameter reference inputs for the function block.

ADVANCED: MMI Sub-Menu

Refer to page 6-76.

SPEED DEMAND is summed algebraically with SPEED FEEDBACK to produce SPEED ERROR. When the drive is enabled, SPEED ERROR is controlled by the PI loop. Proportional and integral profiling is performed in the ADVANCED::ADAPTION function block.

The resulting current demand signal is routed to the CURRENT LOOP function block and to the ADVANCED::ZERO SPD. QUENCH sub-menu.

Speed Loop		
OUTPUT	[356]	0.00 %
SPEED FEEDBACK	[62]	0.00 %
SPEED SETPOINT	[63]	0.00 %
SPEED ERROR	[64]	0.00 %
10.00	[14] PROP. GAIN	
0.500 SECS	[13] INT. TIME CONST.	
OFF	[202] INT. DEFEAT	
0.000	[547] SPEED FBK FILTER	
3	[554] ENCODER FILTER	
0.00 %	[289] SETPOINT 1	
POSITIVE	[9] SIGN 2 (A3)	
1.0000	[7] RATIO 2 (A3)	
	SETPOINT 2 (A3) [290]	0.00 %
0.00 %	[291] SETPOINT 3	
0.00 %	[41] SETPOINT 4	
105.00 %	[357] MAX DEMAND	
-105.00 %	[358] MIN DEMAND	
0.00 %	[595] PRESET TORQUE	
100.00 %	[604] PRESET T SCALE	

Parameter	Tag	Range
OUTPUT	356	xxx.xx %
(SPD LOOP OUTPUT)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
SPEED FEEDBACK	62	xxx.xx %
(RAW SPEED FBK)		
The speed feedback value from the source chosen by SPEED FBK SEL.		
SPEED SETPOINT	63	xxx.xx %
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
SPEED ERROR	64	xxx.xx %
(RAW SPEED ERROR)		
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
PROP. GAIN	14	0.00 to 200.00
(SPD.PROP.GAIN)		
Speed loop PI proportional gain adjustment.		

SPEED LOOP

Parameter	Tag	Range
INT. TIME CONST. (SPD.INT.TIME) Speed loop PI integral gain adjustment.	13	0.001 to 30.000 SECS
INT. DEFEAT When ON it inhibits the integral part of the speed loop PI control to give proportional only control.	202	OFF / ON
SPEED FBK FILTER (SPD.FBK.FILTER) A simple filter function that is applied to speed feedback to reduce ripple caused by low line count encoders and noisy tachos. A value of 0 disables the filter action ,and 1.00 is the maximum value. A typical value would be between 0.5 and 0.75. INCREASING THE FILTER VALUE MAY MAKE THE SPEED LOOP UNSTABLE. The filter time constant τ in milliseconds can be calculated from the following equation:	547	0.000 to 1.000
$\tau = \frac{3.3}{\text{Log}_e\left(\frac{1}{\alpha}\right)}$		
Where α is the value of SPD FBK FILTER. A value of 0.5 equates to a filter time of 4.8ms, 0.8 to 14.7ms, and 0.9 to 31.2ms.		
ENCODER FILTER <i>Reserved parameter for use by Eurotherm Drives.</i>	554	See below
SETPOINT 1 Speed Setpoint 1 (Default Setpoint Sum 1 O/P).	289	-105.00 to 105.00 %
SIGN 2 (A3) Speed Setpoint 2 Sign.	9	NEGATIVE / POSITIVE
RATIO 2 (A3) Speed Setpoint 2 Ratio.	7	-3.0000 to 3.0000
SETPOINT 2 (A3) Speed Setpoint 2 - Fixed (non-configurable) setpoint scanned synchronously with the current loop	290	xxx.xx %
SETPOINT 3 Speed Setpoint 3 (Default Ramp O/P).	291	-105.00 to 105.00 %
SETPOINT 4 Speed Setpoint 4 (Default 5703 I/P).	41	-105.00 to 105.00 %
MAX DEMAND Sets the maximum input to the speed loop. It is clamped at 105% to allow for overshoot in the external loops.	357	0.00 to 105.00 %
MIN DEMAND Sets the minimum input to the speed loop.	358	-105.00 to 105.00 %

SPEED LOOP

Parameter	Tag	Range
PRESET TORQUE	595	-200.00 to 200.00 %
<p>The PRESET TORQUE is pre-loaded into the speed loop integral store as the speed loop in enabled. This is scaled by PRESET T SCALE.</p> <p>This may be used to pre-load the output of the speed loop in elevator/hoist applications to prevent the load from falling back when the brake is released. PRESET T SCALE may be used in situations where the load may vary.</p>		
PRESET T SCALE	604	-200.00 to 200.00 %
<p>Scaler for PRESET TORQUE.</p>		

Functional Description

Speed Loop PI Output

The PI output is accessible via Tag No. 356. This point is before the I Limit clamps and the summing of the additional current demand.

This Tag is not visible on the MMI.

Speed Loop PI with Current Demand Isolate



The speed loop output is still valid (active) with the I DMD. ISOLATE parameter enabled.

- Note:**
- 1 *The speed loop is reset by unquenching the speed loop/current loop.*
 - 2 *I DMD. ISOLATE is overridden by Program Stop (B8) or Normal Stop (C3).*
 - 3 *The speed loop PI is holding the integral term as soon as the PI output reaches current limit. This is true even in Current Demand Isolate mode where it may interfere depending on the way the speed PI is used. This feature is currently not suppressible.*

105% Speed Demands

The speed demand clamping allows the speed setpoint to reach 105%. This applies only to the final summing junction immediately before the speed loop and also to the Setpoint Sum 1 output. Individual speed setpoints are still clamped to 100%.

SPEED LOOP

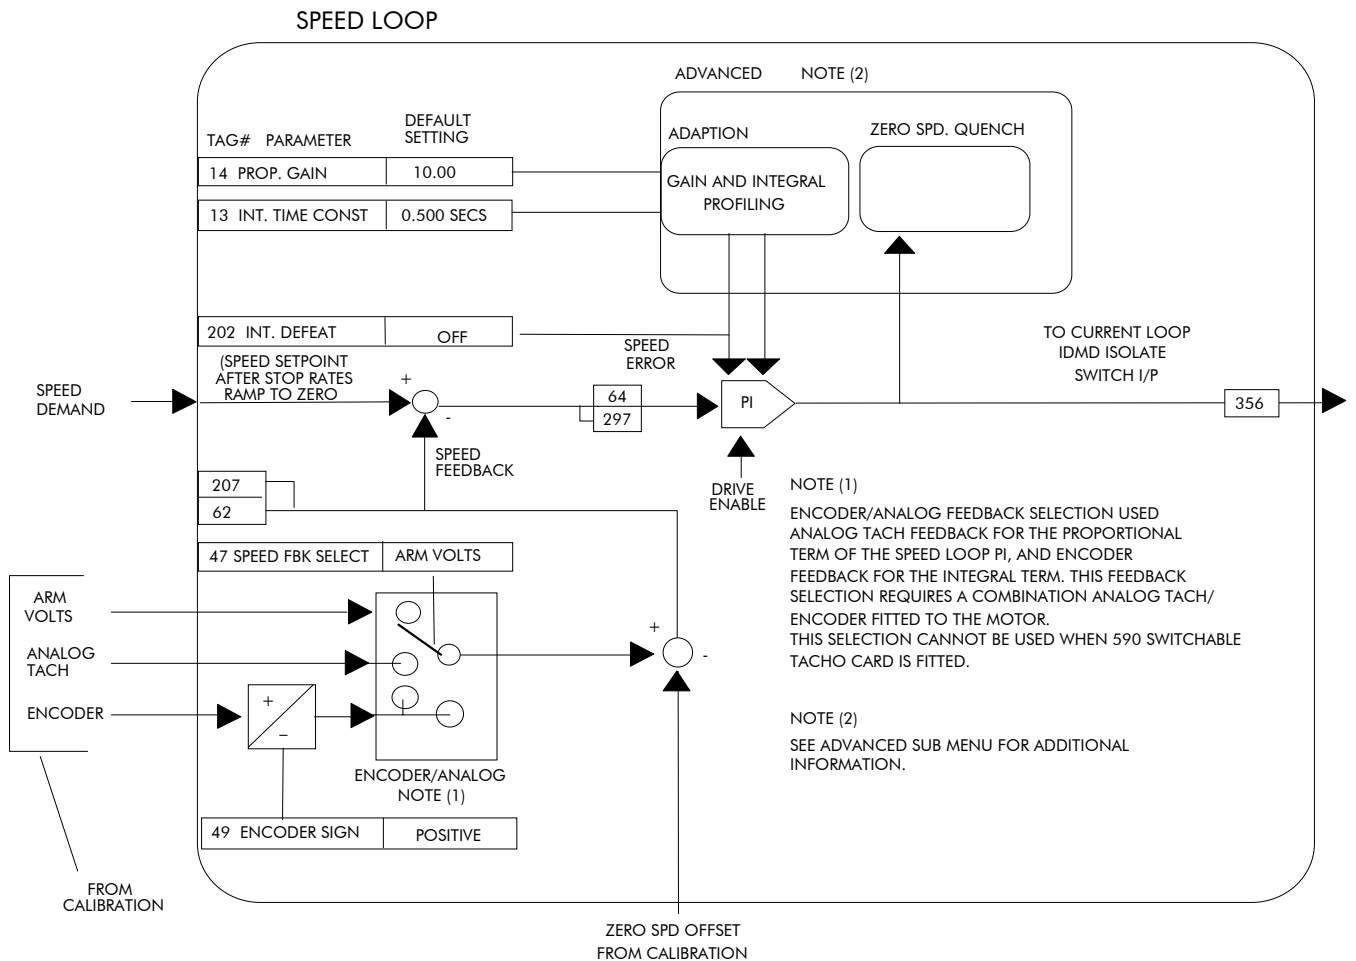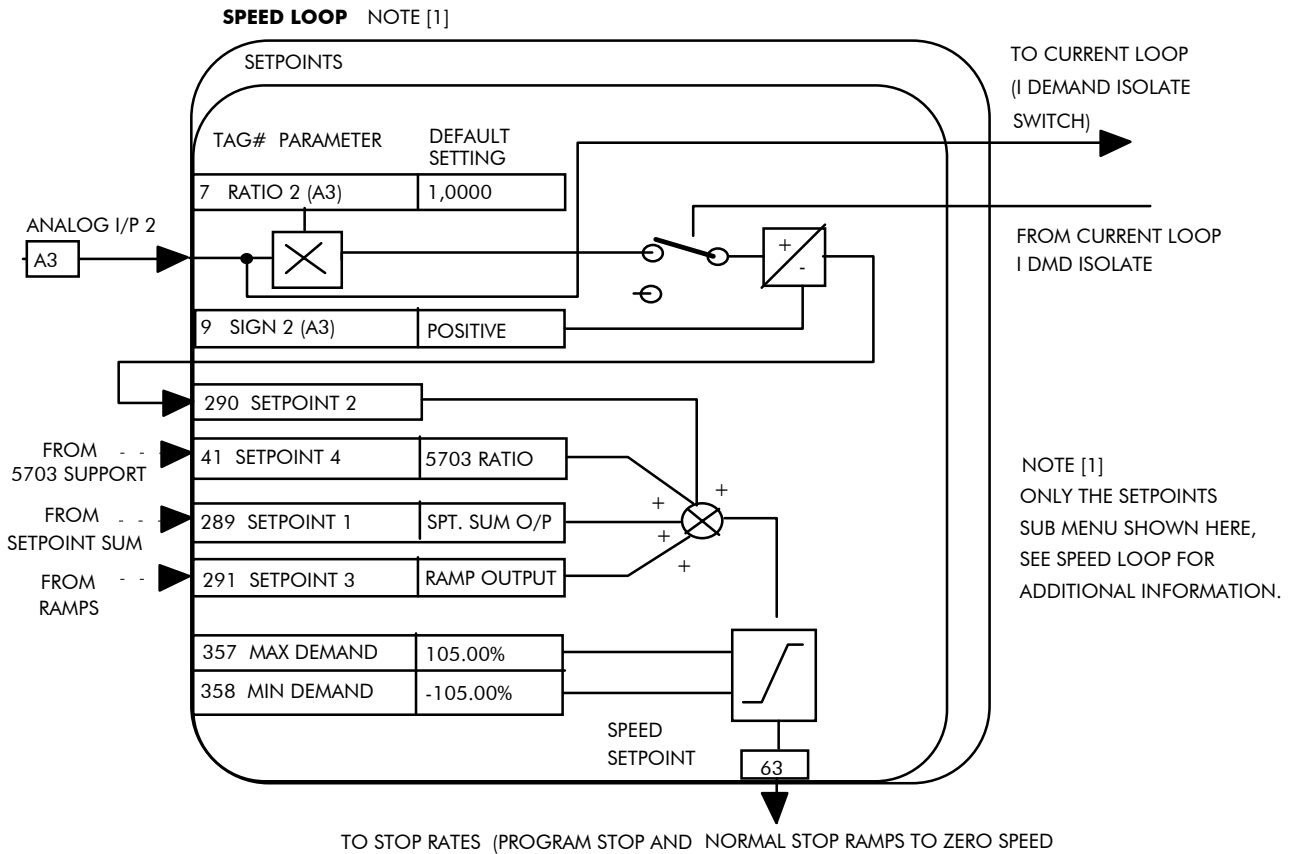

SPEED LOOP (ADVANCED)

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPEED LOOP
- 3 ADVANCED
 - _ I GAIN IN RAMP

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPEED LOOP
- 3 ADVANCED
- 4 ADAPTION
 - _ MODE
 - _ SPD BRK 1 (LOW)
 - _ SPD BRK 2 (HIGH)
 - _ PROP. GAIN
 - _ SPD. INT. TIME

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPEED LOOP
- 3 ADVANCED
- 4 ZERO SPD. QUENCH
 - _ ZERO SPD. LEVEL
 - _ ZERO IAD LEVEL

Contains parameters for the advanced user.

These parameters change the proportional and integral profiles, and can disable SCR/thyristor firing when the drive is stopped.

The ADVANCED function block is viewed in two sub-menus on the MMI : ADAPTION and ZERO SPD. QUENCH.

For details of the third MMI sub-menu, INERTIA COMP, refer to page 6-40.

The input to the ADVANCED block is RAMPING from the RAMPS function block.

Inputs for ADAPTION are PROP. GAIN and INT. TIME CONST. from the SPEED LOOP function block. Its outputs are profiled proportional and integral gains for the speed loop.

Inputs for ZERO SPD. QUENCH are SPEED DEMAND (STOP RATES function block), SPEED FEEDBACK (SPEED LOOP function block) and CURRENT DEMAND (DIAGNOSTICS function block).

ADAPTION : MMI Sub-Menu

This menu allows you to profile the drive's speed loop proportional and integral gains to certain drive parameters. The gains change when the motor speed feedback reaches the thresholds set by SPD BRK 1 (LOW) and SPD BRK 2 (HIGH).

- At or below SPD BRK 1 (LOW), the speed loop uses the PROP. GAIN and INT. TIME CONST. values in ADAPTION as its PI loop gains.
- Between SPD BRK 1 (LOW) and SPD BRK 2 (HIGH), profiling occurs and the speed loop gains are determined by another parameter value (according to the selection of the MODE parameter).
- Above SPD BRK 2 (HIGH), the PROP. GAIN and INT. TIME CONST. settings in the SPEED LOOP function block are used.

MODE selects the parameter for profiling the speed loop PI gains when the motor speed is between the two speed breakpoints.

ZERO SPD. QUENCH : MMI Sub-Menu

When ZERO SPD. QUENCH is TRUE, the current loop is disabled when SPEED DEMAND, SPEED FEEDBACK and CURRENT DEMAND have all dropped to the threshold levels set by ZERO SPD. LEVEL and ZERO IAD LEVEL.

This is similar to Standstill logic (it stops making current but the contactor stays energised) except that the speed loop remains enabled and this will cause the current loop to unquench very quickly.

	Advanced
0	[268] MODE
1.00 %	[269] SPD BRK 1 (LOW)
5.00 %	[270] SPD BRK 2 (HIGH)
5.00	[271] PROP. GAIN
0.500 s	[272] INT. TIME CONST.
1.0000	[274] I GAIN IN RAMP
0.00 %	[273] POS. LOOP P GAIN
0.50 %	[284] ZERO SPD. LEVEL
1.50 %	[285] ZERO IAD LEVEL

SPEED LOOP (ADVANCED)

Parameter	Tag	Range
MODE	268	See below
Selects the speed breakpoint input signal. 0 - Disabled 1 - Speed Feedback Dependent 2 - Speed Error Dependent 3 - Current Demand Dependent		
SPD BRK 1 (LOW)	269	0.00 to 100.00 %
(SPD BRK1 (LOW)) Speed breakpoint 1 to start gain profiling.		
SPD BRK 2 (HIGH)	270	0.00 to 100.00 %
(SPD BRK2 (HIGH)) Speed breakpoint 2 to stop gain profiling.		
PROP. GAIN	271	0.00 to 200.00
Proportional gain used below SPD BRK 1 (LOW)		
INT. TIME CONST.	272	0.001 to 30.000 s
(SPD.INT.TIME) Integral time constant used below SPD BRK 1 (LOW)		
I GAIN IN RAMP	274	0.0000 to 2.0000
This scales the integral gain when the drive is ramping. When RAMPING (Tag No. 113) is TRUE, the integral gain from ADAPTION is switched through the I GAIN IN RAMP scaler. This can be used to help prevent integral wind-up while the drive is ramping (particularly high inertia loads).		
POS. LOOP P GAIN	273	-200.00 to 200.00 %
<i>Reserved parameter for use by Eurotherm Drives. Not recommended for new applications.</i>		
ZERO SPD. LEVEL	284	0.00 to 200.00 %
Sets the threshold of SPEED DEMAND and SPEED FEEDBACK for suspending the current output.		
ZERO IAD LEVEL	285	0.00 to 200.00 %
Sets the current demand threshold for suspending the current output.		

SRAMP

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 SRAMP
 - _ INPUT
 - _ SRAMP OUTPUT
 - _ ACCEL OUTPUT
 - _ AT SPEED
 - _ AT SPEED LEVEL
 - _ QUENCH
 - _ RESET VALUE
 - _ EXTERNAL VALUE
 - _ AUTO RESET
 - _ RATE SET 1
 - _ RATE SET 0
 - _ RATE SELECT

This function block limits the rate of change of an input by limiting the acceleration and the jerk (rate of change of acceleration).

SRamp

	OUTPUT	[589]	0.00 %
	ACCEL OUTPUT	[588]	0.00 %
	AT SPEED	[587]	FALSE
0.00 %	[574]	INPUT	
0	[575]	RATE SELECT	
TRUE	[582]	AUTO RESET	
FALSE	[583]	EXTERNAL RESET	
0.00 %	[584]	RESET VALUE	
FALSE	[585]	QUENCH	
1.00 %	[586]	AT SPEED LEVEL	
5.00 %	[591]	OVER SHOOT THRESHOLD	
0.50 %	[592]	ERROR THRESHOLD	
60.00 %	[576]	ACCEL 0	
60.00 %	[577]	DECEL 0	
20.00 %	[578]	ACCEL 0 JERK 1	
20.00 %	[611]	ACCEL 0 JERK 2	
20.00 %	[596]	DECEL 0 JERK 1	
20.00 %	[613]	DECEL 0 JERK 2	
30.00 %	[579]	ACCEL 1	
30.00 %	[580]	DECEL 1	
20.00 %	[581]	ACCEL 1 JERK 1	
20.00 %	[612]	ACCEL 1 JERK 2	
20.00 %	[597]	DECEL 1 JERK 1	
20.00 %	[614]	DECEL 1 JERK 2	

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 SRAMP
- 4 RATE SET 1
 - _ ACCEL 1
 - _ DECEL JERK 2
 - _ DECEL JERK 1
 - _ ACCEL JERK 2
 - _ ACCEL JERK 1
 - _ DECEL 1

Parameter	Tag	Range
OUTPUT (SRAMP OUTPUT) Diagnostic, ramp output.	589	— .xx %
ACCEL OUTPUT Acceleration diagnostic.	588	— .xx %
AT SPEED Diagnostic output indicating the Abs (input - output) is less than AT SPEED LEVEL.	587	FALSE / TRUE
INPUT Input value.	574	-100.00 to 100.00 %
RATE SELECT Selects between one of two parameter sets. This allows you to have two operating modes (RATE SET 0 or RATE SET 1) with independent ramp parameters.	575	0 to 1
AUTO RESET The ramp is reset automatically when the drive is enabled if set to TRUE.	582	FALSE / TRUE
EXTERNAL RESET Resets the ramp output.	583	FALSE / TRUE
RESET VALUE The output value while RESET is TRUE also used as initial value on start up. If this is linked to speed feedback, the initial ramp output will be set to the current value of speed feedback.	584	-100.00 to 100.00 %
QUENCH If TRUE forces the ramp input to zero.	585	FALSE / TRUE
AT SPEED LEVEL Threshold for AT SPEED diagnostic output.	586	0.00 to 100.00 %
OVER SHOOT THRESHOLD (OVERSHOOT THRESH) <i>Reserved parameter for use by Eurotherm Drives.</i>	591	-100.00 to 100.00 %
ERROR THRESHOLD Hysteresis level before s-ramp operates. <i>Reserved parameter for use by Eurotherm Drives.</i>	592	-100.00 to 100.00 %

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 SRAMP
- 4 RATE SET 0
 - _ ACCEL 0
 - _ DECEL JERK 2
 - _ DECEL JERK 1
 - _ ACCEL JERK 2
 - _ ACCEL JERK 1
 - _ DECEL 0

Parameter	Tag	Range
ACCEL 0	576	0.00 to 100.00 %
Acceleration rate, in units of percent per second ² . i.e. 75.00 % means that the maximum acceleration will be 75.00% per second ² if the full speed of the machine is 1.25ms then the acceleration will be 1.25 * 75.0% = 0.9375ms ² .		
DECEL 0	577	0.00 to 100.00 %
Deceleration rate, only active if SYMMETRIC = TRUE.		
ACCEL 0 JERK 1	578	0.00 to 100.00 %
Rate of change of acceleration, in units of percent per second ³ . For example: 75.00 % means that the maximum acceleration will be 50.00% per second ³ if the full speed of the machine is 1.25ms then the acceleration will be 1.25 * 50.0% = 0.625ms ³ . If SYMMETRIC = TRUE then this value will be used for each of the four segments of the profile. If SYMMETRIC = TRUE then this value will be used only for the first acceleration segment.		
ACCEL 0 JERK 2	611	0.00 to 100.00 %
Rate of change of acceleration in units of percent per second ³ for segment 2. Only applicable if SYMMETRIC = FALSE.		
DECEL 0 JERK 1	596	0.00 to 100.00 %
Rate of change of acceleration in units of percent per second ³ for segment 3. Only applicable if SYMMETRIC = FALSE.		
DECEL 0 JERK 2	613	0.00 to 100.00 %
Rate of change of acceleration in units of percent per second ³ for segment 4. Only applicable if SYMMETRIC = FALSE.		
ACCEL 1	579	0.00 to 100.00 %
Refer to ACCEL 0.		
DECEL 1	580	0.00 to 100.00 %
Refer to DECEL 0.		
ACCEL 1 JERK 1	581	0.00 to 100.00 %
Refer to ACCEL 0 JERK 1.		
ACCEL 1 JERK 2	612	0.00 to 100.00 %
Refer to ACCEL 0 JERK 2.		
DECEL 1 JERK 1	597	0.00 to 100.00 %
Refer to DECEL 0 JERK 1.		
DECEL 1 JERK 2	614	0.00 to 100.00 %
Refer to DECEL 0 JERK 2.		

SRAMP

Useful Equations

Note: These only hold true if Jerk = Jerk2 for acceleration or Jerk 3 = Jerk 4 for deceleration.

V is the maximum speed the drive must reach. In % / sec

A is the maximum allowable acceleration in %/sec²


J is the maximum allowable value for jerk, in %/sec³

The time needed to stop or accelerate is:

$$t = \frac{V}{A} + \frac{A}{J} \text{ [Seconds]}$$

as the speed is symmetrical the average speed is V/2, therefore the stopping / acceleration distance can be calculated.

$$s = \frac{V}{2} \left(\frac{V}{A} + \frac{A}{J} \right) \text{ [Meters]}$$

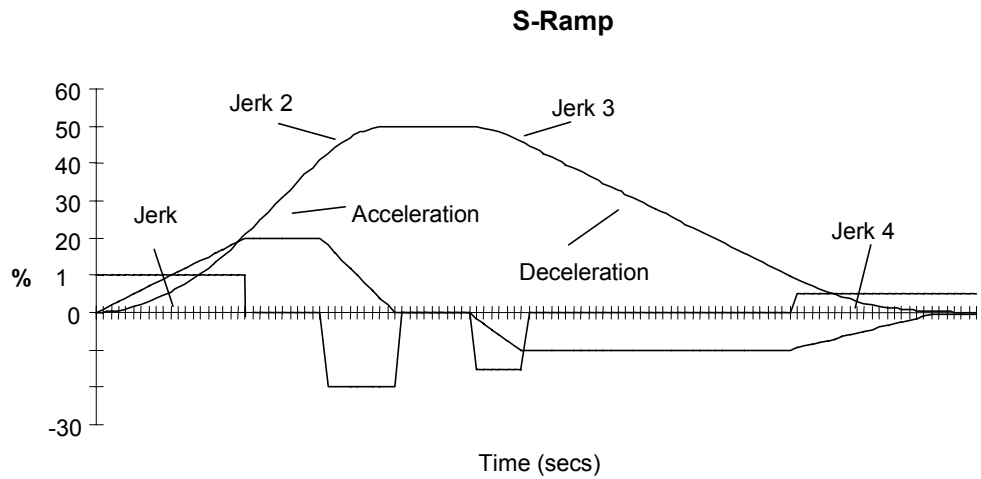

Example acceleration graph for a velocity 60 %/s maximum Acceleration of 20 %/s² and a jerk of 10 %/s³

STANDSTILL

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 STANDSTILL
 - STANDSTILL LOGIC
 - ZERO THRESHOLD

Set a **ZERO THRESHOLD**, defining when the speed setpoint is at zero, to inhibit motor rotation.

The inputs to this block are SPEED FEEDBACK from the SPEED LOOP function block and SPEED SETPOINT from setpoints.


The outputs are AT ZERO SPEED, AT STANDSTILL, and AT ZERO SETPOINT. AT ZERO SPEED is connected to DIGOUT 1 (B5) in the default configuration. A "not at standstill" signal is sent to the drive enable logic.

When SPEED FEEDBACK is less than ZERO THRESHOLD, AT ZERO SPEED is TRUE. When SPEED SETPOINT is less than ZERO THRESHOLD, AT ZERO SETPOINT is TRUE. When both AT ZERO SPEED and AT ZERO SETPOINT are TRUE, AT STANDSTILL is TRUE signalling the motor has stopped.

If AT STANDSTILL is TRUE and STANDSTILL LOGIC is ENABLED, then the speed and current loops are quenched. The SCR (Silicon Controlled Rectifier)/thyristor firing circuits are disabled, the main contactor remains energised and the RUN LED stays on when the drive is at standstill. The drive remains in this state until standstill drops out. That is, when the speed setpoint or speed feedback rise above the zero threshold.



STANDSTILL LOGIC is useful in maintaining absolute zero speed and aids in preventing gearbox wear due to "chattering".

However, it can cause problems in web handling applications using tension feedback: at zero speed, the SCR/thyristors turn off allowing the web tension to pull the driven roll in reverse. When the drive no longer senses it is at zero speed, the SCR/thyristors turn back on causing the motor to move forward and regulate tension. An oscillation condition can result as the drives SCR/thyristors turn on and off trying to maintain a fixed position.

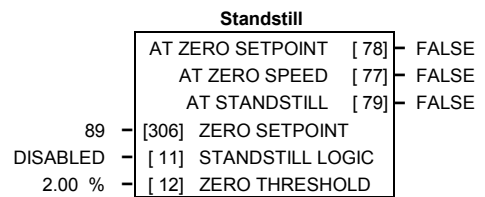

Parameter	Tag	Range
AT ZERO SETPOINT	78	FALSE / TRUE
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
AT ZERO SPEED	77	FALSE / TRUE
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
AT STANDSTILL	79	FALSE / TRUE
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
ZERO SETPOINT	306	0 to 639
(SOURCE TAG)		
Do not alter.		
<i>Reserved parameter for use by Eurotherm Drives.</i>		
STANDSTILL LOGIC	11	DISABLED / ENABLED
If ENABLED, the Converter is quenched (although the contactor remains in) when the Speed Feedback and Speed Setpoint values are less than ZERO THRESHOLD.		
ZERO THRESHOLD	12	0.00 to 100.00 %
Threshold level which defines zero setpoint and zero speed diagnostic outputs and also controls the zero speed relay output.		

STANDSTILL

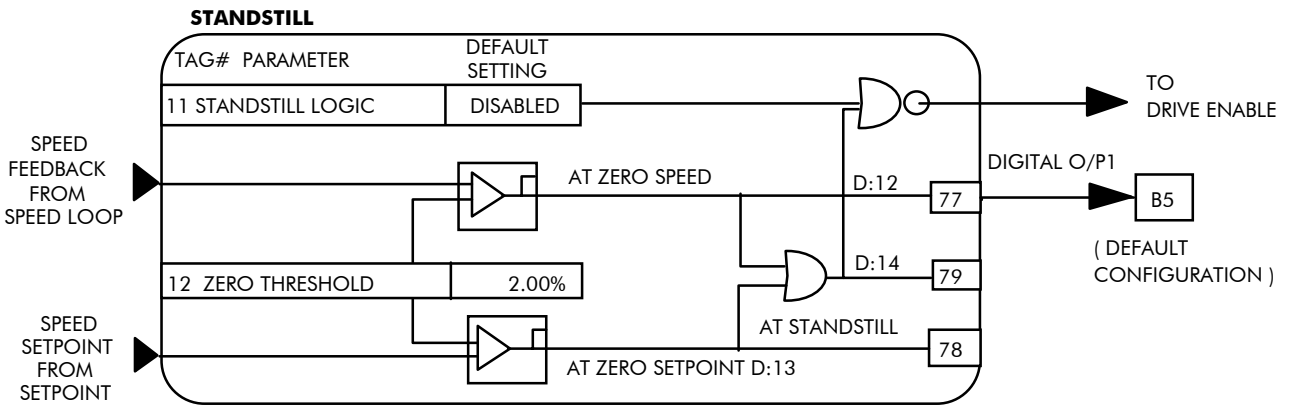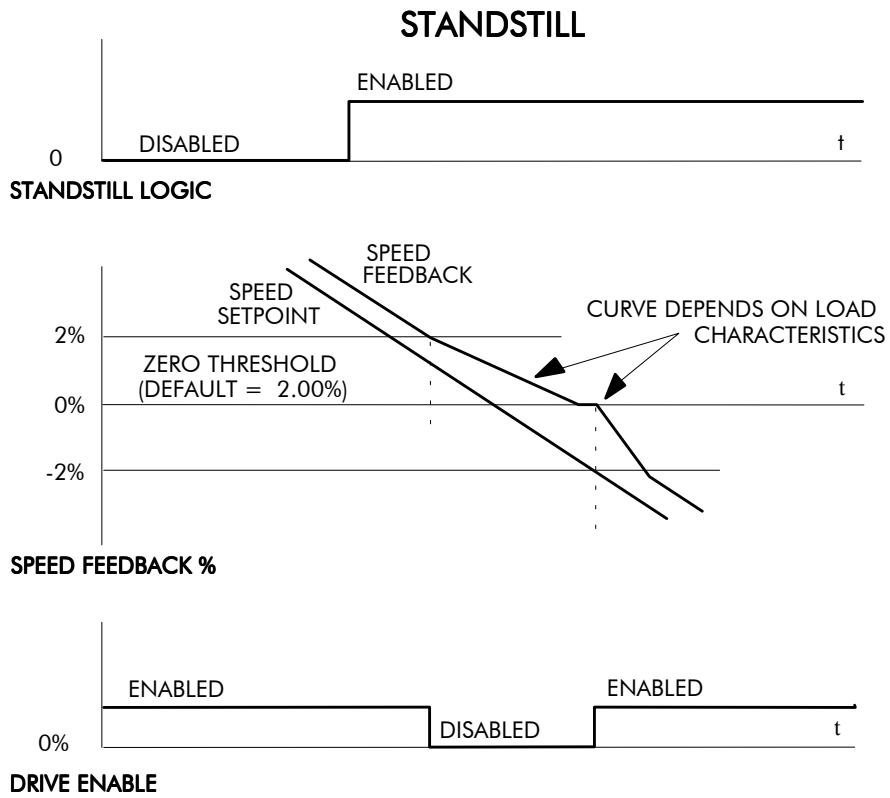

STOP RATES

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 STOP RATES
 - STOP TIME
 - STOP LIMIT
 - CONTACTOR DELAY
 - CURR DECAY RATE
 - PROG STOP TIME
 - PROG STOP LIMIT
 - PROG STOP I LIM
 - STOP ZERO SPEED

These parameters are used by a regenerative drive when stopping with Normal Stop or Program Stop.

The stopping methods of the converter are described in more detail in Chapter 4: “Operating the Converter” - Starting and Stopping Methods.

The inputs to this block are SPEED SETPOINT and SPEED FEEDBACK from the SPEED LOOP function block, the Run signal from terminal C3, and PROGRAM STOP from terminal B8.

Stop Rates		
SPEED DEMAND	[89]	0.00 %
PROGRAM STOP	[80]	FALSE
10.0 s	[27] STOP TIME	
60.0 s	[217] STOP LIMIT	
1.0 s	[302] CONTACTOR DELAY	
0.0	[594] CURR DECAY RATE	
0.1 s	[26] PROG STOP TIME	
60.0 s	[216] PROG STOP LIMIT	
100.00 %	[91] PROG STOP I LIM	
2.00 %	[29] STOP ZERO SPEED	

The outputs are SPEED DEMAND to the speed loop, PROG STOP I LIM to the current loop, and signals to the coast stop and drive enable logic.

Normal Stop

A Normal Stop occurs when the Run signal is removed from terminal C3. It ramps the speed demand to zero at a rate set by STOP TIME.

- Non-regenerative drives can stop no faster than the coast stop rate.
- Regenerative drives use STOP TIME to set the duration of the stop.

After the stop, the contactor de-energises and the drive disables.

The STOP LIMIT timer starts when C3 goes to 0V (the Run signal is removed). If the drive speed has not reached STOP ZERO SPEED within the STOP LIMIT time, the contactor de-energises and the drive disables.

During Normal Stops after the motor reaches zero speed, CONTACTOR DELAY delays the de-energising of the contactor. When STOP ZERO SPEED is set above 0.25%, the drive disables during the contactor delay. Below 0.25%, the drive disables after the contactor delay. This is useful when using the Jog function to prevent multiple operations of the contactor. CONTACTOR DELAY is overridden when terminal C5 (Enable Input) is at 0V.

Program Stop

PROGRAM STOP provides a controlled fast stop for regenerative drives. The stop time is set by PROG STOP TIME. This timer starts once terminal B8 (Program Stop) goes to 0V. When the drive reaches STOP ZERO SPEED, the contactor de-energises and the drive disables. PROG STOP LIMIT sets the maximum time the Program Stop can take before the contactor de-energises and the drive disables.

PROG STOP I LIM sets the current limit in the current loop during a Program Stop. Other current limits can override it.

Parameter	Tag	Range
SPEED DEMAND	89	xxx.xx %
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
PROGRAM STOP	80	FALSE / TRUE
<i>Refer to the DIAGNOSTICS function block description, page 6-23.</i>		
STOP TIME	27	0.1 to 600.0 s
Time to reach zero speed from 100% set speed in normal stop mode (terminal C3 = 0V).		
STOP LIMIT	217	0.0 to 600.0 s


The maximum time a controlled stop can take in a Normal Stop (regenerative braking) before the drive will coast to stop. The timer is triggered when terminal C3 = 0V.

STOP RATES

Parameter	Tag	Range
CONTACTOR DELAY	302	0.1 to 600.0 s
This defines the time the contactor stays energised for after the STOP ZERO SPEED limit is reached. Maintain zero speed during contactor delay.		
CURR DECAY RATE	594	0.00 to 200.00
This is the rate at which the current is quenched when the current loop is disabled.		
PROG STOP TIME	26	0.1 to 600.0 s
Time to reach zero speed from 100% set speed in Program Stop mode (B8 = 0V).		
PROG STOP LIMIT	216	0.0 to 600.0 s
The maximum time a Program Stop (regenerative braking) can take before the contactor is de-energised and the drive is disabled. The timer is triggered when terminal B8 = 0V.		
PROG STOP I LIM	91	0.00 to 200.00 %
Main current limit level (assuming current limit not overridden by I Profile or Inverse Time limits) when performing a Program Stop.		
STOP ZERO SPEED	29	0.00 to 100.00 %
The threshold at which the CONTACTOR DELAY timer starts in Program Stop and Normal Stop modes. See also CONTACTOR DELAY above.		


Functional Description

Stop Hierarchy

- 
- Coast Stop - Terminal B9**
 - Disables the drive and opens the contactor via the pilot output
 - Enable - Terminal C5**
 - Suspends and resets the Control Loops
 - Program Stop - Terminal B8**
 - Independent ramp time
 - Stop Timer
 - Independent Current Limit that may be higher than normal Current Limit
 - Independent zero speed
 - Normal Run/Stop - Terminal C3**
 - Independent ramp time
 - Contactor Delay

Note: The Converter's reaction to commands is defined by a state machine. This determines which commands provide the demanded action, and in which sequence. Consequently, COAST STOP and PROGRAM STOP must be FALSE, i.e. the drive is not in Coast or Program mode, before a Run signal is applied otherwise the controller assumes a Stop mode and remains disabled. Refer to Chapter 4: "Operating the Converter" - Stopping Methods for descriptions of Coast Stop and Program Stop.

STOP RATES

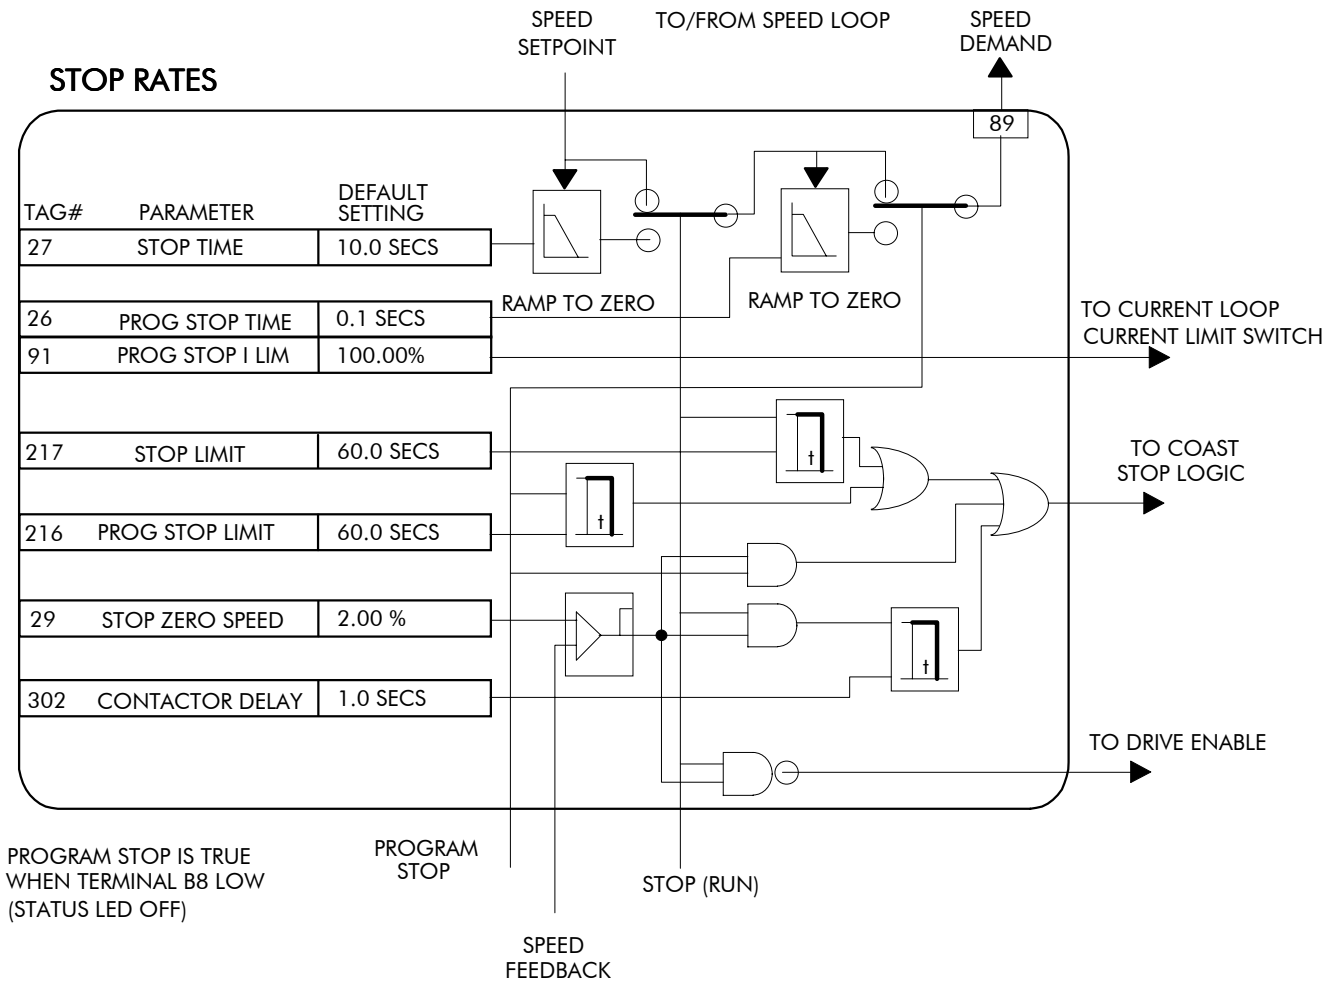

SYSTEM PORT P3

MMI Menu Map

- 1 SERIAL LINKS
- 2 SYSTEM PORT P3
 - _ DUMP MMI (TX)
 - _ UDP XFER (RX)
 - _ UDP XFER (TX)
 - _ VERSION NUMBER

MMI Menu Map

- 1 SERIAL LINKS
- 2 SYSTEM PORT (P3)
- 3 P3 SETUP
 - _ MODE
 - _ 5703 SUPPORT
 - _ P3 BAUD RATE

MMI Menu Map

- 1 SERIAL LINKS
- 2 SYSTEM PORT (P3)
- 3 P3 SETUP
- 4 BISYNCH SUPPORT
 - _ GROUP ID (GID)
 - _ UNIT ID (UID)
 - _ ERROR REPORT

Use this block to configure the drive's RS232 programming port (P3).

Refer to Chapter 14: "Serial Communications" - System Port P3 for further information.

The block is viewed in three menus on the MMI: SYSTEM PORT P3, P3 SETUP and BISYNCH SUPPORT.

SYSTEM PORT P3

This MMI menu contains parameters for transferring data to and from a PC. Refer to Chapter 14.

P3 SETUP

This MMI menu contains the communication set-up parameters for System Port P3. Refer to page 6-87 and Chapter 14 for information on the 5703 SUPPORT sub-menu.

BISYNCH SUPPORT

This MMI menu contains parameters for supporting the BISYNCH protocol.

The P3 port is a non-isolated serial communications port built in to the drive's Control Board.

It is used off-line (while the drive is stopped) for transferring and saving drive configuration files using a personal computer (PC) running a serial communications program, or on-line (while the drive is running) when using the Eurotherm Drives 5703 Setpoint Repeater Unit.

You can also use the P3 port to transfer configuration files by connecting to a PC running the Windows™ compatible software package "ConfigEd Lite". Refer to the ConfigEd Lite manual RG352747.

System Port P3	
0x00C0	[332] ERROR REPORT
CELite (EIAASCII)	[130] MODE
0x0000	[329] GROUP ID
0x0000	[330] UNIT ID

Parameter	Tag	Range
ERROR REPORT	332	0x0000 to 0xFFFF
Displays the last error as a hexadecimal code. Writing any value to this parameter will set the value to >00C0 (No Error). Refer to Chapter 14: "Serial Communications" - Reference for a list of codes.		
MODE	130	See below
Determines the function of the 5703 unit if present. Four options are available:		
	0 : DISABLED	
	1 : 5703 MASTER	
	2 : 5703 SLAVE	
	3 : CELite (EIAASCII)	
P3 BAUD RATE	198	See below
Transmission rate. Four options are available:		
	0 : 300	
	1 : 600	
	2 : 1200	
	3 : 2400	
	4 : 4800	
	5 : 9600 (default)	
	6 : 19200	
GROUP ID	329	0x0000 to 0x0007
(GROUP ID (GID))		
The Eurotherm Drives protocol group identity address.		
UNIT ID	330	0x0000 to 0x000F
(UNIT ID (UID))		
The Eurotherm Drives protocol unit identity address.		
VERSION NUMBER	155	0x0000 to 0x000F
The drive's version number as seen over the System Port (P3).		
Serial communications mnemonic = V0. The version number cannot be changed, and is software version dependent.		


5703 SUPPORT

MMI Menu Map

- 1 SERIAL LINKS
- 2 SYSTEM PORT (P3)
- 3 P3 SETUP
- 4 5703 SUPPORT
 - SETPT. RATIO
 - SETPT. SIGN
 - RAW INPUT
 - SCALED INPUT

This function block contains the parameters for connecting a Eurotherm Drive 5703 Setpoint Repeater Unit.

The 5703 peer-to-peer communication option transfers parameters from drive-to-drive through the serial port, P3.

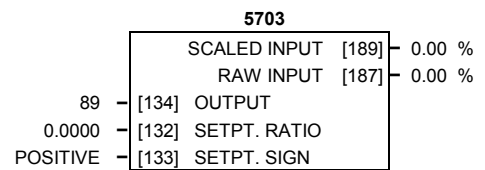

MMI Menu Map

- 1 SYSTEM
- 2 CONFIGURE I/O
- 3 CONFIGURE 5703
 - SOURCE TAG
 - DESTINATION TAG

Parameter	Tag	Range
SCALED INPUT	189	xxx.xx %

The scaled value received by the 5703 unit. This value is updated upon reception of a new message. If the drive is in Slave mode and no new messages have arrived, a 5703 RCV ERROR will occur.

Note: in software versions prior to 5.17, this input is not updated when in Master mode.

RAW INPUT	187	xxx.xx %
------------------	------------	-----------------

The unscaled value received by the 5703 unit.

OUTPUT	134	0 to 639
---------------	------------	-----------------

(SOURCE TAG)

The source tag of the value to be sent to the 5703 unit. The default is 89, SPEED DEMAND. When in Master mode, this value will be sent every block diagram cycle. When in Slave mode, this value is sent upon reception of a new input.

SETPT. RATIO	132	-3.0000 to 3.0000
---------------------	------------	--------------------------

Input scaler.

SETPT. SIGN	133	NEGATIVE / POSITIVE
--------------------	------------	----------------------------

Input sign.

Note: DESTINATION TAG (MMI only) is the destination tag of the value received from the 5703. The default is SETPOINT 4 in the speed loop.

TAPER CALC.

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 TAPER CALC.
 - TAPER
 - TENSION SPT.
 - TAPERED DEMAND
 - TENSION TRIM
 - TOT.TENS.DEMAND

Use this block to profile the tension demand with diameter.

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::TAPER is connected to a non-zero tag.


The function block uses two inputs, tension setpoint and taper setpoint, to create the tension demand. The operator usually controls these setpoints.

Taper is a common requirement for winders. It reduces the tension as the roll diameter increases.

A profiler adjusts the tension using the equation:


$$\text{Tapered Demand} = \text{Tension Spt} \times \left\{ 100\% - \frac{\text{Taper}}{\text{Diameter}} \times (\text{Diameter} - \text{Min Diameter}) \right\}$$

to yield a hyperbolic taper output. MIN DIAMETER and DIAMETER are linked internally to the DIAMETER CALC function block. The taper tension characteristics are shown below:

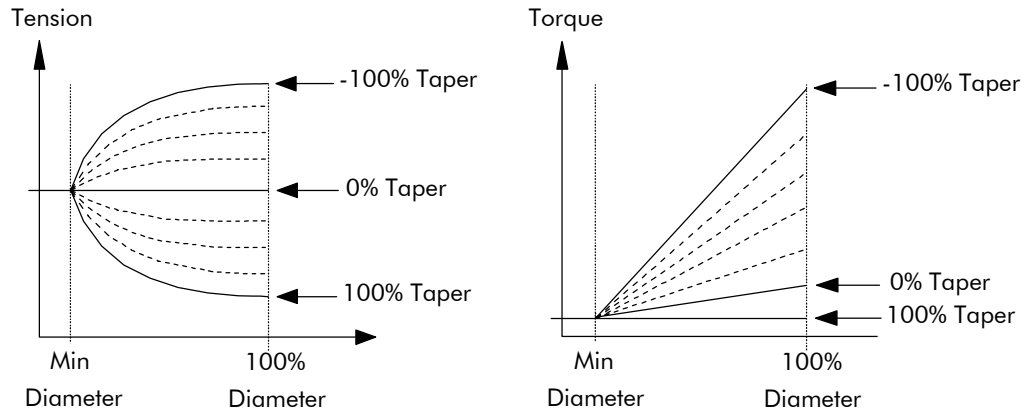

The result is multiplied by TENSION SPT. to get TAPER DEMAND. When the taper setpoint is at 100%, the motor produces constant torque. That is, a constant torque from core to full roll, and the tension falls off as the roll builds.


TENSION TRIM allows the tension demand to be adjusted, for example, when using closed loop trim. The result is TOT. TENS DEMAND.

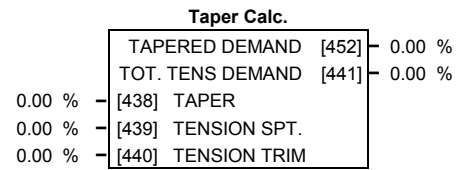

TAPER CALC.

Parameter	Tag	Range
TAPERED DEMAND	452	xxx.xx %
This is the output of the TAPER calculation on the TENSION SPT (before adding TENSION TRIM).		
TOT. TENS DEMAND	441	xxx.xx %
(TOT.TENS.DEMAND)		
This is the final output of this block (total tension demand) which can be connected to the appropriate points in the block diagram.		
TAPER	438	-100.00 to 100.00 %
This defines the amount of tapering in the tension demand with diameter variation. When TAPER is positive, the tension demand is hyperbolically decreased as diameter increases.		
TENSION SPT.	439	0.00 to 100.00 %
This is the required tension setpoint.		
TENSION TRIM	440	-100.00 to 100.00 %
This is the additional tension demand in the form of a trim.		

TAPER CALC.

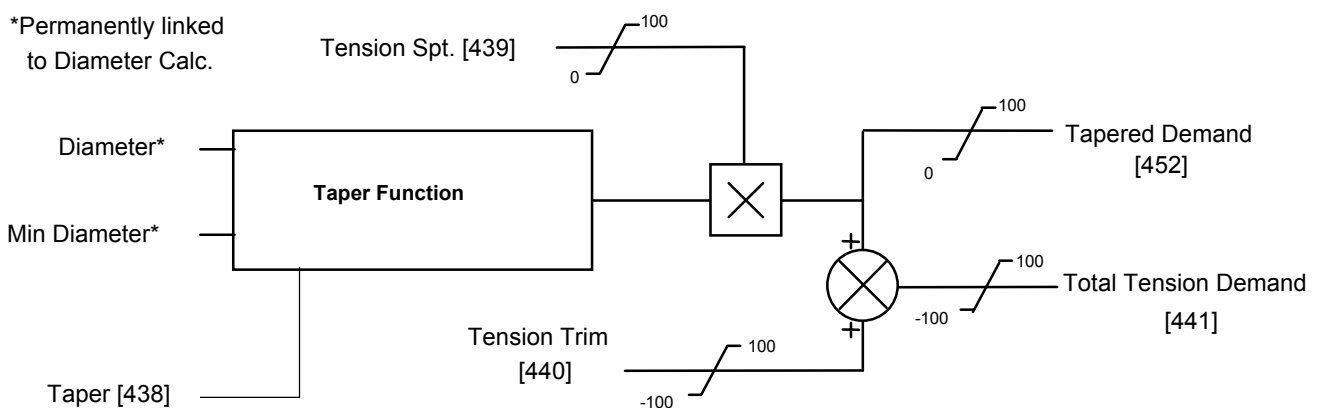

TEC OPTION


MMI Menu Map

1	SERIAL LINKS
2	TEC OPTION
	TEC OPTION TYPE
	TEC OPTION IN 1
	TEC OPTION IN 2
	TEC OPTION IN 3
	TEC OPTION IN 4
	TEC OPTION IN 5
	TEC OPTION FAULT
	TEC OPTION VER
	TEC OPTION OUT 1
	TEC OPTION OUT 2

This function block is used to configure the inputs and outputs of the various Technology Options that can be fitted.

The Technology Option provides a communications interface for external control of the Converter.

Refer to the appropriate Technology Option Technical Manual supplied with the option for further details.

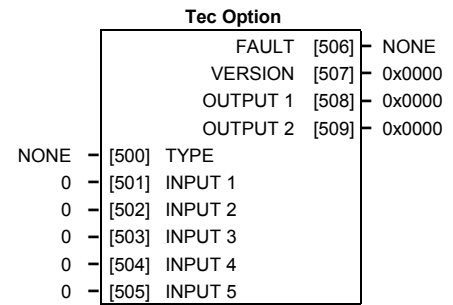

Parameter	Tag	Range
FAULT	506	See below

(TEC OPTION FAULT)

The fault state of the Technology Option.

0 : NONE	no faults
1 : PARAMETER	parameter out-of-range
2 : TYPE MISMATCH	TYPE parameter mismatch
3 : SELF TEST	hardware fault - internal
4 : HARDWARE	hardware fault - external
5 : MISSING	no option fitted
6 : VERSION NUMBER	older than Version 2.x

If the VERSION NUMBER error message is displayed, the Technology Option is using software that doesn't fully support the drive; refer to Eurotherm Drives.

VERSION	507	0x0000 to 0xFFFF
----------------	------------	-------------------------

(TEC OPTION VER)

The version of the Technology Option. If no option is fitted then the version is reset to zero.

OUTPUT 1 to OUTPUT 2	508, 509	xxxxx
-----------------------------	-----------------	--------------

(TEC OPTION OUT 1 to TEC OPTION OUT 2)

The use of these output parameters depends upon the type of Technology Option fitted. Refer to the Technology Option Technical Manual.

TYPE	500	See below
-------------	------------	------------------

(TEC OPTION TYPE)

Selects the type of Technology Option.

0 : NONE	10 : TYPE 10
1 : RS485	11 : TYPE 11
2 : PROFIBUS	12 : TYPE 12
3 : LINK	13 : TYPE 13
4 : DEVICE NET	14 : TYPE 14
5 : CAN OPEN	15 : TYPE 15
6 : LONWORKS	
7 : CONTROLNET	
8 : MODBUS PLUS	
9 : ETHERNET	

INPUT 1 to INPUT 5	501, 502, 503, 504, 505	-32768 to 32767
---------------------------	--------------------------------	------------------------

(TEC OPTION IN 1 to TEC OPTION IN 5)

The use of these input parameters depends upon the type of Technology Option fitted. Refer to the Technology Option Technical Manual.

TENS+COMP CALC.

MMI Menu Map

- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 TENS+COMP CALC.
 - STATIC COMP
 - DYNAMIC COMP
 - REWIND
 - FIX.INERTIA COMP
 - VAR.INERTIA COMP
 - ROLL WIDTH/MASS
 - LINE SPEED SPT
 - FILTER T.C.
 - RATE CAL
 - NORMALISED dv/dt
 - INERTIA COMP O/P
 - TENSION SCALER

This block provides additional torque to compensate for static and dynamic friction, as well as the load inertia.

Add these losses to the diameter-scaled tension demand to produce a compensated torque demand for open loop winder applications.

The inputs to this block are DIAMETER from the DIAMETER CALC. function block, TOT. TENS. DEMAND from the TAPER CALC. function block, and SPEED FEEDBACK from the SPEED LOOP function block.

You should output TENS+COMP to TORQUE DEMAND (Tag 432) in the TORQUE CALC. function block for open loop winder applications.

Tension & Comp	
TENS+COMP [478]	0
INERTIA COMP O/P [485]	0.00 %
0.00 % - [487]	STATIC COMP
0.00 % - [488]	DYNAMIC COMP
ENABLED - [489]	REWIND
0.00 % - [479]	FIX. INERTIA COMP
0.00 % - [480]	VAR. INERTIA COMP
100.00 % - [481]	ROLL WIDTH/MASS
0.00 % - [498]	LINE SPEED SPT
10 - [482]	FILTER T.C.
10.00 - [483]	RATE CAL
0.00 % - [484]	NORMALISED dv/dt
1.0000 - [486]	TENSION SCALER

MMI Menu Map

- 1 SYSTEM
- 2 CONFIGURE I/O
- 3 BLOCK DIAGRAM
 - TENS+COMP CALC.


Static and Dynamic Frictional Losses

Static and dynamic friction are due to gearbox resistance and mechanical binding in the winder spindle and motor bearings. Both absorb motor output torque and require compensation to maintain accurate winder tension.

Static friction, or "stiction", is a constant offset most noticeable at or near zero speed. The compensation torque required to overcome static friction is fixed over an entire operating speed range. You can ignore "stiction" for winders which do not normally operate at zero speeds.

Dynamic friction results from friction losses within the drive train, which includes gearboxes and chain belting linkages. The oil viscosity in gearboxes and windage losses in the motor armature fans also contribute to dynamic frictional losses.

The effects of static and dynamic friction are shown opposite.

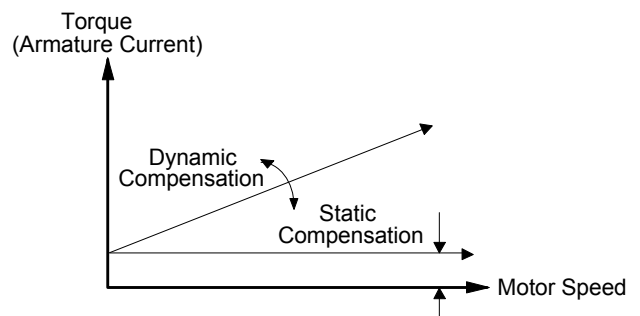



Inertia Compensation

Many winders need inertia compensation to add or subtract torque during acceleration and deceleration to maintain constant tension, especially at large roll diameters. Without compensation, the tension holding capability of open loop winders diminishes during speed changes causing tension sag.

The inertia compensation characteristics is shown opposite.

For winder applications, inertia compensation is split into two components:


1. Fixed inertia compensation for the fixed motor, transmission and load components.
2. Variable inertia compensation for the changing roll inertia. This is especially necessary for high diameter build unwinds and winders.

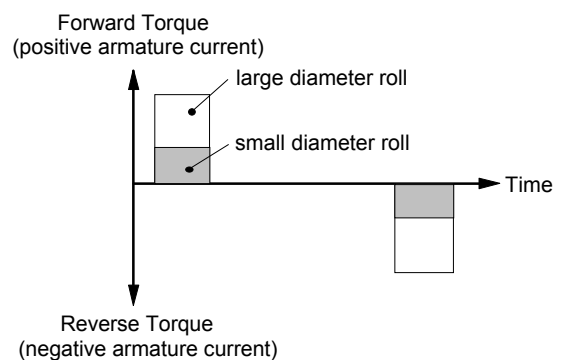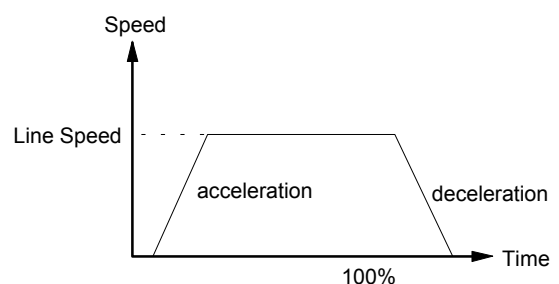

TENS+COMP CALC.

Parameter	Tag	Range
TENS+COMP (TENS+COMP CALC.)	478	0 to 639
The sum of the diameter-scaled TENSION DEMAND after the TENSION SCALER scaling and the compensation losses. For open loop winder applications, connect this output to the TORQUE DEMAND (Tag 432) in the TORQUE CALC. function block. (This output is located in the SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM menu).		
INERTIA COMP O/P	485	xxx.xx %
Monitors the sum of all inertia compensations.		
STATIC COMP	487	-300.00 to 300.00 %
Static friction compensation set-up parameter.		
DYNAMIC COMP	488	-300.00 to 300.00 %
Dynamic friction compensation set-up parameter.		
REWIND	489	DISABLED / ENABLED
Switches the sign of the friction compensations when the motor changes direction. Set to DISABLED only when the winder reverses.		
FIX. INERTIA COMP (FIX.INERTIA COMP)	479	-300.00 to 300.00 %
Fixed inertia compensation set-up parameter.		
VAR. INERTIA COMP (VAR.INERTIA COMP)	480	-300.00 to 300.00 %
Variable inertia compensation set-up parameter.		
ROLL WIDTH/MASS	481	0.00 to 100.00 %
Scales the inertia fixed and variable compensations based on roll width. 100% = maximum roll width.		
LINE SPEED SPT	498	-105.00 to 105.00 %
Used to calculate the line speed acceleration rate value for the fixed and variable inertia compensations.		
FILTER T.C.	482	0 to 20000
The line speed acceleration rate value is calculated from the line speed input. The calculated rate value may have a large ripple content that can disturb the motor torque. The rate signal is therefore filtered, and this filter has a time constant set by this parameter.		
RATE CAL	483	-100.00 to 100.00
Scales the inertia compensation acceleration/deceleration rate value to 100% of the maximum line ramp rate. This parameter should be set to the maximum time required to ramp from zero to full speed in seconds. If RATE CAL = 0.00, then this parameter is set externally through NORMALISED dv/dt, otherwise, RATE CAL sets the inertia compensation acceleration/deceleration rate. <i>Note - Inertia compensation does not work well for line ramp rates above 100 seconds and therefore this parameter is limited to 100.00.</i>		
NORMALISED dv/dt	484	-300.00 to 300.00 %
Useful for large line ramp rates (>100 Secs). Tag an external signal to NORMALISED dv/dt to set the inertia compensation acceleration/deceleration rate externally from the drive. Useful for ramp rates exceeding 100 seconds. The external signal must be normalised to 100% = the maximum line ramp rate. Active <i>only</i> when RATE CAL = 0.00.		
TENSION SCALER	486	-3.0000 to 3.0000
Scales the TENSION DEMAND which is directly connected from the TAPER CALC. function block.		

TENS+COMP CALC.

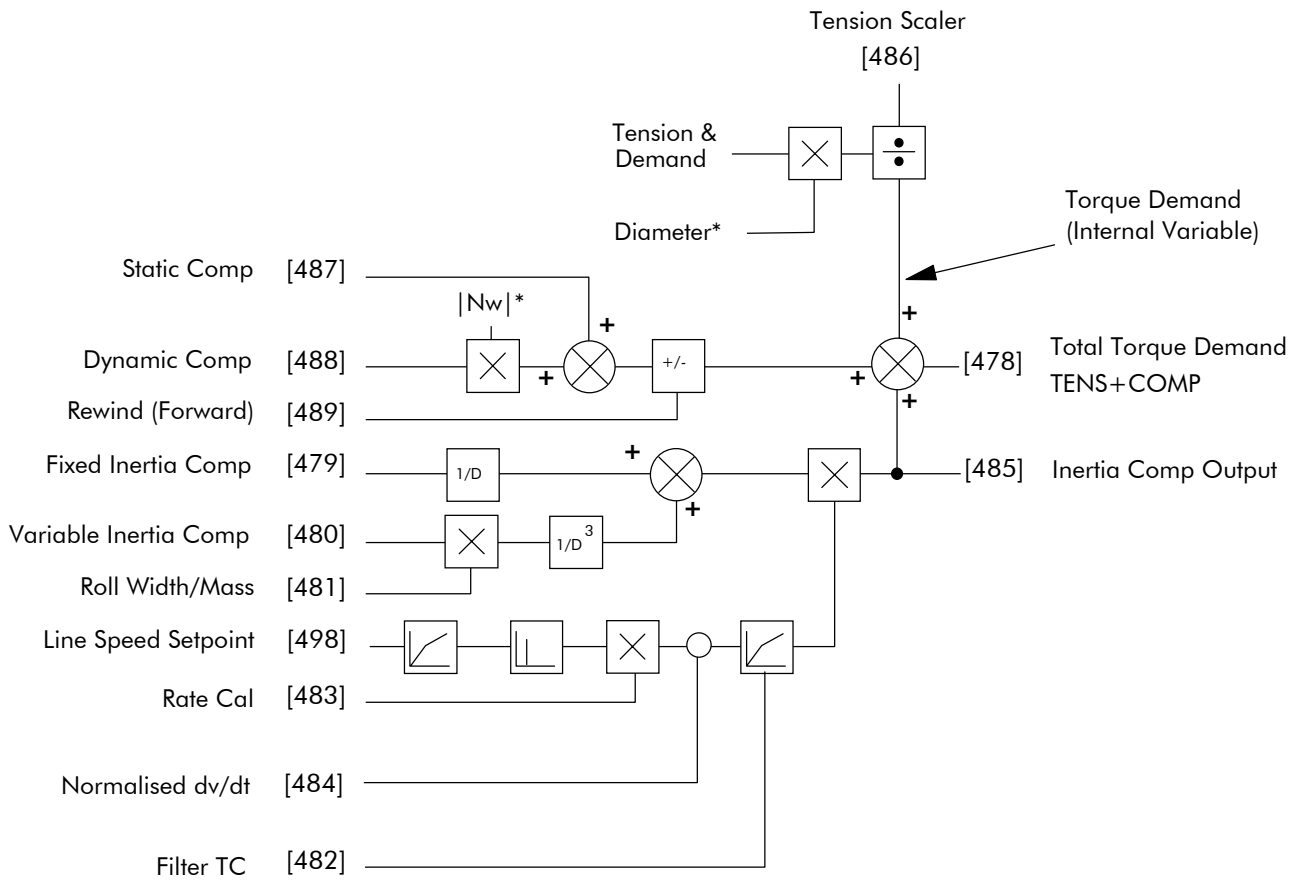

& - Internally connected to Taper Calculator

* - Internally connected to Diameter Calculator

TENS + COMP Internal Block Diagram

TORQUE CALC.

MMI Menu Map


- 1 SETUP PARAMETERS
- 2 SPECIAL BLOCKS
- 3 TORQUE CALC.
 - TORQUE DEMAND
 - TENSION ENABLE
 - OVER WIND

MMI Menu Map

- 1 SYSTEM
- 2 CONFIGURE I/O
- 3 BLOCK DIAGRAM
 - POS. I CLAMP
 - NEG. I CLAMP


This block switches the drive between Speed and Tension mode. It also switches the current limits as required for over and under winding.

This block is ignored by the drive unless SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM::POS I CLAMP and/or NEG I CLAMP is connected to a non-zero tag.

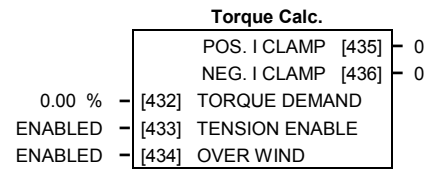


Parameter	Tag	Range
POS. I CLAMP	435	0 to 639
Positive clamp output destination. Set to 301 in use.		
NEG. I CLAMP	436	0 to 639
Negative clamp output destination. Set to 48 in use.		
TORQUE DEMAND	432	-200.00 to 200.00 %
This is the TORQUE CALC function block input.		
TENSION ENABLE	433	DISABLED / ENABLED
When TENSION ENABLE is ENABLED , the tension demand is set by the TORQUE DEMAND signal , tag 432. When DISABLED, it is set by the default current limit. Switch using a free digital input.		
OVER WIND	434	DISABLED / ENABLED
Reverses the sign of the output clamps for over/under winding. Switch using a free digital input.		

Functional Description

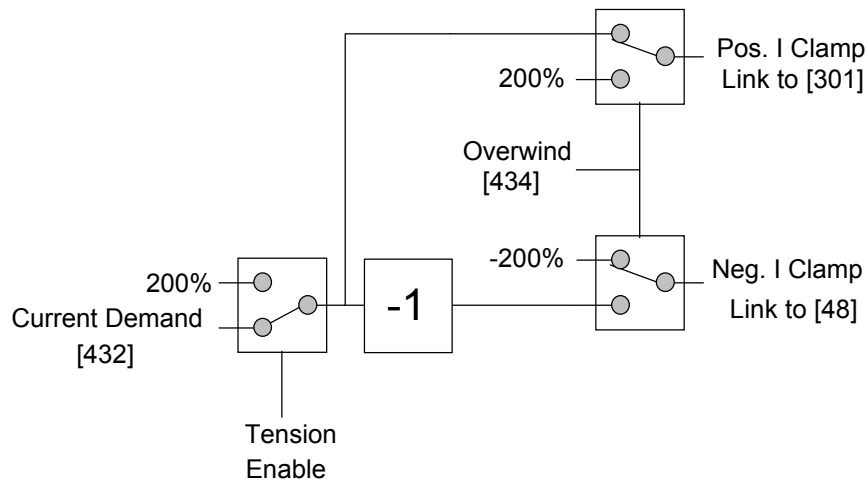

USER FILTER

A floating function block used to filter control signals.

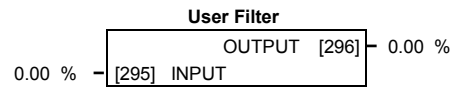

This is an internal function block and does not appear as a menu on the MMI.

A noisy signal that requires smoothing is connected to INPUT. The OUTPUT is connected to the destination function block.

Parameter	Tag	Range
INPUT		-300.00 to 300.00 %
<i>Reserved parameter for use by Eurotherm Drives.</i>		
OUTPUT		xxx.xx %
<i>Reserved parameter for use by Eurotherm Drives.</i>		

TRIPS AND FAULT FINDING

Trips

What Happens when a Trip Occurs

When a trip occurs, the drive's power stage is immediately disabled causing the motor and load to coast to a stop. The trip is latched until action is taken to reset it. This ensures that trips due to transient conditions are captured and the drive is disabled, even when the original cause of the trip is no longer present.

Drive Indications

If a trip condition is detected the unit displays and performs the following actions.

1. The HEALTH LED goes out indicating a Trip condition has occurred. (Investigate, find and remove the cause of the trip.)
2. Terminal B6 (Healthy) goes low (0V).

Keypad Indications

If a trip condition is detected the MMI displays and performs the following actions.

1. The HEALTH LED goes out indicating a Trip condition has occurred. The MMI displays the activated alarm. (Investigate, find and remove the cause of the trip.)
2. Terminal B6 (Healthy) goes low (0V).
3. The alarm message(s) can be acknowledged by pressing the E key, however, the unit will not restart at this point.

Resetting a Trip Condition

All trips must be reset before the drive can be re-enabled. A trip can only be reset once the trip condition is no longer active, i.e. a trip due to a heatsink over-temperature will not reset until the temperature is below the trip level.

Note: *More than one trip can be active at any time. For example, it is possible for both the HEATSINK TRIP and the OVERVOLTS (VA) trips to be active. Alternatively it is possible for the drive to trip due to a FIELD OVER I error and then for the HEATSINK TRIP to become active after the drive has stopped (this may occur due to the thermal time constant of the heatsink).*

You can reset the trip(s) in one of two ways:

1. Power-up, or remove and re-apply the auxiliary power supply.
2. Stop and start the drive, i.e. remove and re-apply the Start/Run signal (terminal C3 or C4, or the STOP and RUN keys on the MMI).

The HEALTH LED (on the unit or MMI) illuminating indicates success. The MMI will return to its original display.

Status LEDs

The following LEDs indicate the status of the drive:

There are two LEDs when the blanking cover is fitted: OK (HEALTH) and RUN. Refer to Chapter 4: "Operating the Drive" - Reading the Status LEDs.

There are seven status LEDs if the Keypad is fitted: OK (HEALTH), RUN, STOP, FWD, REV, SEQ, and REF. Refer to Chapter 5: "The Keypad" - Keypad LEDs.

7-2 Trips and Fault Finding

Fault Finding

The most valuable tools for finding and resolving faults are the MMI and the LED display. You can also monitor alarms and troubleshoot faults remotely through a computer interface if a RS422 serial communications option card (AH385862U001) is installed in the drive.

Initial Troubleshooting Procedure

Most drive problems are encountered during commissioning or soon after start-up. Problems frequently result from incorrect installation or errors in configuring the drive. If you encounter a problem upon initial start-up of the DRV, see the flowchart below and review the installation procedures in Chapter 3 and the start-up and adjustment procedures in Chapter 4.

If you have reviewed these procedures and all seems to be in order, refer to the troubleshooting flowcharts at the back of this chapter.

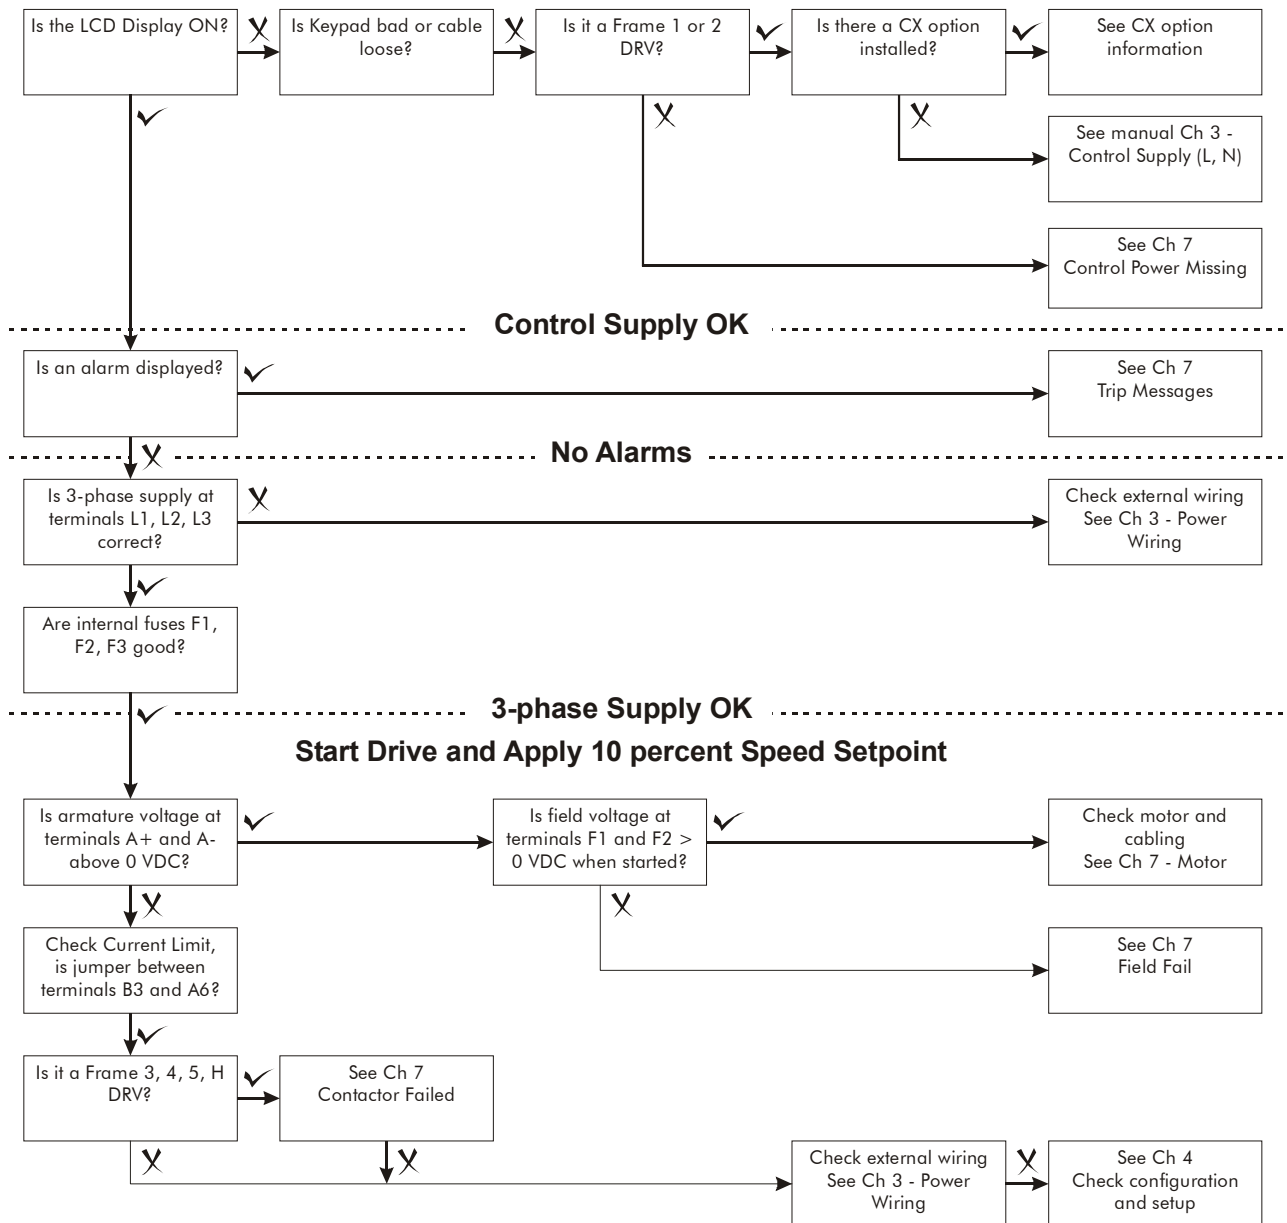


Figure 7-1 Initial Troubleshooting Procedures

Recommended Tools

You will need the following tools for most troubleshooting procedures:

- Voltmeter
- Megger

If available, the following tools can provide more detailed information for problem solving:

- Oscilloscope
- Hand tachometer

You may also need screwdrivers and/or wrenches to restore electrical connections that are incorrectly or have come loose.

Calibration Checks


The drive leaves the factory with the following calibration switches correctly set. Inappropriate settings will prevent the drive from operating correctly. For your reference, the correct settings are given below.

IMPORTANT: If you change the settings for any of these switches you **MUST** re-calibrate the Control Board. Refer to Chapter 4: "Operating the Converter" - Calibrating the Control Board.

Control Board Calibration Scaling Switch (all Frames)

NO POWER IS CONNECTED AT THIS STAGE

The switch is viewed through the Speed Feedback option tray on the front of the drive (left-hand side). The switch is set to "1" (ON) for all frames, except for the 15A Frame 1 where it is set to "OFF".

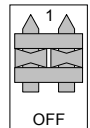

Power Board Current Calibration Switches (Frame 2)

NO POWER IS CONNECTED AT THIS STAGE


View the switches with the drive door open:

SW1 - Product Identity Switch

This switch is always set to HI.

SW2 - Burden Switch

This switch is always set to HI.

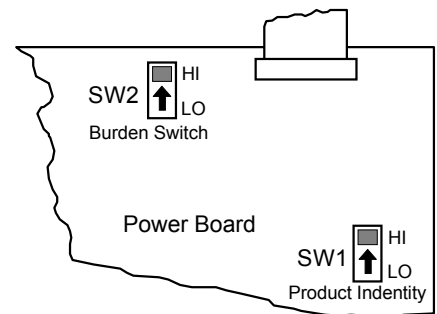


Adaptor Board Current Calibration Switch (Frame 3)

NO POWER IS CONNECTED AT THIS STAGE

View the switch with the terminal cover removed:

IA CAL - Armature Current Calibration Switch

This switch is always set to "1" (ON).

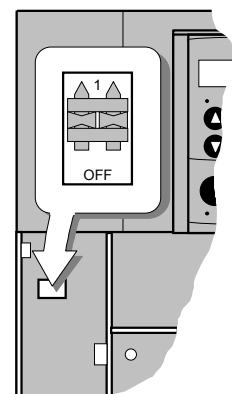

7-4 Trips and Fault Finding

Power Board Current Calibration Switches (Frames 4 & 5)

NO POWER IS CONNECTED AT THIS STAGE


View the switches with the drive door open:

IA CAL – Armature Current Calibration Switch (SW1)

This switch is always set to LO on Frame 4 & 5 drives of 500A or less, and HI for drives greater than 500A.

IF CAL – Field Current Calibration Switch (SW2)

This switch is always set to HI for Frame 4 & 5 drives. The maximum field current calibration is 30A.

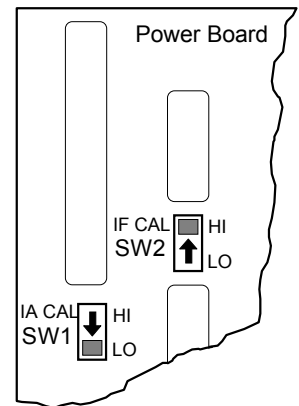

Power Board Current Calibration Switches (Frame H)

NO POWER IS CONNECTED AT THIS STAGE

To access the power board remove the terminal cover, unscrew the two fixings on the right hand side of the control door. Open the door to reveal the power board.

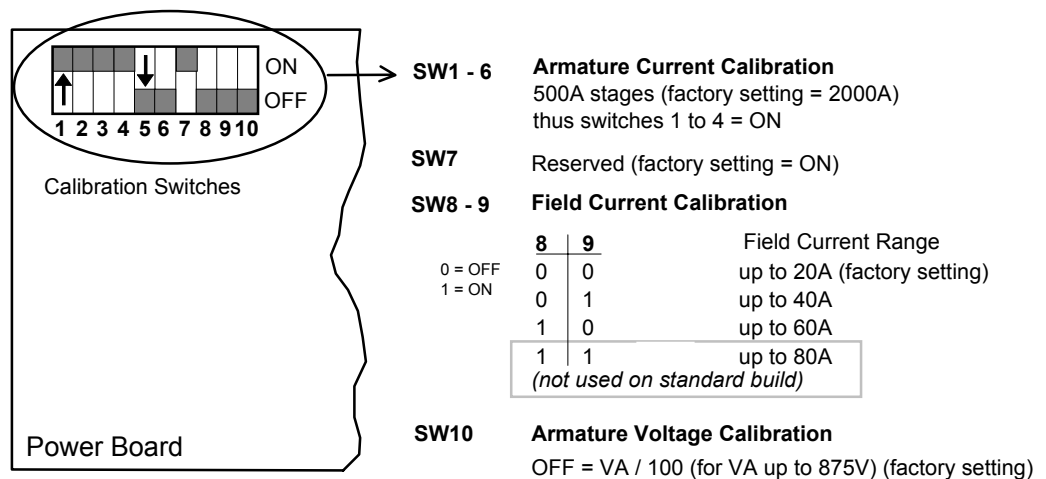


Figure 7-1 Calibration Switches

IA CAL - Armature Current

Calibration switches 1 to 4 are always set to "ON", and 5 to 6 are always set to "OFF".

Armature Voltage

Calibration switch SW10 is always set to "OFF".

IF CAL - Field Current

For field currents greater than 20A, set the Field Current calibration switches 8 and 9 to give the required Field Current range. The drive's Product Code includes the value for Field Current. If you change the Field Current from the 20A factory setting to another value, you must now select the correct Product Code rating:

AUXILIARY POWER ONLY IS CONNECTED AT THIS STAGE


Apply auxiliary power. Note the current Product Code which is displayed on the MMI's Welcome screen at the top of the menu, e.g. DC 4Q 1700A 20 D (20 = 20A Field Current range)

Set the following parameters, but first select *CONFIGURE ENABLE* to be *ENABLED*.

Now, for instance, to set the Field Current range for 40A, you must select the appropriate Product Code for a Field Current range of 40A, e.g. DC 4Q 1700A **40 D**

To do this, refer to Chapter 5: “The Operator Station” – Changing the Stack Size (3-button reset).

Note the nominal field current from the motor rating plate and set this value in the FIELD CURRENT parameter.

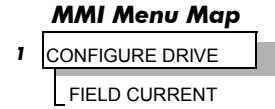

Now select *CONFIGURE ENABLE* to be *DISABLED* and perform a *PARAMETER SAVE*.
You *MUST* re-calibrate the Control Board.
Refer to Chapter 4: "Operating the Converter" - Calibrating the Control Board.



Adaptor Board Current Calibration Switch (Frame H)

NO POWER IS CONNECTED AT THIS STAGE

View the switch with the terminal cover removed:

IA CAL - Armature Current Calibration Switch

This switch is always set to "1" (ON).

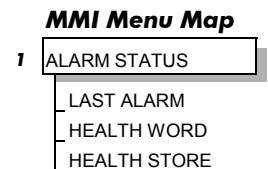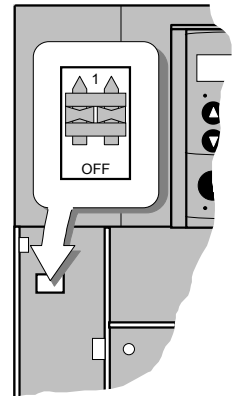

7-6 Trips and Fault Finding

Alarm Messages

The drive continuously monitors alarms whilst running. These alarms are gated together to provide an overall "drive healthy" logic variable. This variable corresponds to the ALARM STATUS software block output HEALTHY (tag number 122). By default the HEALTHY logic parameter is tagged to terminal B6 (DIGOUT 2).

When a trip occurs an alarm message is displayed on the keypad, and information about the trip is stored in the ALARM STATUS menu.

The alarm message and the LAST ALARM parameter are displayed in the selected language of the keypad.

The HEALTH STORE and HEALTH WORD parameters display information as hexadecimal values, or the sum of the hexadecimal values when more than one alarm is active. Thus the unique value can represent one or more alarms.

Note: *Hexadecimal refers to the common practice of counting to the base of 16 in computing, rather than the base of 10. The sixteen 'numbers' used being 0 to 9, A to F. Thus an 8-bit byte is represented by two characters in the range 00 to FF, while a 16 bit word is represented by four characters in the range 0000 to FFFF.*

LAST ALARM

(Tag 528). This display shows the last alarm message to have been displayed. To reset the parameter simply press the ▼ (DOWN) key to clear the alarm. Alternatively, you can switch the auxiliary supply off and on, causing NO ACTIVE ALARMS to be displayed.

HEALTH WORD

(Tag 115). This parameter is used to continuously monitor the status of the drive. As alarms are added or removed, the display will immediately update to show the hexadecimal sum of these alarms.

The value reverts to 0x0000 when the Start (C3) input is raised (+24V), and when no trip condition is present.

HEALTH STORE

(Tag 116). This displays the hexadecimal value of the first (or only) alarm to occur causing the trip condition.

The display reverts to 0x0000 when the Start (C3) input is raised (+24V).

Hexadecimal Representation of Trips

The LAST ALARM, HEALTH WORD and HEALTH STORE parameters use a four digit hexadecimal number to identify individual trips. Each trip has a unique corresponding number as shown below.

LAST ALARM, HEALTH WORD and HEALTH STORE					
Trip		Trip Code			
		First Digit	Digit	Digit	Last Digit
	NO ACTIVE ALARMS				
0	OVERSPEED				1
1	MISSING PULSE				2
2	FIELD OVER I				4
3	HEATSINK TRIP *				8
4	THERMISTOR			1	
5	OVER VOLTS (VA)			2	
6	SPD FEEDBACK			4	
7	ENCODER FAILED			8	
8	FIELD FAILED		1		
9	3 PHASE FAILED *		2		
10	PHASE LOCK		4		
11	5703 RCV ERROR		8		
12	STALL TRIP	1			
13	OVER I TRIP	2			
14	OTHER •	4			
15	ACCTS FAILED *	8			
* Refer to "Power Board LED Trip Information (Frame 4, 5 & H)" below					
• For the LAST ALARM parameter, OTHER is replaced with the trip codes below.					

LAST ALARM only					
14	AUTOTUNE ERROR	F	0	0	1
14	AUTOTUNE ABORTED	F	0	0	2
14	EXTERNAL TRIP	F	0	0	5
14	REMOTE TRIP	F	0	0	6
14	CONFIG ENABLED	F	2	0	0
14	NO OP-STATION	F	4	0	0
14	PCB VERSION	F	F	0	5
14	PRODUCT CODE	F	F	0	6

When more than one trip is to be represented at the same time then the trip codes are simply added together to form the value displayed. Within each digit, values between 10 and 15 are displayed as letters A to F

For example, if the HEALTH WORD parameter is **01A8** then this represents a "1" in digit 3, an "8" and a "2" in digit 2, (8+2 = 10, displayed as A) and an 8 in digit 1. This in turn represents the active trips FIELD FAILED, ENCODER FAILED, OVER VOLTS (VA) and HEATSINK TRIP (an unlikely situation).

Decimal number	Display
10	A
11	B
12	C
13	D
14	E
15	F

7-8 Trips and Fault Finding

Power Board LED Trip Information (Frame 4, 5 & H)

The HEATSINK TRIP, 3 PHASE FAILED and ACCTS FAILED trips are associated with the following LED indications:

Frame 4

Check the LEDs on the power board for more HEATSINK TRIP information.

The LEDs light to indicate a problem.

<u>Trips</u>		
HEATSINK TRIP	field heatsink overtemperature	FLD HS OT <input type="checkbox"/>
	armature heatsink overtemperature	ARM HS OT <input type="checkbox"/>
3 PHASE FAILED	phase loss	PHASE LOSS <input type="checkbox"/>

Frame 5


The master power board (on the left hand side of the unit) is fitted with a Parallel Expansion Board. This board has four additional LEDs providing information about the slave power board (on the right hand side of the unit), and about the general status of the unit.

The LEDs light to indicate a problem.

<u>Trips</u>	Master Power Board	Slave Power Board (indicated by the Parallel Expansion Board)
HEATSINK TRIP	field heatsink overtemperature	FLD HS OT <input type="checkbox"/>
	armature heatsink overtemperature	ARM HS OT <input type="checkbox"/>
3 PHASE FAILED	phase loss	PHASE LOSS <input type="checkbox"/>
	phase rotation fault	PH ROT FLT <input type="checkbox"/>
ACCTS FAILED	current imbalance	CUR IMBALANCE <input type="checkbox"/>

It is essential that the phase sequence applied to the two stacks are identical otherwise the drive will trip on 3 PHASE FAILED.

If there is a current imbalance between the stacks which exceeds 10% the drive will trip on ACCTS FAILED.

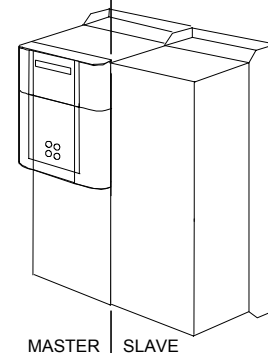

Frame H

The power board has six LEDs indicating further trip information, and general status of the unit.

The LEDs go out to indicate a problem (note that LED1 may also flash as the SMPS attempts to power-up repeatedly, indicating a fault).

<u>Trips</u>	Power Board
switched mode power supply on	SMPS OK <input type="checkbox"/> LED1
ACCTS FAILED	trigger board connection status TRIGGER BOARD PRESENT <input type="checkbox"/> LED4
	ac current transformer connection status ACCTS PRESENT <input type="checkbox"/> LED3
3 PHASE FAILED	thyristor fuses status THYRISTOR FUSES <input type="checkbox"/> LED6
HEATSINK TRIP	field heatsink temperature normal FIELD HEATSINK <input type="checkbox"/> LED2
	armature heatsink temperature normal STACK THERMOSTATS <input type="checkbox"/> LED5

Using the Keypad to Manage Trips

Trip Messages

Most of the alarms have a delay timer so that the drive only trips if the condition persists for the whole of the delay period.

If the drive trips, then the display immediately shows a message indicating the reason for the trip. The possible trip messages are given in the table below.

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
3-PHASE FAILED 3-phase supply failure	Mains voltage incorrect	Check the mains voltage of the drive (refer to Product Code). This alarm may not operate properly if the voltage is incorrect, i.e. wrong unit or drive
	Supply voltage low or missing	Check auxiliary/control or main supply power
	Blown fuse	Check external branch circuit protection. Check auxiliary/control fuse F1 Check that armature current calibration does not exceed drive rating
	Loose wiring. AC contactor not engaging	Check all power wiring for tightness
	Defective power supply pcb	Replace power supply pcb
5703 RCV ERROR Invalid data received via P3 port from another drive/external 5703 unit when configures as a slave device (Alarm only operates when MODE parameter is set to 5703 SLAVE)	Cable from drive/5703 unit not plugged into drive P3 port	Check connection from drive/5703 unit to drive P3 port on control door
	5703 unit not receiving communications from master device	Check output connections and operation of master 5703 unit
	Drive incorrectly configured	Check configuration
	5703 peer-to-peer communications module failure	Replace 5703
ACCTS FAILED Note: <i>The trip prevents the contactor closing and the current loop activating without armature current feedback - important in the case of external stack drives where the thyristor stack is remote from the control board.</i>	AC current transformer plug connection to drive power board missing	Check armature current transformer plug for correct installation.
	Frame 5 only:	Load imbalance between the two parallel power stacks
AUTOTUNE ABORT The Autotune sequence has been aborted. Coast Stop, Program Stop, Enable or Start/Run commands removed before AUTOTUNE procedure completed	Wrong AUTOTUNE sequence followed	Repeat AUTOTUNE procedure
	AUTOTUNE incomplete. (After 2 minutes the drive will time-out if still in AUTOTUNE mode)	Repeat AUTOTUNE procedure. If problem persists, contact Eurotherm Drives customer service

7-10 Trips and Fault Finding

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
AUTOTUNE ERROR Motor rotation detected during Autotune process (speed feedback has exceeded 20% of rated speed), or field current detected during Autotune (field current feedback has exceeded 6% of rated field current) (Alarm only operates during the Autotune sequence)	Residual motor flux when field supply is disconnected	Series fields are not recommended for regenerative drives and the series field winding should normally be left open circuit. If a series field is required, either lock the motor shaft or temporarily disconnect the series field and repeat the AUTOTUNE procedure
	Permanent magnet motor	Lock motor armature and repeat Autotuning procedure
	Separately supplied field	Disable external field supply and repeat Autotuning procedure
CALIB INHIBIT Calibration fault	Drive incorrectly calibrated	Check the calibration settings
COMMS FAULT CODE	Keypad faulty	Replace Keypad
CONFIG INHIBIT Configuration procedure incomplete. CONFIGURE ENABLE left in enabled state	The drive was requested to start whilst in Configuration mode.	Do not attempt to start the drive in Configuration mode
	Encoder or Microtach feedback option card incorrectly fitted to control door	Check board fully inserted in control door
	Fiber optic cable too long or cable distorted (bend radius too small for example) resulting in too weak a signal at Microtach receiver (under drive)	Reduce the tightness of the bend. The fibre optic wire should not be bent tighter than a 2" (5cm) radius
	Fiber optic cable too short resulting in too strong a signal at Microtach receiver (over drive)	Back the fibre optic cable out of the receive slightly and retighten
ENCODER FAILED No speed feedback signal	Optional Encoder board is not fitted	The SPEED FBK SELECT parameter is set to ENCODER but board not fitted
	Wire-ended encoder wires loose	Check cable and connections
	Microtach encoder wires loose or damaged	Check fibre optic cable for damage, bend radius, operating length - refer to Microtach handbook.
EXTERNAL TRIP Customer alarm! Trip operates if input open or high impedance Alarm time delay : 15 seconds	Device not wired to drive or device open circuited	Check C1 to C2 connections to drive - connect C1 to C2 if customer device not fitted.

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
<p>FIELD FAIL</p> <p>Field current is less than 6% of rated current when in Current Control mode</p> <p>Field current is less than 50mA when in Voltage Control mode (with default current burden of 15K)</p> <p>Alarm time delay : 0.75 seconds</p> <p>Refer to Field Fail Procedure, page 7-19</p>	Open circuit motor field	Check connection and measure field resistance
	Faulty operation of field controller	Where an ac supply feeds the onboard field regulator, check connections FL1 & FL2 for line-to-line voltage (rather than line-to-neutral) - L1 into FL1, L2 into FL2. The 3-phase supply must be present for mains synchronisation purposes
	No field supply required	For loads where no field supply is required, e.g. a permanent magnet motor, set the FIELD ENABLE parameter to disable to suspend this alarm.
<p>FIELD OVER I</p> <p>The motor field current has exceeded 120% of the calibrated value</p> <p>Alarm time delay : 15 seconds</p>	Regulator failure	Contact Product Support
	Badly tuned control loop (alarm only operates with field current control mode selected)	Retune control loop
<p>HEATSINK TRIP</p> <p>The drive heatsink temperature is too high</p> <p>Alarm time delay : 0.75 seconds</p> <p>Note: <i>The stack must be allowed to cool in order to re-start the drive.</i></p>	The ambient air temperature is too high	Check cooling, ambient air temperature must not exceed 40°C (104°F) for full rating
	Poor ventilation or spacing between drives	Improve ventilation, if necessary reposition drives ensuring correct spacing
	Fan failure	Check fuse on power board, wrong rotation (models above 70A bridge rating)
	Blocked ventilation slots	Clear ventilation slots
	Clogged air filters	Clean or replace air filters
	Excessive armature current	Check nominal armature current on motor nameplate against the current calibration for the drive

7-12 Trips and Fault Finding

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
<p>MISSING PULSE</p> <p>A missing pulse from the 6-pulse armature current waveform. Trips when the motor loading exceeds 1.5 times the DISCONTINUOUS parameter value.</p> <p>Alarm time delay : 60 seconds</p> <p>Note: <i>Ripple from the speed loop from either the setpoint or feedback can cause unstable current</i></p>	Drive not Autotuned (unstable current loop)	Perform the AUTOTUNE procedure
	SCR gate connection loose	Check SCR gate connections from the trigger board to the SCR gate leads
	SCR defective	Check SCRs with an ohmmeter. See SCR Troubleshooting, page 7-21
	SCR firing pcb defective	Replace the pcb
	Motor has opened or shorted coil	Check the motor with an ohmmeter and megger for insulation and continuity
	Coupling between motor and feedback device slipping	Stop drive and isolate power - check coupling tightness
	Feedback device noisy or defective	Replace tachometer generator if noise is present while observing feedback with an oscilloscope
	Bottom two LEDs on the 5701 Microtach receiver board are out	Weak feedback signal intensity; check connections, fiber optic wire integrity, and transmission distances
Speed loop gain too high	Retune drive speed loop	
OP STATION	Keypad has been disconnected from drive whilst drive is running in local control.	Do not remove under these conditions
<p>OVER I TRIP</p> <p>Armature overcurrent trip. Armature current has exceeded 280% of calibration value</p> <p>Note: <i>300% loading not exceeding 15ms or 325% not exceeding 6.6ms is acceptable)</i></p>	Drive not Autotuned (unstable current loop)	The drive AUTOTUNE procedure MUST be followed for the motor the drive is to control. Repeat the AUTOTUNE procedure
	Drive incorrectly calibrated	Check the calibration settings
	Manual tuning of the drive leaves current loop unstable (THIS IS NOT RECOMMENDED!)	Current loop response may be manually adjusted only AFTER AUTOTUNING is complete. Check current loop response.
	Coupling between motor and feedback device slipping	Stop drive and isolate. Check coupling tightness
	Motor armature faulty	Check motor resistance to ground. Check for armature shorts
	Loss of main supply during regeneration	Check main supply branch circuit protection and SCR fuses (if existing)
Control Door or Power Supply PCB faulty	Replace defective board	

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
<p>OVERSPEED</p> <p>Motor overspeed - the speed feedback signal has exceeded 125% of rated speed.</p> <p>Alarm time delay : 0.1 seconds</p>	Improperly set maximum speed parameters	Use hand tachometer to ensure proper speed and adjust the speed calibration parameter
	Wrong type of feedback selected in SPEED FBK SELECT parameter in MMI	Change parameter to match feedback type
	Calibration set incorrectly on Analog Tachometer Calibration Option Board	Verify calibration setting
	Improper calibration of drive speed feedback, encoder ppr selection for example	Recalibrate the speed feedback
	Improper tuning of speed loop parameters - drive overshooting or unstable	Retune drive speed loop
	Coupling between motor and feedback device slipping	Stop drive and isolate power - check tightness of coupling
	Feedback device noisy or defective	Replace tachometer generator
	Bottom two LEDs on the 5701 Microtach receiver board are out	Weak feedback signal intensity; check connections, fiber optic wire integrity, and transmission distances
	Field weakening parameters incorrectly set	Reconfigure the field weakening parameters as described in Chapter 4
	Drive operating as current regulator	Check external speed loop adjustments
<p>OVER VOLTS (VA)</p> <p>Motor armature voltage has exceeded 120% of rated volts</p> <p>Alarm time delay : 1.5 seconds</p>	Drive miscalibrated for motor armature voltage	Check armature voltage calibration matches motor nameplate information
	Drive miscalibrated for field voltage ratio (voltage model) or field current (current or field weakening model)	Check field calibration of drive. Check field current not exceeding motor nameplate data
	Armature open circuit	Check armature wiring. Check armature fuse F7 (regenerative units only)
	Motor maximum speed set incorrectly causing armature voltage to exceed nameplate rating	Change maximum speed parameter to match the nameplate rating
	Field weakening parameters set incorrectly if using an extended speed range motor	Change field weakening parameters for use with an extended speed range motor - refer to Chapter 4

7-14 Trips and Fault Finding

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
PHASE LOCK Drive SCR firing phase lock loop unable to lock to supply waveform	One or more phase of supply low, too high or missing	Check all three phases of the supply, other equipment on the same supply may be unbalancing the phases. Check fuses F1, F2, F3, FS4, FS5 and FS6
	Supply waveform badly distorted	Install line chokes and/or isolation transformers if not present with drive
	Power supply pcb or control door defective	Replace the power supply board
	Supply frequency outside 46-65Hz range	Change supply for one within the 45 to 65Hz range
REMOTE TRIP	Drive not set for remote operation	Check setting of AUX I/O::REM. SEQUENCE parameter Also see AUX I/O::REM. SEQ. ENABLE parameter (Remote Trip flag set to zero.)
SPEED FEEDBACK The difference between speed feedback and armature voltage feedback is greater than the SPDFBK ALM LEVEL parameter value If FLD WEAK ENABLE parameter is enabled, speed feedback is less than 10% when in the field weakening region Alarm time delay : 0.4 seconds	Analog tachometer feedback polarity incorrect (terminals G3 and G4)	Reverse tachometer leads, or swap encoder connections
	Armature volts miscalibrated	Check armature voltage calibration setting, Chapter 4
	Tachometer generator miscalibrated	Check Analog Tachometer Calibration Option Board setting are for the proper feedback voltage at motor top speed
	Armature voltage sensing leads miswired or damaged	Check wiring of armature voltage sensing wires AS+, AS- from DC contactor to power supply board
	Coupling between motor and feedback device slipping	Stop drive and isolate power - check tightness of coupling
	Feedback device noisy or defective	Replace tachometer generator if noise is present while observing feedback with an oscilloscope
	Bottom two LEDs on the 5701 Microtach receiver board are out	Weak feedback signal intensity; check connections, fiber optic wire integrity, and transmission distances
	Motor has opened or shorted coils	Check the motor for insulation continuity
	Analog tachometer feedback wires or shield loose or shorted to ground	Reconnect the wiring

Trip Message and Meaning	Possible Reason for Trip	Corrective Action
STALL TRIP With motor stationary (AT ZERO SPEED parameter shows TRUE), current has exceeded the STALL THRESHOLD parameter value for longer than the STALL TRIP DELAY parameter value (Alarm only operates when the STALL TRIP parameter is enabled).	Stall timer set too short for load acceleration	Increase stall trip delay and/or install trip threshold if STALL TRIP is being used
	Field current below motor nameplate rating (if the drive is in field current control mode)	Confirm motor field current with DC clamp on meter or current meter. Check drive field calibration
	Field connection miswired	Check motor field wiring is in accordance to motor prints
	Motor unable to deliver sufficient torque	Check motor not undersized for load requirements
	Mechanical binding of the motor	Check for mechanical problems which may cause motor to stall
THERMISTOR The motor temperature is too high Motor thermistor/thermostat input open or high impedance Alarm time delay : 15 seconds Note: <i>The motor must be allowed to cool in order to re-start the drive.</i>	Field voltage is not set correctly (if the drive is in field voltage control mode)	Adjust the FLD.VOLTS RATIO parameter in the Calibration section, Chapter 4
	Motor thermal protection device not wired to drive or thermistor/thermostat open circuited	Check TH1 to TH2 connections to drive - connect TH1 to TH2 if motor not fitted with a thermal protection device (thermistor/thermostat)
	Blower motor rotating in wrong direction (force ventilated motors)	Check direction of fan agrees with arrow on motor blower motor assembly or motor manual
	Blower filter clogged	Clean or replace filter
	Motor operating at low speed/high current	TEFC motors do not generate sufficient flow of air to provide sustained full load at low speed. Check gearing and/or reduce mechanical load. Use a higher power motor or provide additional cooling method independent of motor RPM
	Drive miscalibrated	Check motor armature and current calibration matches motor nameplate information
	Field miswired	Check motor field wiring matches motor wiring diagram for field supply
0xF100 ERROR CAM FULL INIT 0xFF02 UNIMPLEMENTED OPCODE 0xFF03 ERROR NMI 0xFF04 ERROR TRAP 0xFF05 ERROR PCB VERSION 0xFF06 ERROR PRODUCT CODE 0xFF07 ERROR HSO FULL		These are internal software errors. If these should occur please contact Eurotherm Drives Technical Support.

Table 7-1 Trip Messages

7-16 Trips and Fault Finding

Symbolic Alarm Messages

These are generally internal software or hardware. If these should occur cycle the power on the drive to clear the fault and investigate. If the message repeats, contact Eurotherm Drives Technical Support.

Number	Description	Action
0xF003	Pre-Ready Fault	Coding not present. Replace power board or chassis. (If an external stack, check coding supply field).
0xF004	Aux Contactor Open	The internal auxiliary 3-phase contactor failed to close. Check the position of the Calibration Scaling Switch - refer to Chapter 4: "Operating the Converter" - Calibration.
0xF005	External Trip	Ext Trip (C2) open circuit.
0xF006	Remote Trip	REM. SEQUENCE parameter Remote Trip flag set to zero.
0xFF03	Aux Power Fail	Check Aux. Supply and/or Mains Input

Self Test Alarms

Self Test Alarm and Meaning	Possible Reason for Alarm
(EEPROM) CHECKSUM FAIL Parameters not saved, or are corrupted.	(The alarm appears at power-up or at the end of "Upload" UDP Transfer) Corrupted UDP file loaded - press the E key and perform a PARAMETER SAVE. The drive will be returned to its factory default values.
ENABLE CONFIG. The ENABLE CONFIG. parameter has been left in the Enable state.	Select Disable for the ENABLE CONFIG. parameter
LANGUAGE CHECKSUM FAIL Incorrect language selected, or corrupted	(The alarm appears at power-up or at the end of "Upload" UDP Transfer) Corrupted UDP file loaded - press the E key and reload the correct language or de-select the second language.
INIT CAL FAIL Self calibration of analog inputs has exceeded normal tolerance	(The alarm appears at power-up) As a temporary measure, the tolerance can be increased by 0.1% with each press of the E key, however, this indicates a hardware fault - refer to Eurotherm Drives.
IA FBK CAL FAIL / IA INST CAL FAIL The self calibration of the armature current has failed	(The alarm appears at power-up) If powering the unit off and on does not remove the problem, a hardware failure is suspected. Refer to Eurotherm Drives.

Setting Trip Conditions

The following parameters in the CALIBRATION menu are used to set trip conditions:

- OVER SPEED LEVEL
- SPDFBK ALM LEVEL
- STALL THRESHOLD
- STALL TRIP DELAY
- REMOTE TRIP DELAY

Viewing Trip Conditions

The following parameters in the ALARM STATUS menu can be viewed to investigate trip conditions:

- LAST ALARM
- HEALTH WORD
- HEALTH STORE
- THERMISTOR STATE
- SPEED FBK STATE
- STALL TRIP
- REMOTE TRIP

Inhibiting Alarms

The following alarms can be inhibited in the INHIBIT ALARMS menu.

- SPEED FBK ALARM
- ENCODER ALARM
- FIELD FAIL
- 5703 RCV ERROR
- STALL TRIP
- TRIP RESET
- REM TRIP INHIBIT

Note: The STALL TRIP parameter in the DIAGNOSTICS menu is set regardless of the state of STALL TRIP inhibit. The flag is set after the stall time-out expires. The relevant bit (bit 12) in the HEALTH WORD and HEALTH STORE parameters is only set when STALL TRIP is enabled.

Hardware Troubleshooting

This section contains troubleshooting information and flowcharts for identifying and correcting hardware problems.

Note: Repair of 590+ DRV is limited to basic part replacement only. Troubleshooting and electronic component at the board level is NOT recommended. Only the control and power boards, the control fuse F1 and SCR packs are replaceable. Refer to Chapter 6: "Routine Maintenance and Repair" for instructions.

Caution

Completely isolate power before making any wiring changes, replacing fuses, or making any link/jumper changes.

7-18 Trips and Fault Finding

Control Power Missing

The 590+ DRV, frames 3, 4, 5 and H, derives its power from an internal power supply circuit requiring a 110VAC supply with a frequency range of 40 to 70Hz. This power is normally supplied off one phase of the main drive supply through a DRV mounted control transformer. The supply to the control transformer is limited to 230/460VAC.

The flowchart below shows the troubleshooting procedure for correcting a missing or low control power supply. The control power is missing when the drive's LCD display and its LEDs are all out.

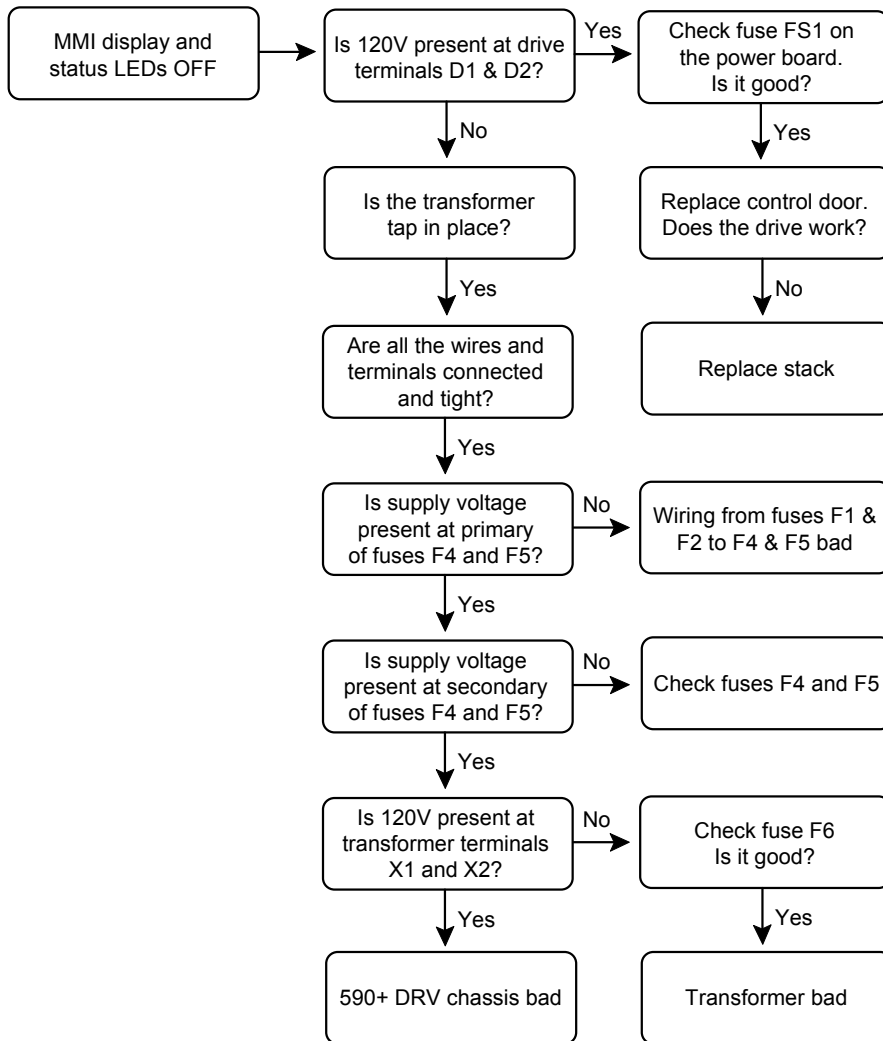


Figure 7-2 - Control Power Troubleshooting Flowchart (Frames 3, 4, 5 & H)

Field Fail Procedure

If the motor field supply fails while the drive is running a motor, the drive should trip on either an OVERSPEED alarm or a FIELD FAILED alarm.

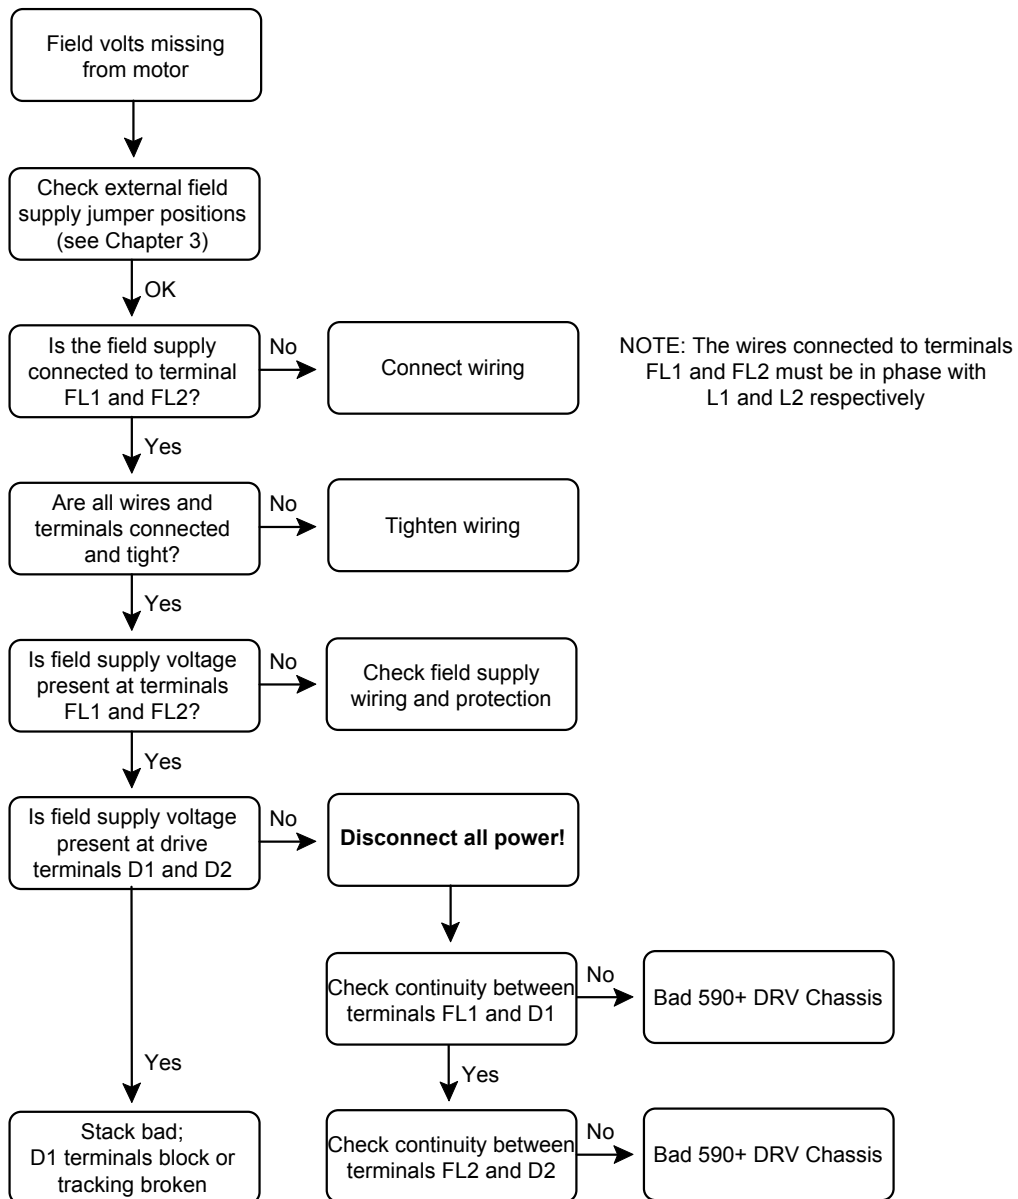


Figure 7-3 - Field Power Troubleshooting Flowchart

7-20 Trips and Fault Finding

Contactor Failed Procedure

This flowchart is used for troubleshooting problems associated with the main contactor, AM, including wiring. Refer to the schematic/wiring diagrams in Chapter 13 when troubleshooting.

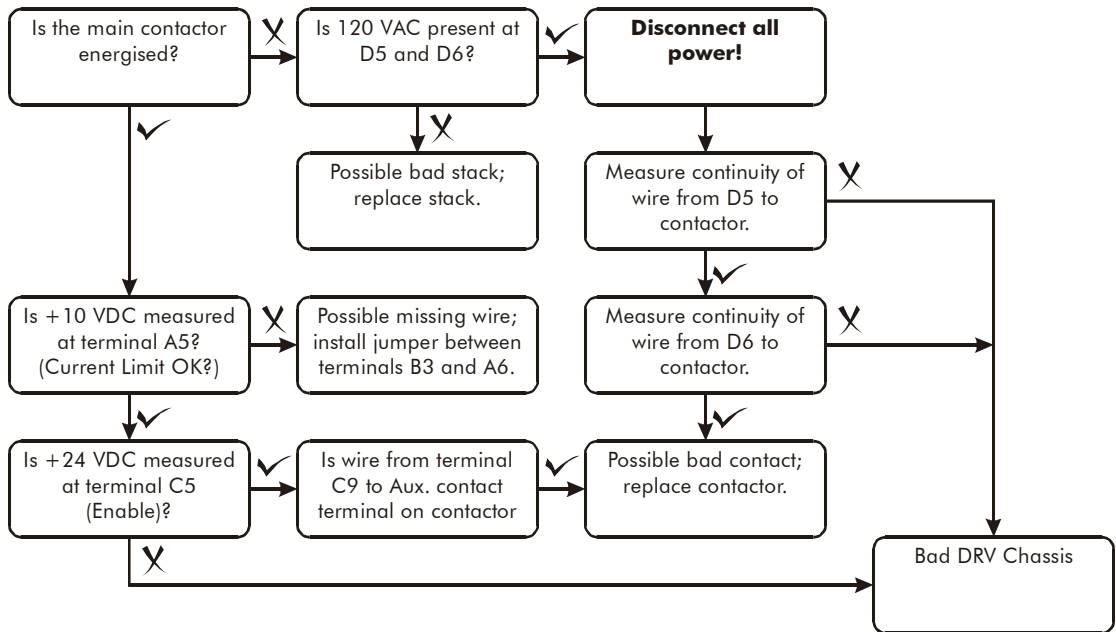


Figure 7-4 - Troubleshooting Flowchart for Faulty DC Contactor

SCR Troubleshooting

Non-regenerative drives contain three SCR packs, A, B and C. Each SCR pack contains two thyristors. Three additional SCR packs (D, E and F) mount above SCR packs A, B and C for regenerative drives. The layout of the SCR packs is shown in Figure 7-5 as they appear on the drive heatsink, from left to right.

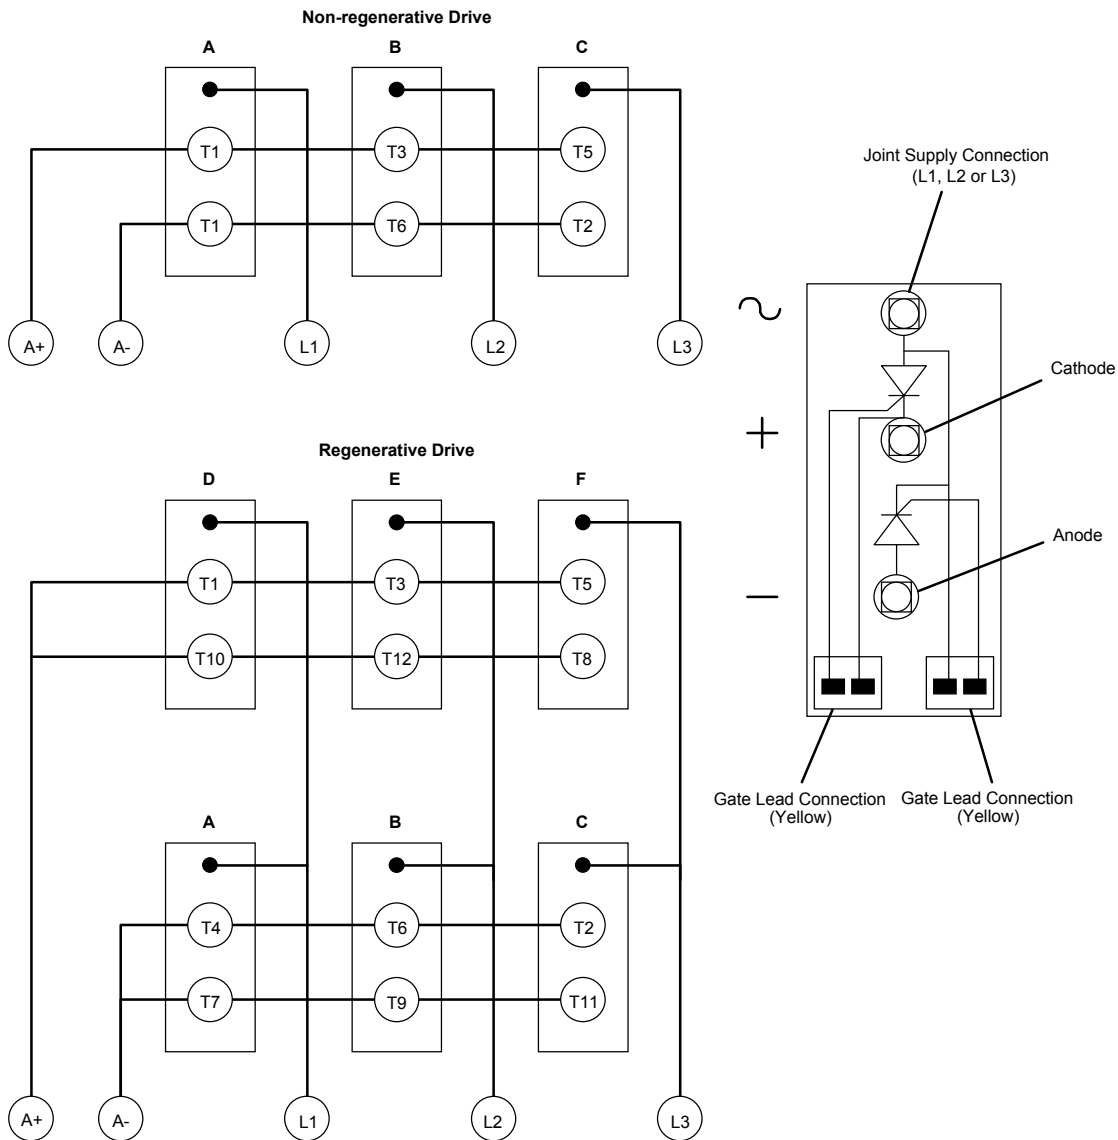


Figure 7-5 SCR Layout

Use the tables below to determine which SCR pack is bad. The tables show the SCR being tested and the SCR pack that contains it. Measure the resistance between each armature and supply terminal. A good SCR will measure greater than 1MΩ when read from the armature to the supply terminal. Reverse the leads and repeat these measurements between the supply and armature terminals. Bas (shorted) SCRs should measure 0 to 1kΩ.

Remove the power supply board and measure the resistance between the gate and the cathode. It should measure between 18 and 40Ω if good. A schematic of the SCR pack is shown above. The outer most terminals connected to yellow leads at the bottom of each SCR pack are the thyristor gate terminations.

Non-regenerative Drives			
Terminal	L1	L2	L3
A+	T1 (A)	T3 (B)	T5 (C)
A-	T4 (A)	T6 (B)	T2 (C)

Regenerative Drives			
Terminal	L1	L2	L3
A+	T1/T10 (D)	T3/T12 (E)	T5/T8 (F)
A-	T4/T7 (A)	T6/T9 (B)	T2/T11 (C)

7-22 Trips and Fault Finding

Motor Checks

Several alarm messages are caused by problems with the motor. Most motor problems relate to insulation breakdown, overtemperature and armature brush and commutation problems. Check the motor armature and field with a megger to ensure that the motor winding insulation has not degraded and shorted one conductor to another or to ground. Continuity checks require an ohmmeter for determining whether motor windings or leads have opened or shorted. Continuity measurements should be least the 1 Ω . Insulation measurements should be greater than 10M Ω .

Note: Armature resistance for motors less than 10Hp (7.5kW) can measure up to 3 Ω .

Caution

Disconnect the motor leads from the drive before using a megger to check for motor ground faults.

Also check the motor commutator for flashover. Clean the commutator and motor brushes if worn or dirty. If the motor is fitted with a blower, change or clean the blower filter regularly.

Common Performance Problems

Parameter Toggles Between Two Conditions

This problem occurs when two parameters write to a third parameter. The two parameters overwrite each other and fight for control of the problem parameter.

No Speed Demand

If all the analog signals are connected to the proper terminals and have the correct sign, I DMD. ISOLATE may be set incorrectly. Monitor terminal C8; if it is OFF, at 0VDC, terminal C8 may have been tagged for a nonstandard function. Monitor parameter SETUP PARAMETERS::CURRENT LOOP::I DMD. ISOLATE. It should be DISABLED for speed control. If it ENABLED, only a signal at terminal A3, ANIN 2, will create a current demand needed to turn the motor.

Speed Setpoint has Unwanted Offset


Terminal A8, Total Speed Setpoint, is compiled from SETPOINTS 1 through 4. Monitor each setpoint individually in SETUP PARAMETERS::SPEED LOOP::SETPOINTS. If one is incorrect, i.e. has been left at an undesired value, simply reset it to zero.

Signal does not get through Ramp

When parameter RAMP HOLD is ON, the ramp output is held to its last input value. Set RAMP HOLD to OFF to allow the signal change.

Test Points

The following test points are located on the control board and can be accessed through the Technology Option housing. When used with a meter, they will provide valuable information in the event of a fault. Refer to Eurotherm Drives for further information.

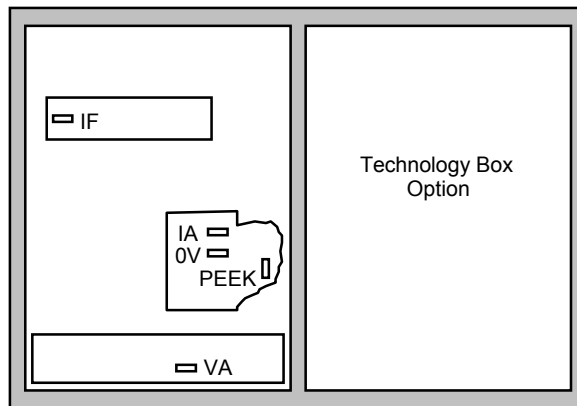

Test Point	Description
IF	Field current feedback 0.0V = 0% 4.0V = 100% (mean voltage), value of <i>FIELD I FBK</i> diagnostic, Tag No. 300
IA	Armature current feedback $\pm 1.1V \equiv \pm 100\%$ (mean current), value of <i>CURRENT FEEDBACK</i> diagnostic, Tag No. 298
VA	Armature volts feedback $\pm 10V \equiv \pm 100\%$ calculated VA (mean voltage), value of <i>TERMINAL VOLTS</i> diagnostic, Tag No. 57
OV	OV
PEEK	PEEK software (Eurotherm Drives use)

7-24 Trips and Fault Finding

ROUTINE MAINTENANCE AND REPAIR

Maintenance

Because of its solid state design, the 590+ DRV Series Digital Drive has few items requiring service or maintenance. Service typically is a matter of replacing fuses, checking electrical contacts, and isolating problems in the overall system application.

Caution

Service procedures must be performed by qualified personnel with an understanding of the dangers inherent in high voltage applications and the precautions necessary when servicing industrial equipment. The customer is responsible for assessing the technical competency of in-house service personnel.

Service Procedures

Required Tools and Equipment

Tools needed for routine service operations include basic hand tools — screwdrivers, wrenches, etc.

WARNING!

Only qualified service personnel should attempt to repair or replace parts in the drive.

Isolate the entire drive from electrical power before attempting to work on it.

Preventive Maintenance

You should perform regular preventive maintenance every six months to ensure long life and continued usefulness of the drive. Keep the drive and its components clean, check auxiliary fans if fitted, and make sure connections and mounting bolts have not loosened from vibration.

The control and field wires can be checked by gently attempting pulling the wires out of the terminals. The terminals should hold the wires firmly in place.

All the remaining wires should be checked with a torque wrench. Refer to Chapter 11: Technical Specifications - Termination Tightening Torque tables.

Repair

Saving Your Application Data

The drive retains saved settings during power-down. You can download and upload this back into the repaired unit, if necessary. You may, depending upon your knowledge of the fault, attempt the back-up of your application data now, refer to Chapter 5: “The Keypad” - Copying an Application.

If the fault clearly lies within the MMI, then return the unit for repair.

8-2 Routine Maintenance and Repair

Returning the Unit to Eurotherm Drives

Before calling Eurotherm Drives Customer Service, make sure you have the following information available:

Information	Source
Catalog number/revision number and or model number, serial number	590+ Series Digital drive serial number label
Motor horsepower, armature current and voltage, field current and voltage, base and top speed ratings	Motor nameplate
Speed voltage feedback per 1000 RPM (analog device), or counts per revolution(digital device)	Speed feedback device nameplate
Applications information and operating environment	System drawings.

Contact your nearest Eurotherm Drives Customer Service to arrange return of the item. Describe the problem in detail, the steps you have taken to rectify it and the results of your efforts.

Pack and despatch the item in the original packing materials, or at least an anti-static enclosure. Do not allow packaging chips to enter the unit.

Warranty Information

Detailed warranty information is contained in the Standard Conditions of Sale document IA058393C which is included with each order. Warranty information also precedes the *Contents* at the front of this manual.

Disposal

This product contains materials which are consignable waste under the Special Waste Regulations 1996 which complies with the EC Hazardous Waste Directive - Directive 91/689/EEC.

We recommend you dispose of the appropriate materials in accordance with the valid environmental control laws. The following table shows which materials can be recycled and which have to be disposed of in a special way.

Material	Recycle	Disposal
metal	yes	no
plastics material	yes	no
printed circuit board	no	yes

The printed circuit board should be disposed of in one of two ways:

1. High temperature incineration (minimum temperature 1200°C) by an incinerator authorised under parts A or B of the Environmental Protection Act
2. Disposal in an engineered land fill site that is licensed to take aluminium electrolytic capacitors. Do not dispose of in a land fill site set aside for domestic waste.

Packaging

During transport our products are protected by suitable packaging. This is entirely environmentally compatible and should be taken for central disposal as secondary raw material.

Technical Support Checks

The results of the following checks will be very useful to Eurotherm Drives' Technical Support.

Caution

Please only attempt these checks if you are electrically competent.

Miscellaneous Checks	✓ or ✗
Check 24V present at Terminals C1 to C9 (C1 is 0V) - dc	
Check ±10V present at Terminals B3 and B4 (B1 is 0V) - dc	
Check auxiliary supply present at Neutral & Line, 110/240V ac	
Check the fans rotate, where applicable	

WARNING!

Now isolate the unit completely from all supplies. It may be necessary to remove an armature and field connection to carry out the following checks.

Continuity Test on Fuses Using a Meter		
Check the coding fuses on the power board		
Check the auxiliary fuses etc. (fan fuse, if applicable)		
Check the supply fuses		
Check the armature fuse		
Diode Check on Power Terminals Using a Meter		✓ or ✗
A+ to L1, L2, L3 and Earth Terminal = Open Circuit		
A- to L1, L2, L3 and Earth Terminal = Open Circuit		
Internal Field Check Using a Meter		✓ or ✗
All the coding fuses must be OK before continuing with the following checks since the fuses are in the circuit.		
-ve to L1 & +ve to F+ = Diode Drop (approximately 0.5V)		
-ve to L2 & +ve to F+ = Diode Drop (approximately 0.5V)		
-ve to F- & +ve to F+ = Diode Drop (approximately 0.5V)		
-ve to L1 & +ve to F- = Open Circuit		
-ve to L2 & +ve to F- = Open Circuit		
External Field Check Using a Meter		✓ or ✗
-ve to FL1 & +ve to F+ = Diode Drop (approximately 0.5V)		
-ve to FL2 & +ve to F+ = Diode Drop (approximately 0.5V)		
-ve to F- & +ve to F+ = Diode Drop (approximately 0.5V)		
-ve to FL1 & +ve to F- = Open Circuit		
-ve to FL2 & +ve to F- = Open Circuit		

Make a note of the Catalog number, revision number and serial number

Catalog Number	Revision Number	Serial Number

Re-establish all connections. All terminals should be secure and not over-torqued.

8-4 Routine Maintenance and Repair

Fuse Replacement (Frame H)

1. Remove the front cover.
2. Unplug the ribbon cables to the trigger boards.
3. Open the swing-frame using the two quick-release fixings at the right hand end.

4Q Product (Regenerative)

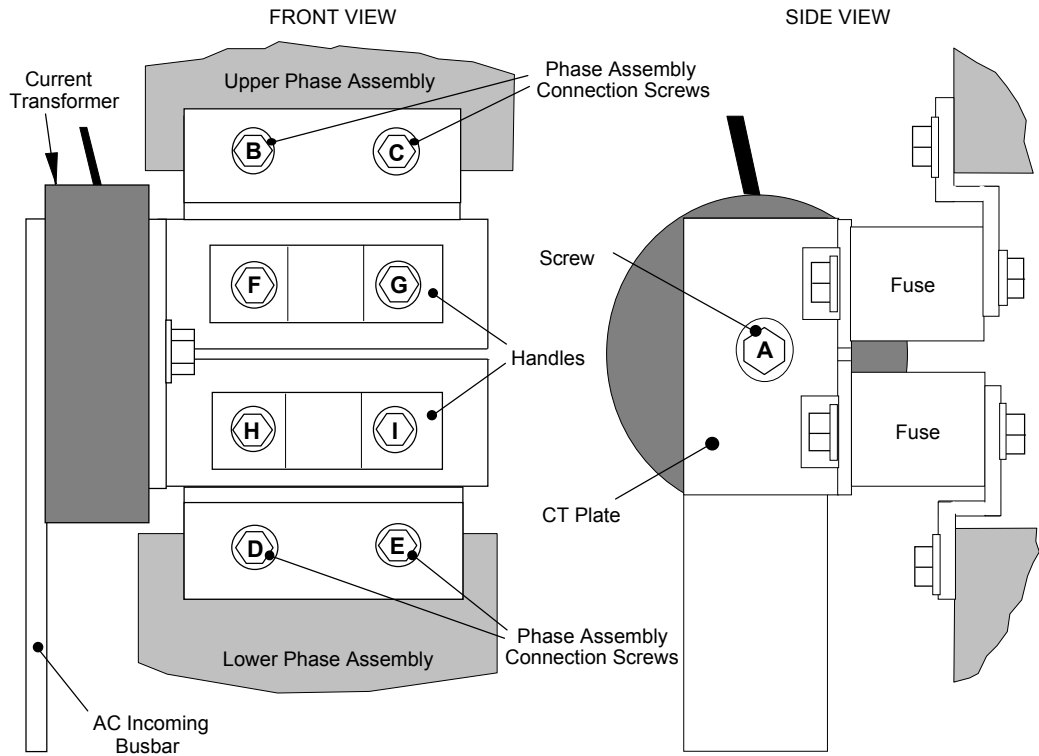


Figure 8-1 590+ Frame H Fuse Replacement Diagram

IMPORTANT: When re-assembling the unit, apply a 'zinc-loaded' jointing compound between the fuses and busbars, and between the busbars and phase assemblies (BICC BX1 - Eurotherm Part No. EA466241)

Observe all tightening torque levels, refer to Chapter 11: "Technical Specifications" - Fixing Types and Torques.

Bench-Top Replacement Procedure

1. Disconnect the relevant fuse microswitch assembly by unplugging the lead assembly from the rear trunking.
2. Remove the M12 (A).
3. Loosen (but do not remove) the four M10 screws (B, C, D, E).
4. Hold the fuse assembly handle in one hand and remove the two screws (D, E) from the lower phase assembly.

Caution

The fuse assembly weighs 9kg maximum.

5. Hold the fuse assembly handles and remove the two screws (B, C) from the upper phase assembly.
6. With the fuse assembly on the bench, remove the M12 screws (F, G, H, I) holding the fuses to the busbars. **Record the fuse microswitch position on the fuse assembly**, do not forget, as the lead assembly will not fit if mounted in the wrong position.

Reverse the above procedure for replacement. Remember to re-connect the fuse microswitches.

In-Situ Replacement Procedure

1. Disconnect the relevant fuse microswitch assembly by unplugging the lead assembly from the rear trunking.
2. Remove the M12 screw (A), and the 4 screws (F, G, H, I). Remove the CT plate and handles.
3. Remove the relevant screws (B, C or D, E) and lift the fuse busbar assembly from the phase assembly.
4. Replace the fuse on the busbar and re-connect the microswitch. Fully tighten the fuse to the busbar.
5. Fit the fuse busbar assembly on to the phase assembly. Don't fully tighten the screws yet.
6. Position the CT plate on top of the fuses. The slack in the fuse busbar assembly will allow the mounting holes to be aligned. Insert the screws.
7. Fully tighten all screws (including those in 5 above).
8. Re-connect the fuse microswitches.

2Q Product (Non-Regenerative)

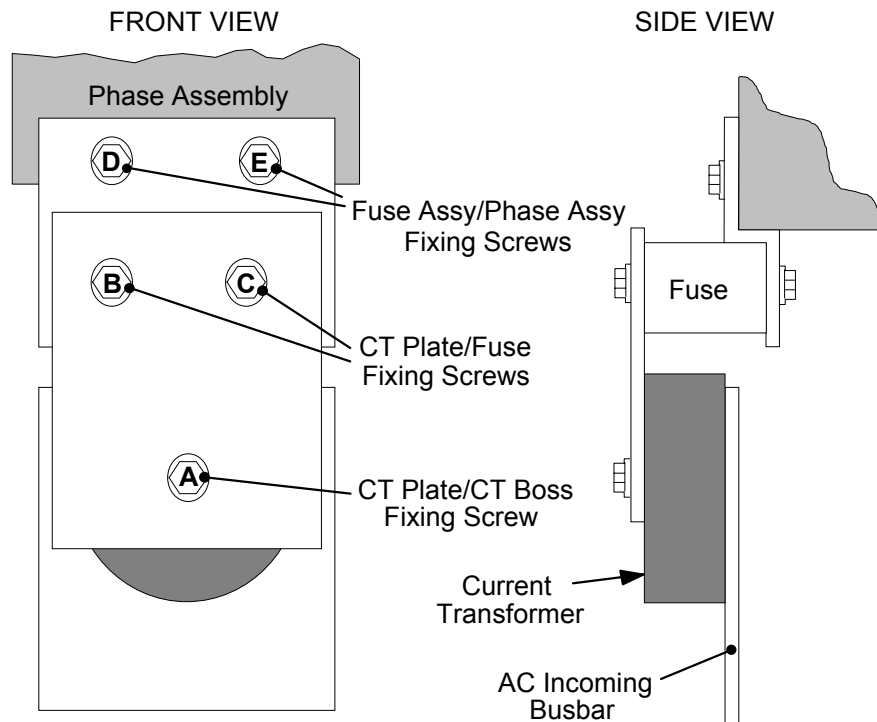


Figure 8-2 591+ Frame H Fuse Replacement Diagram

IMPORTANT: When re-assembling the unit, apply a 'zinc-loaded' jointing compound between the fuses and busbars, and between the busbars and phase assemblies (BICC BX1 - Eurotherm Part No. EA466241)

Bench-Top Replacement Procedure

IMPORTANT: Observe all tightening torque levels, refer to Chapter 11: "Technical Specifications" - Fixing Types and Torques.

Working on the relevant fuse assemblies:

1. Remove the M12 screw (A).
2. Release the two M12 screws (B, C) and remove the CT plate.
3. Remove the two M10 screws (D, E) securing the fuse assembly to the phase assembly.
4. On the bench, replace the relevant fuse on the fuse assembly.
5. Reverse the procedure for re-fitting.

8-6 Routine Maintenance and Repair

Phase Assembly Replacement (Frame H)

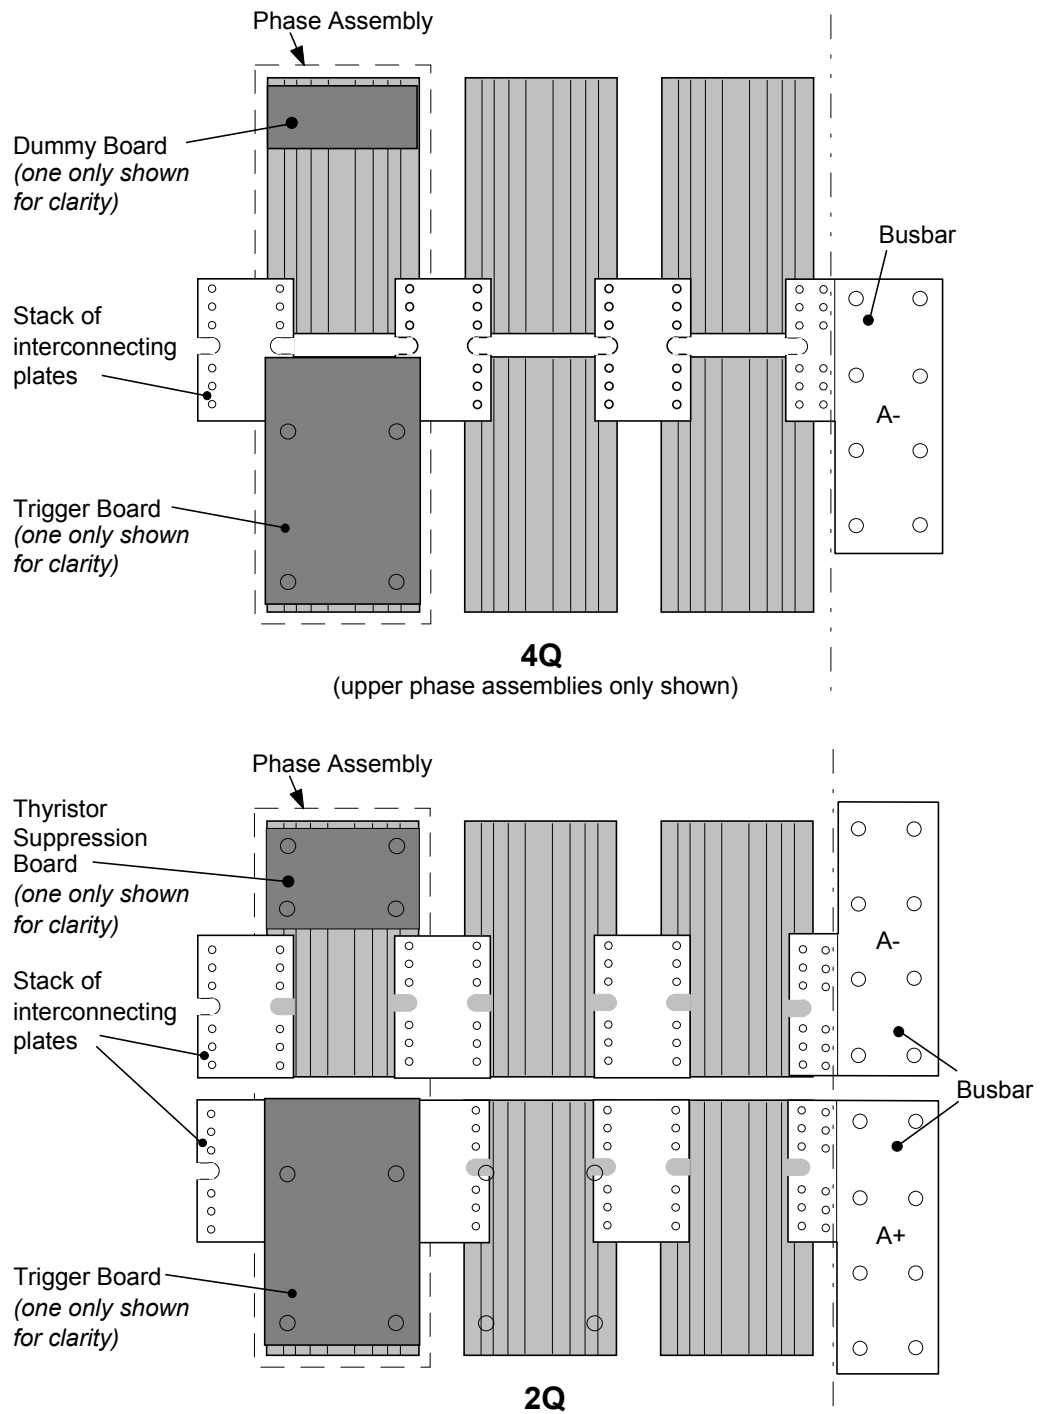


Figure 8-3 Front View of Phase Assemblies

IMPORTANT: When re-assembling the unit, apply a 'zinc-loaded' jointing compound between the fuses and busbars, between the busbars and phase assemblies and between the interconnection plates and the heatsink (BICC BX1 - Eurotherm Part No. EA466241)

Phase Assembly Removal Procedure

IMPORTANT: Observe all tightening torque levels, refer to Chapter 11: "Technical Specifications" - Fixing Types and Torques.

1. Referring to Figure 8-1 (590H) or Figure 8-2 (591H), remove the M12 screw (A). Undo the four screws (B, C, D, E) which allows the CT plate and fuse assembly to be removed.
2. Unplug the thyristor gate leads and the heatsink overtemperature leads from the relevant phase assembly trigger board. Remove the same leads from the adjacent phase assembly or assemblies (this is necessary to gain complete access to the interconnecting plates.) If you are removing the phase assembly from a 591H (2Q) product, also disconnect the thyristor suppression lead from the trigger boards.
3. Remove the trigger board by releasing the four M6 Sems nuts securing the PCB to the assembly. If you are working on a 590H (4Q), remove the dummy trigger board, or if working on a 591H (2Q) remove the thyristor suppression board. Remove the air duct from the top of the phase assembly to gain access to the DC interconnection plates. Do not remove the trigger board support spacers.
4. Remove the DC interconnection plates between the phase assembly and its adjacent assemblies, either output terminals or phase assemblies.
5. If changing an upper phase assembly on a 590H or 591H remove the top baffle. This is achieved by pushing out the two end flaps of the plenum chamber and unclipping the top baffle from the top cover baffle stops and the top of the phase assemblies. Remove the vertical baffles between phase assemblies.
6. If changing a lower phase assembly on a 590H, remove the lower air duct.
7. Remove the complete phase assembly by removing the four M6 Sems nuts at the top and bottom of the phase assembly.

Note: *On the 591H 2Q, the left-hand screw retains the phase coding connection which should be pushed to one side before lifting the phase assembly.*

Phase Assembly Fitting Procedure

1. Position the repaired or spare phase assembly on to the back panel spacer. (Remember to re-connect the coding lead to the bottom of the phase assembly when working on a 591H 2Q).


Check for correct orientation of the assembly. Fix in position with 4 x M6 Sems nuts and tighten to the correct torque level.

Refit the interconnecting plate stacks between the phase assemblies. A stack of three plates are used on a 1200 Amp unit, four on a 1700 Amp unit, five on a 2200 Amp unit and six on a 2700 Amp unit. On a 4Q unit the plates interconnect both the upper and lower thyristors and adjacent phase assemblies. On the 2Q unit the plates interconnect adjacent phase assemblies. Tighten to the correct torque level.

- Note:**
- a) *When fitting a spare phase assembly there may be some misalignment to the new phase where the interconnection plates do not fit easily. In this case, loosen the trigger support spacers which will allow adjustment of the support bars. Fit the interconnecting plates and re-tighten all units, including spacers.*
 - b) *When re-assembling the interconnection plates it is important that a good electrical contact is made between the plates and the aluminium heatsink. Apply a layer of 'zinc-loaded' jointing compound between the interconnection plates and the heatsink.*
3. Refit the air duct on the phase assembly ensuring that the duct fits inside the side ducting of the phase assembly.
 4. Refit the trigger board (thyristor suppression board or dummy board as appropriate) and secure with the M6 Sems nuts.
 5. Reconnect the gate leads, thermostat and suppression lead as necessary. The gate leads cannot be fitted incorrectly as they are polarised by the plugs.
 6. Re-fit the top baffle (either plenum cover or lower 4Q air duct) and vertical baffles.
 7. Replace the fuse.
 8. Re-close the swing-frame.
 9. Replace the trigger board connectors.

8-8 Routine Maintenance and Repair

Replacing the Fan (Frames 4 & 5)

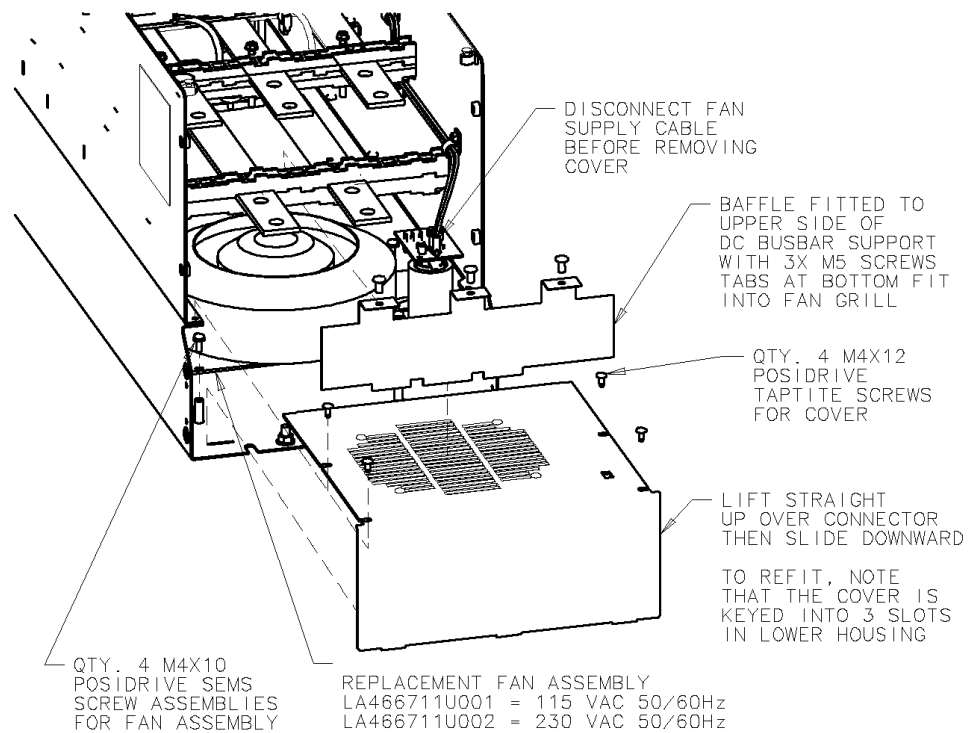

WARNING!

Ensure that all wiring is electrically isolated and cannot be made "live" unintentionally by other personnel.

Remove the terminal cover. Unscrew the three screws securing the baffle and remove. Disconnect the fan supply cable. Remove the two M8 earth/ground screws on the back of the drive (Frame 5). Remove the fan cover. Remove the fan assembly and screws as detailed above.

Reverse the procedure for refitting the fan assembly – refer to the refitting note in the diagram above. The replacement fan assembly includes the fan, cover and capacitor requiring just a simple connection of the supply cable.

Heatsink Cooling Fan Connections


These fans are connected on the power board to the cooling fan supplies, CONN 2 or 3 as described below:

- 380, 500, 725, 830A models have a single fan matched to the auxiliary supply and connected to CONN 2.
- 1580A models have two fans matched to the auxiliary supply connected to CONN 2 & 3.

CONTROL LOOPS

Principle of Operation

Note: Selection between Current Control and Speed Control (default) is made by the I DMD ISOLATE (current demand isolate) parameter using Digital I/P3 (Terminal C8). If ENABLED the drive operates as a current controller, and if DISABLED (the default) it operates as a speed controller.

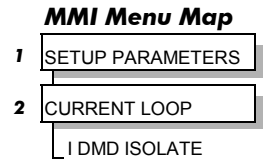

Current Loop

The current loop accepts a demand from either the speed loop or directly from the plant, and forms an error signal which is the difference between demand and average value of feedback. The error signal is fed into a Proportional + Integral compensator which produces the output of the current loop, i.e. the firing angle signal.

In the drive, the error signal is created in two different forms:

1. The *average* error is computed as the difference between demand and average value of feedback and fed into the Integral part of the P + I algorithm.
2. The *instantaneous* error is computed as the difference between demand and instantaneous value of feedback and is fed into the Proportional part of the P + I algorithm. This gives higher transient performance since it does not contain any time lag, unlike the average which has a built-in lag of 1/6 of mains cycle. However, the average is the true measurement of torque which is the objective of the current control and this is not affected by the small time lag in achieving zero steady-state error.

The firing angle signal is translated into a certain time delay from the mains zero cross point (obtained via a Phase-Lock-Loop) and this results in a firing command being issued to the thyristor stack every 1/6 of a mains cycle in steady-state.

Some special features of the current controller are discussed separately below.

Adaptive Current Control

The gain of a thyristor 6-pulse drive (voltage-time area over firing angle) drops dramatically at discontinuous values of armature current. Therefore a gain boost is required in the current controller to compensate for that.

In the drive, this is handled by an adaptive algorithm which allows the current to follow the demand in one step (firing) within the discontinuous region of operation.

Back EMF (BEMF) Estimate

With the motor at standstill, the firing angle for zero current is 120 degrees. When the motor is rotating at different speeds the firing angle for zero current follows a cosine locus.

It is of paramount importance to track this locus as close as possible throughout the speed range if the current loop bandwidth is to be maintained at its highest possible level during current reversals from master to slave bridge and visa-versa.

There are two reasons for the loss of bandwidth at current reversals.

Firstly, the loss of drive gain needs to be compensated in an accurate way which is the objective of the adaptive algorithm.

Secondly, the above algorithm also relies on the right start-up value of firing angle in the incoming bridge in order to minimise both the "dead-time" (time interval of zero current referred to below) as well as the rise time to the required current demand.

In order to get the right start-up value of firing angle the knowledge of the operating BEMF is necessary. In the drive, this is achieved by a combination of a hardware peak current detector and appropriate software algorithm.

9-2 Control Loops

Bridge Changeover Delay

The bridge changeover "dead-time", i.e. time interval of zero current, is programmable from 1 to 1500 (via Reserved Menu) with a default value of 1.

For values from 1 to 6:

The delay can be set at multiples of 1/6 mains period, i.e. max. $6 \times 3.33 = 20\text{ms}$ at 50Hz. This is relevant for use with large power drives where it is advisable to allow more time for snubber currents to subside before reversal is enabled. It is also relevant for motors with very large armature inductance where zero current detection is more sensitive and therefore a "factor of safety" in the bridge changeover delay is advisable.

For values from 7 to 1500:

The delay corresponds to $7 \times 1.33\mu\text{s}$ up to $1500 \times 1.33\mu\text{s} = 2\text{ms}$ maximum.

Manual Tuning

Note: *This procedure is rarely used or required, if possible use Autotune.*

You may need to perform a manual tuning as Autotune does have two limitations:

1. It requires the field to be switched off and therefore the shaft will need clamping when autotuning a permanent-magnet motor or very rarely with a wound-field motor of relatively high permanent magnetism.
2. Part 1 of Autotune determines the discontinuous to continuous boundary level, i.e. the average value at which the armature current becomes "just" continuous. This is achieved by automatically disabling the field and advancing the firing angle at small steps until the slope of the current "envelope" changes substantially indicating continuous region of operation.

Part 2 of Autotune applies a step change in the current demand within the continuous region as determined by Part 1. When the current feedback approaches the final settling value within 1 to 2 steps, the autotune function terminates and returns the "FIELD ENABLE" to its previous state. The P & I gains and the value of discontinuous boundary current should then be saved.

If the value of boundary current (Part 1) is very high (larger than 150% or so), then the Autotune Part 2 step change will be in the region above 200% which might result in overcurrent trip. In this case it is advisable to set the I gain to a large enough value (typically 10) to give fast response throughout the discontinuous region. A low value for the P gain (typically 1, not important since there is no effective armature time constant in the discontinuous region to compensate for). And finally eliminate the adaptive mode by setting "Discontinuous" to zero. At the same time though, one must disable the Missing Pulse alarm; this is activated when the load current is above the "Discontinuous" level and in this case it would give erroneous trips if left enabled. In order to disable this alarm the special "super-password" reserved for Eurotherm Drives personnel needs to be entered. Next in the "Reserved" menu, which will then appear as a submenu of "SYSTEM", a parameter called SYS HEALTH INHIB should be set to the hexadecimal value 0x0002.


The above suggestion assumes that the current limit will prevent the motor from operating in the continuous region, i.e. above 150% in the example above. If this is not the case, as for example when the current limit is set at 200%, then a manual tuning will be necessary.

Set the DISCONTINUOUS parameter to the correct value by disabling or disconnecting the field, set the current limit to zero and start the drive. Gradually increase the current limit observing the current feedback waveform (see Diagnostics below) on an oscilloscope beam. When the pulses "just come together", with no zero interval between them, read the value of current limit (or indeed current demand) and set the DISCONTINUOUS parameter to this value. If this value is very high (above the current limit), then it should be set to zero and follow the suggestion in 2 above. In this case the drive will not perform any adaption in the discontinuous region, so some loss in performance may be noticed in the current loop response.


Subsequently either

- a squarewave signal should be applied to the current demand input (Terminal A3) with Current Demand Isolate (terminal C8) on
- or "toggle" between two values of current limit into terminal A6 and operate in normal speed loop mode.


Ideally this input signal should be offset above the Discontinuous level, such that the drive is operating in the continuous current region. Then you could increase the value of I gain to give a fast rise with no more than 10% overshoot and subsequently increase the P gain towards critically damped response, i.e. practically no overshoot.

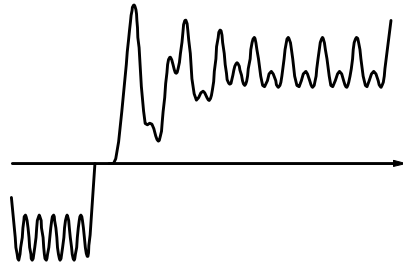

Current Loop controls incorrectly set.
Integral Time Constant too short
increase Current Loop Integral Time Constant

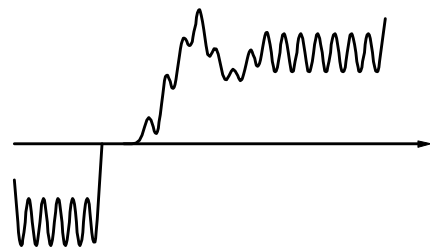

Current Loop controls incorrectly set.
Proportional Gain too low - increase
Current Loop Proportional Gain

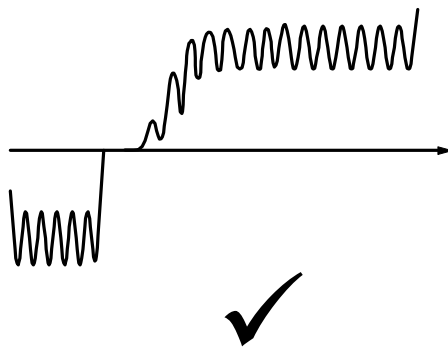

Current Loop response
correctly adjusted.

100% current. It will also give the operating bridge, i.e. it will be negative for the Master bridge (positive current demand) and positive for the Slave bridge (negative current demand).

Tuning Hints

If the I gain is too high, the response will be underdamped (overshoot will be excessive with long oscillatory settling). If the I gain is too low, the response will be overdamped (long exponential rise).

With the I gain optimally set, if the P gain is too low the response will be overdamped. If P is too high the response will revert to underdamped with the tendency to go totally unstable.

Diagnostics

The diagnostic point for "real" armature current is the first (left-hand side) test point below the calibration panel. This will give 1.1V average for 100% current. It will also give the operating bridge, i.e. it will be negative for the Master bridge (positive current demand) and positive for the Slave bridge (negative current demand).

Speed Loop

The speed loop accepts a demand from either an outside loop (i.e. position loop) or directly from the plant and forms the error signal which is the difference between demand and feedback. The error signal is fed into a Proportional + Integral compensator which produces the output of the speed loop, i.e. the current demand signal.

The integral gain is translated into a Time Constant (seconds) in the MMI which defines more clearly the function of the compensator against a certain load time constant.

Speed Loop Synchronised with Current Loop

The proportional part of the P+I algorithm is executed immediately before each run of the current loop, thus ensuring minimum time lag and therefore maximum bandwidth.

9-4 Control Loops

Combined Analog Tacho / Encoder Feedback

By using the analog tacho f/b on the Proportional part of the P + I algorithm and the encoder f/b on the Integral part (using similar principle as in the current loop), the drive combines maximum transient response with the increased steady-state accuracy of the digital feedback. Please refer to Eurotherm Drives Engineering Department for assistance in the use of this feature.

Current Demand Rate Limit (di/dt)

Access to the di/dt limit is currently reserved for Eurotherm Drives personnel only in the Reserved Menu.

This is a limit imposed on the rate of change of the current demand. It is to be used for motors with commutation limitations, mechanical systems that cannot absorb rapid torque transients and also as a means of limiting current overshoot for large current swings (e.g. 0 \rightarrow 200%). The default value is set at 35% (i.e. maximum allowable change is 35% of FLC in 1/6 mains cycle) which has no practical effect on the current response between 0 and 100%.

Field Control

Set-up Notes

The setting of the P + I gains for the current controller is done manually in much the same way as described in Chapter 4: "Current Loop - Manual Tuning". One convenient way is to switch several times from "quench" to "standby" mode and observe the current response 0 \rightarrow 50% for rise time and overshoot.

The setting of the field weakening gains is achieved by observing the armature voltage feedback for overshoot and settling time. The EMF GAIN parameter defaults to 0.30 (real gain of 30) and normally lies in the region 0.20 to 0.70 (larger settings normally lead to instability). The EMF LEAD parameter should be set at around the time constant for the field current loop. It defaults to 2.00 (200ms). Finally, the EMF LAG parameter defaults to 40.00 (4000ms) and it should generally lie in the region of 10 to 50 times the "emf lead".

The tuning of the field weakening loop is also very dependent on the acceleration rate through base speed and visa-versa. If armature voltage overshoot is a problem for rapid acceleration rates, then the use of the "feedback lead/lag" compensator is recommended to limit the overshoot as discussed above. If not, then the default values for the above bemf fbk gains are recommended (i.e. disabled) which will probably allow further increase in the forward path transfer function gains ("emf gain" and "emf lead") for faster field response.

In summary, the increased attenuation at the higher frequencies will allow an increase in the gain whilst maintaining the desired phase margin. Bearing in mind that the negative angle of the compensator lowers the angle curve, in order to maintain the desired phase margin (45 to 60 degrees) a reduction in the phase-margin frequency is required. This is the frequency at which the log magnitude curve crosses the 0db line. Since the phase-margin frequency is indicative of the speed of response of the system, its reduction should be kept to a minimum. This is achievable by trying to keep the value of the corner-frequency $1 / T1$ as low as possible by setting $T1$ at values greater than 100ms or so. The upper limit for $T1$ will be dictated by the settling time requirement.

Current Control

The field current loop can accept a demand directly from the plant and/or an outside field weakening loop and forms the error signal which is the difference between demand and feedback. The error signal is fed into a P + I compensator which produces the output of the field loop, i.e. the field firing angle signal.

The firing angle signal is translated into a certain time delay from the mains zero cross point (obtained via the same Phase-Lock-Loop as for the armature) and this results into a firing command being issued to the field bridge every 1/2 of a mains cycle in steady-state.

Voltage Control

This offers the facility of an open-loop voltage control for motors which do not provide in the nameplate the field current rating. The field voltage is controlled by the specified RATIO OUT/IN which defaults to 90%. This is the maximum dc Volts that can be obtained for a given

ac RMS input in a single-phase rectifier, i.e. 370V dc for 415V ac supply. The specified ratio determines directly the firing angle at which the controller operates and therefore the thermal effects on the field resistance as well as mains voltage variations are not compensated for. It is also worth noting that in this mode the field overcurrent alarm is not active (since there is no current scaling) and therefore this mode is not recommended for use with supplies much greater than the field voltage rating.

Field Weakening

The field weakening loop accepts a demand for MAX VOLTS (default 100%) and forms the error signal which is the difference between demand and arm. volts feedback. The error signal is fed into a Lead/Lag compensator which produces the output of the field weakening loop, i.e. the field weakening demand. This gets subtracted from the field setpoint (default 100%) to produce the field demand into the field current loop. A MIN FLD CURRENT parameter (default 10%) limits the minimum level in the field weakening region.

The Lead/Lag compensator has a dc gain ("emf gain" = Kp), a lead time constant ("emf lead" = T1) and a lag time constant ("emf lag" = T2).

Note: *Field weakening is not possible when running with Armature Volts feedback. Although field weakening can be "enabled" in this instance, a software interlock clamps the field demand at 100% and will not allow the field weakening to reduce it.*

Lead/Lag

The slight disadvantage of Lead/Lag { transfer function = $K_p * (1+sT_1) / (1+sT_2)$ } versus P+I { transfer function = $K_p * (1+sT) / sT$ } is that the DC gain is not "infinity" and therefore there is a "finite" steady-state error. This is kept sufficiently small for values of "emf gain" > 0.20 (i.e. real 20).

The advantage of the Lead/Lag is that it allows greater attenuation at higher frequencies. The high frequency gain is $K_p T_1 / T_2$ and therefore by keeping the ratio T_2 / T_1 high (generally at values above 10) the log magnitude is reduced by $20\log(T_2/T_1)$ for frequencies above $1 / T_1$.

An extra feedback lead/lag compensator has been added into the arm. volts f/b to minimise the overshoot in volts. This is particularly useful when accelerating fast through base speed and therefore increasing the motor bmf at a faster rate than the field current can possibly weaken, due to the normally large field time constant. The ratio of "bmf fbk lead" / "bmf fbk lag" should always be greater than 1 to give a "lead" function to allow the field to start weakening early enough. However, it is not recommended to raise the ratio much higher than 2 to 3 times, otherwise instability will start creeping in. The absolute setting of the above parameters in milliseconds depends on the overall field time constant. The default value is set to 1 (100ms / 100ms) which means that the function is disabled.

Standby Field

When the armature current gets quenched, a timer starts timing-out and after a certain delay ("fld quench delay") it will either quench the field totally ("fld quench mode" = "quench") or will reduce it to 50% of the current or voltage setpoint ("fld quench mode" = "standby"). This applies to both current and voltage modes.

9-6 Control Loops

PARAMETER TABLES

The headings for the Tag No. table are described below.

Tag	A numeric identification of the parameter. It is used to identify the source and destinations of internal links.
Name	The parameter name as it appears on the MMI.
MMI Menu	The menu page under which the parameter is stored on the MMI.
CE Block	The Function Block under which the parameter is stored in the ConfigEd Lite programming software.
Range	<p>This varies with parameter type:</p> <p>INT The upper and lower limits of the parameter, indicating the parameter's true, internally-held, number of decimal.</p> <p>Note: Decimal Places - some internally held parameters with two decimal places are only displayed with one decimal place. These parameters are indicated in the Parameter Description tables. The Range parameter highlights these with "(h)".</p> <p>BOOL 0 = FALSE, 1 = TRUE</p> <p>WORD 0x0000 to 0xFFFF (hexadecimal)</p>
Mn	Serial Communications Mnemonic: Refer to Chapter 14: "Serial Communications"
Notes	<p>Output parameters are not saved in non-vol memory unless noted otherwise.</p> <p>Input parameters are saved in non-vol memory unless noted otherwise.</p> <p>Note 1. This input parameter is not saved in non-volatile memory.</p> <p>Note 2. This input parameter can only be written to when the drive is stopped.</p> <p>Note 3. This input parameter can only be written to when the drive is in configuration mode.</p> <p>Note 4. This parameter is reserved</p>

Parameter Types:

Parameters that look like 0x0000 are WORDS

Parameters that have text are BOOLs if they have a range of 0,1

Parameters that have text are WORDS if their range is 0 to greater than 1

All other parameters are INT (integers)

If a parameter can only be written to in Config mode, this implies that the drive is stopped.

10-2 Parameter Specification Table

Specification Table: Tag Number Order

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
1	NONVOL VERSION			0x0000 to 0xFFFF	a1	
2	RAMP ACCEL TIME	SETUP PARAMETERS::RAMPS	Ramps	0.1 to 600.0 SECS	a2	
3	RAMP DECEL TIME	SETUP PARAMETERS::RAMPS	Ramps	0.1 to 600.0 SECS	a3	
4	CONSTANT ACCEL	SETUP PARAMETERS::RAMPS	Ramps	0:DISABLED 1:ENABLED	a4	4
5	RAMP INPUT	SETUP PARAMETERS::RAMPS	Ramps	-105.00 to 105.00 %	a5	
6	RATIO 1	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-3.0000 to 3.0000	a6	
7	RATIO 2 (A3)	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	-3.0000 to 3.0000	a7	
8	SIGN 1	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	0:NEGATIVE 1:POSITIVE	a8	
9	SIGN 2 (A3)	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	Same as Tag 8	a9	
10	ZERO SPD. OFFSET	SETUP PARAMETERS::CALIBRATION	Calibration	-5.00 to 5.00 %	aa	
11	STANDSTILL LOGIC	SETUP PARAMETERS::STANDSTILL	Standstill	Same as Tag 4	ab	
12	ZERO THRESHOLD	SETUP PARAMETERS::STANDSTILL	Standstill	0.00 to 100.00 %	ac	
13	SPD.INT.TIME	SETUP PARAMETERS::SPEED LOOP	Speed Loop	0.001 to 30.000 SECS	ad	
14	SPD.PROP.GAIN	SETUP PARAMETERS::SPEED LOOP	Speed Loop	0.00 to 200.00	ae	
15	CUR.LIMIT/SCALER	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0.00 to 200.00 %	af	
16	PROP. GAIN	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0.00 to 200.00	ag	
17	INT. GAIN	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0.00 to 200.00	ah	
18	AUTOTUNE	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0:OFF 1:ON	ai	1
19	FIELD FAIL	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	0:ENABLED 1:INHIBITED	aj	
20	ARMATURE V CAL.	SETUP PARAMETERS::CALIBRATION	Calibration	0.9800 to 1.1000	ak	
21	IR COMPENSATION	SETUP PARAMETERS::CALIBRATION	Calibration	0.00 to 100.00 %	al	
22	ENCODER RPM	SETUP PARAMETERS::CALIBRATION	Calibration	0 to 6000 RPM	am	
23	ANALOG TACH CAL	SETUP PARAMETERS::CALIBRATION	Calibration	0.9800 to 1.1000	an	
24	ENCODER LINES	SETUP PARAMETERS::CALIBRATION	Calibration	10 to 5000	ao	2
25	ARMATURE I (A9)	SETUP PARAMETERS::CALIBRATION	Calibration	0:UNIPOLAR 1:BIPOLAR	ap	
26	PROG STOP TIME	SETUP PARAMETERS::STOP RATES	Stop Rates	0.1 to 600.0 SECS	aq	
27	STOP TIME	SETUP PARAMETERS::STOP RATES	Stop Rates	0.1 to 600.0 SECS	ar	
28	STALL TRIP	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	Same as Tag 19	as	
29	STOP ZERO SPEED	SETUP PARAMETERS::STOP RATES	Stop Rates	0.00 to 100.00 %	at	
30	ADDITIONAL DEM	SETUP PARAMETERS::CURRENT LOOP	Current Loop	-200.00 to 200.00 %	au	
31	SPD BRK2 (HIGH)	SETUP PARAMETERS::CURRENT PROFILE	Current Profile	0.00 to 100.00 %	av	2
32	SPD BRK1 (LOW)	SETUP PARAMETERS::CURRENT PROFILE	Current Profile	0.00 to 100.00 %	aw	2
33	IMAX BRK2(SPD2)	SETUP PARAMETERS::CURRENT PROFILE	Current Profile	0.00 to 200.00 %	ax	2
34	FIELD FBKSTOP	RESERVED	Reserved	0 to 1000	ay	4
35	FIELD FFRSTOP	RESERVED	Reserved	0 to 10000	az	4
36	IFFB DELAY	RESERVED	Reserved	0 to 255	b0	4
37	FULL MENUS	MENUS	Menus	Same as Tag 4	b1	
39	CONFIGURE ENABLE	SETUP PARAMETERS::CALIBRATION		Same as Tag 4	b3	2
40	SYSTEM IO	RESERVED	Unallocated		b4	Output,4

Parameter Specification Table 10-3

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
41	SETPOINT 4	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	-105.00 to 105.00 %	b5	
42	AT CURRENT LIMIT	DIAGNOSTICS	Current Loop		b6	Output
43	MODULUS	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 1 (B5)	Digout 1 (B5)	0:FALSE 1:TRUE	b7	
44	MODULUS	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 2 (B6)	Digout 2 (B6)	Same as Tag 43	b8	
45	MODULUS	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 3 (B7)	Digout 3 (B7)	Same as Tag 43	b9	
46	/ILOOP SUSPEND	RESERVED	Current Loop		ba	Output,4
47	SPEED FBK SELECT	SETUP PARAMETERS::SPEED LOOP	Speed Loop	0:ARM VOLTS FBK 1:ANALOG TACH 2:ENCODER 3:ENCODER/ANALOG	bb	2
48	NEG. I CLAMP	SETUP PARAMETERS::CURRENT LOOP	Current Loop	-200.00 to 200.00 %	bc	
49	ENCODER SIGN	SETUP PARAMETERS::SPEED LOOP	Speed Loop	Same as Tag 8	bd	2
50	ANIN 1 (A2)	DIAGNOSTICS	Analog Input 1		be	Output
51	ANIN 2 (A3)	DIAGNOSTICS	Analog Input 2		bf	Output
52	ANIN 3 (A4)	DIAGNOSTICS	Analog Input 3		bg	Output
53	ANIN 4 (A5)	DIAGNOSTICS	Analog Input 4		bh	Output
54	ANIN 5 (A6)	DIAGNOSTICS	Analog Input 5		bi	Output
55	ANOUT 1 (A7)	DIAGNOSTICS	Analog Output 1		bj	Output
56	ANOUT 2 (A8)	DIAGNOSTICS	Analog Output 2		bk	Output
57	TERMINAL VOLTS	DIAGNOSTICS	Calibration		bl	Output
58	UNFIL.TACH INPUT	DIAGNOSTICS	Calibration		bm	Output
59	UNFIL.ENCODER	DIAGNOSTICS	Calibration		bn	Output
60	BACK EMF	DIAGNOSTICS	Calibration		bo	Output
61	ACTUAL NEG I LIM	DIAGNOSTICS	Diagnostics		bp	Output
62	UNFIL.SPD.FBK	DIAGNOSTICS	Speed Loop		bq	Output
63	SPEED SETPOINT	DIAGNOSTICS	Speed Loop		br	Output
64	UNFIL.SPD.ERROR	DIAGNOSTICS	Speed Loop		bs	Output
65	IaFbk UNFILTERED	DIAGNOSTICS	Current Loop		bt	Output
66	IaDmd UNFILTERED	DIAGNOSTICS	Current Loop		bu	Output
67	ACTUAL POS I LIM	DIAGNOSTICS	Diagnostics		bv	Output
68	START (C3)	DIAGNOSTICS	Aux I/O		bw	Output
69	DIGITAL INPUT C4	DIAGNOSTICS	Aux I/O		bx	Output
70	DIGITAL INPUT C5	DIAGNOSTICS	Aux I/O		by	Output
71	DIGIN 1 (C6)	DIAGNOSTICS	Digital Input 1		bz	Output
72	DIGIN 2 (C7)	DIAGNOSTICS	Digital Input 2		c0	Output
73	DIGIN 3 (C8)	DIAGNOSTICS	Digital Input 3		c1	Output
74	DIGOUT 1 (B5)	DIAGNOSTICS	Digout 1 (B5)		c2	Output
75	DIGOUT 2 (B6)	DIAGNOSTICS	Digout 2 (B6)		c3	Output
76	DIGOUT 3 (B7)	DIAGNOSTICS	Digout 3 (B7)		c4	Output
77	AT ZERO SPEED	DIAGNOSTICS	Standstill		c5	Output
78	AT ZERO SETPOINT	DIAGNOSTICS	Standstill		c6	Output
79	AT STANDSTILL	DIAGNOSTICS	Standstill		c7	Output
80	PROGRAM STOP	DIAGNOSTICS	Stop Rates		c8	Output
81	SPEED FBK ALARM	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	Same as Tag 19	c9	
82	DRIVE START	DIAGNOSTICS	Diagnostics		ca	Output
83	CONTACTOR CLOSED	DIAGNOSTICS	Unallocated		cb	Output
84	DRIVE ENABLE	DIAGNOSTICS	Diagnostics		cc	Output
85	RAMP OUTPUT	DIAGNOSTICS	Ramps		cd	Output

10-4 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
86	SPT SUM OUTPUT	DIAGNOSTICS	Setpoint Sum 1		ce	Output
87	POS. I CLAMP	DIAGNOSTICS	Diagnostics		cf	Output
88	NEG. I CLAMP	DIAGNOSTICS	Diagnostics		cg	Output
89	SPEED DEMAND	DIAGNOSTICS	Stop Rates		ch	Output
90	BIPOLAR CLAMPS	SETUP PARAMETERS::CURRENT LOOP	Current Loop	Same as Tag 4	ci	
91	PROG STOP I LIM	SETUP PARAMETERS::STOP RATES	Stop Rates	0.00 to 200.00 %	cj	
92	ENCODER ALARM	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	Same as Tag 19	ck	
93	IMAX BRK1 (SPD1)	SETUP PARAMETERS::CURRENT PROFILE	Current Profile	0.00 to 200.00 %	cl	2
94	AUX DIGOUT 1	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	cm	
95	AUX DIGOUT 2	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	cn	
96	AUX DIGOUT 3	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	co	
97	SOURCE TAG	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 1 (B5)	Digout 1 (B5)	0 to 639	cp	2,3
98	SOURCE TAG	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 2 (B6)	Digout 2 (B6)	0 to 639	cq	2,3
99	SOURCE TAG	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 3 (B7)	Digout 3 (B7)	0 to 639	cr	2,3
100	INPUT 1	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-200.00 to 200.00 %	cs	
101	MIN BS DEAD TIME	RESERVED	Reserved	1 to 6000	ct	4
102	DESTINATION TAG	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 1 (C6)	Digital Input 1	0 to 639	cu	2,3
103	VALUE FOR TRUE	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 1 (C6)	Digital Input 1	-300.00 to 300.00 %	cv	
104	VALUE FOR FALSE	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 1 (C6)	Digital Input 1	-300.00 to 300.00 %	cw	
105	DESTINATION TAG	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 2 (C7)	Digital Input 2	0 to 639	cx	2,3
106	VALUE FOR TRUE	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 2 (C7)	Digital Input 2	-300.00 to 300.00 %	cy	
107	VALUE FOR FALSE	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 2 (C7)	Digital Input 2	-300.00 to 300.00 %	cz	
108	DESTINATION TAG	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 3 (C8)	Digital Input 3	0 to 639	d0	2,3
109	VALUE FOR TRUE	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 3 (C8)	Digital Input 3	-300.00 to 300.00 %	d1	
110	VALUE FOR FALSE	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGIN 3 (C8)	Digital Input 3	-300.00 to 300.00 %	d2	
111	5703 RCV ERROR	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	Same as Tag 19	d3	
112	STALL TRIP	ALARM STATUS	Alarms		d4	Output
113	RAMPING	DIAGNOSTICS	Ramps		d5	Output
114	SEQ STATE	RESERVED	Reserved		d6	Output,4
115	HEALTH WORD	ALARM STATUS	Alarms		d7	Output
116	HEALTH STORE	ALARM STATUS	Alarms		d8	Output
117	HEALTH INHIBIT	RESERVED	Unallocated	0x0000 to 0xFFFF	d9	4
118	RAMP HOLD	SETUP PARAMETERS::RAMPS	Ramps	Same as Tag 18	da	
119	I DMD. ISOLATE	SETUP PARAMETERS::CURRENT LOOP	Current Loop	Same as Tag 4	db	
120	ENTER PASSWORD	PASSWORD		0x0000 to 0xFFFF	dc	1
121	CHANGE PASSWORD	PASSWORD		0x0000 to 0xFFFF	dd	
122	HEALTH LED	DIAGNOSTICS	Alarms		de	Output
123	PEEK DATA	SYSTEM::PEEK		0x0000 to 0xFFFF	df	
124	PEEK SCALE	SYSTEM::PEEK		-300.00 to 300.00	dg	
125	READY	DIAGNOSTICS	Alarms		dh	Output
126	MIN SPEED	SETUP PARAMETERS::RAMPS	Ramps	0.00 to 100.00 %	di	

Parameter Specification Table 10-5

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
128	ANOUT 1	SETUP PARAMETERS::AUX I/O	Aux I/O	-100.00 to 100.00 %	dk	
129	ANOUT 2	SETUP PARAMETERS::AUX I/O	Aux I/O	-100.00 to 100.00 %	dl	
130	MODE	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP	System Port P3	0:DISABLED 1:5703 MASTER 2:5703 SLAVE 3:EIASCII	dm	
131	DEADBAND WIDTH	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	0.00 to 100.00 %	dn	
132	SETPT. RATIO	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::5703 SUPPORT	5703	-3.0000 to 3.0000	do	
133	SETPT. SIGN	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::5703 SUPPORT	5703	Same as Tag 8	dp	
134	SOURCE TAG	SYSTEM::CONFIGURE I/O::CONFIGURE 5703	5703	0 to 639	dq	2,3
135	DESTINATION TAG	SYSTEM::CONFIGURE I/O::CONFIGURE 5703	Scaled 5703 Input	0 to 639	dr	2,3
136	FEED FORWARD	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0.10 to 50.00	ds	4
137	DISCONTINUOUS	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0.00 to 200.00 %	dt	
154	II	RESERVED	Reserved		ea	Output,4
155	VERSION NUMBER	SERIAL LINKS::SYSTEM PORT (P3)	Unallocated		eb	Output
158	OP STATION ERROR	RESERVED	Op Station	0x0000 to 0xFFFF	ee	1,4
161	AUX START	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	eh	
162	MIN MMI CYCLE TM	RESERVED	Reserved	A to 1388	ei	4
163	ILOOP PI MODE	RESERVED	Reserved	0 to 2	ej	2,4
164	TOGGLE PERIOD	RESERVED	Reserved	0x0000 to 0xFFFF	ek	4
165	TOGGLE REF 1	RESERVED	Reserved	-300.00 to 300.00 %	el	4
166	SEL. INT/CUR/SPD	RESERVED	Reserved	0 to 4	em	2,4
167	TOGGLE REF 2	RESERVED	Reserved	-300.00 to 300.00 %	en	4
168	AUX ENABLE	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	eo	
169	FIELD ENABLED	DIAGNOSTICS	Field Control		ep	Output
170	FIELD ENABLE	SETUP PARAMETERS::FIELD CONTROL	Field Control	Same as Tag 4	eq	2
171	SETPOINT	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS	Field Control	0.00 to 100.00 %	er	
172	INT. GAIN	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS	Field Control	0.00 to 100.00	es	
173	PROP. GAIN	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS	Field Control	0.00 to 100.00	et	
174	FLD. WEAK ENABLE	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	Same as Tag 4	eu	2
175	EMF LEAD	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	0.10 to 50.00	ev	
176	EMF LAG	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	0.00 to 200.00	ew	
177	EMF GAIN	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	0.00 to 100.00	ex	
178	MAX VOLTS	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	0.00 to 100.00 %	ey	
179	MIN FLD.CURRENT	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	0.00 to 100.00 %	ez	2
180	SPDFBK ALM LEVEL	SETUP PARAMETERS::CALIBRATION	Calibration	0.00 to 100.00 %	f0	
181	UNFIL.FIELD FBK	DIAGNOSTICS	Calibration		f1	Output
182	FIELD I CAL.	SETUP PARAMETERS::CALIBRATION	Calibration	0.9800 to 1.1000	f2	

10-6 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
183	FIELD DEMAND	DIAGNOSTICS	Field Control		f3	Output
184	FLD.FIRING ANGLE	DIAGNOSTICS	Field Control		f4	Output
185	FLD.QUENCH DELAY	SETUP PARAMETERS::FIELD CONTROL	Field Control	0.0 to 600.0 SECS	f5	
186	FLD. QUENCH MODE	SETUP PARAMETERS::FIELD CONTROL	Field Control	0:QUENCH 1:STANDBY	f6	
187	RAW INPUT	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::5703 SUPPORT	5703	-300.00 to 300.00 %	f7	
188	OVER SPEED LEVEL	SETUP PARAMETERS::CALIBRATION	Calibration	0.00 to 200.00 %	f8	4
189	SCALED INPUT	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::5703 SUPPORT	5703		f9	Output,2
190	PEAK HW SLOPE	RESERVED	Reserved	0 to -1	fa	2,4
191	BEMF FBK LEAD	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	10 to 5000	fb	
192	BEMF FBK LAG	SETUP PARAMETERS::FIELD CONTROL::FLD.CURRENT VARS::FLD.WEAK VARS	Field Control	10 to 5000	fc	
193	TICK LENGTH	RESERVED	Reserved		fd	Output,4
194	DISC ADAPT POT	RESERVED	Reserved	0 to 10000	fe	4
195	THRESHOLD (>)	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 1 (B5)	Digout 1 (B5)	-300.00 to 300.00 %	ff	2
196	THRESHOLD (>)	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 2 (B6)	Digout 2 (B6)	-300.00 to 300.00 %	fg	2
197	THRESHOLD (>)	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 3 (B7)	Digout 3 (B7)	-300.00 to 300.00 %	fh	2
198	P3 BAUD RATE	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP		0:300 1:600 2:1200 3:2400 4:4800 5:9600 6:19200	fi	2
199	DELAY	SETUP PARAMETERS::INVERSE TIME	Inverse Time	0.1 to 600.0 SECS	fj	2,4
200	RATE	SETUP PARAMETERS::INVERSE TIME	Inverse Time	0.1 to 600.0 SECS	fk	2,4
201	REGEN MODE	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0:2Q (NON-REGEN) 1:4Q (REGEN)	fl	2
202	INT. DEFEAT	SETUP PARAMETERS::SPEED LOOP	Speed Loop	Same as Tag 18	fm	
203	INVERSE TIME O/P	DIAGNOSTICS	Inverse Time		fn	Output,2
204	AIMING POINT	SETUP PARAMETERS::INVERSE TIME	Inverse Time	0.00 to 103.00 %	fo	2,4
205	dl/dt	RESERVED	Reserved	0.00 to 200.00 %	fp	4
206	ENCODER	DIAGNOSTICS	Diagnostics		fq	Output
207	SPEED FEEDBACK	DIAGNOSTICS	Diagnostics		fr	Output
208	RATIO 0	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-3.0000 to 3.0000	fs	
209	FLD.CTRL MODE	SETUP PARAMETERS::FIELD CONTROL	Field Control	0:VOLTAGE CONTROL 1:CURRENT CONTROL	ft	2
210	FLD.VOLTS RATIO	SETUP PARAMETERS::FIELD CONTROL::FLD.VOLTAGE VARS	Field Control	0.00 to 100.00 %	fu	
211	SYS HEALTH INHIB	RESERVED	Reserved	0x0000 to 0xFFFF	fv	2,4
212	OPERATING MODE	DIAGNOSTICS	Jog/Slack		fw	Output
213	ZERO CUR OFFSET	RESERVED	Reserved	0x0000 to 0xFFFF	fx	4
214	ZCD THRESHOLD	RESERVED	Reserved	0x0000 to 0xFFFF	fy	4
215	G&L POWER METER	RESERVED	Unallocated		fz	Output,4
216	PROG STOP LIMIT	SETUP PARAMETERS::STOP RATES	Stop Rates	0.0 to 600.0 SECS	g0	
217	STOP LIMIT	SETUP PARAMETERS::STOP RATES	Stop Rates	0.0 to 600.0 SECS	g1	
218	JOG SPEED 1	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	-100.00 to 100.00 %	g2	
219	JOG SPEED 2	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	-100.00 to 100.00 %	g3	

Parameter Specification Table 10-7

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
221	MMI FILTER T.C.	RESERVED	Reserved	0 to 20000	g5	4
222	PRED STEP	RESERVED	Reserved	0x0000 to 0xFFFF	g6	2,4
223	SCAN THRESHOLD	RESERVED	Reserved	0x0000 to 0xFFFF	g7	2,4
224	STALL TRIP DELAY	SETUP PARAMETERS::CALIBRATION	Calibration	0.1 to 600.0 SECS	g8	
225	CRAWL SPEED	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	-100.00 to 100.00 %	g9	
226	PEAK HW OFFSET	RESERVED	Reserved	0 to 20000	ga	2,4
227	AUX JOG	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	gb	
228	MODE	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	Same as Tag 43	gc	
230	CALIBRATION	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 1 (A2)	Analog Input 1	-3.0000 to 3.0000	ge	
231	MAX VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 1 (A2)	Analog Input 1	-300.00 to 300.00 %	gf	
232	MIN VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 1 (A2)	Analog Input 1	-300.00 to 300.00 %	gg	
233	CALIBRATION	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 2 (A3)	Analog Input 2	-3.0000 to 3.0000	gh	
234	MAX VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 2 (A3)	Analog Input 2	-300.00 to 300.00 %	gi	
235	MIN VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 2 (A3)	Analog Input 2	-300.00 to 300.00 %	gj	
236	CALIBRATION	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 3 (A4)	Analog Input 3	-3.0000 to 3.0000	gk	
237	MAX VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 3 (A4)	Analog Input 3	-300.00 to 300.00 %	gl	
238	MIN VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 3 (A4)	Analog Input 3	-300.00 to 300.00 %	gm	
239	CALIBRATION	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 4 (A5)	Analog Input 4	-3.0000 to 3.0000	gn	
240	MAX VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 4 (A5)	Analog Input 4	-300.00 to 300.00 %	go	
241	MIN VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 4 (A5)	Analog Input 4	-300.00 to 300.00 %	gp	
242	CALIBRATION	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 5 (A6)	Analog Input 5	-3.0000 to 3.0000	gq	
243	MAX VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 5 (A6)	Analog Input 5	-300.00 to 300.00 %	gr	
244	MIN VALUE	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 5 (A6)	Analog Input 5	-300.00 to 300.00 %	gs	
245	% TO GET 10V	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 1 (A7)	Analog Output 1	-300.00 to 300.00 %	gt	
246	DESTINATION TAG	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 1 (A2)	Analog Input 1	0 to 639	gu	2,3
247	DESTINATION TAG	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 5 (A6)	Analog Input 5	0 to 639	gv	2,3
248	% TO GET 10V	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 2 (A8)	Analog Output 2	-300.00 to 300.00 %	gw	
249	DESTINATION TAG	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 3 (A4)	Analog Input 3	0 to 639	gx	2,3
250	DESTINATION TAG	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 4 (A5)	Analog Input 4	0 to 639	gy	2,3
251	SOURCE TAG	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 1 (A7)	Analog Output 1	0 to 639	gz	2,3
252	SOURCE TAG	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 2 (A8)	Analog Output 2	0 to 639	h0	2,3
253	TAKE UP 1	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	-100.00 to 100.00 %	h1	
254	TAKE UP 2	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	-100.00 to 100.00 %	h2	
255	RESET VALUE	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	-300.00 to 300.00 %	h3	

10-8 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
256	INCREASE RATE	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	0.1 to 600.0 SECS	h4	
257	DECREASE RATE	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	0.1 to 600.0 SECS	h5	
258	MIN VALUE	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	-300.00 to 300.00 %	h6	
259	MAX VALUE	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	-300.00 to 300.00 %	h7	
260	RAISE/LOWER DEST	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Raise/Lower Output	0 to 639	h8	
261	RAISE INPUT	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	Same as Tag 43	h9	
262	LOWER INPUT	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	Same as Tag 43	ha	
263	STALL THRESHOLD	SETUP PARAMETERS::CALIBRATION	Calibration	0.00 to 200.00 %	hb	
264	RAISE/LOWER O/P	DIAGNOSTICS	Raise/Lower		hc	Output
265	ANALOG IP OFFSET	RESERVED	Reserved	-30000 to 30000	hd	4
266	% S-RAMP	SETUP PARAMETERS::RAMPS	Ramps	0.00 to 100.00 %	he	
267	POSITION COUNT	RESERVED	Calibration	0x0000 to 0xFFFF	hf	4
268	MODE	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ADAPTION	Advanced	0 to 3	hg	
269	SPD BRK1 (LOW)	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ADAPTION	Advanced	0.00 to 100.00 %	hh	
270	SPD BRK2 (HIGH)	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ADAPTION	Advanced	0.00 to 100.00 %	hi	
271	PROP. GAIN	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ADAPTION	Advanced	0.00 to 200.00	hj	
272	SPD.INT.TIME	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ADAPTION	Advanced	0.001 to 30.000 SECS	hk	
273	POS. LOOP P GAIN	SETUP PARAMETERS::SPEED LOOP::ADVANCED	Advanced	-200.00 to 200.00 %	hl	4
274	I GAIN IN RAMP	SETUP PARAMETERS::SPEED LOOP::ADVANCED	Advanced	0.0000 to 2.0000	hm	
275	POSITION DIVIDER	RESERVED	Calibration	1 to 30000	hn	4
276	PLL PROP	RESERVED	Reserved	0 to 20000	ho	4
277	PLL INT	RESERVED	Reserved	0 to 20000	hp	4
278	PLL ERROR	RESERVED	Unallocated		hq	Output,4
279	ARM ENDSTOP	RESERVED	Reserved	0 to 20000	hr	2,4
280	HF C/O DISC GAIN	RESERVED	Reserved	0 to 10000	hs	4
281	HF C/O FILTER TC	RESERVED	Reserved	0 to 20000	ht	4
282	BEMF THRESHOLD	RESERVED	Reserved	0 to 20000	hu	4
283	SCAN TC	RESERVED	Reserved	0 to 20000	hv	4
284	ZERO SPD. LEVEL	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ZERO SPD. QUENCH	Advanced	0.00 to 200.00 %	hw	
285	ZERO IAD LEVEL	SETUP PARAMETERS::SPEED LOOP::ADVANCED::ZERO SPD. QUENCH	Advanced	0.00 to 200.00 %	hx	
286	RAMPING THRESH.	SETUP PARAMETERS::RAMPS	Ramps	0.00 to 100.00 %	hy	
287	AUTO RESET	SETUP PARAMETERS::RAMPS	Ramps	Same as Tag 4	hz	
288	EXTERNAL RESET	SETUP PARAMETERS::RAMPS	Ramps	Same as Tag 4	i0	
289	SETPOINT 1	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	-105.00 to 105.00 %	i1	
290	SETPOINT 2 (A3)	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop		i2	Output
291	SETPOINT 3	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	-105.00 to 105.00 %	i3	
292	SIGN 0	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	Same as Tag 8	i4	
293	RAMP O/P DEST	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Ramp Output	0 to 639	i5	2,3

Parameter Specification Table 10-9

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
294	SPT SUM 1 DEST	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Setpoint Sum 1 Output	0 to 639	i6	2,3
295	FILTER INPUT	RESERVED	User Filter	-300.00 to 300.00 %	i7	4
296	FILTER OUTPUT	RESERVED	User Filter		i8	Output,4
297	SPEED ERROR	DIAGNOSTICS	Diagnostics		i9	Output
298	CURRENT FEEDBACK	DIAGNOSTICS	Diagnostics		ia	Output
299	CURRENT DEMAND	DIAGNOSTICS	Diagnostics		ib	Output
300	FIELD I FBK.	DIAGNOSTICS	Diagnostics		ic	Output
301	POS. I CLAMP	SETUP PARAMETERS::CURRENT LOOP	Current Loop	-200.00 to 200.00 %	id	
302	CONTACTOR DELAY	SETUP PARAMETERS::STOP RATES	Stop Rates	0.1 to 600.0 SECS	ie	
304	LANGUAGE		Menus	0:0 : ENGLISH;1 : Other 1:0 : ENGLISH;1 : Other	ig	2
305	TRIP RESET	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	Same as Tag 43	ih	
306	SOURCE TAG	SETUP PARAMETERS::STANDSTILL	Standstill	0 to 639	ii	2,3,4
307	EXTERNAL RESET	SETUP PARAMETERS::RAISE/LOWER	Raise/Lower	Same as Tag 43	ij	
308	TACH INPUT	DIAGNOSTICS	Diagnostics		ik	Output
309	INPUT 0	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-200.00 to 200.00 %	il	
310	AUTOCAL	RESERVED	Reserved	Same as Tag 4	im	4
311	IAINST OFFSET	RESERVED	Reserved	0 to 20000	in	4
312	PNO 112	SERIAL LINKS::PNO CONFIG	PNO 112	0 to 639	io	
313	PNO 113	SERIAL LINKS::PNO CONFIG	PNO 113	0 to 639	ip	
314	PNO 114	SERIAL LINKS::PNO CONFIG	PNO 114	0 to 639	iq	
315	PNO 115	SERIAL LINKS::PNO CONFIG	PNO 115	0 to 639	ir	
316	PNO 116	SERIAL LINKS::PNO CONFIG	PNO 116	0 to 639	is	
317	PNO 117	SERIAL LINKS::PNO CONFIG	PNO 117	0 to 639	it	
318	PNO 118	SERIAL LINKS::PNO CONFIG	PNO 118	0 to 639	iu	
319	PNO 119	SERIAL LINKS::PNO CONFIG	PNO 119	0 to 639	iv	
320	PNO 120	SERIAL LINKS::PNO CONFIG	PNO 120	0 to 639	iw	
321	PNO 121	SERIAL LINKS::PNO CONFIG	PNO 121	0 to 639	ix	
322	PNO 122	SERIAL LINKS::PNO CONFIG	PNO 122	0 to 639	iy	
323	PNO 123	SERIAL LINKS::PNO CONFIG	PNO 123	0 to 639	iz	
324	PNO 124	SERIAL LINKS::PNO CONFIG	PNO 124	0 to 639	j0	
325	PNO 125	SERIAL LINKS::PNO CONFIG	PNO 125	0 to 639	j1	
326	PNO 126	SERIAL LINKS::PNO CONFIG	PNO 126	0 to 639	j2	
327	PNO 127	SERIAL LINKS::PNO CONFIG	PNO 127	0 to 639	j3	
329	GROUP ID (GID)	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::BISYNCH SUPPORT	System Port P3	0 to 7	j5	
330	UNIT ID (UID)	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::BISYNCH SUPPORT	System Port P3	0 to F	j6	
332	ERROR REPORT	SERIAL LINKS::SYSTEM PORT (P3)::P3 SETUP::BISYNCH SUPPORT	System Port P3	0x0000 to 0xFFFF	j8	1
336	CHANGEOVER BIAS	RESERVED	Reserved	0x0000 to 0xFFFF	jc	2,4
337	THERMISTOR STATE	ALARM STATUS	Unallocated		jd	Output
339	VALUE 1	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	jf	
340	VALUE 2	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	ig	
341	VALUE 3	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	jh	
342	VALUE 4	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	ji	
343	VALUE 5	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	jj	
344	VALUE 6	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	jk	
345	VALUE 7	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	jl	
346	LOGIC 1	SYSTEM::miniLINK	Minilink	Same as Tag 18	jm	
347	LOGIC 2	SYSTEM::miniLINK	Minilink	Same as Tag 18	jn	

10-10 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
348	LOGIC 3	SYSTEM::miniLINK	Minilink	Same as Tag 18	jo	
349	LOGIC 4	SYSTEM::miniLINK	Minilink	Same as Tag 18	jp	
350	LOGIC 5	SYSTEM::miniLINK	Minilink	Same as Tag 18	jq	
351	LOGIC 6	SYSTEM::miniLINK	Minilink	Same as Tag 18	jr	
352	LOGIC 7	SYSTEM::miniLINK	Minilink	Same as Tag 18	js	
353	LOGIC 8	SYSTEM::miniLINK	Minilink	Same as Tag 18	jt	
354	PARAMETER SAVE	PARAMETER SAVE		0:UP TO ACTION 1:REQUESTED	ju	1
355	RAMP RATE	SETUP PARAMETERS::JOG/SLACK	Jog/Slack	0.1 to 600.0 SECS	jv	
356	TOTAL I DMD	RESERVED	Speed Loop		jw	Output,2,4
357	MAX DEMAND	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	0.00 to 105.00 %	jx	
358	MIN DEMAND	SETUP PARAMETERS::SPEED LOOP::SETPOINTS	Speed Loop	-105.00 to 105.00 %	iy	
359	INVERTED	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 1 (B5)	Digout 1 (B5)	Same as Tag 43	jz	
360	INVERTED	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 2 (B6)	Digout 2 (B6)	Same as Tag 43	k0	
361	INVERTED	SYSTEM::CONFIGURE I/O::DIGITAL OUTPUTS::DIGOUT 3 (B7)	Digout 3 (B7)	Same as Tag 43	k1	
362	MODULUS	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 1 (A7)	Analog Output 1	Same as Tag 43	k2	
363	MODULUS	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 2 (A8)	Analog Output 2	Same as Tag 43	k3	
364	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 1	Link 1	0 to 639	k4	2,3
365	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 1	Link 1	0 to 639	k5	2,3
366	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 2	Link 2	0 to 639	k6	2,3
367	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 2	Link 2	0 to 639	k7	2,3
368	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 3	Link 3	0 to 639	k8	2,3
369	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 3	Link 3	0 to 639	k9	2,3
370	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 4	Link 4	0 to 639	ka	2,3
371	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 4	Link 4	0 to 639	kb	2,3
372	R/L DELTA	RESERVED	Unallocated		kc	Output,4
373	SYS RAMP DELTA	RESERVED	Unallocated		kd	Output,4
374	SYSTEM RESET	DIAGNOSTICS	Unallocated		ke	Output
375	LIMIT	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	0.00 to 200.00 %	kf	
376	DRIVE RUNNING	DIAGNOSTICS	Unallocated		kg	Output
378	LANG CHECKSUM				ki	Output
379	VALUE 8	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	kj	
380	VALUE 9	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	kk	
381	VALUE 10	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	kl	
382	VALUE 11	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	km	
383	VALUE 12	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	kn	
384	VALUE 13	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	ko	
385	VALUE 14	SYSTEM::miniLINK	Minilink	-300.00 to 300.00 %	kp	
386	FILTER T.C.	RESERVED	Reserved	0 to 20000	kq	4
387	RAW POS COUNT	RESERVED	Reserved		kr	Output,4

Parameter Specification Table 10-11

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
388	SYNC OFFSET	RESERVED	Reserved	-30000 to 30000	ks	4
389	PERCENT RPM	RESERVED	Reserved		kt	Output,4
390	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 11	Link 11	0 to 639	ku	2,3
391	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 11	Link 11	0 to 639	kv	2,3
392	ADVANCED	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 11	Link 11	Same as Tag 18	kw	
393	MODE	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 11	Link 11	0:SWITCH 1:INVERT 2:AND 3:OR 4:SIGN CHANGER 5:MODULUS 6:COMPARATOR	kx	
394	AUX.SOURCE	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 11	Link 11	0 to 639	ky	2,3
395	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 12	Link 12	0 to 639	kz	2,3
396	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 12	Link 12	0 to 639	l0	2,3
397	ADVANCED	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 12	Link 12	Same as Tag 18	l1	
398	MODE	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 12	Link 12	Same as Tag 393	l2	
399	AUX.SOURCE	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 12	Link 12	0 to 639	l3	2,3
400	PID O/P DEST	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	PID Output	0 to 639	l4	2,3
401	DERIVATIVE TC	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0.000 to 10.000 SECS	l5	
402	INT.TIME.CONST	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0.01 to 100.00 SECS	l6	
403	FILTER T.C.	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0.000 to 10.000 SECS	l7	
404	PROP. GAIN	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0.0 to 100.0	l8	
405	POSITIVE LIMIT	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0.00 to 105.00 %	l9	
406	NEGATIVE LIMIT	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-105.00 to 0.00 %	la	
407	O/P SCALER(TRIM)	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-3.0000 to 3.0000	lb	
408	ENABLE	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	Same as Tag 4	lc	
409	INT. DEFEAT	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	Same as Tag 18	ld	
410	INPUT 1	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-300.00 to 300.00 %	le	
411	INPUT 2	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-300.00 to 300.00 %	lf	
412	RATIO 1	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-3.0000 to 3.0000	lg	
413	RATIO 2	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-3.0000 to 3.0000	lh	
414	DIVIDER 2	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-3.0000 to 3.0000	li	
415	PID ERROR	DIAGNOSTICS	PID		lj	Output
416	PID CLAMPED	DIAGNOSTICS	PID		lk	Output
417	PID OUTPUT	DIAGNOSTICS	PID		ll	Output

10-12 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
418	DIVIDER 1	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	-3.0000 to 3.0000	lm	
419	DIVIDER 1	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-3.0000 to 3.0000	ln	
420	DIVIDER 0	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-3.0000 to 3.0000	lo	
421	MAIN CURR. LIMIT	SETUP PARAMETERS::CURRENT LOOP	Current Loop	0.00 to 200.00 %	lp	
422	RESET VALUE	SETUP PARAMETERS::RAMPS	Ramps	-300.00 to 300.00 %	lq	
423	INPUT 2	SETUP PARAMETERS::SETPOINT SUM 1	Setpoint Sum 1	-200.00 to 200.00 %	lr	
424	LINE SPEED	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	-105.00 to 105.00 %	ls	
425	MIN DIAMETER	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	0.00 to 100.00 %	lt	
426	MIN SPEED	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	0.00 to 100.00 %	lu	
427	DIAMETER	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.		lv	Output
428	MOD OF LINE SPD	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.		lw	Output
429	MOD OF REEL SPD	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.		lx	Output
430	UNFILT DIAMETER	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.		ly	Output
431	DIAMETER	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Diameter	0 to 639	lz	2,3
432	TORQUE DEMAND	SETUP PARAMETERS::SPECIAL BLOCKS::TORQUE CALC.	Torque Calc.	-200.00 to 200.00 %	m0	
433	TENSION ENABLE	SETUP PARAMETERS::SPECIAL BLOCKS::TORQUE CALC.	Torque Calc.	Same as Tag 4	m1	
434	OVER WIND	SETUP PARAMETERS::SPECIAL BLOCKS::TORQUE CALC.	Torque Calc.	Same as Tag 4	m2	
435	POS. I CLAMP	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Torque Calc.	0 to 639	m3	2,3
436	NEG. I CLAMP	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Torque Calc.	0 to 639	m4	2,3
437	REEL SPEED	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	-105.00 to 105.00 %	m5	
438	TAPER	SETUP PARAMETERS::SPECIAL BLOCKS::TAPER CALC.	Taper Calc.	-100.00 to 100.00 %	m6	
439	TENSION SPT.	SETUP PARAMETERS::SPECIAL BLOCKS::TAPER CALC.	Taper Calc.	0.00 to 100.00 %	m7	
440	TENSION TRIM	SETUP PARAMETERS::SPECIAL BLOCKS::TAPER CALC.	Taper Calc.	-100.00 to 100.00 %	m8	
441	TOT.TENS.DEMAND	SETUP PARAMETERS::SPECIAL BLOCKS::TAPER CALC.	Taper Calc.		m9	Output
442	TAPER	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Taper	0 to 639	ma	2,3
443	INPUT 1	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-300.00 to 300.00 %	mb	
444	INPUT 0	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-300.00 to 300.00 %	mc	
445	INPUT 2	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-300.00 to 300.00 %	md	
446	RATIO 1	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-3.0000 to 3.0000	me	
447	RATIO 0	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-3.0000 to 3.0000	mf	
448	DIVIDER 0	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-3.0000 to 3.0000	mg	
449	LIMIT	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	0.00 to 200.00 %	mh	

Parameter Specification Table 10-13

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
450	SETPOINT SUM 2	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Setpoint Sum 2 Output	0 to 639	mi	2,3
451	SPT SUM OUTPUT	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2		mj	Output
452	TAPERED DEMAND	SETUP PARAMETERS::SPECIAL BLOCKS::TAPER CALC.	Taper Calc.		mk	Output
453	RAMP RATE	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	0.1 to 600.0 SECS	ml	
454	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 5	Link 5	0 to 639	mm	2,3
455	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 5	Link 5	0 to 639	mn	2,3
456	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 6	Link 6	0 to 639	mo	2,3
457	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 6	Link 6	0 to 639	mp	2,3
458	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 7	Link 7	0 to 639	mq	2,3
459	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 7	Link 7	0 to 639	mr	2,3
460	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 8	Link 8	0 to 639	ms	2,3
461	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 8	Link 8	0 to 639	mt	2,3
462	RESET VALUE	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	0.00 to 100.00 %	mu	
463	EXTERNAL RESET	SETUP PARAMETERS::SPECIAL BLOCKS::DIAMETER CALC.	Diameter Calc.	Same as Tag 4	mv	
464	OFFSET	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 1 (A7)	Analog Output 1	-100.00 to 100.00 %	mw	
465	OFFSET	SYSTEM::CONFIGURE I/O::ANALOG OUTPUTS::ANOUT 2 (A8)	Analog Output 2	-100.00 to 100.00 %	mx	
466	DIVIDER 1	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2	-3.0000 to 3.0000	my	
467	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 9	Link 9	0 to 639	mz	2,3
468	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 9	Link 9	0 to 639	n0	2,3
469	SOURCE TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 10	Link 10	0 to 639	n1	2,3
470	DESTINATION TAG	SYSTEM::CONFIGURE I/O::INTERNAL LINKS::LINK 10	Link 10	0 to 639	n2	2,3
471	STANDBY FIELD	RESERVED	Reserved	0.00 to 100.00 %	n3	4
472	SPEED FBK STATE	ALARM STATUS	Unallocated		n4	Output
473	MODE	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0 to 4	n5	
474	MIN PROFILE GAIN	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID	0.00 to 100.00 %	n6	
475	PROFILED GAIN	SETUP PARAMETERS::SPECIAL BLOCKS::PID	PID		n7	Output
476	3-PHASE FIELD	RESERVED	Reserved	Same as Tag 4	n8	2,4
477	AUTOTUNE				n9	Output,2
478	TENS+COMP CALC.	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM	Tension & Comp	0 to 639	na	2,3
479	FIX.INERTIA COMP	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-300.00 to 300.00 %	nb	
480	VAR.INERTIA COMP	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-300.00 to 300.00 %	nc	

10-14 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
481	ROLL WIDTH/MASS	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	0.00 to 100.00 %	nd	
482	FILTER T.C.	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	0 to 20000	ne	
483	RATE CAL	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-100.00 to 100.00	nf	
484	NORMALISED dv/dt	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-300.00 to 300.00 %	ng	
485	INERTIA COMP O/P	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp		nh	Output
486	TENSION SCALER	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-3.0000 to 3.0000	ni	
487	STATIC COMP	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-300.00 to 300.00 %	nj	
488	DYNAMIC COMP	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-300.00 to 300.00 %	nk	
489	REWIND	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	Same as Tag 4	nl	
491	STPT SUM 2 OUT 0	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2		nn	Output,2
492	STPT SUM 2 OUT 1	SETUP PARAMETERS::SPECIAL BLOCKS::SETPOINT SUM 2	Setpoint Sum 2		no	Output,2
493	OUTPUT	SYSTEM::CONFIGURE I/O::ANALOG INPUTS::ANIN 2 (A3)	Analog Input 2		np	Output,2
494	DESTINATION TAG	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGITAL INPUT C4	Dig in C4	0 to 639	nq	2,3
495	DESTINATION TAG	SYSTEM::CONFIGURE I/O::DIGITAL INPUTS::DIGITAL INPUT C5	Dig in C5	0 to 639	nr	2,3
496	JOG/SLACK	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	ns	
497	ENABLE	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 18	nt	
498	LINE SPEED SPT	SETUP PARAMETERS::SPECIAL BLOCKS::TENS+COMP CALC.	Tension & Comp	-105.00 to 105.00 %	nu	
500	TEC OPTION TYPE	SERIAL LINKS::TEC OPTION	Tec Option	0:NONE 1:RS485 2:PROFIBUS DP 3:LINK 4:DEVICE NET 5:CAN OPEN 6:LONWORKS 7:CONTROLNET 8:MODBUS PLUS 9:ETHERNET 10:TYPE 10 11:TYPE 11 12:TYPE 12 13:TYPE 13 14:TYPE 14 15:TYPE 15	nw	
501	TEC OPTION IN 1	SERIAL LINKS::TEC OPTION	Tec Option	0 to -1	nx	
502	TEC OPTION IN 2	SERIAL LINKS::TEC OPTION	Tec Option	0 to -1	ny	
503	TEC OPTION IN 3	SERIAL LINKS::TEC OPTION	Tec Option	0 to -1	nz	
504	TEC OPTION IN 4	SERIAL LINKS::TEC OPTION	Tec Option	0 to -1	o0	
505	TEC OPTION IN 5	SERIAL LINKS::TEC OPTION	Tec Option	0 to -1	o1	
506	TEC OPTION FAULT	SERIAL LINKS::TEC OPTION	Tec Option		o2	Output
507	TEC OPTION VER	SERIAL LINKS::TEC OPTION	Tec Option		o3	Output
508	TEC OPTION OUT 1	SERIAL LINKS::TEC OPTION	Tec Option		o4	Output
509	TEC OPTION OUT 2	SERIAL LINKS::TEC OPTION	Tec Option		o5	Output

Parameter Specification Table 10-15

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
510	PRODUCT CODE			0:INVALID 1:DC 4Q 15A 2:DC 2Q 15A 3:DC 4Q 35A 4:DC 2Q 35A 5:DC 4Q 40A 6:DC 2Q 40A 7:DC 4Q 55A 8:DC 2Q 55A 9:DC 4Q 70A 10:DC 2Q 70A 11:DC 4Q 90A 12:DC 2Q 90A 13:DC 4Q 110A 14:DC 2Q 110A 15:DC 4Q 125A 16:DC 2Q 125A 17:DC 4Q 162A 18:DC 2Q 162A 19:DC 4Q 165A 20:DC 2Q 165A 21:DC 4Q 35A D 22:DC 2Q 35A D 23:DC 4Q 70A D 24:DC 2Q 70A D 25:DC 4Q 110A D 26:DC 2Q 110A D 27:DC 4Q 150A D 28:DC 2Q 150A D 29:DC 4Q 180A D 30:DC 2Q 180A D 31:DC 4Q 270A D 32:DC 2Q 270A D 33:DC 4Q 128* 20* D 34:DC 2Q 128* 20* D 35:DC 4Q 1024* 20*D 36:DC 2Q 1024* 20*D 37:DC 4Q 1024* 30*D 38:DC 2Q 1024* 30*D 39:DC 4Q 360A D 40:DC 2Q 360A D 41:DC 4Q 450A D 42:DC 2Q 450A D 43:DC 4Q 720A D 44:DC 2Q 720A D 45:DC 4Q 800A D 46:DC 2Q 800A D 47:DC 4Q 1024* 30*D 48:DC 2Q 1024* 30*D 49:DC 4Q 1200A 20 D 50:DC 2Q 1200A 20 D 51:DC 4Q 1700A 20 D 52:DC 2Q 1700A 20 D 53:DC 4Q 2200A 20 D 54:DC 2Q 2200A 20 D 55:DC 4Q 2700A 20 D 56:DC 2Q 2700A 20 D 57:DC 4Q 1200A 40 D 58:DC 2Q 1200A 40 D 59:DC 4Q 1700A 40 D 60:DC 2Q 1700A 40 D 61:DC 4Q 2200A 40 D 62:DC 2Q 2200A 40 D 63:DC 4Q 2700A 40 D 64:DC 2Q 2700A 40 D 65:DC 4Q 1200A 60 D 66:DC 2Q 1200A 60 D 67:DC 4Q 1700A 60 D 68:DC 2Q 1700A 60 D 69:DC 4Q 2200A 60 D 70:DC 2Q 2200A 60 D	o6	1,2,3

10-16 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
510	PRODUCT CODE			71:DC 4Q 2700A 60 D 72:DC 2Q 2700A 60 D 73:DC 4Q 1200A 80 D 74:DC 2Q 1200A 80 D 75:DC 4Q 1700A 80 D 76:DC 2Q 1700A 80 D 77:DC 4Q 2200A 80 D 78:DC 2Q 2200A 80 D 79:DC 4Q 2700A 80 D 80:DC 2Q 2700A 80 D 81:DC RETRO 4Q 720A 82:DC RETRO 2Q 720A 83:DC RETRO 4Q 128A 84:DC RETRO 2Q 128A 85:DC HW SCALE 4Q D 86:DC HW SCALE 2Q D 87:DC 2Q 40A 88:DC 4Q 40A 89:DC 4Q 725A 90:DC 2Q 725A 91:DC 4Q 830A 92:DC 2Q 830A 93:DC 4Q 1580A 94:DC 2Q 1580A 95:DC 4Q 275A 96:DC 2Q 275A 97:DC 4Q 380A 98:DC 2Q 380A 99:DC 4Q 500A 100:DC 2Q 500A	o6	1,2,3
511	LOCAL KEY ENABLE	SETUP PARAMETERS::OP- STATION::SET UP	Op Station	Same as Tag 43	o7	
512	SETPOINT	SETUP PARAMETERS::OP- STATION::SET UP	Op Station	0.00 to 100.00 %	o8	1
513	JOG SETPOINT	SETUP PARAMETERS::OP- STATION::SET UP	Op Station	0.00 to 100.00 %	o9	1
514	RAMP ACCEL TIME	SETUP PARAMETERS::OP- STATION::LOCAL RAMP	Op Station	0.1 to 600.0 SECS	oa	
515	RAMP DECEL TIME	SETUP PARAMETERS::OP- STATION::LOCAL RAMP	Op Station	0.1 to 600.0 SECS	ob	
516	FORWARD	SETUP PARAMETERS::OP- STATION::START UP VALUES	Op Station	Same as Tag 43	oc	
517	LOCAL	SETUP PARAMETERS::OP- STATION::START UP VALUES	Op Station	Same as Tag 43	od	
518	PROGRAM	SETUP PARAMETERS::OP- STATION::START UP VALUES	Op Station	Same as Tag 43	oe	
519	SETPOINT	SETUP PARAMETERS::OP- STATION::START UP VALUES	Op Station	0.00 to 100.00 %	of	
520	JOG SETPOINT	SETUP PARAMETERS::OP- STATION::START UP VALUES	Op Station	0.00 to 100.00 %	og	
521	NOM MOTOR VOLTS	SETUP PARAMETERS::CALIBRATION	Calibration	100 to 875 VOLTS	oh	3
522	NOT 570 STACK	RESERVED	Reserved	Same as Tag 43	oi	4
523	ARMATURE CURRENT	SETUP PARAMETERS::CALIBRATION	Calibration	1.0 to 15.0 AMPS	oj	3
524	FIELD CURRENT	SETUP PARAMETERS::CALIBRATION	Calibration	0.2 to 4.0 AMPS	ok	3
525	COAST STOP	DIAGNOSTICS			ol	Output
526	BY-PASS PASSWORD	PASSWORD	Reserved	Same as Tag 43	om	4
527	MASTER BRIDGE	SETUP PARAMETERS::CURRENT LOOP	Current Loop		on	Output
528	LAST ALARM	ALARM STATUS	Alarms		oo	Output
529	PNO 39	RESERVED		0x0000 to 0xFFFF	op	4
530	PNO 47	RESERVED			oq	Output,4
531	PNO 55	RESERVED		0x0000 to 0xFFFF	or	4
532	PNO 63	RESERVED		0x0000 to 0xFFFF	os	4
533	PNO 71	RESERVED		0x0000 to 0xFFFF	ot	4

Parameter Specification Table 10-17

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
534	PNO 95	RESERVED		0x0000 to 0xFFFF	ou	4
535	REM.SEQ.ENABLE	SETUP PARAMETERS::AUX I/O	Aux I/O	Same as Tag 43	ov	2
536	REM.SEQUENCE	SETUP PARAMETERS::AUX I/O	Aux I/O	0x0000 to 0xFFFF	ow	1
537	SEQ STATUS	SETUP PARAMETERS::AUX I/O	Aux I/O		ox	Output
538	CURRENT FBK.AMPS	DIAGNOSTICS	Current Loop		oy	Output,3
539	FIELD I FBK.AMPS	DIAGNOSTICS	Current Loop		oz	Output,3
540	REM TRIP INHIBIT	SETUP PARAMETERS::INHIBIT ALARMS	Alarms	Same as Tag 19	p0	
541	REM TRIP DELAY	SETUP PARAMETERS::CALIBRATION	Alarms	0.1 to 600.0 SECS	p1	
542	REMOTE TRIP	ALARM STATUS	Alarms		p2	Output
543	ZERO CAL INPUTS	CONFIGURE DRIVE		0:UP TO ACTION 1:REQUESTED	p3	1,2,3,4
544	PCODE SAVE			Same as Tag 43	p4	1,2,3
545	PCODE ID			0 to 100	p5	1,2,3
547	SPD.FBK.FILTER	SETUP PARAMETERS::SPEED LOOP	Speed Loop	0.000 to 1.000	p7	
549	SPEED LOOP O/P	DIAGNOSTICS			p9	Output,2
550	ENABLE 12 PULSE	RESERVED		0 to 2	pa	2,4
551	MASTER BRIDGE	RESERVED			pb	Output,2,4
552	SLAVE BRIDGE	RESERVED			pc	Output,2,4
553	MAX BS DEAD TIME	RESERVED		1 to 6000	pd	4
554	ENCODER FILTER	SETUP PARAMETERS::SPEED LOOP		0 to 7	pe	4
556	INERTIA	SETUP PARAMETERS::SPEED LOOP::ADVANCED::INERTIA COMP		0.00 to 200.00	pg	
557	FILTER	SETUP PARAMETERS::SPEED LOOP::ADVANCED::INERTIA COMP		0 to 20000	ph	
558	RATE CAL	SETUP PARAMETERS::SPEED LOOP::ADVANCED::INERTIA COMP		0.00 to 200.00	pi	
559	MAX SPEED	SETUP PARAMETERS::PRESET SPEEDS		0.1 to 3000.0	pj	
560	SELECT 1	SETUP PARAMETERS::PRESET SPEEDS		Same as Tag 43	pk	
561	SELECT 2	SETUP PARAMETERS::PRESET SPEEDS		Same as Tag 43	pl	
562	SELECT 3	SETUP PARAMETERS::PRESET SPEEDS		Same as Tag 43	pm	
563	INVERT O/P	SETUP PARAMETERS::PRESET SPEEDS		Same as Tag 43	pn	
564	INPUT 0	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	po	
565	INPUT 1	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	pp	
566	INPUT 2	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	pq	
567	INPUT 3	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	pr	
568	INPUT 4	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	ps	
569	INPUT 5	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	pt	
570	INPUT 6	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	pu	
571	INPUT 7	SETUP PARAMETERS::PRESET SPEEDS		-3000.0 to 3000.0	pv	
572	PRESET O/P	SETUP PARAMETERS::PRESET SPEEDS			pw	Output
573	PRESET DEST	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM		0 to 639	px	2,3
574	INPUT	SETUP PARAMETERS::SRAMP		-100.00 to 100.00 %	py	
575	RATE SELECT	SETUP PARAMETERS::SRAMP		0 to 1	pz	
576	ACCEL 0	SETUP PARAMETERS::SRAMP::RATE SET 0		0.00 to 100.00 %	q0	
577	DECEL 0	SETUP PARAMETERS::SRAMP::RATE SET 0		0.00 to 100.00 %	q1	
578	ACCEL JERK 1	SETUP PARAMETERS::SRAMP::RATE SET 0		0.00 to 100.00 %	q2	
579	ACCEL 1	SETUP PARAMETERS::SRAMP::RATE SET 1		0.00 to 100.00 %	q3	

10-18 Parameter Specification Table

Tag	Name	MMI Menu	CE Block	Range	MN	Notes
580	DECEL 1	SETUP PARAMETERS::SRAMP::RATE SET 1		0.00 to 100.00 %	q4	
581	ACCEL JERK 1	SETUP PARAMETERS::SRAMP::RATE SET 1		0.00 to 100.00 %	q5	
582	AUTO RESET	SETUP PARAMETERS::SRAMP		Same as Tag 43	q6	
583	EXTERNAL RESET	SETUP PARAMETERS::SRAMP		Same as Tag 43	q7	
584	RESET VALUE	SETUP PARAMETERS::SRAMP		-100.00 to 100.00 %	q8	
585	QUENCH	SETUP PARAMETERS::SRAMP		Same as Tag 43	q9	
586	AT SPEED LEVEL	SETUP PARAMETERS::SRAMP		0.00 to 100.00 %	qa	
587	AT SPEED	SETUP PARAMETERS::SRAMP			qb	Output
588	ACCEL OUTPUT	SETUP PARAMETERS::SRAMP			qc	Output
589	SRAMP OUTPUT	SETUP PARAMETERS::SRAMP			qd	Output
590	SRAMP DEST	SYSTEM::CONFIGURE I/O::BLOCK DIAGRAM		0 to 639	qe	2,3
591	OVERSHOOT THRESH	SETUP PARAMETERS::SRAMP		-100.00 to 100.00 %	qf	4
592	ERROR THRESH	SETUP PARAMETERS::SRAMP		-100.00 to 100.00 %	qg	4
593	OUTPUT FPM	SETUP PARAMETERS::PRESET SPEEDS			qh	Output
594	CURR DECAY RATE	SETUP PARAMETERS::STOP RATES		0.00 to 200.00	qi	
595	PRESET TORQUE	SETUP PARAMETERS::SPEED LOOP		-200.00 to 200.00 %	qj	
596	DECEL JERK 1	SETUP PARAMETERS::SRAMP::RATE SET 0		0.00 to 100.00 %	qk	
597	DECEL JERK 1	SETUP PARAMETERS::SRAMP::RATE SET 1		0.00 to 100.00 %	ql	
600	LIMIT	SETUP PARAMETERS::PRESET SPEEDS		Same as Tag 43	qo	
601	DELTA	SETUP PARAMETERS::SPEED LOOP::ADVANCED::INERTIA COMP			qp	Output
602	INERTIA COMP O/P	SETUP PARAMETERS::SPEED LOOP::ADVANCED::INERTIA COMP			qq	Output
603	UNSCALED OUTPUT	SETUP PARAMETERS::SPEED LOOP::ADVANCED::INERTIA COMP			qr	Output
604	PRESET T SCALE	SETUP PARAMETERS::SPEED LOOP		-200.00 to 200.00 %	qs	
605	ARM VOLTS FBK	DIAGNOSTICS			qt	Output
610	GRAY SCALE	SETUP PARAMETERS::PRESET SPEEDS		Same as Tag 43	qy	
611	ACCEL JERK 2	SETUP PARAMETERS::SRAMP::RATE SET 0		0.00 to 100.00 %	qz	
612	ACCEL JERK 2	SETUP PARAMETERS::SRAMP::RATE SET 1		0.00 to 100.00 %	r0	
613	DECEL JERK 2	SETUP PARAMETERS::SRAMP::RATE SET 0		0.00 to 100.00 %	r1	
614	DECEL JERK 2	SETUP PARAMETERS::SRAMP::RATE SET 1		0.00 to 100.00 %	r2	
617	FIELD I THRESH	SETUP PARAMETERS::FIELD CONTROL		0.00 to 100.00 %	r5	
618	UP TO FIELD	SETUP PARAMETERS::FIELD CONTROL			r6	Output
620	INVERT	SETUP PARAMETERS::RAMPS		Same as Tag 43	r8	
623	EXTENDED PLL	RESERVED		Same as Tag 43	rb	4

Parameter Table: MMI Menu Order

1	FACTORY DEFAULTS
2	MENU
3	DIAGNOSTICS
4	[089] SPEED DEMAND
4	[207] SPEED FEEDBACK
4	[297] SPEED ERROR
4	[549] SPEED LOOP O/P
4	[299] CURRENT DEMAND
4	[298] CURRENT FEEDBACK
4	[538] CURRENT FBK.AMPS
4	[065] IaFbk UNFILTERED
4	[066] IaDmd UNFILTERED
4	[087] POS. I CLAMP
4	[088] NEG. I CLAMP
4	[067] ACTUAL POS I LIM
4	[061] ACTUAL NEG I LIM
4	[203] INVERSE TIME O/P
4	[042] AT CURRENT LIMIT
4	[077] AT ZERO SPEED
4	[078] AT ZERO SETPOINT
4	[079] AT STANDSTILL
4	[113] RAMPING
4	[080] PROGRAM STOP
4	[525] COAST STOP
4	[082] DRIVE START
4	[084] DRIVE ENABLE
4	[212] OPERATING MODE
4	[169] FIELD ENABLED
4	[183] FIELD DEMAND
4	[300] FIELD I FBK.
4	[539] FIELD I FBK.AMPS
4	[181] UNFIL.FIELD FBK
4	[184] FLD.FIRING ANGLE
4	[050] ANIN 1 (A2)
4	[051] ANIN 2 (A3)
4	[052] ANIN 3 (A4)
4	[053] ANIN 4 (A5)
4	[054] ANIN 5 (A6)
4	[055] ANOUT 1 (A7)
4	[056] ANOUT 2 (A8)
4	[068] START (C3)
4	[069] DIGITAL INPUT C4
4	[070] DIGITAL INPUT C5
4	[071] DIGIN 1 (C6)
4	[072] DIGIN 2 (C7)
4	[073] DIGIN 3 (C8)
4	[074] DIGOUT 1 (B5)
4	[075] DIGOUT 2 (B6)
4	[076] DIGOUT 3 (B7)
4	[264] RAISE/LOWER O/P
4	[417] PID OUTPUT
4	[416] PID CLAMPED
4	[415] PID ERROR
4	[086] SPT SUM OUTPUT
4	[085] RAMP OUTPUT
4	[572] PRESET O/P
4	[589] SRAMP OUTPUT
4	[593] OUTPUT FPM
4	[063] SPEED SETPOINT
4	[057] TERMINAL VOLTS
4	[060] BACK EMF
4	[605] ARM VOLTS FBK
4	[308] TACH INPUT
4	[058] UNFIL.TACH INPUT

10-20 Parameter Specification Table

4					__[206] ENCODER	
4					__[059] UNFIL.ENCODER	
4					__[062] UNFIL.SPD.FBK	
4					__[064] UNFIL.SPD.ERROR	
4					__[083] CONTACTOR CLOSED	
4					__[122] HEALTH LED	
4					__[125] READY	
4					__[376] DRIVE RUNNING	
4					__[374] SYSTEM RESET	
3					__ SETUP PARAMETERS	
4					__ RAMPS	
5					[002] RAMP ACCEL TIME	
5					[003] RAMP DECEL TIME	
5					[004] CONSTANT ACCEL	Reserved
5					[118] RAMP HOLD	
5					[620] INVERT	
5					[005] RAMP INPUT	
5					[266] % S-RAMP	
5					[286] RAMPING THRESH.	
5					[287] AUTO RESET	
5					[288] EXTERNAL RESET	
5					[422] RESET VALUE	
5					[126] MIN SPEED	
4					__ AUX I/O	
5					[161] AUX START	
5					[227] AUX JOG	
5					[168] AUX ENABLE	
5					[094] AUX DIGOUT 1	
5					[095] AUX DIGOUT 2	
5					[096] AUX DIGOUT 3	
5					[128] ANOUT 1	
5					[129] ANOUT 2	
5					[496] JOG/SLACK	
5					[497] ENABLE	
5					[535] REM.SEQ.ENABLE	
5					[536] REM.SEQUENCE	
5					[537] SEQ STATUS	
4					__ OP-STATION	
5					__ SET UP	
6					[512] SETPOINT	
6					[513] JOG SETPOINT	
6					[511] LOCAL KEY ENABLE	
5					__ START UP VALUES	
6					[519] SETPOINT	
6					[520] JOG SETPOINT	
6					[516] FORWARD	
6					[518] PROGRAM	
6					[517] LOCAL	
5					__ LOCAL RAMP	
6					[514] RAMP ACCEL TIME	
6					[515] RAMP DECEL TIME	
4					__ JOG/SLACK	
5					[218] JOG SPEED 1	
5					[219] JOG SPEED 2	
5					[253] TAKE UP 1	
5					[254] TAKE UP 2	
5					[225] CRAWL SPEED	
5					[228] MODE	
5					[355] RAMP RATE	
4					__ RAISE/LOWER	
5					[255] RESET VALUE	
5					[256] INCREASE RATE	
5					[257] DECREASE RATE	
5					[261] RAISE INPUT	
5					[262] LOWER INPUT	
5					[258] MIN VALUE	
5					[259] MAX VALUE	
5					[307] EXTERNAL RESET	

Parameter Specification Table 10-21

4		PRESET SPEEDS	
5		__[560] SELECT 1	
5		__[561] SELECT 2	
5		__[562] SELECT 3	
5		__[563] INVERT O/P	
5		__[559] MAX SPEED	
5		__[600] LIMIT	
5		__[610] GRAY SCALE	
5		__[564] INPUT 0	
5		__[565] INPUT 1	
5		__[566] INPUT 2	
5		__[567] INPUT 3	
5		__[568] INPUT 4	
5		__[569] INPUT 5	
5		__[570] INPUT 6	
5		__[571] INPUT 7	
5		__[572] PRESET O/P	
5		__[593] OUTPUT FPM	
4		SRAMP	
5		__[574] INPUT	
5		__[575] RATE SELECT	
5		__RATE SET 0	
6		[576] ACCEL 0	
6		[577] DECEL 0	
6		[578] ACCEL JERK 1	
6		[611] ACCEL JERK 2	
6		[596] DECEL JERK 1	
6		[613] DECEL JERK 2	
5		__RATE SET 1	
6		[579] ACCEL 1	
6		[580] DECEL 1	
6		[581] ACCEL JERK 1	
6		[612] ACCEL JERK 2	
6		[597] DECEL JERK 1	
6		[614] DECEL JERK 2	
5		__[582] AUTO RESET	
5		__[583] EXTERNAL RESET	
5		__[584] RESET VALUE	
5		__[585] QUENCH	
5		__[586] AT SPEED LEVEL	
5		__[587] AT SPEED	
5		__[588] ACCEL OUTPUT	
5		__[589] SRAMP OUTPUT	
5		__[591] OVERSHOOT THRESH	Reserved
5		__[592] ERROR THRESH	Reserved
4		SPECIAL BLOCKS	
5		PID	
6		[404] PROP. GAIN	
6		[402] INT.TIME.CONST	
6		[401] DERIVATIVE TC	
6		[405] POSITIVE LIMIT	
6		[406] NEGATIVE LIMIT	
6		[407] O/P SCALER(TRIM)	
6		[410] INPUT 1	
6		[411] INPUT 2	
6		[412] RATIO 1	
6		[413] RATIO 2	
6		[418] DIVIDER 1	
6		[414] DIVIDER 2	
6		[408] ENABLE	
6		[409] INT. DEFEAT	
6		[403] FILTER T.C.	
6		[473] MODE	
6		[474] MIN PROFILE GAIN	
6		[475] PROFILED GAIN	
5		TENS+COMP CALC.	
6		[487] STATIC COMP	
6		[488] DYNAMIC COMP	

Parameter Specification Table 10-23

5					__[031] SPD BRK2 (HIGH)	
5					__[093] IMAX BRK1 (SPD1)	
5					__[033] IMAX BRK2 (SPD2)	
4					INVERSE TIME	
5					__[204] AIMING POINT	Reserved
5					__[199] DELAY	Reserved
5					__[200] RATE	Reserved
4					STOP RATES	
5					__[027] STOP TIME	
5					__[217] STOP LIMIT	
5					__[302] CONTACTOR DELAY	
5					__[594] CURR DECAY RATE	
5					__[026] PROG STOP TIME	
5					__[216] PROG STOP LIMIT	
5					__[091] PROG STOP I LIM	
5					__[029] STOP ZERO SPEED	
4					CALIBRATION	
5					__[039] CONFIGURE ENABLE	
5					__[521] NOM MOTOR VOLTS	
5					__[523] ARMATURE CURRENT	
5					__[524] FIELD CURRENT	
5					__[020] ARMATURE V CAL.	
5					__[021] IR COMPENSATION	
5					__[022] ENCODER RPM	
5					__[024] ENCODER LINES	
5					__[023] ANALOG TACH CAL	
5					__[010] ZERO SPD. OFFSET	
5					__[025] ARMATURE I (A9)	
5					__[180] SPDFBK ALM LEVEL	
5					__[263] STALL THRESHOLD	
5					__[224] STALL TRIP DELAY	
5					__[541] REM TRIP DELAY	
5					__[188] OVER SPEED LEVEL	Reserved
5					__[182] FIELD I CAL.	
4					INHIBIT ALARMS	
5					__[019] FIELD FAIL	
5					__[111] 5703 RCV ERROR	
5					__[028] STALL TRIP	
5					__[305] TRIP RESET	
5					__[081] SPEED FBK ALARM	
5					__[092] ENCODER ALARM	
5					__[540] REM TRIP INHIBIT	
4					CURRENT LOOP	
5					__[421] MAIN CURR. LIMIT	
5					__[016] PROP. GAIN	
5					__[017] INT. GAIN	
5					__[018] AUTOTUNE	
5					__[136] FEED FORWARD	Reserved
5					__[137] DISCONTINUOUS	
5					__[030] ADDITIONAL DEM	
5					__[090] BIPOLAR CLAMPS	
5					__[201] REGEN MODE	
5					__[527] MASTER BRIDGE	
5					__[301] POS. I CLAMP	
5					__[048] NEG. I CLAMP	
5					__[119] I DM.D. ISOLATE	
5					__[015] CUR.LIMIT/SCALER	
4					SPEED LOOP	
5					__[014] SPD.PROP.GAIN	
5					__[013] SPD.INT.TIME	
5					__[202] INT. DEFEAT	
5					__[595] PRESET TORQUE	
5					__[604] PRESET T SCALE	
5					__[049] ENCODER SIGN	
5					__[047] SPEED FBK SELECT	
5					__[547] SPD.FBK.FILTER	
5					__[554] ENCODER FILTER	Reserved
5					ADVANCED	

10-24 Parameter Specification Table

6				ADAPTION	
7				__[268] MODE	
7				__[269] SPD BRK1 (LOW)	
7				__[270] SPD BRK2 (HIGH)	
7				__[271] PROP. GAIN	
7				__[272] SPD.INT.TIME	
6				__[274] I GAIN IN RAMP	
6				__[273] POS. LOOP P GAIN	Reserved
6				ZERO SPD. QUENCH	
7				__[284] ZERO SPD. LEVEL	
7				__[285] ZERO IAD LEVEL	
6				INERTIA COMP	
7				__[556] INERTIA	
7				__[557] FILTER	
7				__[558] RATE CAL	
7				__[601] DELTA	
7				__[603] UNSCALED OUTPUT	
7				__[602] INERTIA COMP O/P	
5				SETPOINTS	
6				__[289] SETPOINT 1	
6				__[009] SIGN 2 (A3)	
6				__[007] RATIO 2 (A3)	
6				__[290] SETPOINT 2 (A3)	
6				__[291] SETPOINT 3	
6				__[041] SETPOINT 4	
6				__[357] MAX DEMAND	
6				__[358] MIN DEMAND	
4				STANDSTILL	
5				__[011] STANDSTILL LOGIC	
5				__[012] ZERO THRESHOLD	
5				__[306] SOURCE TAG	Reserved
4				SETPOINT SUM 1	
5				__[006] RATIO 1	
5				__[208] RATIO 0	
5				__[008] SIGN 1	
5				__[292] SIGN 0	
5				__[419] DIVIDER 1	
5				__[420] DIVIDER 0	
5				__[131] DEADBAND WIDTH	
5				__[375] LIMIT	
5				__[423] INPUT 2	
5				__[100] INPUT 1	
5				__[309] INPUT 0	
3				PASSWORD	
4				__[120] ENTER PASSWORD	
4				__[526] BY-PASS PASSWORD	Reserved
4				__[121] CHANGE PASSWORD	
3				ALARM STATUS	
4				__[528] LAST ALARM	
4				__[115] HEALTH WORD	
4				__[116] HEALTH STORE	
4				__[337] THERMISTOR STATE	
4				__[472] SPEED FBK STATE	
4				__[112] STALL TRIP	
4				__[542] REMOTE TRIP	
3				MENUS	
4				__[037] FULL MENUS	
4				__LANGUAGE	
3				SERIAL LINKS	
4				TEC OPTION	
5				__[500] TEC OPTION TYPE	
5				__[501] TEC OPTION IN 1	
5				__[502] TEC OPTION IN 2	
5				__[503] TEC OPTION IN 3	
5				__[504] TEC OPTION IN 4	
5				__[505] TEC OPTION IN 5	
5				__[506] TEC OPTION FAULT	
5				__[507] TEC OPTION VER	

5			_ [508] TEC OPTION OUT 1	
5			_ [509] TEC OPTION OUT 2	
4			__SYSTEM PORT (P3)	
5			__P3 SETUP	
6			_ [130] MODE	
6			__5703 SUPPORT	
7			_ [132] SETPT. RATIO	
7			_ [133] SETPT. SIGN	
7			_ [187] RAW INPUT	
7			_ [189] SCALED INPUT	
6			__BISYNCH SUPPORT	
7			_ [329] GROUP ID (GID)	
7			_ [330] UNIT ID (UID)	
7			_ [332] ERROR REPORT	
6			_ [198] P3 BAUD RATE	
5			__DUMP MMI (TX)	
5			__UDP XFER (TX)	
5			_ [155] VERSION NUMBER	
4			__PNO CONFIG	
5			_ [312] PNO 112	
5			_ [313] PNO 113	
5			_ [314] PNO 114	
5			_ [315] PNO 115	
5			_ [316] PNO 116	
5			_ [317] PNO 117	
5			_ [318] PNO 118	
5			_ [319] PNO 119	
5			_ [320] PNO 120	
5			_ [321] PNO 121	
5			_ [322] PNO 122	
5			_ [323] PNO 123	
5			_ [324] PNO 124	
5			_ [325] PNO 125	
5			_ [326] PNO 126	
5			_ [327] PNO 127	
3			__SYSTEM	
4			__SOFTWARE	
4			__CONFIGURE I/O	
5			_ [039] CONFIGURE ENABLE	
5			__ANALOG INPUTS	
6			__ANIN 1 (A2)	
7			_ [230] CALIBRATION	
7			_ [231] MAX VALUE	
7			_ [232] MIN VALUE	
7			_ [246] DESTINATION TAG	
6			__ANIN 2 (A3)	
7			_ [233] CALIBRATION	
7			_ [234] MAX VALUE	
7			_ [235] MIN VALUE	
7			_ [493] OUTPUT	
6			__ANIN 3 (A4)	
7			_ [236] CALIBRATION	
7			_ [237] MAX VALUE	
7			_ [238] MIN VALUE	
7			_ [249] DESTINATION TAG	
6			__ANIN 4 (A5)	
7			_ [239] CALIBRATION	
7			_ [240] MAX VALUE	
7			_ [241] MIN VALUE	
7			_ [250] DESTINATION TAG	
6			__ANIN 5 (A6)	
7			_ [242] CALIBRATION	
7			_ [243] MAX VALUE	
7			_ [244] MIN VALUE	
7			_ [247] DESTINATION TAG	
5			__ANALOG OUTPUTS	
6			__ANOUT 1 (A7)	
7			_ [245] % TO GET 10V	

10-26 Parameter Specification Table

7				__[362] MODULUS
7				__[464] OFFSET
7				__[251] SOURCE TAG
6				__ANOUT 2 (A8)
7				__[248] % TO GET 10V
7				__[363] MODULUS
7				__[465] OFFSET
7				__[252] SOURCE TAG
5				__DIGITAL INPUTS
6				__DIGITAL INPUT C4
7				__[494] DESTINATION TAG
6				__DIGITAL INPUT C5
7				__[495] DESTINATION TAG
6				__DIGIN 1 (C6)
7				__[103] VALUE FOR TRUE
7				__[104] VALUE FOR FALSE
7				__[102] DESTINATION TAG
6				__DIGIN 2 (C7)
7				__[106] VALUE FOR TRUE
7				__[107] VALUE FOR FALSE
7				__[105] DESTINATION TAG
6				__DIGIN 3 (C8)
7				__[109] VALUE FOR TRUE
7				__[110] VALUE FOR FALSE
7				__[108] DESTINATION TAG
5				__DIGITAL OUTPUTS
6				__DIGOUT 1 (B5)
7				__[195] THRESHOLD (>)
7				__[043] MODULUS
7				__[097] SOURCE TAG
7				__[359] INVERTED
6				__DIGOUT 2 (B6)
7				__[196] THRESHOLD (>)
7				__[044] MODULUS
7				__[098] SOURCE TAG
7				__[360] INVERTED
6				__DIGOUT 3 (B7)
7				__[197] THRESHOLD (>)
7				__[045] MODULUS
7				__[099] SOURCE TAG
7				__[361] INVERTED
5				__CONFIGURE 5703
6				__[134] SOURCE TAG
6				__[135] DESTINATION TAG
5				__BLOCK DIAGRAM
6				__[293] RAMP O/P DEST
6				__[294] SPT SUM 1 DEST
6				__[400] PID O/P DEST
6				__[431] DIAMETER
6				__[442] TAPER
6				__[450] SETPOINT SUM 2
6				__[435] POS. I CLAMP
6				__[436] NEG. I CLAMP
6				__[478] TENS+COMP CALC.
6				__[260] RAISE/LOWER DEST
6				__[573] PRESET DEST
6				__[590] SRAMP DEST
5				__INTERNAL LINKS
6				__LINK 1
7				__[364] SOURCE TAG
7				__[365] DESTINATION TAG
6				__LINK 2
7				__[366] SOURCE TAG
7				__[367] DESTINATION TAG
6				__LINK 3
7				__[368] SOURCE TAG
7				__[369] DESTINATION TAG
6				__LINK 4

Parameter Specification Table 10-27

7				__[370] SOURCE TAG	
7				__[371] DESTINATION TAG	
6				LINK 5	
7				__[454] SOURCE TAG	
7				__[455] DESTINATION TAG	
6				LINK 6	
7				__[456] SOURCE TAG	
7				__[457] DESTINATION TAG	
6				LINK 7	
7				__[458] SOURCE TAG	
7				__[459] DESTINATION TAG	
6				LINK 8	
7				__[460] SOURCE TAG	
7				__[461] DESTINATION TAG	
6				LINK 9	
7				__[467] SOURCE TAG	
7				__[468] DESTINATION TAG	
6				LINK 10	
7				__[469] SOURCE TAG	
7				__[470] DESTINATION TAG	
6				LINK 11	
7				__[390] SOURCE TAG	
7				__[391] DESTINATION TAG	
7				__[392] ADVANCED	
7				__[393] MODE	
7				__[394] AUX.SOURCE	
6				LINK 12	
7				__[395] SOURCE TAG	
7				__[396] DESTINATION TAG	
7				__[397] ADVANCED	
7				__[398] MODE	
7				__[399] AUX.SOURCE	
4				RESERVED	
5				FACTORY USE ONLY	
6				DO NOT ALTER !!	
7				__[162] MIN MMI CYCLE TM	Reserved
7				__[163] ILOOP PI MODE	Reserved
7				__[164] TOGGLE PERIOD	Reserved
7				__[165] TOGGLE REF 1	Reserved
7				__[166] SEL. INT/CUR/SPD	Reserved
7				__[167] TOGGLE REF 2	Reserved
7				__[190] PEAK HW SLOPE	Reserved
7				__[226] PEAK HW OFFSET	Reserved
7				__[211] SYS HEALTH INHIB	Reserved
7				__[194] DISC ADAPT POT	Reserved
7				__[193] TICK LENGTH	Reserved
7				__[310] AUTOCAL	Reserved
7				__[311] IAINST OFFSET	Reserved
7				__[213] ZERO CUR OFFSET	Reserved
7				__[214] ZCD THRESHOLD	Reserved
7				__[221] MMI FILTER T.C.	Reserved
7				__[222] PRED STEP	Reserved
7				__[223] SCAN THRESHOLD	Reserved
7				__[034] FIELD FBKSTOP	Reserved
7				__[035] FIELD FFRSTOP	Reserved
7				__[036] IFFB DELAY	Reserved
7				__[154] II	Reserved
7				__[101] MIN BS DEAD TIME	Reserved
7				__[553] MAX BS DEAD TIME	Reserved
7				__[356] TOTAL I DMD	Reserved
7				__[608] phang dg	Reserved
7				__[609] phangE_n dg	Reserved
7				__[623] EXTENDED PLL	Reserved
7				__[276] PLL PROP	Reserved
7				__[277] PLL INT	Reserved
7				__[386] FILTER T.C.	Reserved
7				__[279] ARM ENDSTOP	Reserved
7				__[283] SCAN TC	Reserved

10-28 Parameter Specification Table

7				__[280]	HF C/O DISC GAIN	Reserved
7				__[281]	HF C/O FILTER TC	Reserved
7				__[282]	BEMF THRESHOLD	Reserved
7				__[265]	ANALOG IP OFFSET	Reserved
7				__[388]	SYNC OFFSET	Reserved
7				__[205]	dI/dt	Reserved
7				__[336]	CHANGEOVER BIAS	Reserved
7				__[471]	STANDBY FIELD	Reserved
7				__[476]	3-PHASE FIELD	Reserved
7				__[550]	ENABLE 12 PULSE	Reserved
7				__[551]	MASTER BRIDGE	Reserved
7				__[552]	SLAVE BRIDGE	Reserved
7				__[522]	NOT 570 STACK	Reserved
7				__[158]	OP STATION ERROR	Reserved
7				__[040]	SYSTEM IO	Reserved
7				__[046]	/ILOOP SUSPEND	Reserved
7				__[114]	SEQ STATE	Reserved
7				__[117]	HEALTH INHIBIT	Reserved
7				__[215]	G&L POWER METER	Reserved
7				__[267]	POSITION COUNT	Reserved
7				__[275]	POSITION DIVIDER	Reserved
7				__[387]	RAW POS COUNT	Reserved
7				__[278]	PLL ERROR	Reserved
7				__[295]	FILTER INPUT	Reserved
7				__[296]	FILTER OUTPUT	Reserved
7				__[372]	R/L DELTA	Reserved
7				__[373]	SYS RAMP DELTA	Reserved
7				__[389]	PERCENT RPM	Reserved
7				__[529]	PNO 39	Reserved
7				__[530]	PNO 47	Reserved
7				__[531]	PNO 55	Reserved
7				__[532]	PNO 63	Reserved
7				__[533]	PNO 71	Reserved
7				__P[534]	NO 95	Reserved
4					PEEK	
5				__[123]	PEEK DATA	
5				__[124]	PEEK SCALE	
4					miniLINK	
5				__[339]	VALUE 1	
5				__[340]	VALUE 2	
5				__[341]	VALUE 3	
5				__[342]	VALUE 4	
5				__[343]	VALUE 5	
5				__[344]	VALUE 6	
5				__[345]	VALUE 7	
5				__[379]	VALUE 8	
5				__[380]	VALUE 9	
5				__[381]	VALUE 10	
5				__[382]	VALUE 11	
5				__[383]	VALUE 12	
5				__[384]	VALUE 13	
5				__[385]	VALUE 14	
5				__[346]	LOGIC 1	
5				__[347]	LOGIC 2	
5				__[348]	LOGIC 3	
5				__[349]	LOGIC 4	
5				__[350]	LOGIC 5	
5				__[351]	LOGIC 6	
5				__[352]	LOGIC 7	
5				__[353]	LOGIC 8	
3				__[354]	PARAMETER SAVE	
3					CONFIGURE DRIVE	
4				__[039]	CONFIGURE ENABLE	
4				__[521]	NOM MOTOR VOLTS	
4				__[523]	ARMATURE CURRENT	
4				__[524]	FIELD CURRENT	
4				__[543]	ZERO CAL INPUTS	Reserved
4				__[209]	FLD.CTRL MODE	

Parameter Specification Table 10-29

4			__[210] FLD.VOLTS RATIO
4			__[421] MAIN CURR. LIMIT
4			__[018] AUTOTUNE
4			__[047] SPEED FBK SELECT
4			__[024] ENCODER LINES
4			__[022] ENCODER RPM
4			__[049] ENCODER SIGN
4			__[013] SPD.INT.TIME
4			__[014] SPD.PROP.GAIN

10-30 Parameter Specification Table

TECHNICAL SPECIFICATIONS

Environmental Details	
Operating Temperature	Frame 1 : 0°C to +45°C (32°F to 113°F) Frame 2 : 0°C to +45°C (32°F to 113°F) Frame 3 : 0°C to +45°C (32°F to 113°F) Frame 4 : 0°C to +40°C (32°F to 104°F)* Frame 5 : 0°C to +40°C (32°F to 104°F)* Frame H : 0°C to +40°C (32°F to 104°F)* * Can be enclosed in a 40°C (104°F) ambient when using the external vent kit supplied with the drive. Operating temperature is defined as the ambient temperature to the immediate surround of the drive, when the drive and other equipment adjacent to it is operating at worst case conditions. Output current values should be derated at 1% per degree Centigrade above rated temperature up to a maximum of 55°C (126°F).
Storage Temperature	-25°C to +55°C (-13°F to 126°F)
Shipping Temperature	-25°C to +70 °C (-13°F to 158°F)
Product Enclosure Rating	IP00 (Europe) [Frame 1 unit is IP20] UL Open Type (North America/Canada) If the product enclosure is totally enclosed, the exposed metal surface dissipates approximately 50W/m ² for a 10°C temperature rise of internal air above ambient.
Vibration	Test Fc of EN60068-2-6 19Hz <= f <= 57Hz sinusoidal 0.075mm amplitude 57Hz <= f <= 150Hz sinusoidal 1g 10 sweep cycles per axis on each of three mutually perpendicular axis
Altitude	If > 500 metres (1650 feet) above sea level, derate Motor Power rating by 1% per 200 metres (660 feet) to a maximum of 5,000 metres (16,500 feet)
Humidity	Maximum 85% relative humidity at 40°C non-condensing
Atmosphere	Non flammable, non corrosive and dust free
Climatic Conditions	Class 3k3, as defined by EN60721-3-3 (1995)
Safety	
Europe	EN50178 (1998), when fitted inside a cubicle
North America/Canada	UL508C
Overvoltage Category	Overvoltage Category III (3-phase supply), Overvoltage Category II (auxiliary supply)
Pollution Degree	Pollution Degree 2

EMC Compliance	
All models	European Community Directive 89/336/EEC
All models	EN61800-3 (1997) Table 11 : conducted emissions when installed in accordance with the instructions in Chapter 3. Refer to "Mounting the Converter". EN61800-3 (1997) Immunity requirements EN61800-3 (1997) Table 12 Radiated emissions
If fitted with specified external filters (except Frame H)	EN61800-3 (1997) restricted distribution: conducted emissions

11-2 Technical Specifications

Electrical Ratings - Power Circuit

Refer to Chapter 3: "Earth Fault Monitoring Systems" for circuit breaker details.
 Motor HP ratings as NEC Table 430-147: "Full Load Current in Amperes, DC Motors"

Motor HP @ 500V dc (HP)	Power @ 500V dc (kW)	Output Current with full overload rating (A) *	Field Current (A)	Total Losses @ Full Load (W)	Symmetrical Fault Current rms (kA)
Frame 1					
7.5	7	15	4	57	5
20	15	35	4	117	5
Frame 2					
30	22	55	10	182	10
40	30	70	10	234	10
50	37	90	10	295	10
60	45	110	10	354	10
75	55	125	10	442	10
100	75	165	10	519	10
Frame 3					
125	100	206	10	780	10
150	120	246	10	866	10
Frame 4					
200	150	360	30	1230	18
250	187	425	30	1410	18
300	225	490	30	1590	18
400	327	700	30	2265	30
500	335	815	30	2580	30
Frame 5					
600	480	1000	30	3090	85
700	525	1200	30	3690	85
800	600	1334	30	4092	85
Frame H					
600	450	1050	60	3780	100
900	675	1450	60	5280	100
1000	750	1600	60	6000	100
1250	937	2000	60	6780	100
1500	1120	2400	60	8280	100

Output current values should be derated at 1% per degree Centigrade above rated temperature, up to a maximum of 55°C.

Output current values should be derated at an altitude of 500 metres (1640 feet) above sea level at a rate of 1% per 200 metres (656 feet) to a maximum of 5000 metres.

Power Supply Details			
3-Phase Supply	LV Build	All Frames	110-220V \pm 10% ac, 50/60Hz \pm 5%, line-to-line, earth/ground referenced (TN) and non-earth/ground referenced (IT)
	Standard	All Frames	380-500V \pm 10% ac, 50/60Hz \pm 5%, line-to-line, earth/ground referenced (TN) and non-earth/ground referenced (IT)
	HV Build	Frame 4 Frame 5	500-600V \pm 10% ac, 50/60Hz \pm 5%, line-to-line, ground referenced (TN) and non-ground referenced (IT)
	HV Build	Frame H	380-690V \pm 10% ac, 50/60Hz \pm 5%, line-to-line, earth/ground referenced (TN) and non-earth/ground referenced (IT)
Supply Current		(0.9 x I _{dc}) Amps ac rms	
Field Supply Current		(1 x I _{dc}) Amps ac rms (build related)	
Field Supply Voltage		Build-related	
Phase		3-phase rotation insensitive, no adjustment necessary for frequency change	

Control Power Supply Details	
Control Supply	110-230V \pm 10%, 50-60Hz \pm 10%, single phase, Overvoltage Category II “Where auxiliary cooling fans are used, then the supply is set by the requirement for the fan, i.e. 115V \pm 10% or 230V \pm 10%.” Refer to the Model No. and Chapter 2: “An Overview of the Drive ” - Understanding the Product Code
Auxiliary Supply Current	3A ac rms maximum. Nominal current used for power supplies: 0.5A at 115V ac Fan current for integral fans: refer to Cooling Fans, page 11-22. The remainder is available for driving the AC Contactor. The control power is supplied by a built-in control transformer on Frame 3 and higher.
Contactor Output	3A maximum at the control voltage

11-4 Technical Specifications

AC Line Reactor (Frames 1, 2, 3, 4 & 5)

To correctly isolate the 590+ DRV from the ac power system, and to protect other equipment from transients on the power system, always use the recommended external ac line reactor (or alternatively a transformer may achieve the necessary isolation).

The Frame 5 requires two ac line reactors (one in front of each of the paralleled drives). This provides isolating impedance between the drive and its ac power source. It also provides the necessary impedance between the paralleled drives, forcing them to share the total motor current evenly. The Frame 5 drive must still use two ac line reactors when a transformer is used for isolation, however, the reactors can be of a much lower inductance, typically 3-5 μ H.

DRVs with Drive Ratings below 100A cannot achieve conformance with EN61800-3 Table 11 using only a 50 μ H line choke. Capacitors must be fitted between phase and ground to achieve conformance.

For use without filters (use with capacitors for armature currents <100A, refer to Chapter 3: "AC Line Reactor")

Hp (240/500V) (V)	Drive Rating (A)	Reactor Current (Amps AC)	Inductance (μ H)	Eurotherm Drives Part No.
Frame 1				
3/7.5	15	13.5	50	CO466448U015
10/20	35	36	50	CO466448U040
Frame 2				
10/20	40	36	50	CO466448U040
15/30	55	63	50	CO466448U070
20/40	70	63	50	CO466448U070
25/50	90	100	50	CO466448U110
30/60	110	100	50	CO466448U110
40/75	125	148.5	50	CO466448U165
50/100	165	148.5	50	CO466448U165
Frame 3				
60/125	206	360	50	CO057960
75/150	246	360	50	CO057960
AC Line Reactors @ 2% line impedance for conformance with EN55011 Class A when used with specified filters:				
Frame 1				
3/7.5	15	13.5	1130	CO466449U015
10/20	35	36	424	CO466449U040
Frame 2				
10/20	40	36	424	CO466449U040
15/30	55	63	242	CO466449U070
20/40	70	63	242	CO466449U070
25/50	90	100	154	CO466449U110
30/60	110	100	154	CO466449U110
40/75	125	148.5	103	CO466449U165
50/100	165	148.5	103	CO466449U165
Frame 3				
60/125	206	360	50	CO057960
75/150	246	360	50	CO057960
AC Line Reactors @ 1% line impedance for conformance with EN55011 Class A when used with specified filters:				
Frame 4				
200	360	342	30 μ H	CO466709U038
250	425	450	25 μ H	CO466709U050
300	490	450	25 μ H	CO466709U050
400	700	653	20 μ H	CO466709U073
500	815	747	15 μ H	CO466709U083

AC Line Reactor (Frames 1, 2, 3, 4 & 5)

To correctly isolate the 590+ DRV from the ac power system, and to protect other equipment from transients on the power system, always use the recommended external ac line reactor (or alternatively a transformer may achieve the necessary isolation).

The Frame 5 requires two ac line reactors (one in front of each of the paralleled drives). This provides isolating impedance between the drive and its ac power source. It also provides the necessary impedance between the paralleled drives, forcing them to share the total motor current evenly. The Frame 5 drive must still use two ac line reactors when a transformer is used for isolation, however, the reactors can be of a much lower inductance, typically 3-5µH.

DRVs with Drive Ratings below 100A cannot achieve conformance with EN61800-3 Table 11 using only a 50µH line choke. Capacitors must be fitted between phase and ground to achieve conformance.

For use without filters (use with capacitors for armature currents <100A, refer to Chapter 3: "AC Line Reactor")

Hp (240/500V) (V)	Drive Rating (A)	Reactor Current (Amps AC)	Inductance (µH)	Eurotherm Drives Part No.
Frame 5 (2 AC Line Reactors required)				
600	1000	653	20 µH	CO466709U073
700	1200	653	20 µH	CO466709U073
800	1334	747	15 µH	CO466709U083
Use with transformer only:				
600	1000	567	5 µH	CO466709U120
700	1200	567	5 µH	CO466709U120
800	1334	747	5 µH	CO466709U160

AC Line Reactor (Frame H)

Always use the recommended external AC Line Reactor.

Drive Rating	AC Current (A)	Inductance (µH)	Eurotherm Drives Part No.	
AC Line Reactor @ 2% line impedance				
Frame H				
850, 1020A (500, 600hp)	LV	1080	15	CO466250U012
	HV	1080	20	CO466251U012
1120, 1280, 1440A (700, 800, 900Hp)	LV	1620	10	CO466250U017
	HV	1620	15	CO466251U017
1600, 2000A (1000, 1250Hp)	LV	1980	10	CO466250U022
	HV	1980	15	CO466251U022
2400A (1500Hp)	LV	2520	7.5	CO466250U027
	HV	2520	10	CO466251U027

11-6 Technical Specifications

External AC Supply (RFI) Filters

Filters must only be fitted on the mains side of the contactor.

AC supply filter part numbers for conformance with EN55011 Class A.

Drive Rating		Total Filter Watt Loss	Eurotherm Filter Part No.
(Hp @ 500V)	(A)	(W)	
Frame 1			
7.5	15	11	1 off CO467844U015
20	35	16	1 off CO467844U040
Frame 2			
20	40	16	1 off CO467844U040
30	55	75	1 off CO467844U070
40	70	75	1 off CO467844U070
50	90	75	1 off CO467844U110
60	110	75	1 off CO467844U110
75	125	158	1 off CO467844U165
100	165	158	1 off CO467844U165
Frame 3			
125	206	50	1 off CO467844U180
150	246	50	1 off CO467843U340
Frame 4			
360 (please contact Eurotherm Drives)			1 off CO467843U340
425 (please contact Eurotherm Drives)			1 off CO467843U340
490 (please contact Eurotherm Drives)			1 off CO467843U340
700 (please contact Eurotherm Drives)			1 off CO467843U340
815 (please contact Eurotherm Drives)			1 off CO467843U340
Frame 5			
1580 (please contact Eurotherm Drives)			

Input Line Fuses (Frames 1, 2, 3, 4, & 5)

For fuses where compliance to UL Standards are required, refer to Chapter 12: “Installing the Drive” - Requirements for UL Compliance.

Input Line Semiconductor Fuses are internally fitted on all DRV units

Armature Semiconductor Fuses are fitted on Regenerative DRV units

Drive Rating (Hp @ 240/500V) (A)		Line Fuses (Eurotherm Part #)	Armature Fuses (Eurotherm Part #)
Frame 1			
3/7.5	15	A60Q40 (Gould Part #)	A70QS50-14F (Gould Part #)
10/20	35	A60Q40 (Gould Part #)	A70QS50-14F (Gould Part #)
Frame 2			
10/20	40	A50QS80 (Gould Part #)	A70QS80-14F (Gould Part #)
15/30	55	A50QS80 (Gould Part #)	A70QS80 (Gould Part #)
20/40	70	A50QS80 (Gould Part #)	A70QS80 (Gould Part #)
25/50	90	A50QS125 (Gould Part #)	A70QS150 (Gould Part #)
30/60	110	A50QS125 (Gould Part #)	A70QS150 (Gould Part #)
40/75	125	A50QS200 (Gould Part #)	A70QS200 (Gould Part #)
50/100	165	A50QS200 (Gould Part #)	A70QS200 (Gould Part #)
Frame 3			
60/125	206	CS350265	CS350402
75/150	246	CS350265	CS352024
Frame 4			
200	360	CS470689U0400	CS470690U0450
250	425	CS470689U0500	CS470690U0630
300	490	CS470689U0630	CS470690U0700
400	700	CS470689U0800	CS470690U0900
500	815	CS470689U0900	CS470690U1100
Frame 5			
600	1000	CS470689U0630 (6 per drive)	CS470690U1200
700	1200	CS470689U0700 (6 per drive)	CS470690U1500
800	1334	CS470689U0800 (6 per drive)	CS470690U1600
900	1500	not applicable	FWJ 1800A (Gould Part #)

11-8 Technical Specifications

SCR Leg Fuses (Frame H)

Input Line Semiconductor Fuses are internally fitted on all units

Drive Rating		Non-regenerative		Regenerative	
(A)	Hp (500V)	Line Fuse Rating	Eurotherm Drives Part No.	Limb Fuse Rating	Eurotherm Drives Part No.
Frame H					
500	850	500A x 2	CS466260U050	350A x 2	CS466261U035
600	1020	800A x 2	CS466260U080	550A x 2	CS466261U055
700	1120	800A x 2	CS466260U080	550A x 2	CS466261U055
800	1280	800A x 2	CS466260U080	550A x 2	CS466261U055
900	1440	100A x 2	CS466260U100	700A x 2	CS466261U070
1000	1600	100A x 2	CS466260U100	700A x 2	CS466261U070
1250	2000	1250A x 2	CS466260U125	900A x 2	CS466261U090
1500	2400	1250A x 2	CS466260U125	900A x 2	CS466261U090

Power Supply Fuses

Power Board	Identification	Fuse Rating	Eurotherm Part No.
Frame 1			
AH466407 (terminal board)	FS1, 5x20mm glass slow-blow (for auxiliary supply, contactor, fan supply)	3A	CH540033
Frame 2			
AH470330	FS1, 5x20mm glass slow-blow (for auxiliary supply, contactor, fan supply)	3A	CH540033
Frame 3			
AH385851	FS1, 5x20mm glass slow-blow (for auxiliary supply, contactor, fan supply)	3A	CH540033
Frame 4 & 5			
AH466701	FS3 and FS4, 5x20mm glass slow-blow (for auxiliary supply, contactor, fan supply)	3A	CH540033
Frame H			
AH466001	FS1, 5x20mm glass slow-blow (for auxiliary supply, contactor, fan supply)	3A	CH540033

Field Fuses

Identification	Fuse Rating	Eurotherm Part No.
Frames 1, 2 & 3		
10x38mm	10A	CS470407U010
Frame 4 & 5		
10x38mm	30A	CS470407U030
External field fuses are required for Frame H units.		

Earthing/Grounding Safety Details	
Earthing/Grounding	<p>Permanent earthing/grounding is mandatory on all units because the earth/ground leakage current exceeds 3.5mA ac/10mA dc under normal operating conditions. Permanent earthing/grounding can be made in two ways::</p> <ol style="list-style-type: none"> 1. By using a copper conductor of at least 10mm² cross-sectional area. 2. By using a second conductor, through separate terminals electrically parallel to the protective conductor. <p>Note: <i>Each conductor itself must meet the local requirements for a protective earth/ground conductor.</i></p>
Input Supply Details (TN) and (IT)	<p>Units with or without external filters are suitable for use on earth/ground referenced (TN) supplies, but units used with a filter are not recommended for non-earth/ground referenced (IT) supplies.</p>
Ground Leakage Current	<p>>50mA (all models)</p>

Terminal Definitions (Digital/Analog Inputs & Outputs)

User inputs/outputs are IEC1131 compliant.

<p>Digital Input</p>	<p>Rated Voltage:</p> <ul style="list-style-type: none"> • Off Region: input voltage input current • Transition Region: input voltage input current • On Region: input voltage input current <p>Input Impedance Sample Time</p>	<p>24V dc</p> <p>minimum -3V, maximum 5V minimum not defined, maximum 15mA</p> <p>minimum 5V, maximum 15V minimum 0.5mA, maximum 15mA</p> <p>minimum 15V, maximum 30V minimum 2mA, maximum 15mA</p> <p>4.7kΩ 10ms</p>
<p>Digital Output</p> <p>These outputs are active high and source current from the terminal to the load. Thus the load must be connected between the output and the signal earth/ground. A free-wheel diode is included in the output to protect the output transistor when switching inductive loads such as relays.</p>	<p>Digital Output Voltage Digital Output Current Output Update Rate Output Impedance Source/Sink Rated Current Temporary Overload Overload Protection Overload Recover Reverse Voltage Protection Operating Voltage Off state leakage current</p>	<p>+24V dc</p> <p>+100mA maximum source</p> <p>10ms</p> <p>Negligible up to 50mA load, short circuit protection provided. Source</p> <p>0.1A</p> <p>None</p> <p>Indefinite</p> <p>Automatic</p> <p>Yes</p> <p><30V dc</p> <p><0.4mA</p>
<p>Analog Input/Output</p> <p>Terminal blocks A, B, and C are located on the control board each block being a 9 way plug-in connector. In addition to terminal blocks A, B and C, terminal blocks G and H provide connections when the two option modules are fitted on the control board.</p>	<p>Input Resolution Output Resolution Input Impedance Input Impedance Limit Maximum Input Sample Rate Input Overload Capability Output Capacity Output Update Rate Output Overdrive Capability</p>	<p>12 Bit plus sign, i.e. 10mV = 0.025% of full scale deflection</p> <p>10 Bit plus sign, i.e. 10mV = 0.1% of full scale deflection</p> <p>100kΩ with a 1ms filter for Analog I/P (A3) and 2ms for others</p> <p>≥10kΩ (signal range -10V to +10V)</p> <p>10ms (typically), 3ms for Analog I/P 2 (A3)</p> <p>10%, i.e. maximum recognisable voltage 11V. Analog Tachogenerator input should be applied to Terminal G3 on Calibration Option Card only</p> <p>10V at 5mA. Short circuit protected</p> <p>10ms</p> <p>10%, i.e. maximum output 11V</p>

Terminal Information - Power Board (Frames 1, 2, 3, 4 & 5)

Note that on Frame 1 and 2 units, L1, L2, L3, A+ and A- terminals are located on a separate Terminal Board. On Frame 3, 4 & 5 units, they are busbar connections.

Frame 3 units have terminal designations D1 to D8, shown in brackets in the Terminal Number column of this table.

Terminal Description	Terminal Function	Signal Level	Terminal Number
Mains Supply L1	Three phase mains power input, phase reference Line 1	500Vac maximum 50-60Hz line-to-line	L1
Mains Supply L2	Three phase mains power input, phase reference Line 2	500Vac maximum 50-60Hz line-to-line	L2
Mains Supply L3	Three phase mains power input, phase reference Line 3	500Vac maximum 50-60Hz line-to-line	L3
Armature connection positive A+	Drive dc power output, reference Armature Positive connection to dc motor	550Vdc maximum with respect to A- (maximum voltage dependent upon the supply voltage, the ratio being: V_{out} is approximately equal to 1.15Vac supply)	A+
Armature connection negative A-	Drive dc power output, reference Armature Negative connection to dc motor	550Vdc maximum with respect to A+ (maximum voltage dependent upon the supply voltage, the ratio being: V_{out} is approximately equal to 1.15Vac supply)	A-
Auxiliary N/C Volt-Free MC Contact : 1, 2	Used to indicate the status of the main contactor (L1, L2, L3). See TB4.	-	1, 2
External field supply FL1	External single phase ac Line 1 input to field bridge.	500V ac maximum, 50-60Hz line-to-line	FL1 (D1)
External field supply FL2	External single phase ac Line 2 input to field bridge.	500V ac maximum, 50-60Hz line-to-line	FL2 (D2)
This feature not available on Frame 1 units	<p>Required AC Input Voltage = $1.11 \times \text{Nominal DC Output}$.</p> <p>The field regulator will control the field current provided that the Nominal DC Output voltage exceeds the field voltage by at least 10%.</p> <p>i.e. $V_{AC} = 1.11 \times V_{DC}$ and $V_{DC} = 1.1 \times V_{FIELD}$ therefore $V_{AC} = 1.22 \times V_{FIELD}$</p> <p>The external AC supply must be fitted with high speed fuses to protect the field regulator. For drives with 10A field capability 10A fuses should be used.</p> <p><i>Note: When using an external ac input it is important to have the correct phase relationship on the terminals. The supply must be derived from L1 (Red) and L2 (Yellow) phases directly or indirectly through a transformer. L1 must be connected to FL1, and L2 to FL2.</i></p>		

Terminal Information - Power Board (Frames 1, 2, 3, 4 & 5)

Note that on Frame 1 and 2 units, L1, L2, L3, A+ and A- terminals are located on a separate Terminal Board. On Frame 3, 4 & 5 units, they are busbar connections.

Frame 3 units have terminal designations D1 to D8, shown in brackets in the Terminal Number column of this table.

Terminal Description	Terminal Function	Signal Level	Terminal Number
Field Output F-	DC supply for motor field connections. The DC output voltage at these terminals will depend upon the AC supply voltage and the mode of field control. Voltage Control The output voltage will be determined by the ratio parameter in the field variables. The relationship between the dc output voltage and AC input voltage is determined by the equation:- $V_{dc} = \frac{V_{ratio} \times V_{AC}}{100}$ The default value of Vratio is 90% hence the DC output voltage will be the same as for a full wave diode rectifier, i.e., 90% is maximum output.	0.9 x Vac	F- (D3)
Field Output F+	DC supply for motor field connections.	0.9 x Vac	F+ (D4)
Auxiliary supply Aux N Auxiliary supply Aux L	Neutral Line These terminals are the mains input connections for the switch mode power supply and contactor control relay supply.	115V 50-60Hz line-to-line 115V 50-60Hz line-to-line	CONTROL N (D7) L (D8)
Main contactor coil Con L	Line This terminal is the switched output from the contactor control relay and is derived from the auxiliary supply at terminal D8. The output is internally fused at 3A hence contactor coils having a high pick-up current must be operated via a slave relay. <i>Note: The contacts of the Contactor Control Relay are suppressed by a series connected resistor (680 Ohms) and capacitor (22nF) to protect the relay contacts. Users should be aware that when the contactor Control Relay is "De-energised", a leakage current of approximately 2mA can be expected and this should be considered when interfacing to these terminals. Typically, there could be the energisation of very sensitive relays.</i>	115V 50-60Hz line-to-line	EXT CONTACTOR L (D5)

Terminal Information - Power Board (Frames 1, 2, 3, 4 & 5)

Note that on Frame 1 and 2 units, L1, L2, L3, A+ and A- terminals are located on a separate Terminal Board. On Frame 3, 4 & 5 units, they are busbar connections.

Frame 3 units have terminal designations D1 to D8, shown in brackets in the Terminal Number column of this table.

Terminal Description	Terminal Function	Signal Level	Terminal Number
Main contactor coil Con N	Neutral This terminal is internally connected to the auxiliary supply neutral and provides a convenient connection point for the contactor coil neutral connection.	115V 50-60Hz line-to-line	N (D6)
Thermistor Therm +	Isolated Thermistor Input – positive It is good practice to protect DC motors against sustained thermal overloads by fitting temperature sensitive resistors or switches in the field and interpole windings of the machine. The drive complies with the requirements of IEC 34-11-2-2 and is suitable for use with Mark A detectors. These devices have a low resistance (typically 200Ω) up to a reference temperature 125°C). Above this temperature, their resistance rises rapidly to greater than 4kΩ. The preferred installation is for three detectors to be connected in series between terminals Th1 and Th2. The 590+ will indicate a motor overtemperature alarm if the external resistance between Th1 and Th2 exceeds 3kΩ. The alarm can be reset when the resistance falls below 750Ω. Terminals Th1 and Th2 must be jumpered if overtemperature sensors are not used.	See description	MOTOR THERMISTOR Th1 (THERM+) (THERM+ & THERM –, found on Frame 3 units, are located on a separate pcb to the left of the power board in the door assembly)
Thermistor Therm -	Isolated Thermistor Input – negative See description above	See description	Th2 (THERM-)
PE	Protective earth/ground - incoming earth/ground	-	STUDS
PE	Protective earth/ground - motor earth/ground	-	STUDS
PE	Protective earth/ground	-	STUDS

11-14 Technical Specifications

Terminal Information - Control Board				
This Control Board is common to all 590+DRV units.				
Terminal Description	Terminal Function	Signal Level	Configurable	Terminal Number
TERMINAL BLOCK A				
0V (Signal)	Zero Volt Reference	0V	N/A	A1
Analog Input 1	Speed Setpoint No. 1	+10V = Full speed setpoint forward -10V = Full speed setpoint reverse	YES	A2
Analog Input 2	Aux. Speed Setpoint/ Current Demand The function of this input is determined by Digital Input No. 3 at terminal C8. C8 open circuit = Speed Setpoint C8 at +24V = Current Demand	+10V = Full speed setpoint forward -10V = Full speed setpoint reverse in speed setpoint mode. +10V = 100% Positive current demand. -10V = 100% Reverse current demand.	NO	A3
Analog Input 3	Ramped Speed Setpoint	+10V = Full speed setpoint -10V = Full speed setpoint reverse	YES	A4
Analog Input 4	Aux. Current Clamp -ve	+10V = 200% Positive current demand -10V = 200% Reverse current clamp	YES	A5
Analog Input 5	Main Current Limit/ Aux. Current Clamp +ve The function of analog inputs 4 and 5 is determined by digital Input No.1 on terminal C6. C6 open circuit. Analog inputs No.5 = Main Current Limit. C6 at +24V. Analog input No. 5 = Auxiliary Current Clamp Positive. Analog Input No. 4 = Auxiliary Current Clamp Negative.		YES	A6
Analog Output 1	Speed Feedback	+10V = Full speed feedback forward. -10V = Full speed feedback reverse.	YES	A7
Analog Output 2	Total Speed Setpoint	+10V = Full speed feedback forward. -10V = Full speed feedback reverse.	YES	A8
Current Meter Output	Buffered Armature Current Output The output can be selected as either Bipolar or Unipolar by the Armature I parameter.	<u>Bipolar Mode</u> +10V = 200% output current forward. -10V = 200% output current reverse. <u>Unipolar Mode</u> +10V = 200% output current.	NO	A9

Terminal Information - Control Board

This Control Board is common to all 590+DRV units.

Terminal Description	Terminal Function	Signal Level	Configurable	Terminal Number
TERMINAL BLOCK B				
0V (Signal)	Zero Volt Reference	0V	N/A	B1
Not Connected	Not Connected			B2
+10V DC Reference	User +10V Reference	+10V at 10mA short circuit protected	N/A	B3
-10V DC Reference	User -10V Reference	-10V at 10mA short circuit protected	YES	B4
Digital Output 1	Zero Speed Detected The operating level of this output can be modified by the standstill zero threshold parameter to give the desired accuracy of operation	+24V at zero speed (100mA maximum)	YES	B5
Digital Output 2	Drive Healthy (Drive Operational) This output is true when the drive is Healthy.	+24V when Healthy (100mA maximum)	YES	B6
Digital Output 3	Drive Ready This output is true when the drive is ready to function, i.e., "locked" into the mains.	+24V when Ready (100mA maximum)	YES	B7
Program Stop Input	Program Stop When the Program Stop input is held at +24V, the drive operates as required by the inputs. When the Program Stop is open circuit or at zero volts, the drive provides a controlled or program stop as defined by the Program Stop parameters.	+24V drive run 0V (o/c) drive program stop Threshold +16V	NO	B8
Coast Stop Input	Coast Stop When the Coast Stop input is at +24V, the drive operates normally. When the Coast Stop is at zero volts or open circuit, the main contactor is open and the drive no longer operates. The motor coasts to rest.	+24V drive run 0V (o/c) drive coasts to rest. Threshold +16V	NO	B9

11-16 Technical Specifications

Terminal Information - Control Board

This Control Board is common to all 590+DRV units.

Terminal Description	Terminal Function	Signal Level	Configurable	Terminal Number
TERMINAL BLOCK C				
0V (Signal)	Zero Volt Reference	0V	N/A	C1
External Trip Input	An external interlock or permissive.	External permissive element should be connected to C1 to run. If not using this feature, connect a jumper between C1 and C2. May be used as an unisolated motor thermal input	NO	C2
Start/Run Input	Start/Run When an input is applied to this terminal, the main contactor will close and the drive will operate provided there are no alarms, program stop/coast stop signals are high and the drive is enabled. When the input is removed the drive will perform a regenerative stop to zero speed. A regenerative stop can only be achieved by a 4 quad regenerative drive; the 2 quad non-regenerative drive will coast to zero speed.	+24V = True/Run 0V (o/c) = False/Normal Stop Threshold + 16V	NO	C3
Jog Input	Jog When the Jog Input is held at +24V, the drive jogs provided input C3 is low. When the Jog Input is removed the drive will ramp down to zero obeying the Jog Ramp Rate.	+24V = True/Jog 0V = False/Stop Threshold +16V	YES	C4
Enable Input	Enable The Enable Input provides a means of electronically inhibiting drive operation. If the enable input is not true all control loops will be inhibited and the drive will not function.	+24V = True/Enable 0V = False/Inhibit Threshold +16V	YES	C5
Digital Input 1	Current Clamp Select This input alters the configuration of the current clamps. With no connection, i.e., false, Analog I/P 5 provides a unipolar current limit. When true, Analog I/P5 is the positive current clamp, Analog I/P 4 is the negative current clamp	+24V = True/Bipolar Clamp 0V = False/Unipolar Clamp Threshold +16V	YES	C6

Terminal Information - Control Board

This Control Board is common to all 590+DRV units.

Terminal Description	Terminal Function	Signal Level	Configurable	Terminal Number
Digital Input 2	<p>Ramp Hold</p> <p>If the input is held true the S-Ramp output is frozen at the last value irrespective of the Ramped Setpoint Input. When false the S-Ramp Output follows the Ramped Setpoint Input with a delay determined by the Acceleration and Deceleration Ramped time parameters.</p>	<p>+24V = True/Hold</p> <p>0V = False/Ramp</p> <p>Threshold + 16V</p>	YES	C7
Digital Input 3	<p>Current Demand Isolate</p> <p>This input alters the drive operation from Speed Control to Current Control. When digital input No. 3 is true, analog input No. 2 provides the current demand and the speed loop is disconnected. When false the speed loop is in control and analog input No. 2 is an auxiliary speed setpoint.</p>	<p>+24V = True/Current</p> <p>0V = False/Speed</p> <p>Threshold + 16V</p>	YES	C8
+24V Supply	+24V	<p>Maximum output current: 200mA</p> <p>Note that the maximum combined consumption for digital outputs 1, 2 & 3 and C9 should not exceed 300mA.</p> <p>Some typical loads are given below:</p> <p>Microtach : 75mA</p> <p>Relays : 50mA each</p> <p>Fiber Optic ancillaries : 50mA each</p> <p>DeviceNetTechnology Box : 50mA</p>	N/A	C9

11-18 Technical Specifications

<h2 style="text-align: center;">Terminal Information (Frame H)</h2> <p style="text-align: center;">These terminals are located externally on the product.</p>		
Terminal Description	Terminal Function	Terminal Number
Three phase supply	Drive supply	L1 - L3
Armature + Armature -	Drive output to motor armature Drive output to motor armature	A+ A-
External field supply (Red Phase) External field supply (Yellow Phase)	External single phase ac Line 1 input to field bridge. External single phase ac Line 2 input to field bridge. Required AC Input Voltage = 1.11 x Nominal DC Output. The field regulator will control the field current provided that the Nominal DC Output voltage exceeds the field voltage by at least 10%. i.e. $V_{AC} = 1.11 \times V_{DC}$ and $V_{DC} = 1.1 \times V_{FIELD}$ therefore $V_{AC} = 1.22 \times V_{FIELD}$ The external AC supply must be fitted with high speed fuses to protect the field regulator. For drives with 10A field capability 10A fuses should be used, those with 20A field capability 20A fuses, etc. <i>Note: When using an external AC input it is important to have the correct phase relationship on the terminals. The supply must be derived from L1 (Red) and L2 (Yellow) phases directly or indirectly through a transformer. L1 must be connected to FL1, and L2 to FL2.</i>	FL1 FL2
Field Output (DC+) Field Output (DC-)	DC supply for motor field connections. DC supply for motor field connections. The DC output voltage at these terminals will depend upon the AC supply voltage and the mode of field control. Please refer to the Product Manual for details of the drive capability and operation. Maximum drive field output capability is 60A DC.	F+ F-
External Armature Volts Sense (+) External Armature Volts Sense (-)	This connection can be used if a more accurate value of armature voltage is required, for example a DC line reactor may be fitted. This terminal should be connected directly to the positive motor armature terminal. This terminal should be connected directly to the negative motor armature terminal (see above).	MVA+ MVA-
Auxiliary Supply Live 110-240V Auxiliary Supply Neutral	These terminals are the mains input connections for control supply transformer and contactor relay supply	L N
Main contactor coil V AC Main contactor coil V AC	This terminal is internally connected to the auxiliary supply neutral and provides a convenient connection point for the contactor coil neutral connection This terminal is the switched output from the contactor control relay and is derived from the auxiliary supply. The output is internally fused at 3A hence contactor coils having a high pick-up current must be operated via a slave relay. <i>Note: The contacts of the Contactor Control Relay are suppressed by a series connected resistor (680 Ohms) and capacitor (22nF) to protect the relay contacts. Users should be aware that when the contactor Control Relay is "De-energised", a leakage current of approximately 2mA can be expected and this should be considered when interfacing to these terminals. Typically, there could be the energisation of very sensitive relays.</i>	N C

Terminal Information - Option Boards			
Terminal Description	Terminal Function	Signal Level	Terminal Number
TERMINAL BLOCK G (SWITCHABLE TACHO CALIBRATION OPTION)			
AC Tacho input	AC		G1
AC Tacho input	AC		G2
+ DC Tacho input	+DC		G3
- DC Tacho input	- DC		G4
Tacho Out	Calibrated Tacho Output		P3
(5701 MICROTACH RECEIVE OPTION - PLASTIC)			
Signal Input	Microtach fibre optic input	There are no other connections to this option module. (The 5701 Microtach should be powered by an external 24V DC at 60mA, 1.4W.)	F1
(5901 MICROTACH OPTION MODULE - GLASS)			
Signal Input	Microtach fibre optic input	There are no other connections to this option module. (The 5901 Microtach should be powered by an external 24V DC at 125mA, 3W.)	F1
TERMINAL BLOCK G (ENCODER OPTION)			
Terminal Block G pinouts will change function depending upon which option board is fitted to the control board. The configuration supplied as standard is with the Switchable Tacho Calibration Option fitted. Further information on the other options may be obtained from the relevant Technical Manual.			
TECHNOLOGY BOX OPTION (SERIAL COMMUNICATIONS)			
Refer to the Technical Manual supplied with the option for details.			

Wiring Requirements for EMC Compliance				
	Power Supply Wire	Motor Wire	External Filter to Drive Wire	Signal/Control Wire
Wire Type (for EMC Compliance)	Unshielded	Shielded/armored	Replace flying leads with shielded/armored when >0.6m	Shielded
Segregation	From all other wiring (clean)	From all other wiring (noisy)		From all other wiring (sensitive)
Length Limitations With External Filter	Unlimited	50 metres	As short as possible	25 metres
Shield to Ground Connection		Both ends	Both ends	Drive end only

11-20 Technical Specifications

Wire Sizes and Termination Tightening Torques (Frames 1, 2, 3, 4 & 5)

- Power cables must have a minimum rating of 1.1 x full load current - EUROPE
- Control wiring must have a minimum cross-section area of 0.75mm² (18AWG)

Terminations	Maximum Tightening Torque	UL		EUROPE
		Recommended Wire Size	Maximum Terminal Aperture Size (AWG)	Maximum Terminal Aperture Size (mm ²)
All Units				
A1 – A9, B1 – B9, C1 – C9	0.6-0.8Nm (5-7 lb-in.)	14 AWG	12	2.5
Frame 1				
15A, 35A UNITS				
A+, A-	1.8Nm (16 lb-in)	8-18 AWG	8	10
L1, L2, L3	1.8Nm (16 lb-in)	8-18 AWG	8	10
Grounding terminal	2.0Nm (17 lb-in.)	12 AWG	-	-
AUX. CONT. (TB4)	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
F+, F-	0.8Nm (7.0 lb-in)	14 AWG	12	2.5
BL1, BL2, BL3	0.8Nm (7.0 lb-in)	12-22 AWG *	12	2.5
L, N, 3, 4, TH1, TH2	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
Frame 2				
40A UNITS				
A+, A-	5.6Nm (50 lb-in)	8 AWG	2/0	70
L1, L2, L3	5.6Nm (50 lb-in)	8 AWG	2/0	70
Grounding terminal	5.6Nm (50 lb-in)	6 AWG	2/0	70
AUX. CONT. (TB4)	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
FL1, FL2, F+, F-	0.8Nm (7.0 lb-in)	14 AWG	12	2.5
BL1, BL2, BL3	0.8Nm (7.0 lb-in)	6-18 AWG *	12	2.5
L, N, 3, 4, TH1, TH2	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
70A UNITS				
A+, A-	5.6Nm (50 lb-in)	3 AWG	2/0	70
L1, L2, L3	5.6Nm (50 lb-in)	6 AWG	2/0	70
Grounding terminal	5.6Nm (50 lb-in)	6 AWG	2/0	70
AUX. CONT. (TB4)	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
FL1, FL2, F+, F-	0.8Nm (7.0 lb-in)	14 AWG	12	2.5
BL1, BL2, BL3	0.8Nm (7.0 lb-in)	6-18 AWG *	12	2.5
L, N, 3, 4, TH1, TH2	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
110A UNITS				
A+, A-	5.6Nm (50 lb-in)	1/0 AWG	2/0	70
L1, L2, L3	5.6Nm (50 lb-in)	3 AWG	2/0	70
Grounding terminal	5.6Nm (50 lb-in)	6 AWG	2/0	70
AUX. CONT. (TB4)	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
FL1, FL2, F+, F-	0.8Nm (7.0 lb-in)	14 AWG	12	2.5
BL1, BL2, BL3	0.8Nm (7.0 lb-in)	6-18 AWG *	12	2.5
L, N, 3, 4, TH1, TH2	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
165A UNITS				
A+, A-	42.4Nm (375 lb-in)	4/0 AWG	250 cmil	120
L1, L2, L3	5.6Nm (50 lb-in)	1/0 AWG	2/0	70
Grounding terminal	5.6Nm (50 lb-in)	3 AWG	2/0	70
AUX. CONT. (TB4)	0.5Nm (5.0 lb-in)	12 AWG	12	2.5
FL1, FL2, F+, F-	0.8Nm (7.0 lb-in)	14 AWG	12	2.5
BL1, BL2, BL3	0.8Nm (7.0 lb-in)	6-18 AWG *	12	2.5
L, N, 3, 4, TH1, TH2	0.5Nm (5.0 lb-in)	12 AWG	12	2.5

Wire Sizes and Termination Tightening Torques (Frames 1, 2, 3, 4 & 5)

- Power cables must have a minimum rating of 1.1 x full load current - EUROPE
- Control wiring must have a minimum cross-section area of 0.75mm² (18AWG)

Terminations	Maximum Tightening Torque	UL		EUROPE
		Recommended Wire Size	Maximum Terminal Aperture Size (AWG)	Maximum Terminal Aperture Size (mm ²)
Frame 3				
180A, 270A UNITS				
A+, A-	11Nm (97 lb-in)	2/0 AWG	-	-
L1, L2, L3	11Nm (97 lb-in)	2/0 AWG	-	-
Grounding terminal	6.8Nm (60 lb-in)	2/0 AWG	-	-
D1- D8	0.45Nm (4.0 lb-in)	14 AWG	-	-
THERM+, THERM-	0.45Nm (4.0 lb-in)	14 AWG	-	-
Frame 4 & 5				
380A, 500A, 725A, 830A, 1580A UNITS				
A+, A-	23Nm (204 lb-in)	-	-	-
L1, L2, L3	23Nm (204 lb-in)	-	-	-
Grounding terminal	6.8Nm (60 lb-in)	-	-	-
FL1, FL2	0.8Nm (7 lb-in)	-	-	-
F+, F-	0.8Nm (7 lb-in)	-	-	-
Auxiliary supply, contactor and motor thermistor	0.6Nm (5 lb-in)	-	-	-

Termination Tightening Torque (Frame H)

Description	Fixings	Spanner Size	Format	Torque Nm
Drive Mounting Fixings	M12	19mm	Bolt	57.2
Ground studs on back panel	M10	17mm	Nut	32.8
Fuse assy to Phase assy	M10	17mm	Bolt	24
AC Input & DC Output Bus bars	M12	19mm	Nut & Bolt	57.2
Fuse assembly	M12	19mm	Bolt	42
Fuse assembly to CT	M12	19mm	Bolt	42
DC Output terminal panel to side panel	M6	10mm	Bolt	6.8
DC Bus bars	M6	10mm	Nut	6.8
I/P terminal assy	M6	10mm	Nut	4
Lifting Bracket Fixings	M10	17mm	Bolt	24

Dynamic Braking

External Braking unit with contactor available on Frame 1 and Frame 2 units.

Current Rating of Contactor Switch	150% of armature current for 30 seconds
Rating	Resistor to meet NEMA ICS 3-302.62 (to stop a load from base speed with 2 x motor inertia three times in rapid succession).

11-22 Technical Specifications

Cooling Fans						
Drive Rating (Hp @ 240/500V)	Output Current (armature) (A)	Maximum Rating Ambient ¹ (°C)	Cooling Method	Number of Fans	Fan Current Rating 110/120V ac	Fan Current Rating 220/240V ac
Frame 1						
3/7.5	15	45	no fan	0	N/A	N/A
10/20	35	45	Integral Fan	1	N/A	N/A
Frame 2						
10/20	40	45	Integral Fan	1	N/A	N/A
15/30	55	45	Integral Fan	1	N/A	N/A
20/40	70	45	Integral Fan	1	N/A	N/A
25/50	90	45	Integral Fan	1	N/A	N/A
30/60	110	45	Integral Fan	1	N/A	N/A
40/75	125	45	Integral Fan	1	N/A	N/A
50/100	165	45	Integral Fan	1	N/A	N/A
Frame 3						
60/125	206	45	Integral Fan	1	N/A	N/A
75/150	246	45	Integral Fan	1	N/A	N/A
Frame 4						
200	360	40	Forced Vent 240cfm (410m ³ /hr) @ 200Pa	1	130W, 10μF	140W, 2.5μF
250	425	40	Forced Vent 240cfm (410m ³ /hr) @ 200Pa	1	130W, 10μF	140W, 2.5μF
300	490	40	Forced Vent 240cfm (410m ³ /hr) @ 200Pa	1	130W, 10μF	140W, 2.5μF
400	700	40	Forced Vent 240cfm (410m ³ /hr) @ 200Pa	1	130W, 10μF	140W, 2.5μF
500	815	40	Forced Vent 240cfm (410m ³ /hr) @ 200Pa	1	130W, 10μF	140W, 2.5μF
Frame 5						
900	1580	40	Forced Vent 240cfm (410m ³ /hr) @ 200Pa	2	130W, 10μF	140W, 2.5μF
Frame H						
900	1200	40	Separate Fan	2	See note below	See note below
1000	1700	40	Separate Fan	2	See note below	See note below
1250	2200	40	Separate Fan	2	See note below	See note below
1500	2700	40	Separate Fan	2	See note below	See note below
Fans supplied with Frame H units have an air flow rate per fan of 850m ³ /hr at 250 Pascal						
Fan Ratings:						
115V ac 50Hz, 1.67A, 177W, 2750 rpm, motor run capacitor 18μF						
115V ac 60Hz, 2.21A, 240W, 2660 rpm, motor run capacitor 18μF						

CERTIFICATION FOR THE DRIVE

Caution

The integration of this product into other apparatus or systems is not the responsibility of Eurotherm Drives, with respect to applicability, effectivity, or safety of operation of the other apparatus or systems.

Requirements for EMC Compliance

All Variable Speed Drives (VSDs) potentially produce electrical emissions which are radiated into the environment and conducted back into the ac supply. VSDs are inherently immune to any additional external electrical noise. The following information is provided to maximise the Electro Magnetic Compatibility (EMC) of VSDs and systems in their intended operating environment, by minimising their emissions and maximising their immunity.

Minimising Radiated Emissions

EN55011/EN55022 radiated emission measurements are made between 30MHz and 1GHz in the far field at a distance of 10 to 30 metres (32.8 to 98.4 feet). Limits lower than 30MHz or in close proximity are not specified. Emissions from individual components tend to be additive.

- Use a screened/armoured cable between VSD/cubicle and motor containing the motor protective earth/ground (PE) connection. It should have a 360° screen termination. Earth screen at both ends connecting to the motor frame and VSD/cubicle backplate. Maintain the screen integrity using 360° terminations.

Note: Some hazardous area installations may preclude direct earthing/grounding at both ends of the screen, in this case earth/ground one end via a 1µF 50Vac capacitor, and the other must be directly earthed/grounded.

- Keep unshielded cable as short as possible inside the cubicle.
- Always maintain the integrity of the shield.
- If the cable is interrupted to insert contactors etc., re-connect the screen using the shortest possible route.
- Keep the length of screen stripped-back as short as possible when making screen connections.
- Ideally use 360° screen terminations using cable glands or 'U' clips on power screen rails.

If a shielded cable is not available, lay unshielded motor cables in a metal conduit which will act as a shield. The conduit must be continuous with a direct electrical contact to the VSD and motor housing. If links are necessary, use braid with a minimum cross sectional area of 10mm².

Note: Some motor gland boxes, conduit and conduit glands are made of plastic, if this is the case, then braid must be connected in parallel to maintain screen integrity. In addition at the motor end, ensure that the screen is electrically connected to the motor frame since some terminal boxes are insulated from the frame by gasket/paint.

Earthing/Grounding Requirements

IMPORTANT: Protective earthing/grounding always takes precedence over EMC earthing.

Protective Earth/Ground (PE) Connections

Note: In accordance with installations to EN60204, only one protective earth/ground conductor is permitted at each VSD protective earth/ground terminal contacting point.

Local wiring regulations may require the protective earth/ground connection of the motor to be connected locally, i.e. not as specified in these instructions. This will not cause shielding problems because of the relatively high RF impedance of the local earth/ground connection.

12-2 Certification for the Drive

Control/Signal EMC Earth Connections

For compliance with EN60204 and EMC requirements, the “0V/signal ground” must be separately earthed/grounded. When a number of units are used in a system, these terminals should be connected together at a single, local earthing/grounding point.

Control and signal cables for the encoder, all analog inputs, and communications require screening with the screen connected only at the VSD end. However, if high frequency noise is still a problem, earth/ground the shield at the non VSD end via a 0.1 μ F, 50Vac capacitor.

Note: Connect the screen (at the VSD end) to the VSD protective point, and not to the control board terminals.

Cabling Requirements

Note: Refer to Chapter 11: “Technical Specifications” for additional Cabling Requirements.

Planning Cable Runs

- Use the shortest possible motor cable lengths.
- Keep electrically noisy and sensitive cables apart.
- Keep electrically noisy and sensitive parallel cable runs to a minimum. Separate parallel cable runs by at least 0.25 metres (0.8 feet). For runs longer than 10 metres (32.8 feet), separation should be increased proportionally. For example if the parallel runs were 50m (164 feet), then the separation would be $(50/10) \times 0.25\text{m} = 1.25\text{m}$ ($164/32.8 \times 0.8 = 4$ feet).
- Sensitive cables should cross noisy cables at 90°.
- Never run sensitive cables close or parallel to the motor cable for any distance.
- Never run supply or motor cables in the same bundle as the signal/control and feedback cables, even if they are screened.
- Ensure EMC filter input and output cables are separately routed and do not couple noise across the filter (i.e. bypass the filter).

Increasing Motor Cable Length

Because cable capacitance and hence conducted emissions increase with motor cable length, conformance to EMC limits is only guaranteed with the specified ac supply filter option using a maximum cable length as specified in Chapter 11: “Technical Specifications”.

Screened/armoured cable has significant capacitance between the conductors and screen which increases linearly with cable length (typically 200pF/m but varies with cable type and current rating).

Long cable lengths may have the following undesirable effects:

- Producing increased conducted emissions which degrade the performance of the EMC filter due to saturation.
- Causing RCDs (Residual Current Devices) to trip due to increased high frequency earth /ground current.
- Producing increased heating inside the EMC ac supply filter from the increased conducted emissions.

These effects can be overcome by adding reactors at the output of the VSD.

EMC Installation Options

The unit, when installed for Class A operation, will be compliant with EN55011 (1991)/EN55022 (1994) for radiated emissions, as described below.

Screening & Earthing/Grounding (cubicle mounted, Class A)

Note: The installation requirements of local safety standards must be achieved regarding the safety of electrical equipment for machines.

The unit is installed for Class A operation when mounted inside a cubicle having 10dB attenuation between 30 and 100MHz (typically the attenuation provided by a metal cabinet with no aperture of dimension greater than 0.15m (0.5 feet), using the recommended ac supply filter and having met all cabling requirements.

Note: Radiated magnetic and electric fields inside the cubicle will be high and any components fitted inside must be sufficiently immune.

The VSD, external filter and associated equipment are mounted on to a conducting, metal mounting panel. Do not use cubicle constructions that use insulating mounting panels or undefined mounting structures. Cables between the VSD and motor must be screened or armoured and terminated at the VSD or locally on the back panel.

Single VSD - Single Motor

Apply a single-point, series earthing/grounding strategy for a single VSD mounted in a cubicle as shown.

The protective earth/ground connection (PE) to the motor must be run inside the screened cable between the motor and VSD and be connected to a separate star point earth/ground terminal near the VSD.

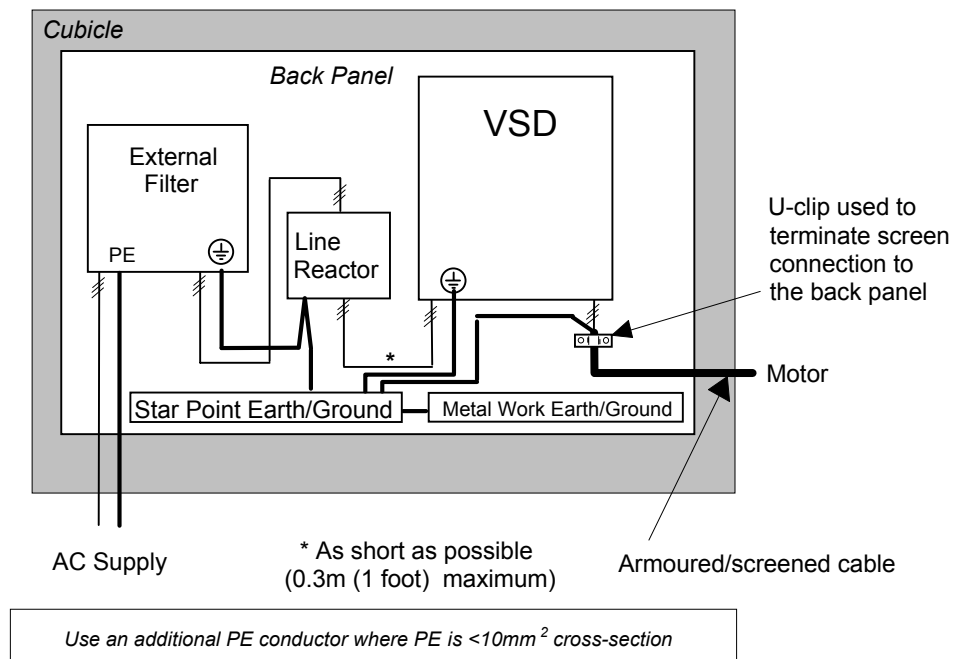


Figure 12-1 EMC and Safety Earthing/Grounding Cabling

Star Point Earthing/Grounding

A star-point earthing/grounding policy separates 'noisy' and 'clean' earths/grounds. Four separate earth/ground busbars (three are insulated from the mounting panel) connect to a single earth/ground point (star point) near the incoming safety earth/ground from the main supply. Flexible, large cross-section cable is used to ensure a low HF impedance. Busbars are arranged so that connection to the single earth/ground point is as short as possible.

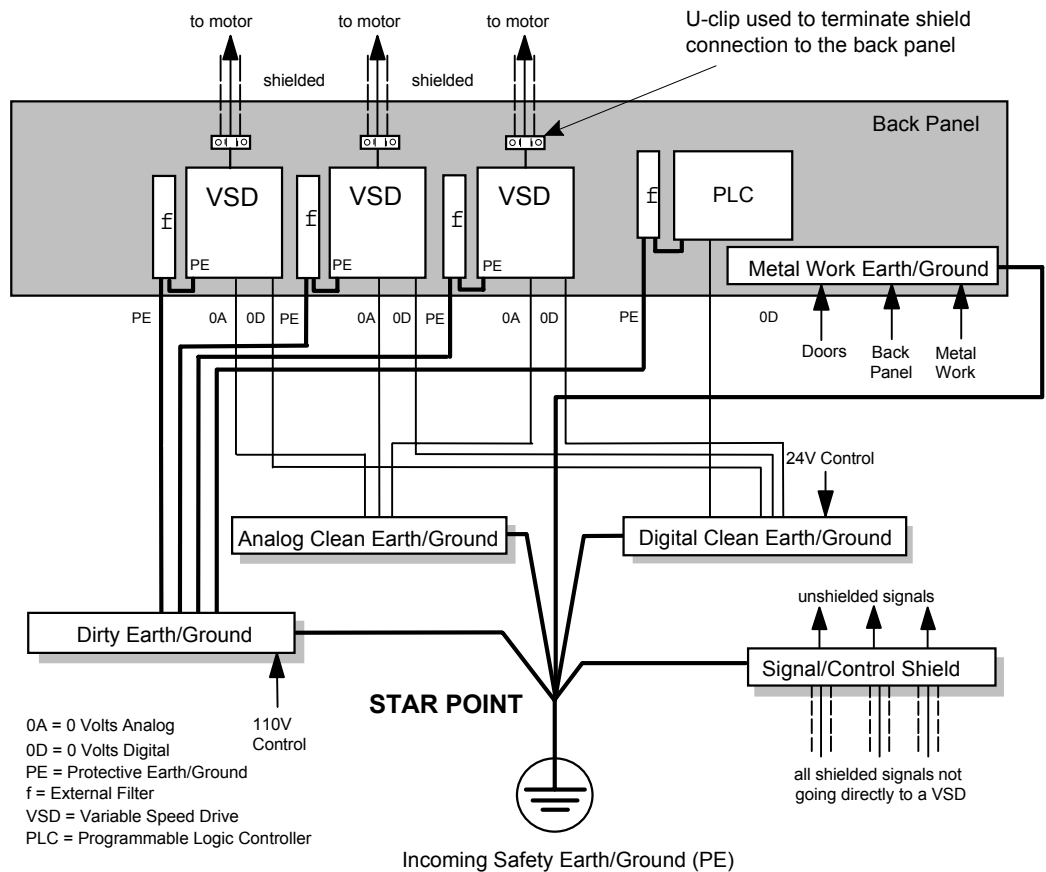


Figure 12-2 Star Point Earthing/Grounding

1 Clean Earth/Ground Busbar (insulated from the mounting panel)

Used as a reference point for all signal and control cabling. This may be further subdivided into an analog and a digital reference busbar, each separately connected to the star earthing/grounding point. The digital reference is also used for any 24V control.

2 Dirty Earth/Ground Busbar (insulated from the mounting panel)

Used for all power earths/grounds, i.e. protective earth/ground connection. It is also used as a reference for any 110 or 220V control used, and for the control transformer screen.

3 Metal Work Earth/Ground Busbar

The back panel is used as this earth/ground busbar, and should provide earthing/grounding points for all parts of the cubicle including panels and doors. This busbar is also used for power screened cables which terminate near to (10cm/4 inches) the VSD - such as motor cables, braking choppers and their resistors, or between VSDs. Use U-clips to clamp the screened cables to the back panel to ensure optimum HF connection.

4 Signal/Control Screen Earth/Ground Busbar (insulated from the mounting panel)

Used for signal/control screened cables which **do not** go directly to the VSD. Place this busbar as close as possible to the point of cable entry. 'U' clamp the screened cables to the busbars to ensure an optimum HF connection.

Sensitive Equipment

The proximity of the source and victim circuit has a large effect on radiated coupling. The electromagnetic fields produced by VSDs falls off rapidly with distance from the cabling/cubicle. Remember that the radiated fields from EMC compliant drive systems are measured at least 10m from the equipment, over the band 30-1000MHz. Any equipment placed closer than this will see larger magnitude fields, especially when very close to the drive.

Do not place magnetic/electric field sensitive equipment within 0.25 metres (0.8 feet) of the following parts of the VSD system:

- Variable Speed Drive (VSD)
- Input or output reactors/transformers
- The cable between VSD and motor (even when screened/armoured)
- AC/DC brushed motors (due to commutation)
- Relays and contactors (even when suppressed)

From experience, the following equipment is particularly sensitive and requires careful installation.

- Any transducers which produce low level analog outputs (<1V) , e.g. load cells, strain gauges, thermocouples, piezoelectric transducers, anemometers, LVDTs
- Wide band width control inputs (>100Hz)
- AM radios (long and medium wave only)
- Video cameras and closed circuit TV
- Office personal computers
- Capacitive devices such as proximity sensors and level transducers
- Mains borne communication systems
- Equipment not suitable for operation in the intended EMC environment, i.e. with insufficient immunity to new EMC standards

Requirements for UL Compliance

Motor Overload Protection

Note: An external, motor overload protective device must be provided by the installer.

The maximum internal overload protection level (current limit) is 150% for 30 seconds and 200% for 10 seconds.

Motor overload protection is provided by means of the thermal device in the motor winding. This protection cannot be evaluated by UL, hence it is the responsibility of the installer and/or the local inspector to determine whether the overload protection is in compliance with the National Electrical Code or Local Code requirements.

Branch Circuit/Short Circuit Protection Requirements

The controller requires branch circuit protection. Branch circuit protection requirements must be in accordance with the latest addition of the National Electrical Code, NEC/NFPA-70.

UL Recognized Component (JFHR2) semiconductor fuses with current ratings and maximum I²t ratings as specified below must be used in the controller. Refer to the table below for the recommended fuse manufacturer and part number.

(HP) 500V	Controller Rating (A)	Input Line Semiconductor Fuses			
		Ratings			Part No. Gould or equivalent*
		(Vac)	(A)	I ² t (A ² s)	
7.5	15	500	31.3	750	A60Q35
20	35	500	31.3	750	A60Q35
20	40	500	31.3	750	A60Q35
30	70	500	71.6	1300	A50QS80-4R
40	70	500	71.6	1300	A50QS80-4R
50	110	500	111.8	2860	A50QS125-4R
60	110	500	111.8	2860	A50QS125-4R
75	165	500	156.6	7540	A50QS200-4R
100	165	500	156.5	7540	A50QS200-4R
					Part No. Bussmann or equivalent*
200	380	660	550	135000	170M6809
300	500	660	700	300000	170M6811
400	725	660	900	670000	170M6813
500	830	660	1000	945000	170M6814
1000	1585	660	2 x 1000	945000	170M6814
<p>* Other UL Recognized Component (JFHR2) semiconductor fuses may be used in the controller provided that the voltage, ampere and I²t ratings shown above are not exceeded.</p> <p>Note: Semiconductor fuses are acceptable as branch circuit short-circuit protection for the solid-state motor controllers only.</p>					

Table 12-1 Short Circuit Protection Requirements

Short Circuit Ratings

These products are suitable for use on a circuit capable of delivering not more than (the value shown in Table 12-2) RMS Symmetrical Amperes, 500V maximum.

Output Ratings		Short Circuit Rating RMS Symmetrical Amperes
(A)	(kW) 500V	
15	7.5	5,000
35	15	5,000
40	15	10,000
70	30	10,000
110	45	10,000
165	75	10,000
380	150	18000
500	225	18000
725	327	30000
830	335	30000
1585	650	85000

Table 12-2 Short Circuit Ratings

Field Wiring Temperature Rating

Use 75°C copper conductors only.

Operating Ambient Temperature

For the operating ambient temperature range, refer to Chapter 11: “Technical Specifications”.

Field Wiring Terminal Markings

For the correct field wiring connections that are to be made to each terminal, refer to Chapter 3: “Installing the Drive” - Electrical Installation.

Power and Control Field Wiring Terminals

For the correct tightening torque value, refer to Chapter 11: “Technical Specifications”.

Field Earthing/Grounding Terminals

The field grounding terminal(s) is identified with the International Grounding Symbol (IEC) Publication 417, Symbol 5019.



Field Terminal Kits

UL compliant terminal kits are available for the connection of power wiring for the following drive ratings. These terminals must be applied with the correct tooling as described in the Installation Instructions provided with each terminal kit.

Kit Part Number	Controller Rating (A)	Number of Lugs	Purpose	Lugs per Terminal	Wire Size per Lug	Cable Rating
LA386000U380	380	3	AC	1	2 x 4/0 AWG	230A
		2	DC	1	2 x 250kcmil	255A
LA386000U500	500	3	AC	1	2 x 300kcmil	285A
		2	DC	1	2 x 350kcmil	310A
LA386000U725	725	3	AC	1	2 x 600kcmil	420A
		4	DC	2	2 x 4/0 AWG	230A
LA386000U830	830	6	AC	2	2 x 250kcmil	255A
		4	DC	2	2 x 300kcmil	285A

Note: 1580A controller requires two LA386000U830 kits.

Fuse Replacement Information

For fuse replacement information, refer to Chapter 11: “Technical Specifications”.

12-8 Certification for the Drive

Recommended Wire Sizes (Frames 1, 2, 4 & 5)

Main power wiring. Local wiring regulations always take precedence.

Drive Size (A)	Input			Output		
	Input Current (A)	Number of Conductors	North American Wire Size	Output Current (A)	Number of Conductors	North American Wire Size
Frame 1						
15	13.5	1	12 AWG	15	1	12 AWG
35	28.35	1	8 AWG	35	1	8 AWG
Frame 2						
40	36	1	8 AWG	40	1	8 AWG
70	63	1	1 AWG	70	1	3 AWG
110	99	1	1 AWG	110	1	1/0 AWG
165	148.5	1	3/0 AWG	165	1	4/0 AWG
Frame 4						
360	295	1	250MCM	360	1	350MCM
425	349	1	350MCM	425	1	500MCM
490	402	1	500MCM	490	2	250MCM
700	574	2	250MCM	700	2	350MCM
815	668	2	350MCM	815	2	500MCM
Frame 5						
1000	820	2	500MCM	1000	3	350MCM
1200	984	3	350MCM	1200	3	500MCM
1334	1094	3	350MCM	1334	3	500MCM

Recommended Wire Sizes (Frame H)

Local wiring regulations always take precedence.

Description	Drive Size (A)	Input			Output		
		Input Current (A)	Number of Conductors	North American Wire Size	Output Current (A)	Number of Conductors	North American Wire Size
Main Power	1200	1100	4	500	1200	4	500
	1700	1550	6	400	1700	6	500
	2200	2000	6	600	2200	6	700
	2700	2450	6	900	2700	8	700
Field	60	60	1	AWG 8	60	1	AWG 8

European Directives and the CE Mark

The following information is supplied to provide a basic understanding of the EMC and low voltage directives CE marking requirements. The following literature is recommended for further information:

- *Recommendations for Application of Power Drive Systems (PDS), European Council Directives - CE Marking and Technical Standardisation - (CEMEP)*
Available from your local trade association or Eurotherm Drives office
- *EMC Installation Guidelines for Modules and Systems - (Eurotherm Drives)*
Available from your local Eurotherm Drives office, part number HA388879
- *Short Form Overview of European Directives for Variable Speed Drives and Applications - (Eurotherm Drives)*
Available from your local Eurotherm Drives office, part number HA389770

The European machines and drives manufacturers via their national trade associations have formed the European Committee of Manufacturers of Electrical Machines and Power Electronics (CEMEP). Eurotherm Drives and other major European drives manufacturers are working to the CEMEP recommendations on CE marking. The CE mark shows that a product complies with the relevant EU directives, in our case the Low Voltage Directive and, in some instances, the EMC Directive.

CE Marking for Low Voltage Directive

When installed in accordance with this manual, the 590+ DRV Series DC Digital Drive is CE marked by Eurotherm Drives Ltd in accordance with the low voltage directive (S.I. No. 3260 implements this LVD directive into UK law). An EC Declaration of Conformity (low voltage directive) is included at the end of this chapter.

CE Marking for EMC - Who is Responsible?

Note: *The specified EMC emission and immunity performance of this unit can only be achieved when the unit is installed to the EMC Installation Instructions given in this manual.*

According to S.I. No. 2373 which implements the EMC directive into UK law, the requirement for CE marking this unit falls into two categories:

1. Where the supplied unit has an intrinsic/direct function to the end user, then the unit is classed as **relevant apparatus**.
2. Where the supplied unit is incorporated into a higher system/apparatus or machine which includes (at least) the motor, cable and a driven load but is unable to function without this unit, then the unit is classed as a **component**.

■ **Relevant Apparatus - Eurotherm Drives Responsibility**

Occasionally, say in a case where an existing fixed speed motor - such as a fan or pump - is converted to variable speed with an add-on drive module (*relevant apparatus*), it becomes the responsibility of Eurotherm Drives to apply the CE mark and issue an EC Declaration of Conformity for the EMC Directive. This declaration and the CE mark is included at the end of this chapter.

■ **Component - Customer Responsibility**

The majority of Eurotherm Drives' products are classed as *components* and therefore we cannot apply the CE mark or produce an EC Declaration of Conformity in respect of EMC. It is therefore the manufacturer/supplier/installer of the higher system/apparatus or machine who must conform to the EMC directive and CE mark.

Legal Requirements for CE Marking

For compliance in Europe with EN61800-3 Table 11:

- The CE marking of drives whose armature current $>100\text{A}$ is applicable without filtering.
- The CE marking of drives whose armature current $<100\text{A}$ is **only** applicable with filtering.

IMPORTANT: Before installation, clearly understand who is responsible for conformance with the EMC directive. Misappropriation of the CE mark is a criminal offence.

It is important that you have now defined who is responsible for conforming to the EMC directive, either:

■ Eurotherm Drives Responsibility

You intend to use the unit as *relevant apparatus*.

When the specified EMC filter is correctly fitted to the unit following EMC installation instructions, it complies with the relevant standards indicated in the following tables. The fitting of the filter is mandatory for the CE marking of this unit to apply.

The relevant declarations are to be found at the end of this chapter. The CE mark is displayed on the EC Declaration of Conformity (EMC Directive) provided at the end of this chapter.

■ Customer Responsibility

You intend to use the unit as a *component*, therefore you have a choice:

1. To fit the specified filter following EMC installation instructions, which may help you gain EMC compliance for the final machine/system.
2. Not to fit the specified filter, but use a combination of global or local filtering and screening methods, natural migration through distance, or the use of distributed parasitic elements of the existing installation.

Note: When two or more EMC compliant components are combined to form the final machine/system, the resulting machine/system may no longer be compliant, (emissions tend to be additive, immunity is determined by the least immune component). Understand the EMC environment and applicable standards to keep additional compliance costs to a minimum.

Applying for CE Marking for EMC

We have supplied a Manufacturer's EMC Declaration at the end of this chapter that you can use as a basis for your own justification of overall compliance with the EMC directive. There are three methods of demonstrating conformity:

1. Self-certification to a relevant standard
2. Third party testing to a relevant standard
3. Writing a technical construction file stating the technical rationale as to why your final machine/system is compliant. An EMC "competent body" must then assess this and issue a technical report or certificate to demonstrate compliance.
Refer to Article 10(2) of Directive 89/336/EEC.

With EMC compliance, an EC Declaration of Conformity and the CE mark will be issued for your final machine/system.

IMPORTANT: Professional end users with EMC expertise who are using drive modules and cubicle systems defined as components who supply, place on the market or install the relevant apparatus must take responsibility for demonstrating EMC conformance and applying the CE mark and issuing an EC Declaration of Conformity.

Which Standards Apply?

The standard applied to this unit covers both:

1. Emission - these requirements limit the interference caused by operating (this) drive module.
2. Immunity - these requirements limit the effect of interference (on this unit) from other electrical and electronic apparatus.

The following tables indicate the section of standard with which the unit complies, dependent upon how the unit is installed and used.

Assuming installation to EMC instructions in this manual

“Filter” refers to a specified external filter.


Installation	Standard	Unit used as Relevant Apparatus		Unit used as a Component		
		filter (EMC compliance)	no filter	filter (EMC compliance may be applied for)	no filter	
		enclosure	enclosure	enclosure	enclosure	
2nd Environment 	Radiated RF Emission	EN61800-3 (1997) Table 12	✓	✓	✓	✓
	Conducted RF Emission	EN61800-3 (1997) Table 9	✓		✓	
		EN61800-3 (1997) Table 11		✓		✓
	Immunity	EN61800-3 (1997) 2nd Environment	✓	✓	✓	✓

Table 12-1 Application of Standard

12-12 Certification for the Drive

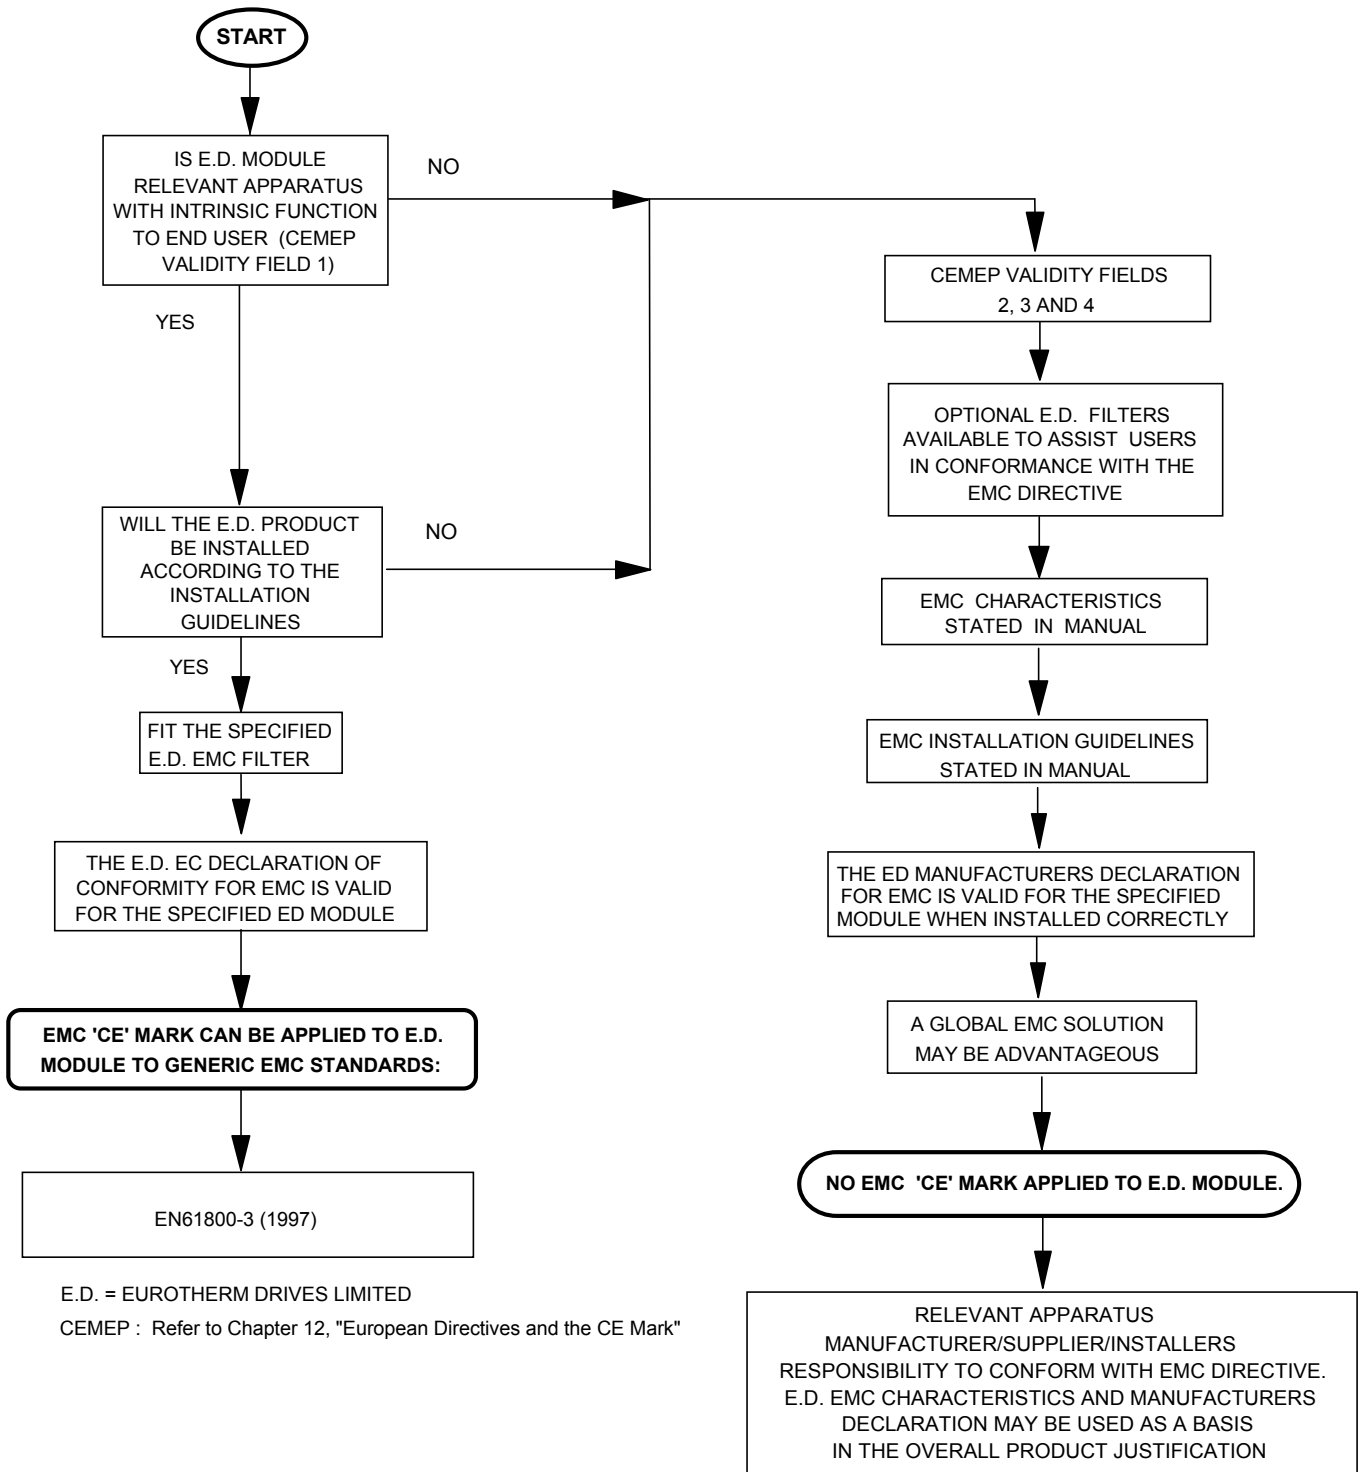


Figure 12-3 Eurotherm EMC 'CE' Mark Validity Chart

Certificates

590P-DRV (15-165A)



EC DECLARATIONS OF CONFORMITY

Date CE marked first applied: 01/04/01

EMC Directive

In accordance with the EEC Directive 89/336/EEC and amended by 92/31/EEC and 93/68/EEC, Article 10 and Annex 1, (EMC DIRECTIVE)
 We Eurotherm Drives Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment) is in accordance with the relevant clauses from the following standard:-
BSEN61800-3 (1997)

Low Voltage Directive

In accordance with the EEC Directive 73/23/EEC and amended by 93/68/EEC, Article 13 and Annex III, (LOW VOLTAGE DIRECTIVE)
 We Eurotherm Drives Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment), is in accordance with the following standard :-
EN50178 (1998)

Issued for compliance with the EMC Directive when the unit is used as *relevant apparatus*.

The drive is CE marked in accordance with the low voltage directive for electrical equipment and appliances in the voltage range when installed correctly.

MANUFACTURERS DECLARATIONS

EMC Declaration

We Eurotherm Drives Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment) is in accordance with the relevant clauses from the following standard:-
BSEN61800-3 (1997)

Machinery Directive

The above Electronic Products are components to be incorporated into machinery and may not be operated alone.
 The complete machinery or installation using this equipment may only be put into service when the safety considerations of the Directive 89/392/EEC are fully adhered to.
 Particular reference should be made to EN60204-1 (Safety of Machinery - Electrical Equipment of Machines).
 All instructions, warnings and safety information of the Product Manual must be adhered to.

This is provided to aid your justification for EMC compliance when the unit is used as a *component*.

Since the potential hazards are mainly electrical rather than mechanical, the drive does not fall under the machinery directive. However, we do supply a manufacturer's declaration for

Dr Martin Payn (Conformance Officer)

when the drive is used (as a *component*) in machinery.

* For information only
 # Compliant with these immunity standards without specified EMC filters.

EUROTHERM DRIVES LIMITED

NEW COURTWICK LANE, LITTLEHAMPTON, WEST SUSSEX BN17 7RZ

TELEPHONE: 01903 737000 FAX: 01903 737100

Registered Number: 1159876 England. Registered Office: New Courtwick Lane, Littlehampton, West Sussex BN17 7RZ

File Name: G:\Manuals - Changes\590+ Integrator DRV Manual\OK12drv.doc

© 1999 EUROTHERM DRIVES

ISS:	DATE	DRN: MP	CHKD:	DRAWING NUMBER: HK466529.919
A	22/02/00			TITLE:
				Declarations of Conformity

12-14 Certification for the Drive

STANDARD AND OPTIONAL EQUIPMENT

Standard Equipment

Power Board Circuit Descriptions

AH470280U005, U006, U007, U008 (Frame 1)

U005	U006	U007	U008
Non-regenerative	Regenerative	Non-regenerative	Regenerative
230-500V: 7.5Hp (15A)	230-500V: 7.5Hp (15A)	230-500V: 20Hp (35A)	230-500V: 20Hp (35A)

Power supplies for the drive are generated from the single phase auxiliary supply via a Switched Mode Power Supply. The incoming supply is directly rectified to provide a high voltage dc power rail. A high voltage transistor switches this rail on to the primary of a high frequency transformer, the output of which is rectified and smoothed to provide the dc power supply rails. The +15V dc rail is monitored via a reference element and a control signal returned via an opto-isolator to the control element of the high voltage switching transistor. The other dc rails (-15V & +24V dc) are generated via separate secondary windings that are rectified and smoothed, with a separate SMPS element providing a regulated +5V dc rail. The SMPS operates over an input voltage range of 110V to 240V ac $\pm 10\%$, 50/60Hz.

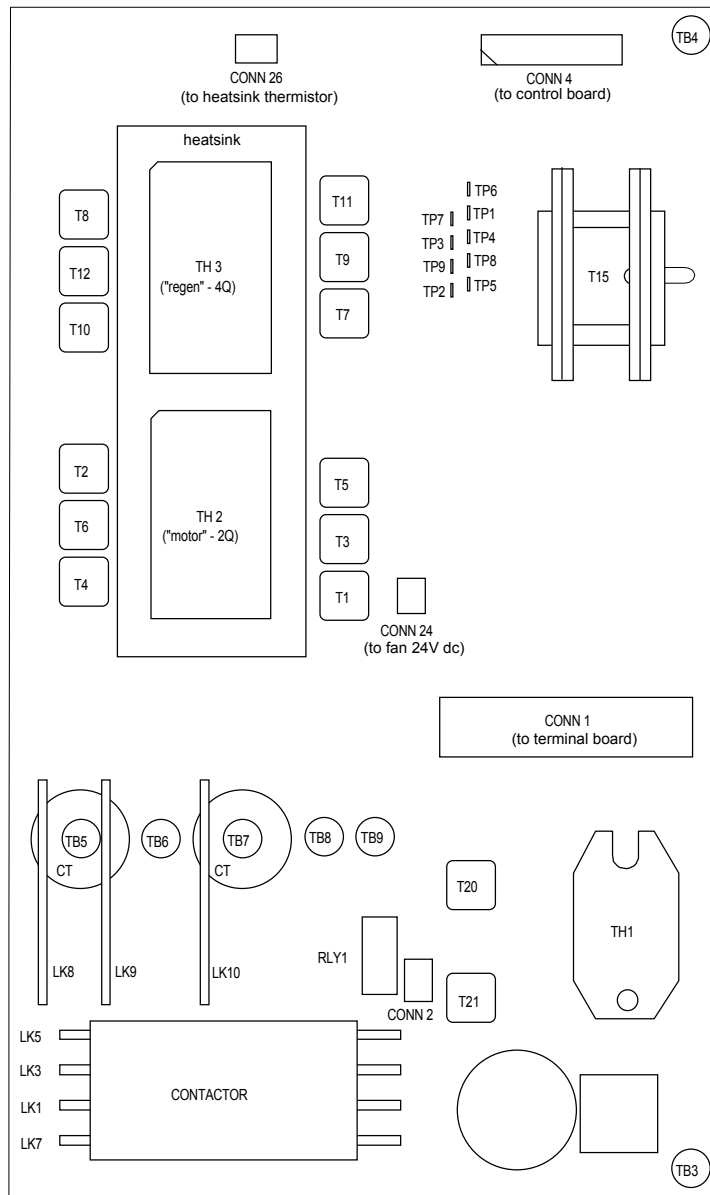


Figure 13-1 590+ Power Board 4 Quad (AH470280U005, U006, U007, U008)

13-2 Standard and Optional Equipment

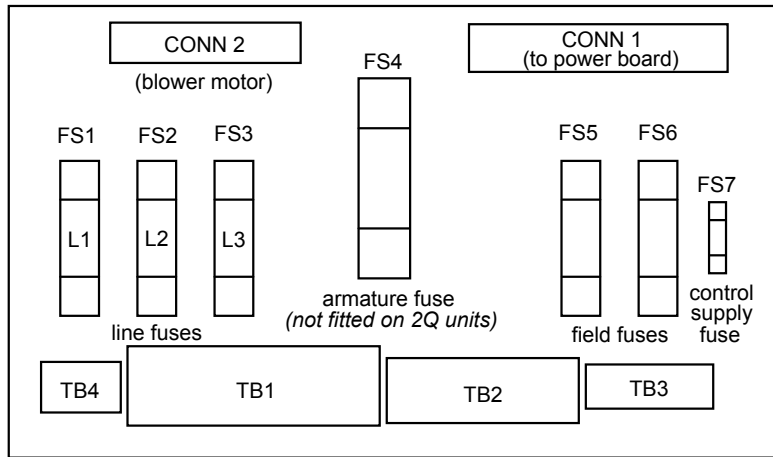


Figure 13-2 Terminal Board - AH470364 (15-35A, 3-20Hp)

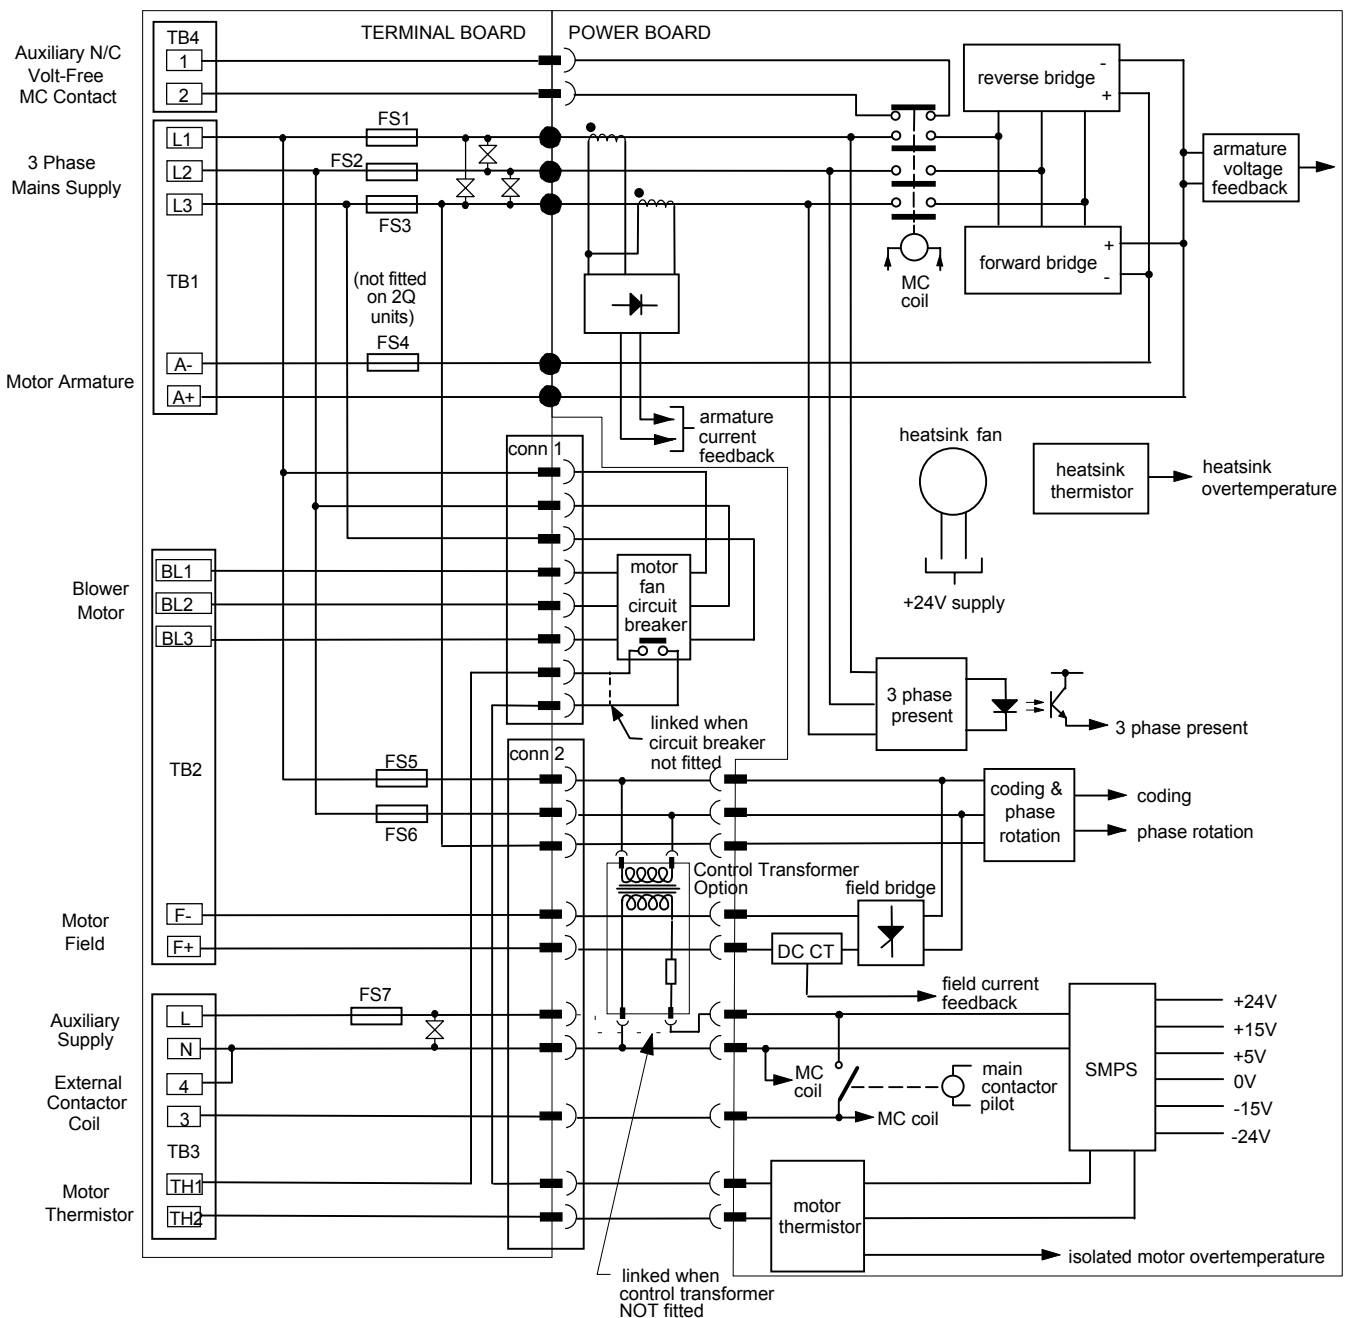


Figure 13-3 AH470280U005, U006, U007, U008 (Frame 1)

AH470330U101, U102, U001, U002 (Frame 2)

U101	U102	U001	U002
Non-regenerative	Regenerative	Non-regenerative	Regenerative
110-220V: 30-100Hp (40-165A)	110-220V: 30-100Hp (40-165A)	380-500V: 30-100Hp (40-165A)	380-500V: 30-100Hp (40-165A)

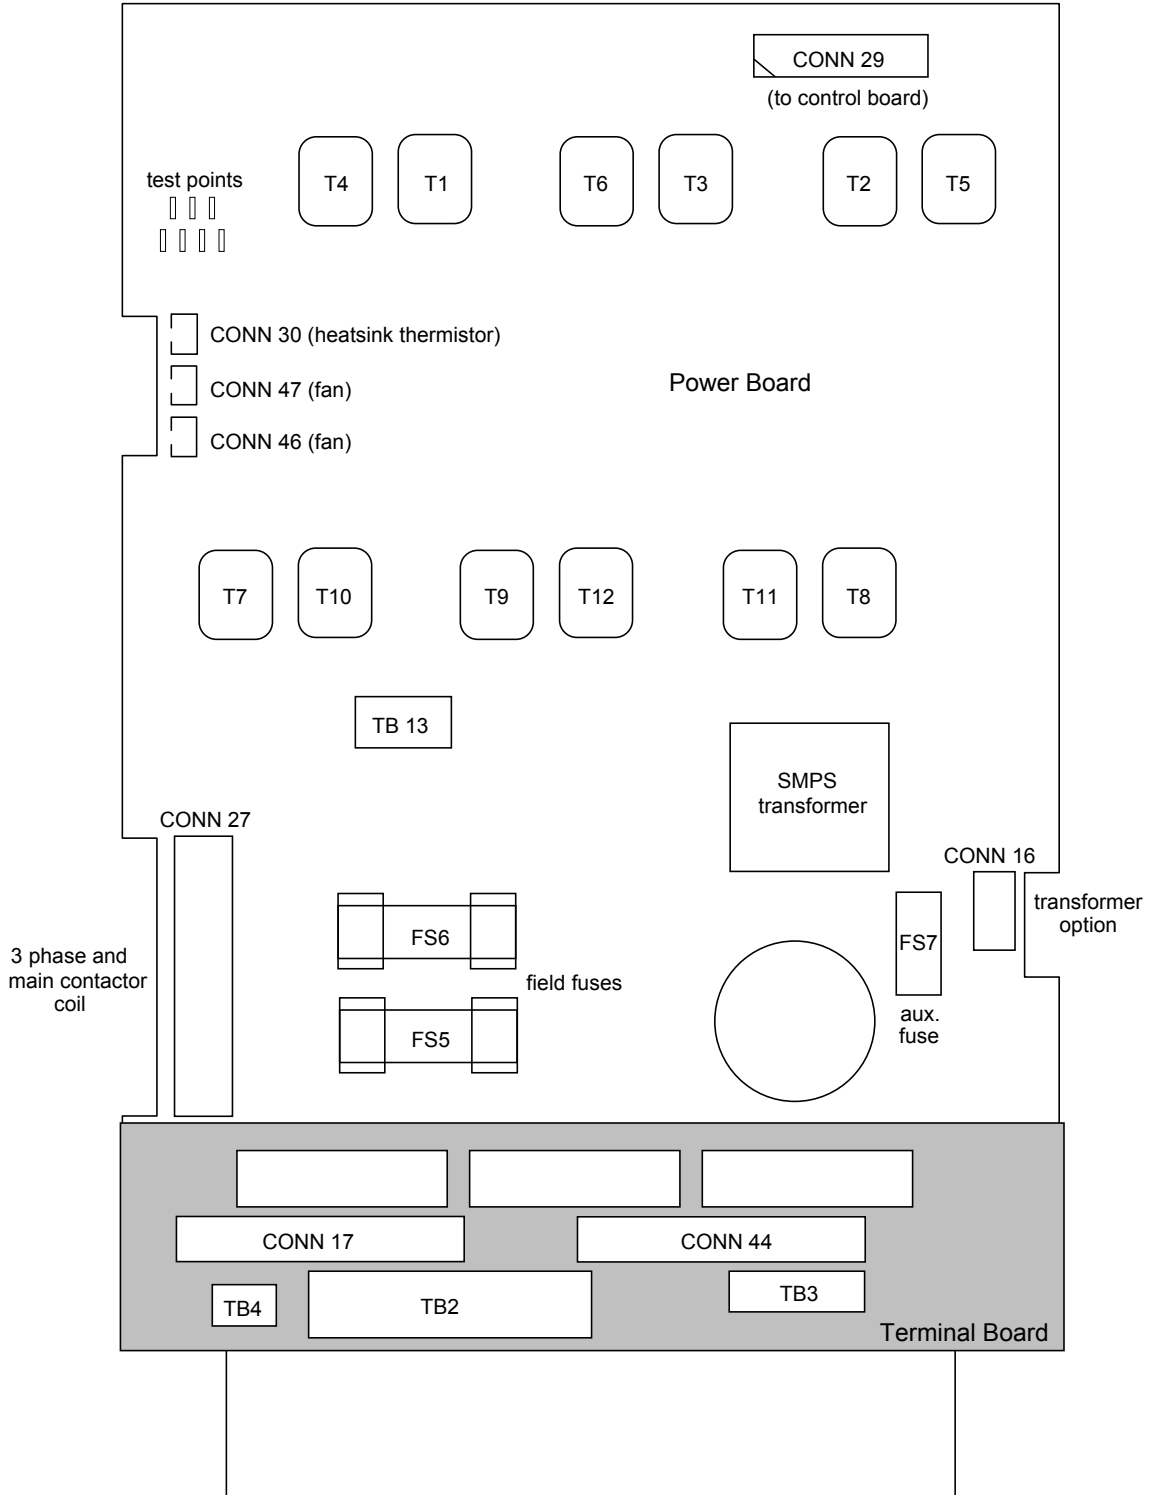


Figure 13-4 590+ Power Board 4 Quad (AH470330)

13-4 Standard and Optional Equipment

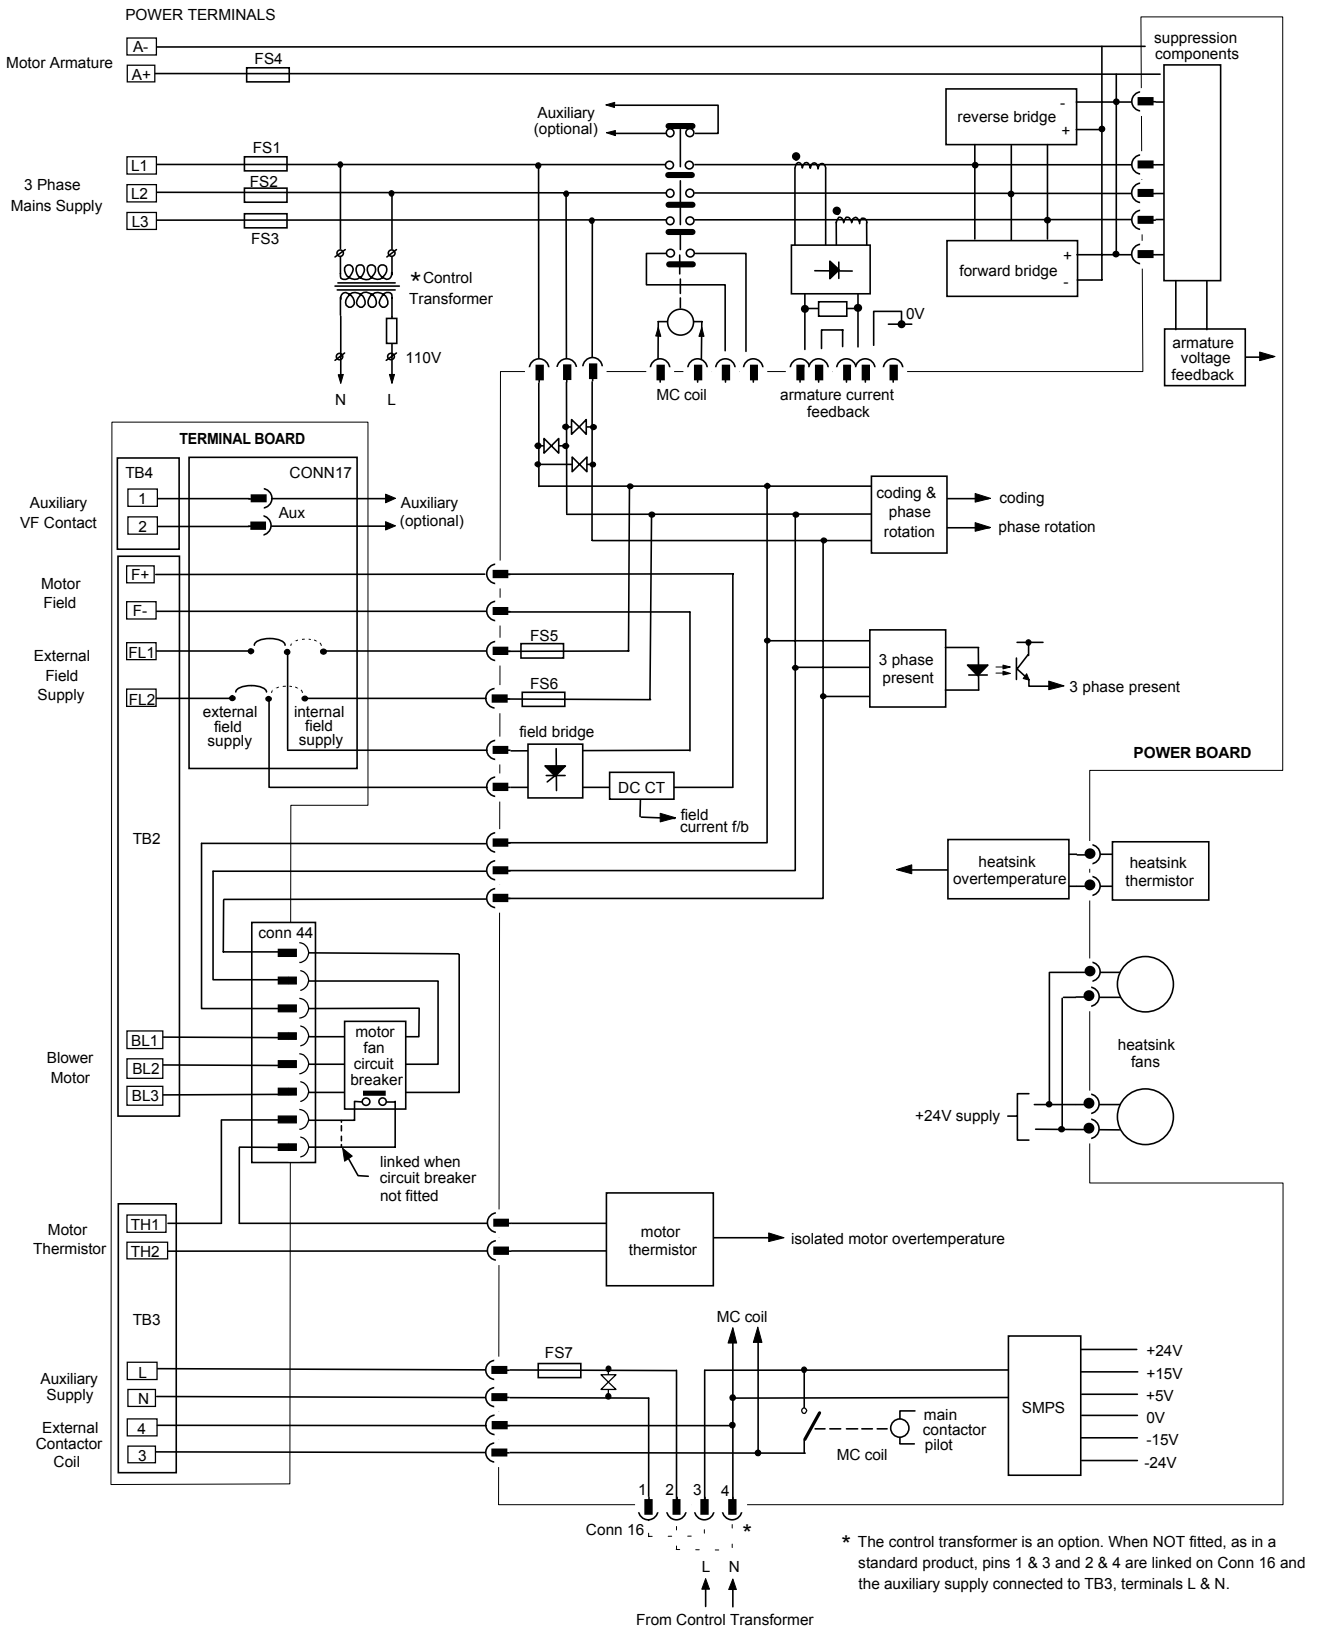


Figure 13-5 AH470330 (Frame 2)

AH385851U002, U003 (Frame 3)

U002	U003
Regenerative	Non-regenerative
380-500V : 125-150Hp	380-500V : 125-150Hp

Power supplies for the drive are generated from the single phase auxiliary supply via a switched mode power supply. The incoming supply is directly rectified to provide a high voltage dc power rail. A high voltage transistor switches this rail on to the primary of a high frequency transformer, the output of which is rectified and smoothed to provide the dc power supply rails. The +5V dc rail is monitored via a reference element and a control signal returned via an opto-isolator to the control element of the high voltage switching transistor. The ±15V dc rails are generated via separate secondary windings that are rectified, smoothed and stabilised by linear regulators. The SMPS operates over an input voltage range of 110V to 240V ac ±10%, 50/60Hz. The auxiliary supply fuse FS1 provides protection of the high voltage elements.

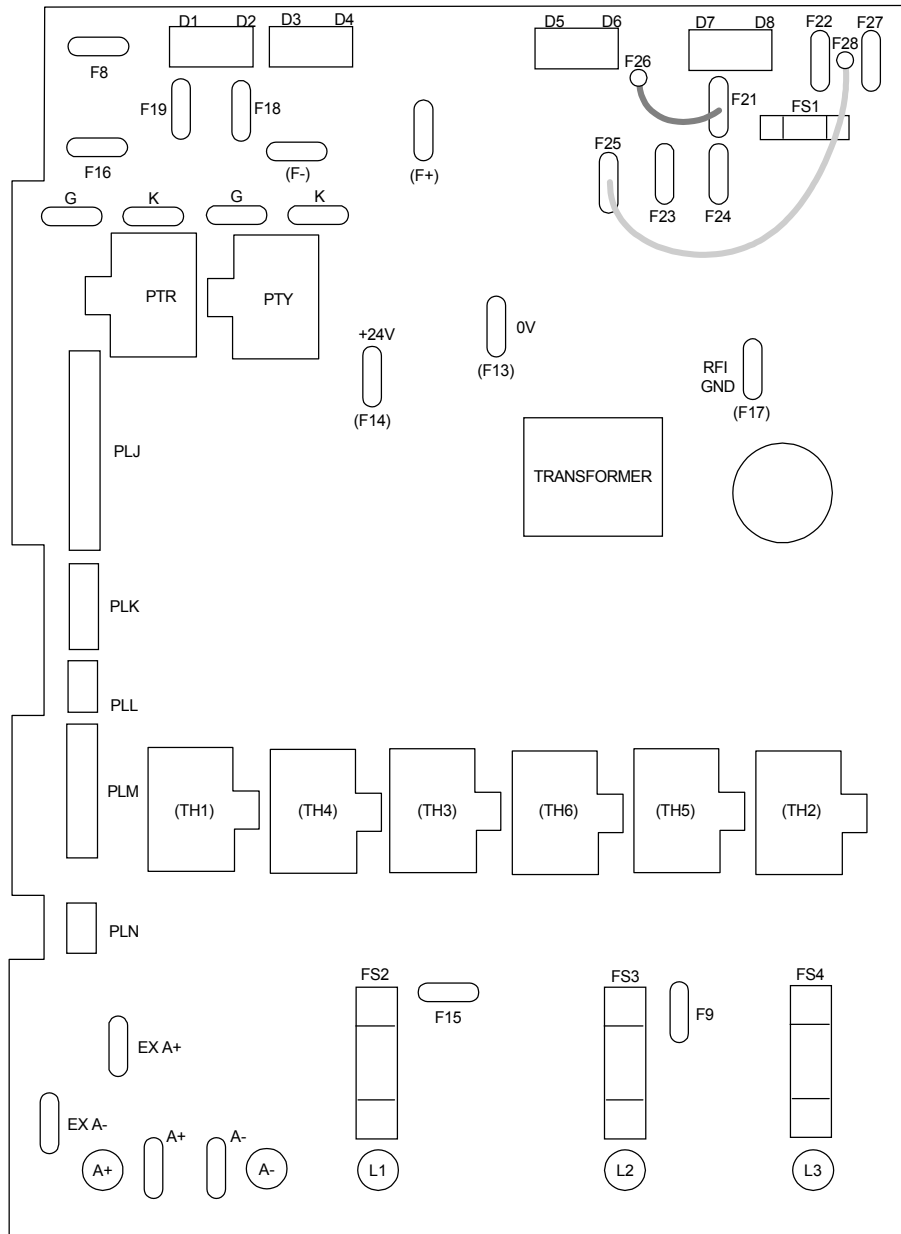


Figure 13-6 591 Power Board 2 Quad (AH385851U003)

13-6 Standard and Optional Equipment

Heatsink Cooling Fan Connections

When fitted, these fans are connected on the power board to FAN LIVE (F27), FAN NEUTRAL (F24) and FAN COMMON (F23) as described below:


- A single fan should be matched to the auxiliary supply and connected to F27 and F24.
- Two fans using a 110/115V auxiliary supply should be connected in parallel to F27 and F24.
- Two fans using a 220/240V auxiliary supply should be connected in series to F27 and F24 using F23 as the centre point.

Contactors Supply

The drive requires an ac or dc power contactor in series with the main power path to ensure correct power-up sequencing. This contactor is directly initiated by the Microcontroller via an isolating relay which drives the contactor coil with the same voltage as that of the auxiliary supply.

This is achieved by the brown wire connection from COIL LIVE (F28) to RELAY (F25) and the blue wire connection from COIL NEUTRAL (F21) to CONTACTOR RETURN (F26).

However, if an alternative supply for the contactor coil is required move the brown wire from F25 to F22, and move the blue wire from F21 to F25. The external coil supply can now be switched using a volt-free contact between terminals D5 and D6.

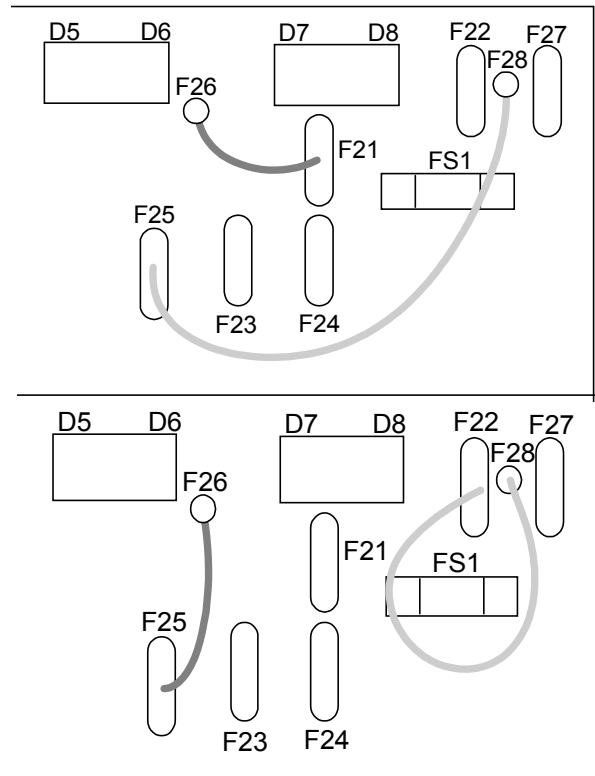

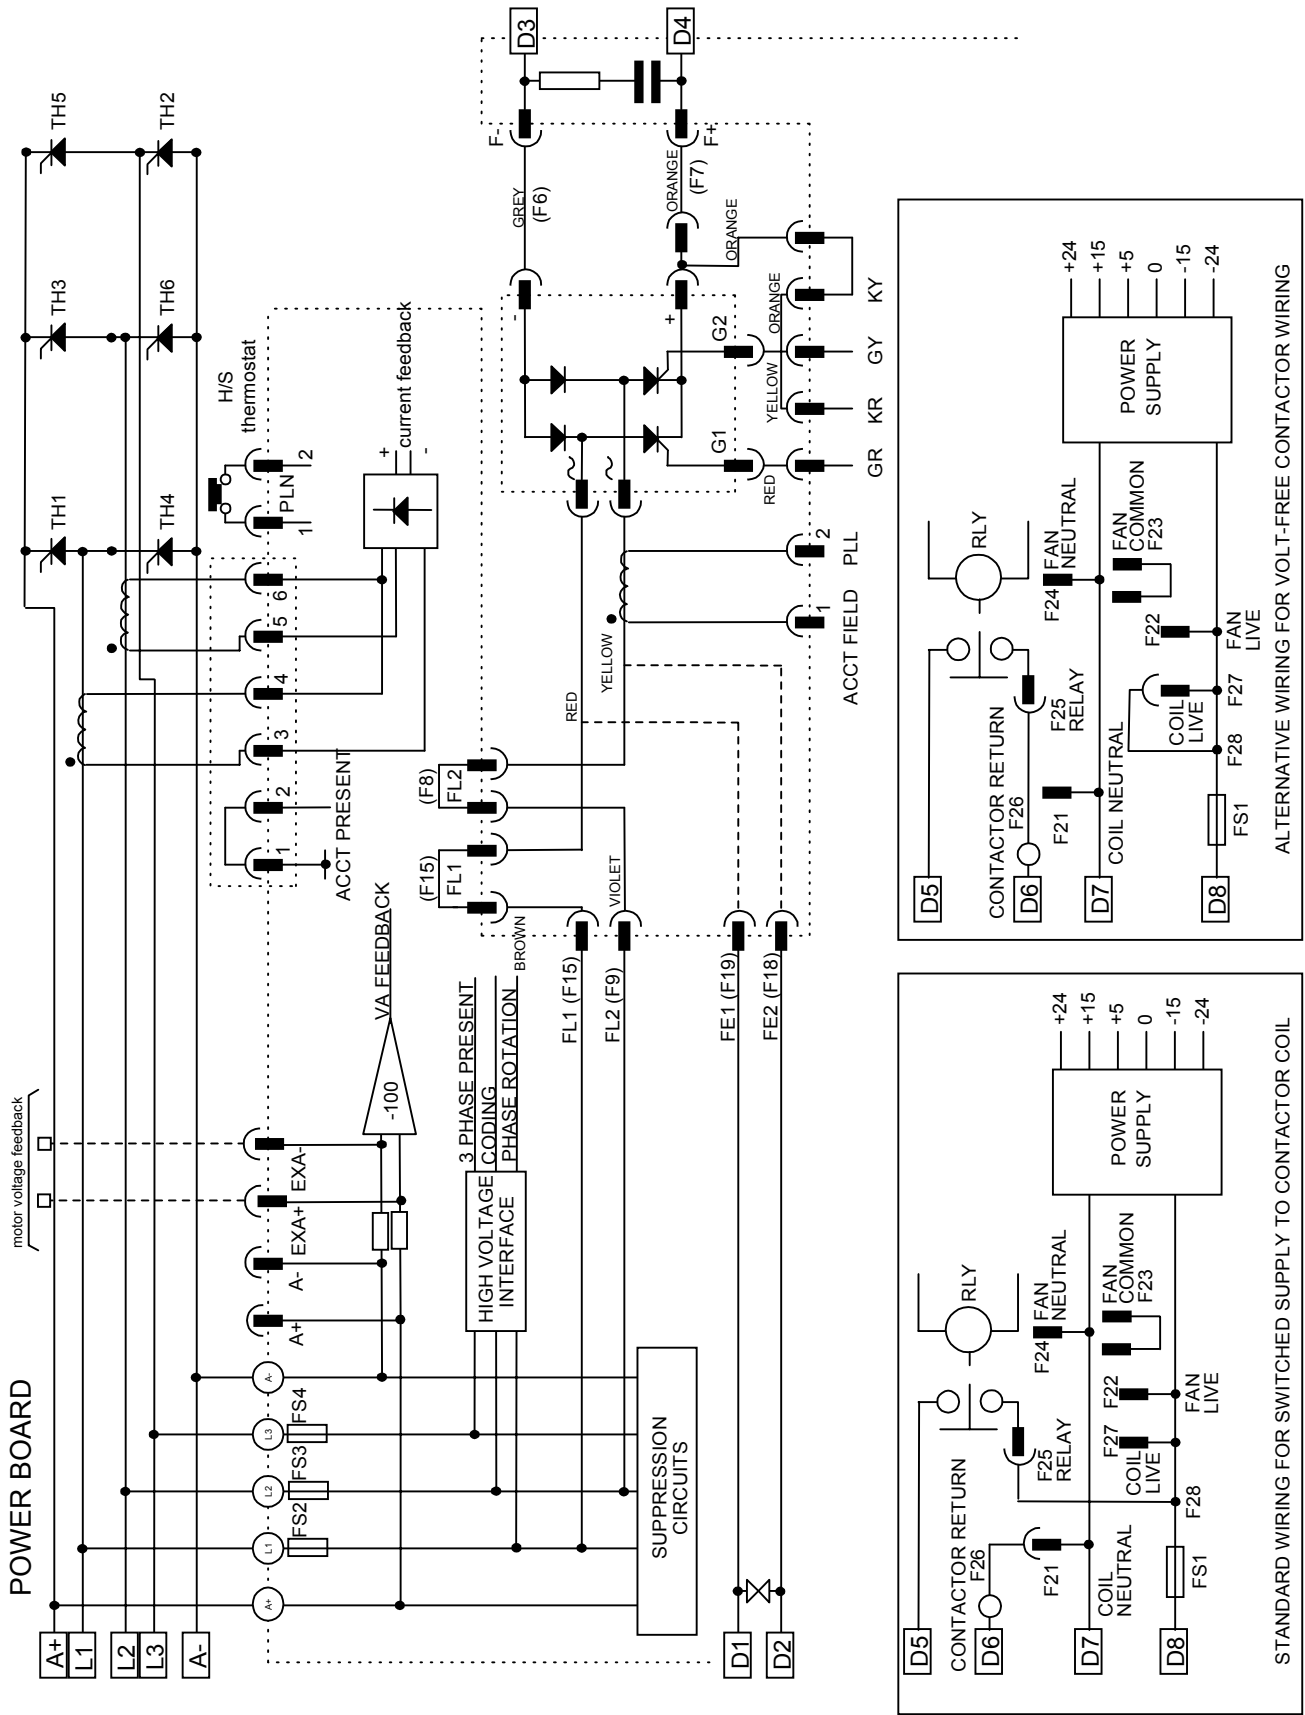


Figure 13-7 2 Quad Power Circuit - using AH385851U003 (Frame 3)

13-8 Standard and Optional Equipment

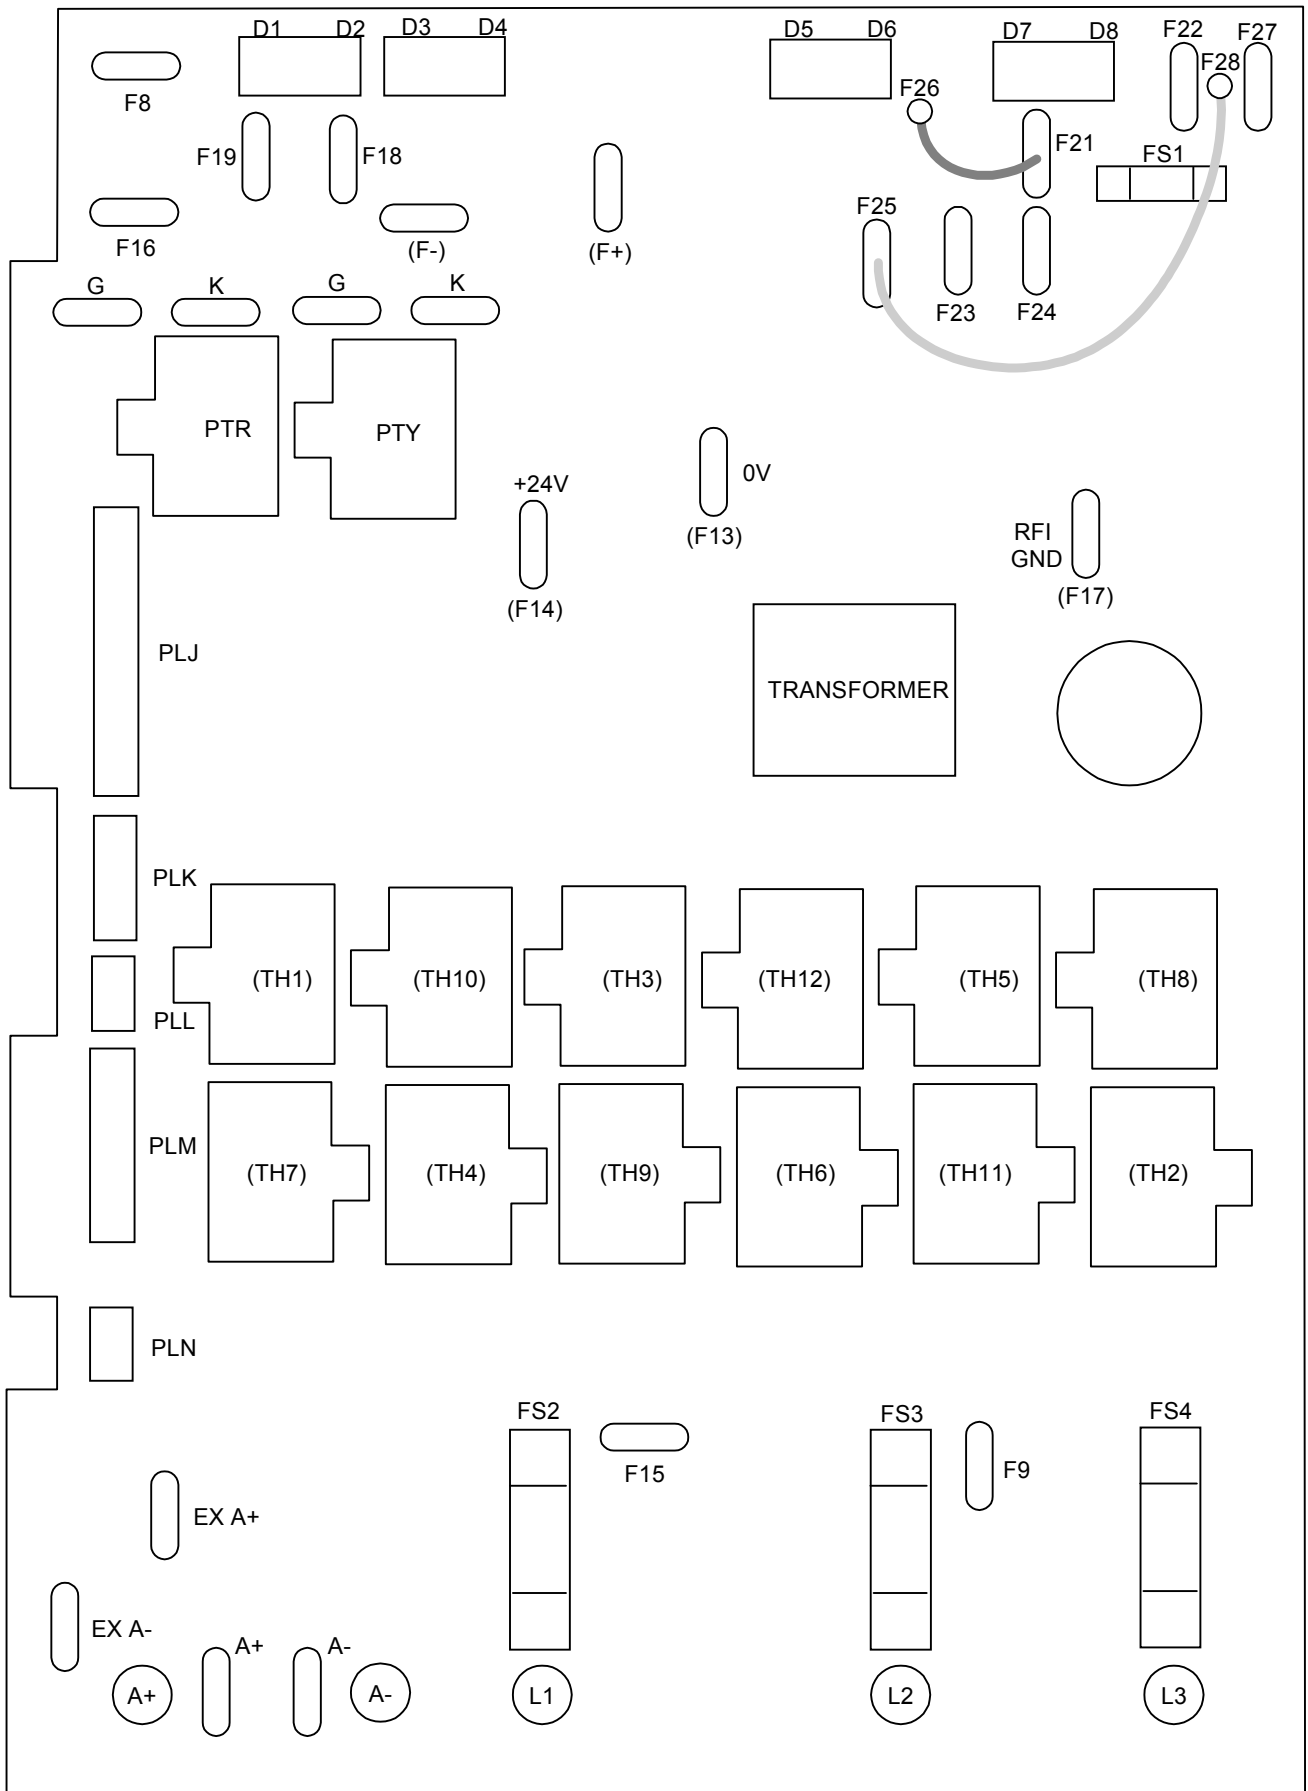


Figure 13-8 590 Power Board 4 Quad (AH385851U002) - (Frame 3)

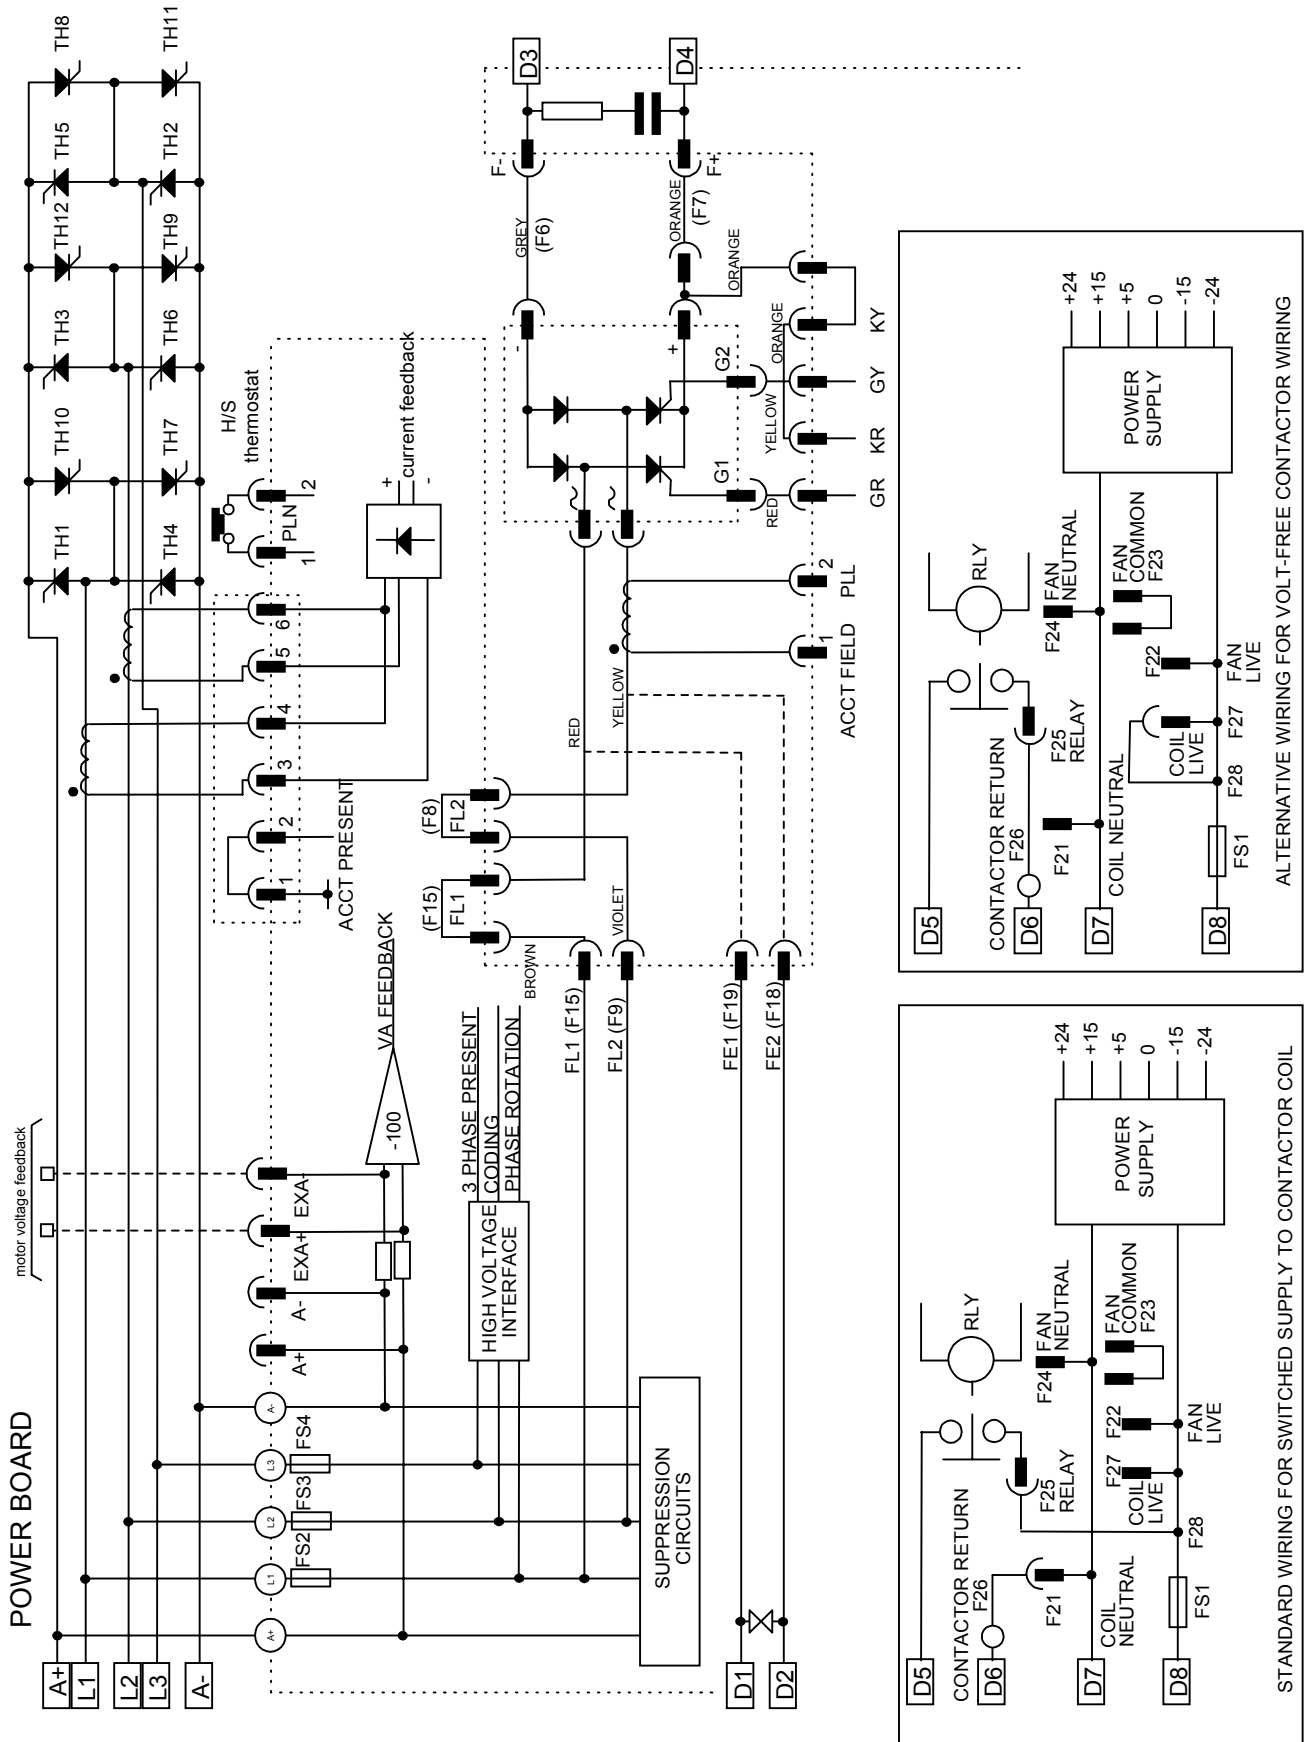


Figure 13-9 4 Quad Power Circuit - using AH385851U002 (Frame 3)

13-10 Standard and Optional Equipment

AH466701U001, U002, U003 (Frames 4 & 5)

U001	U002	U003
Regenerative / non-regenerative	Regenerative / non-regenerative	Regenerative / non-regenerative
110-220V: 200-800Hp	380-500V: 200-800Hp	500-600V: 200-800Hp

Power supplies for the drive are generated from the single phase auxiliary supply via a Switched Mode Power Supply. The incoming supply is directly rectified to provide a high voltage dc power rail. A high voltage transistor switches this rail on to the primary of a high frequency transformer, the output of which is rectified and smoothed to provide the dc power supply rails. The +15V dc rail is monitored via a reference element and a control signal returned via an opto-isolator to the control element of the high voltage switching transistor. The other dc rails (-15V & +24V dc) are generated via separate secondary windings which are rectified and smoothed, with a separate SMPS element providing a regulated +5V dc rail. The SMPS operates over an input voltage range of 110V to 240V ac $\pm 10\%$, 50/60Hz.

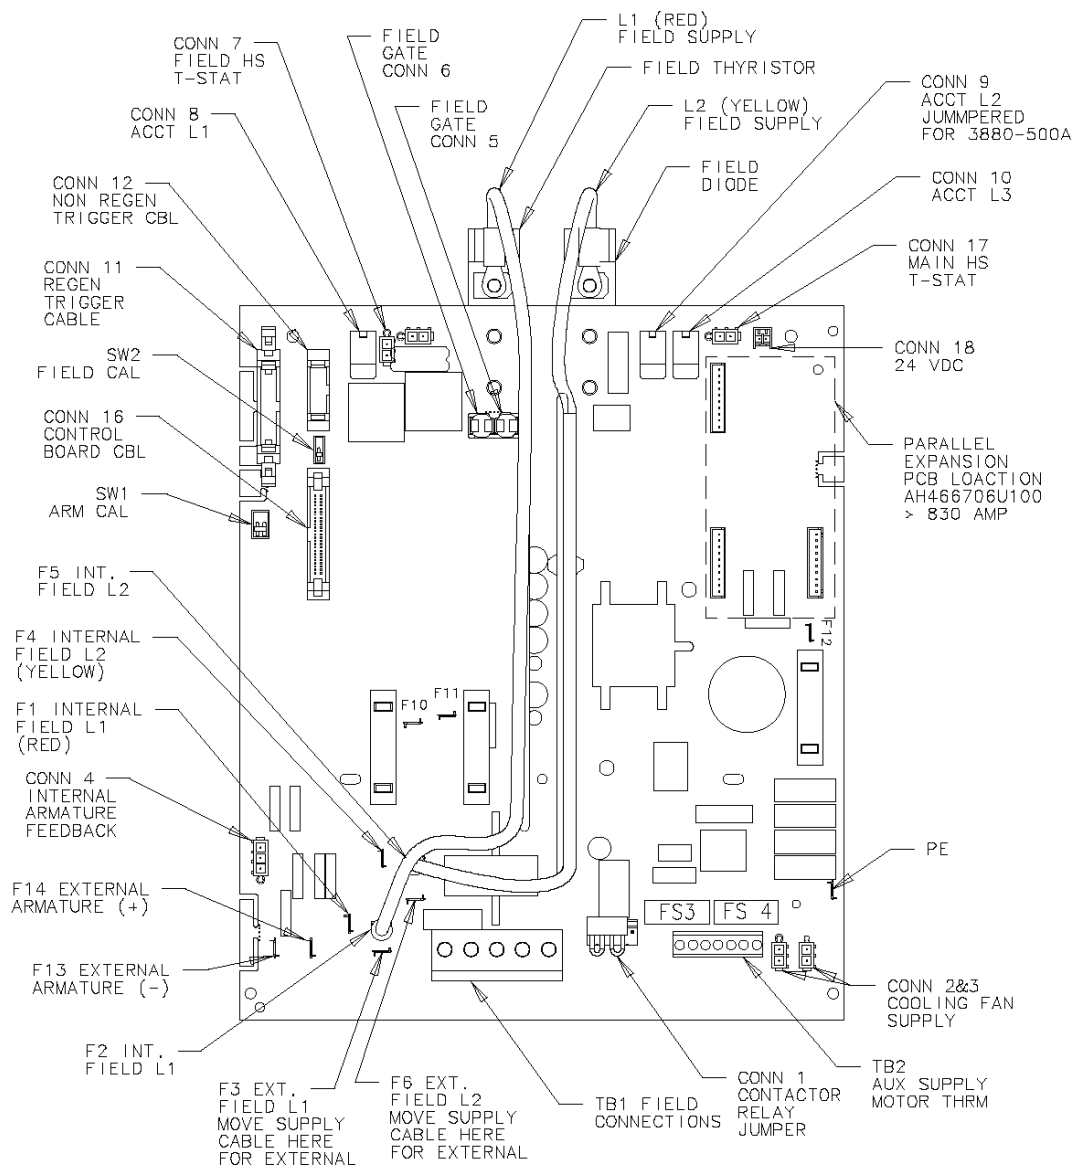


Figure 13-10 590+/591+ Power Board, 4 Quad and 2 Quad (AH466701)

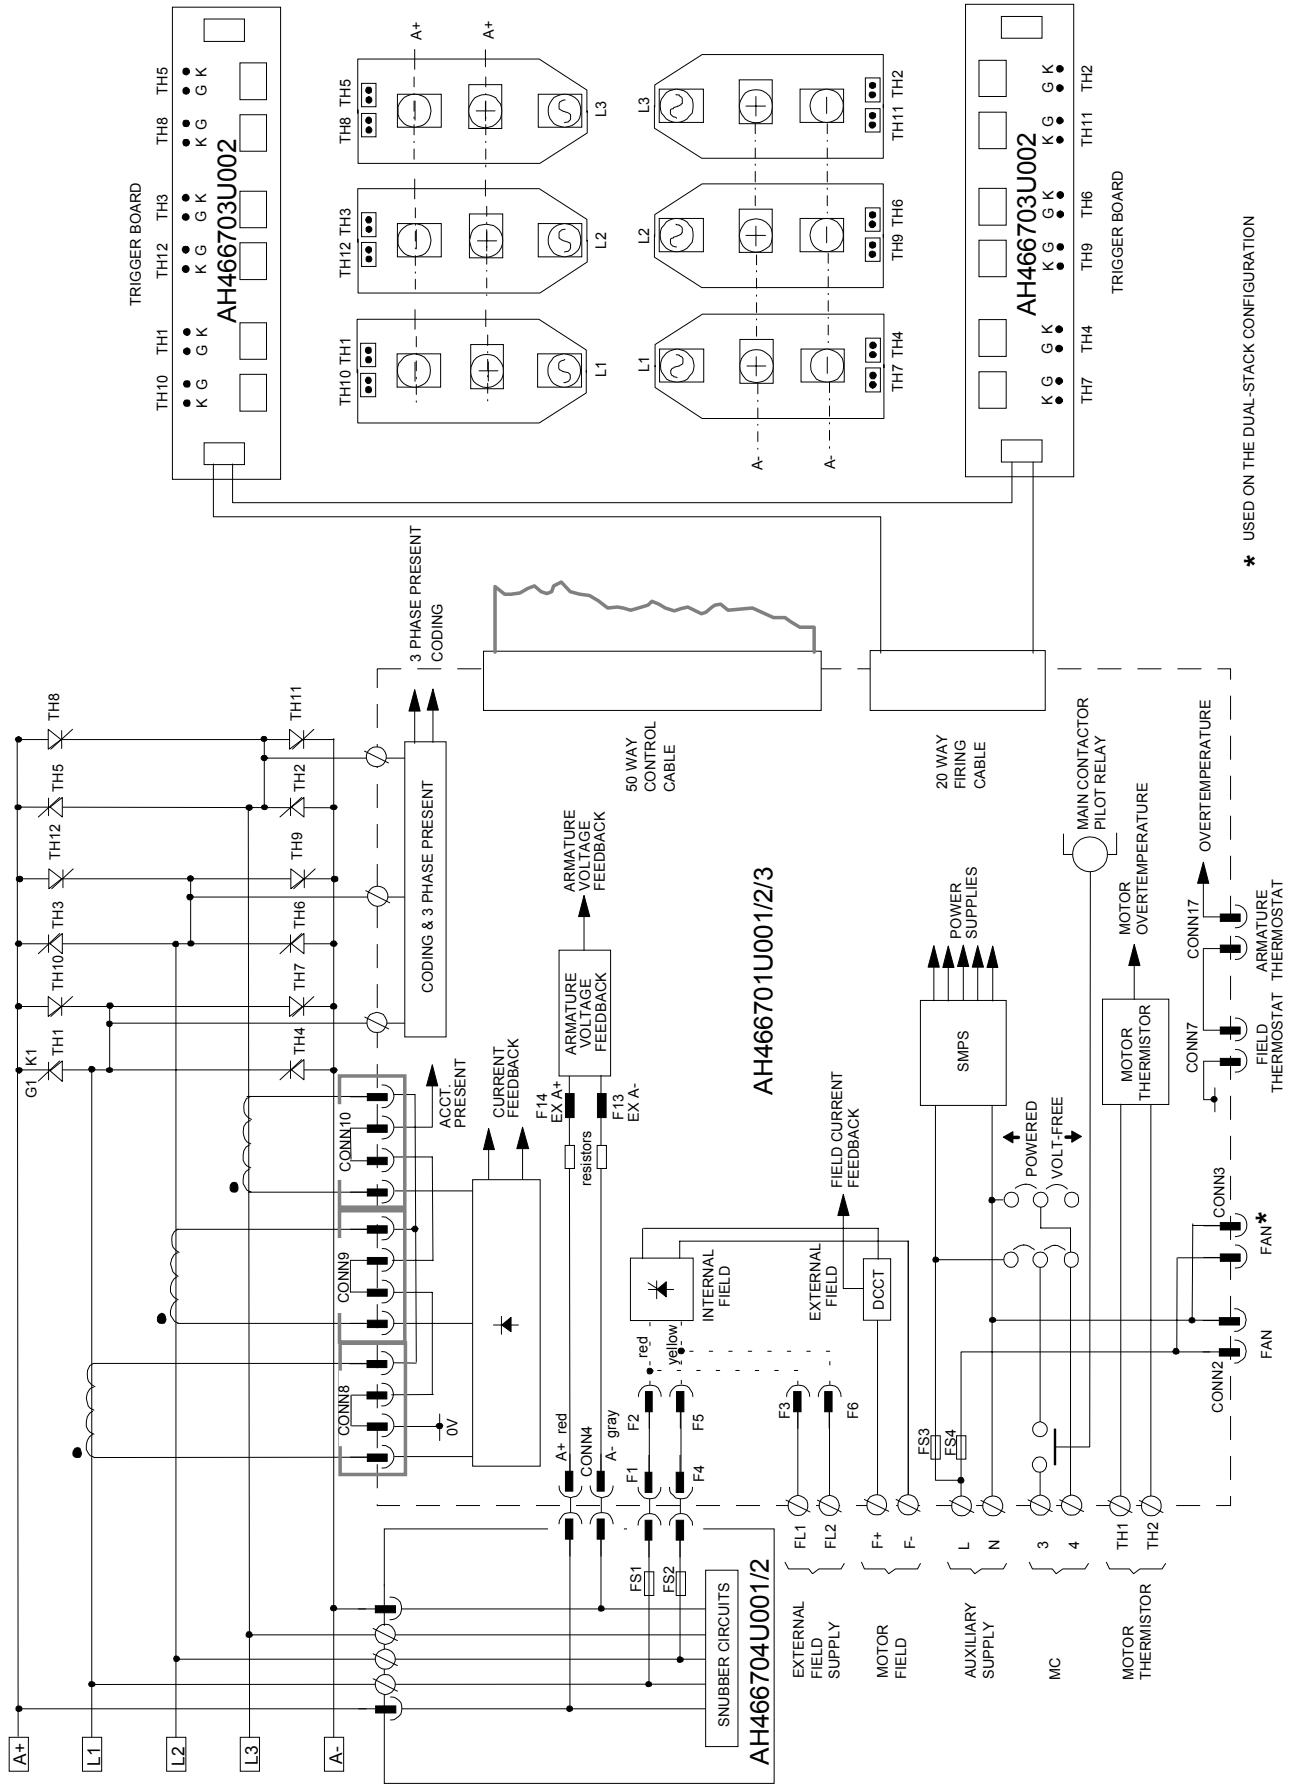


Figure 13-11 4 Quad Power Circuit – Frame 4 & 5 Units using AH466701

13-12 Standard and Optional Equipment

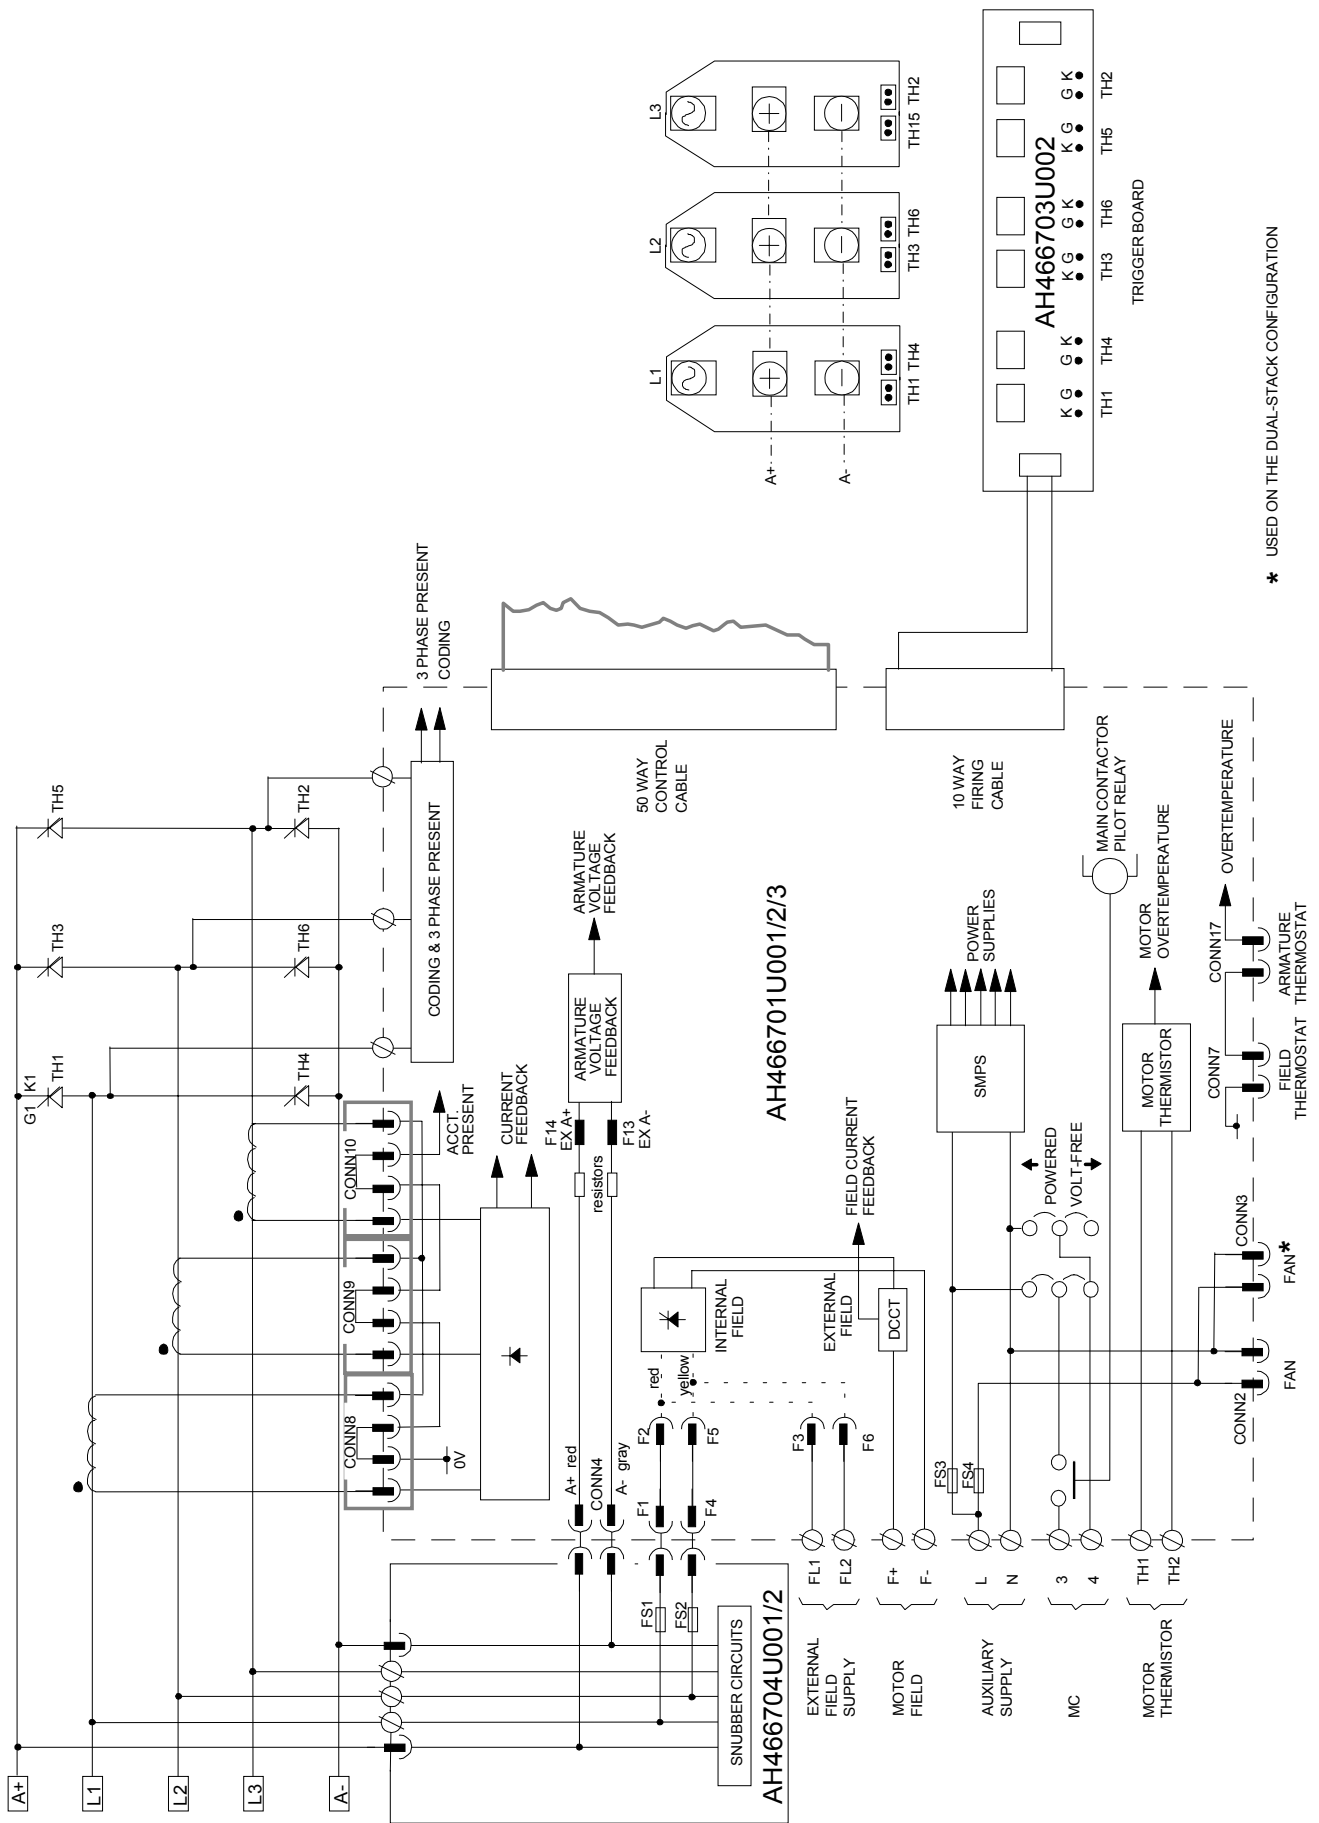


Figure 13-12 2 Quad Power Circuit –Frame 4 & 5 Units using AH466701

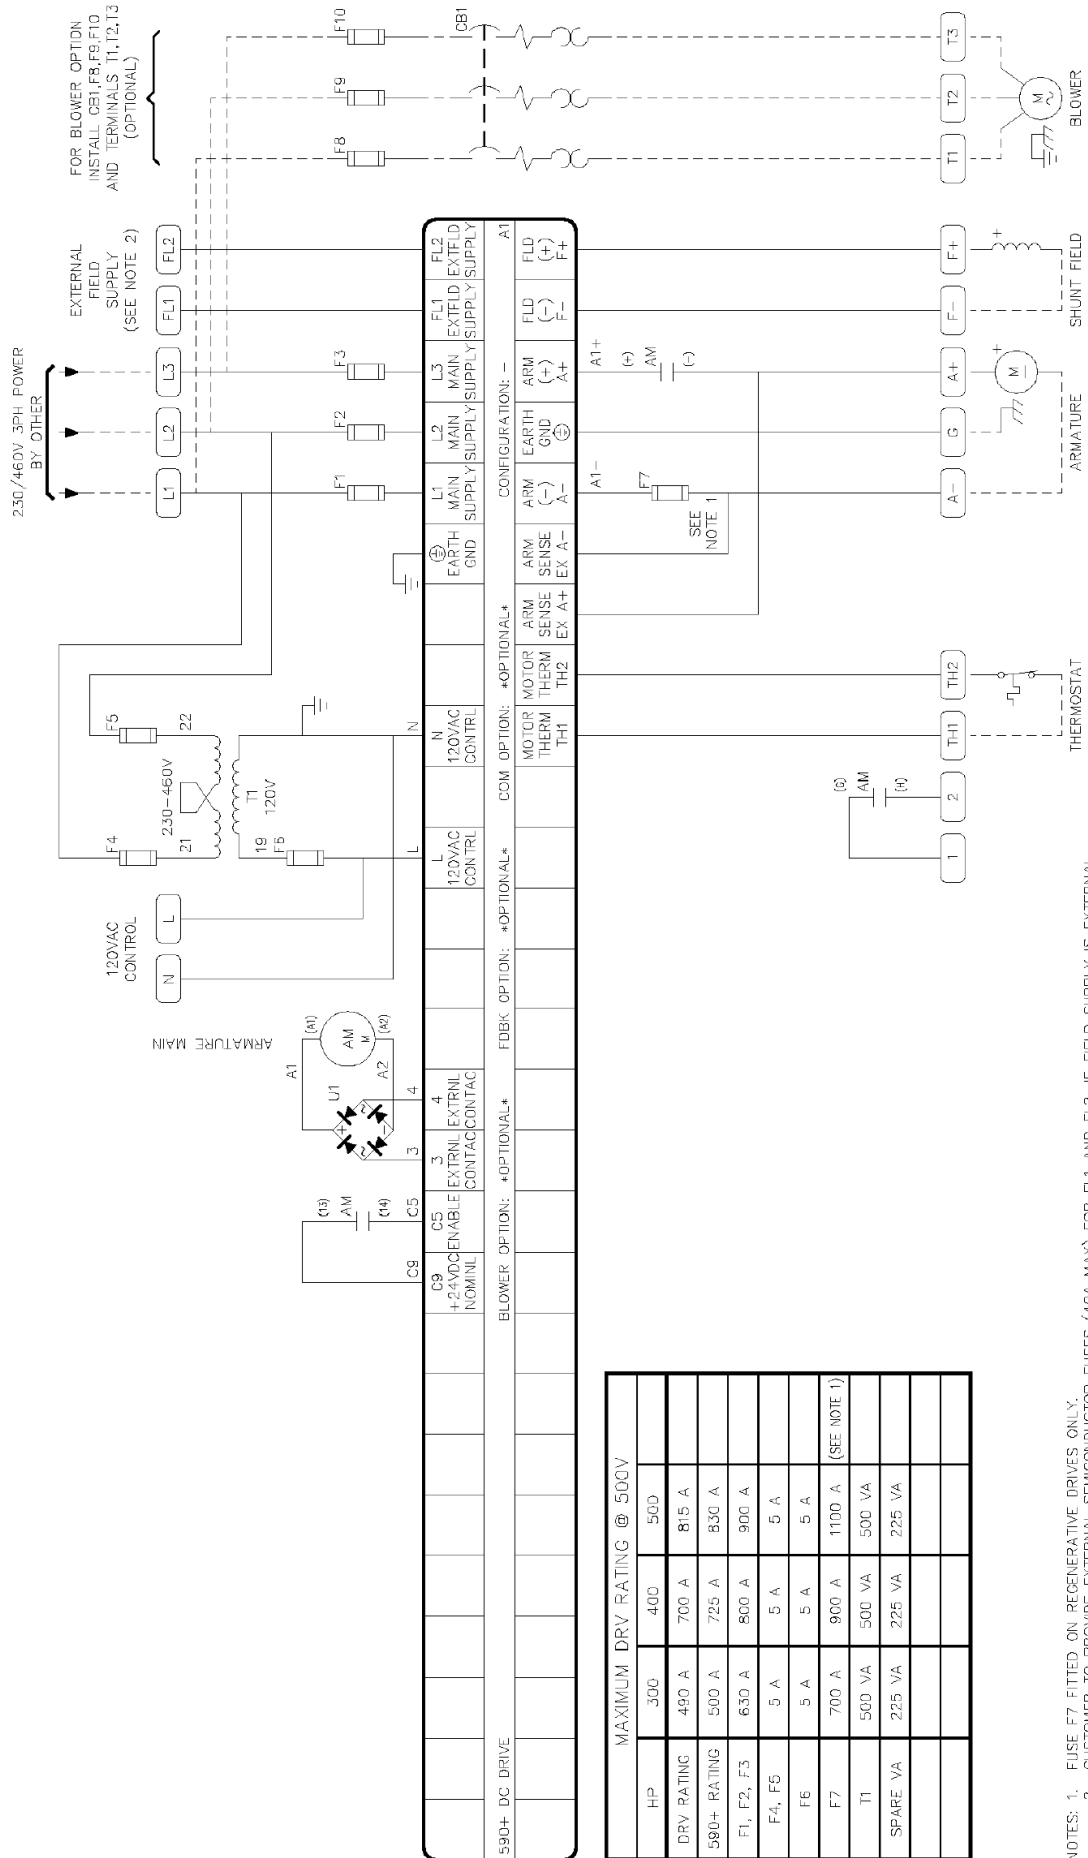


Figure 13-13 Internal Wiring Diagram –Frame 4 (DC Armature Contactor)

13-14 Standard and Optional Equipment


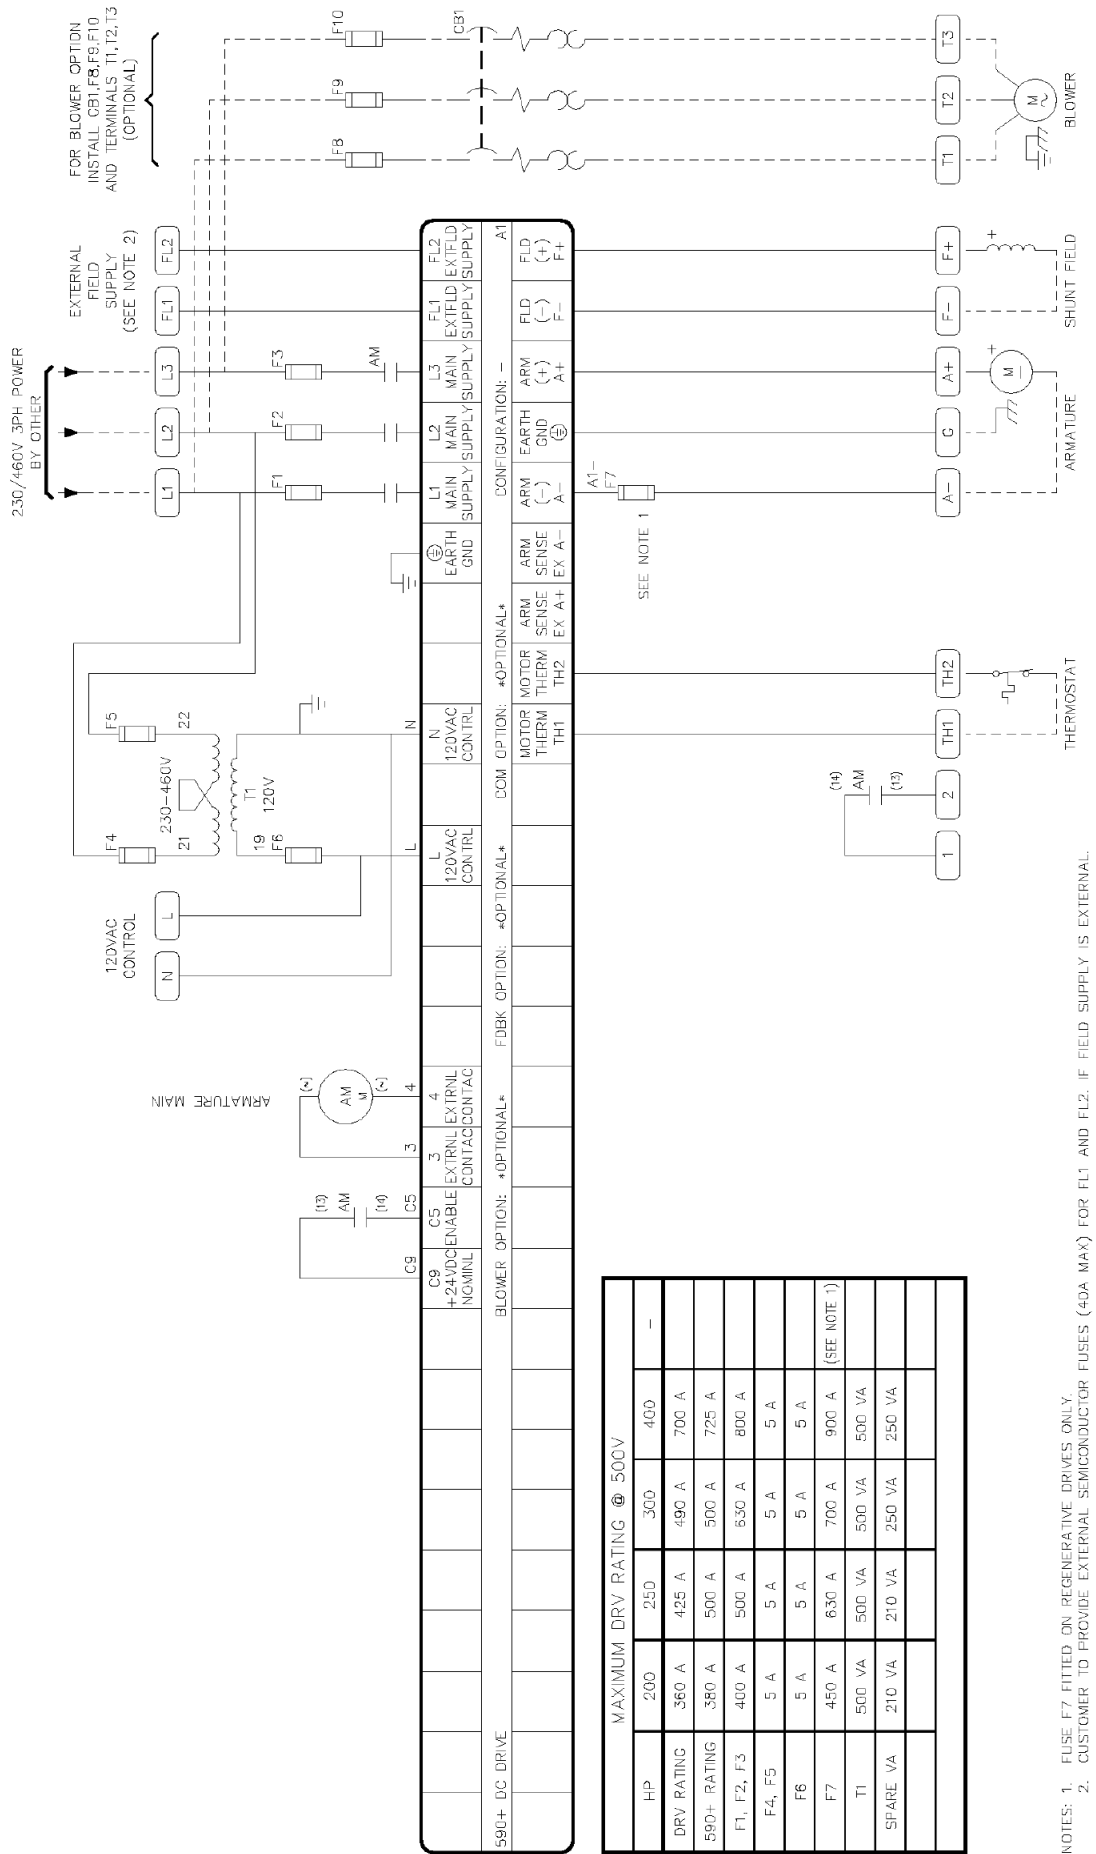


Figure 13-14 Internal Wiring Diagram – Frame 4 (AC Line Contactor)

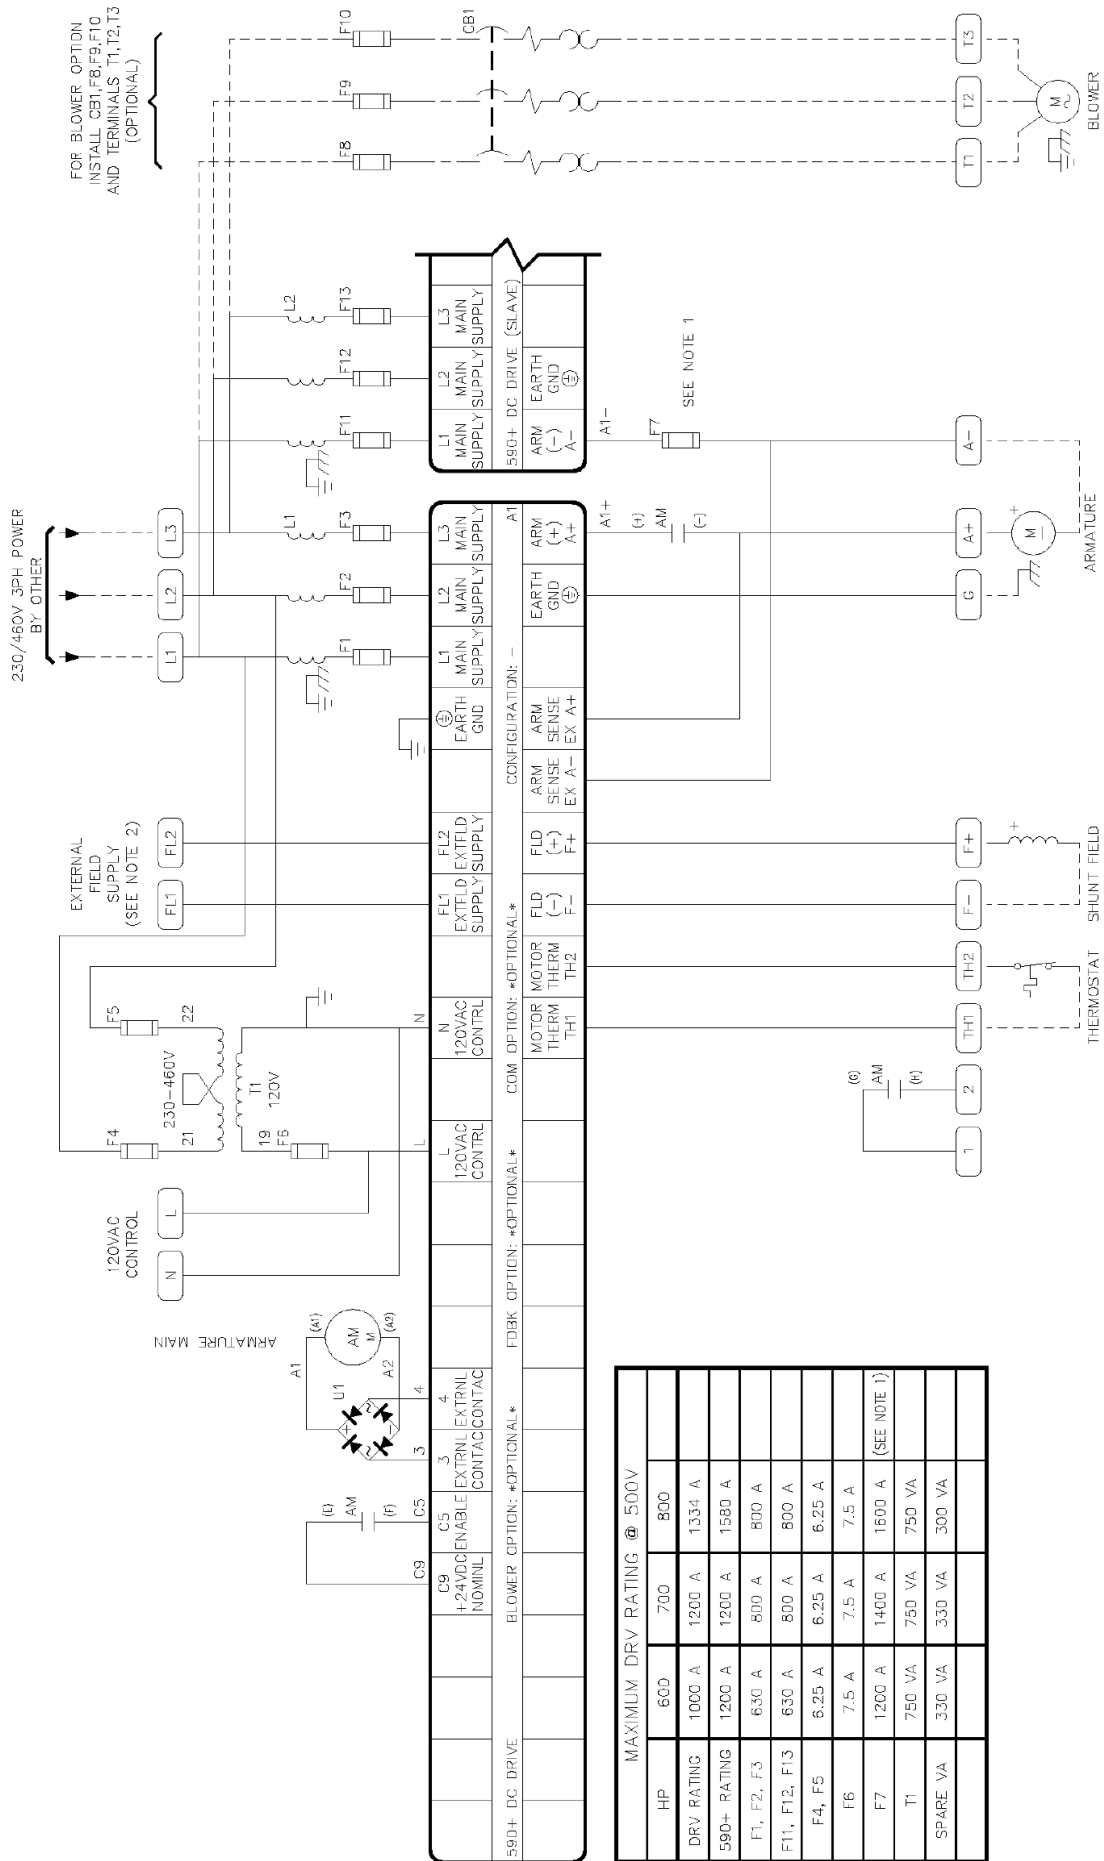

NOTES: 1. FUSE F7 FITTED ON REGENERATIVE DRIVES ONLY.
 2. CUSTOMER TO PROVIDE EXTERNAL SEMICONDUCTOR FUSES (40A MAX) FOR FL1 AND FL2. IF FIELD SUPPLY IS EXTERNAL.



Figure 13-15 Internal Wiring Diagram – Frame 5 (DC Armature Contactor)

13-16 Standard and Optional Equipment

AH466001U001, U101 (Frame H)

U001	U101
Regenerative / non-regenerative	Regenerative / non-regenerative
380-690V: 900-1500Hp	110-220V: 900-1500Hp

Power supplies for the drive are generated from the single phase auxiliary supply via a Switched Mode Power Supply. The incoming supply is directly rectified to provide a high voltage dc power rail. A high voltage transistor switches this rail on to the primary of a high frequency transformer, the output of which is rectified and smoothed to provide the dc power supply rails. The 5V dc rail is monitored via a reference element and a control signal returned via an optoisolator to the control element of the high voltage switching transistor. The other dc rails (-15V & +24V dc) are generated via separate secondary windings which are rectified and smoothed, with individual linear regulators providing $\pm 15V$ dc rail. The SMPS operates over an input voltage range of 110V to 240V ac $\pm 10\%$, 50/60Hz.

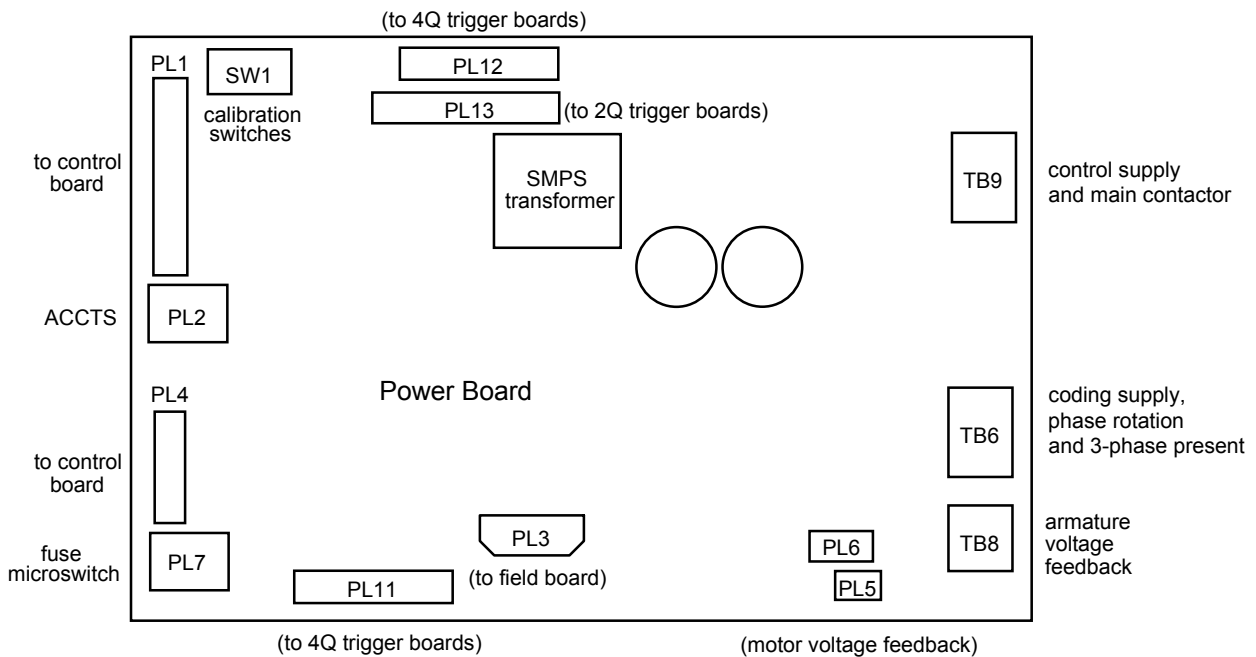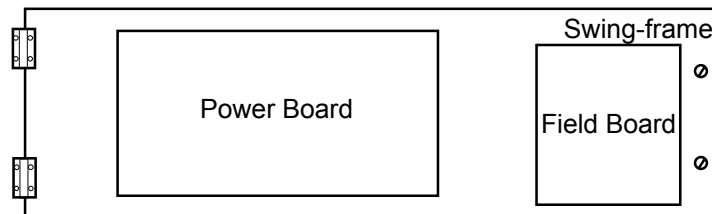

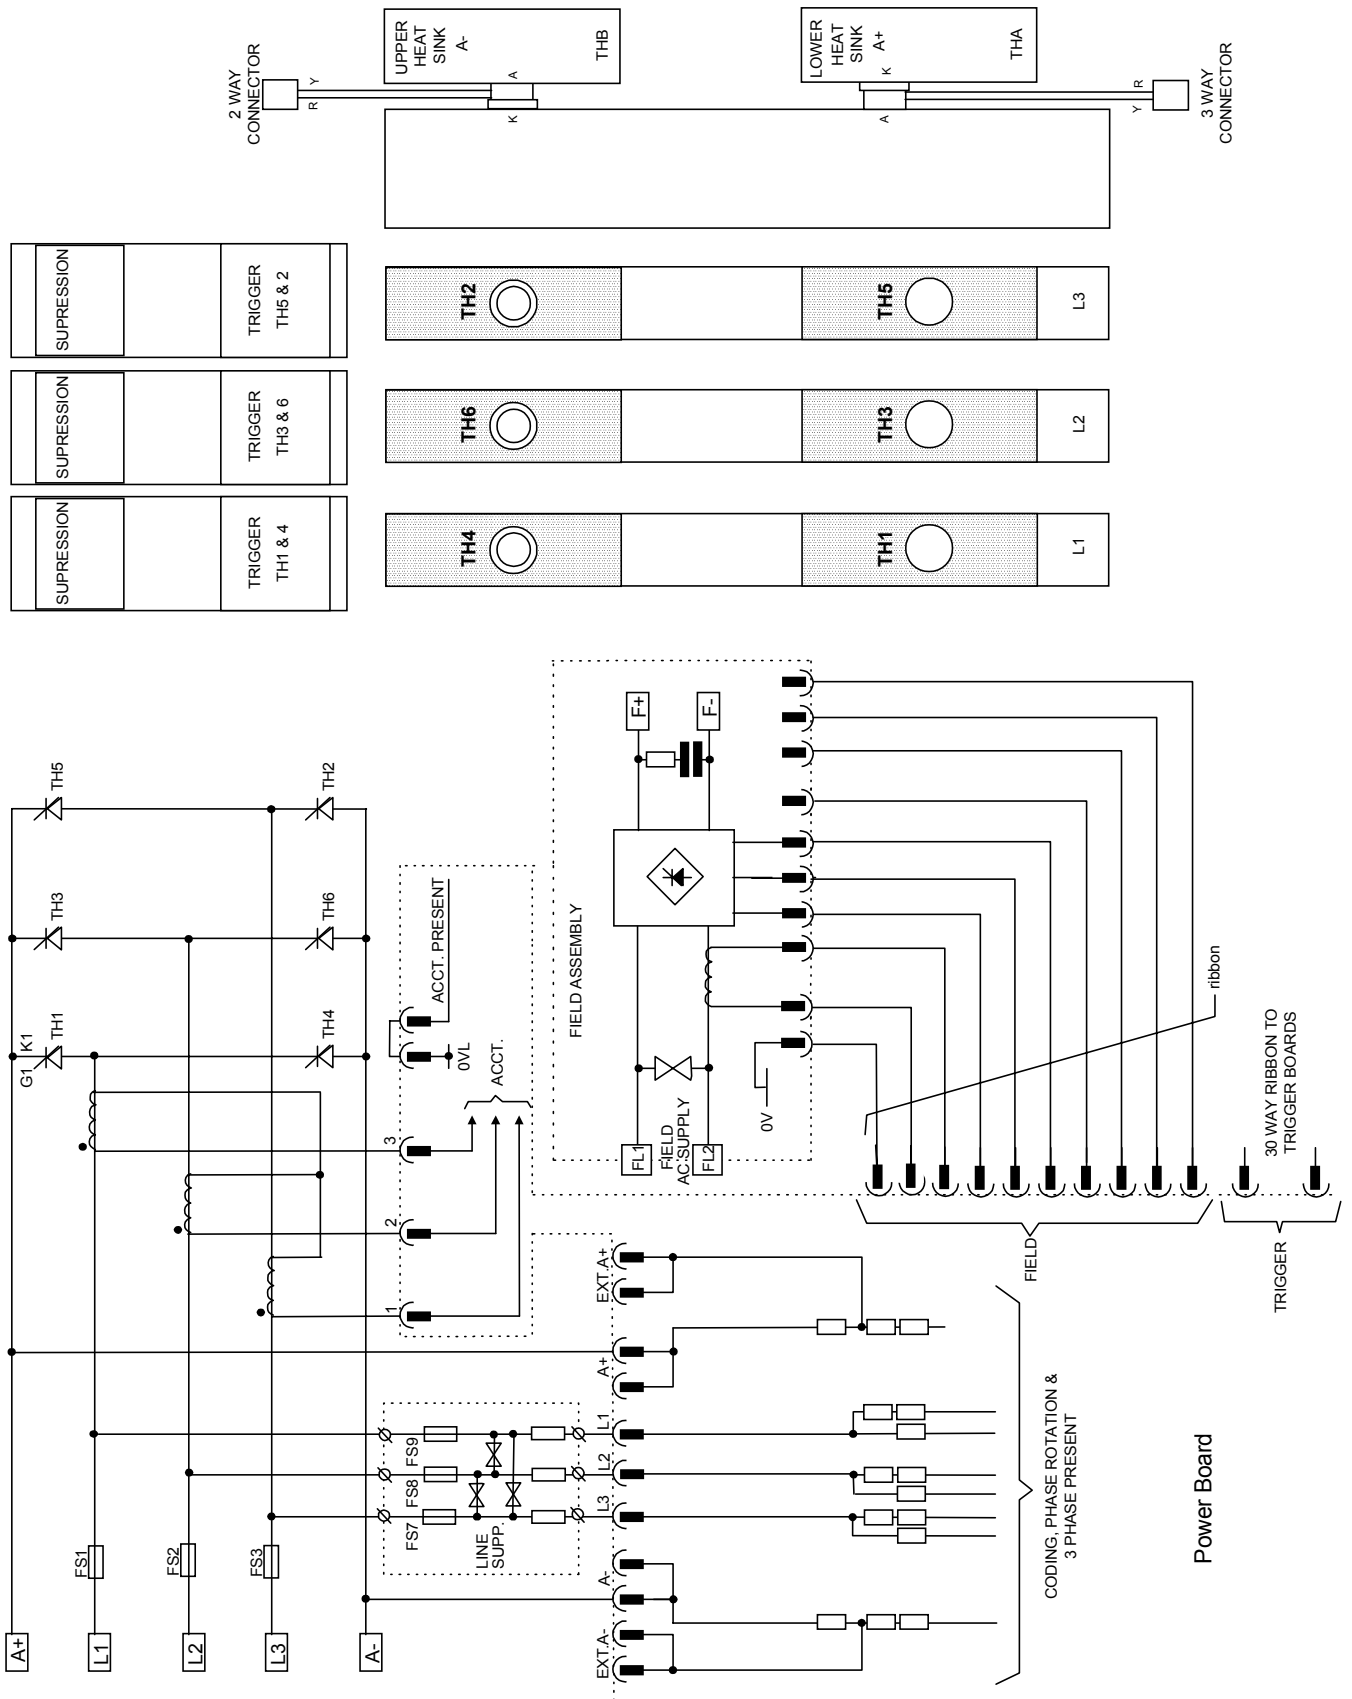


Figure 13-16 2 Quad Power Circuit – Frame H Units using AH466001U001

13-18 Standard and Optional Equipment

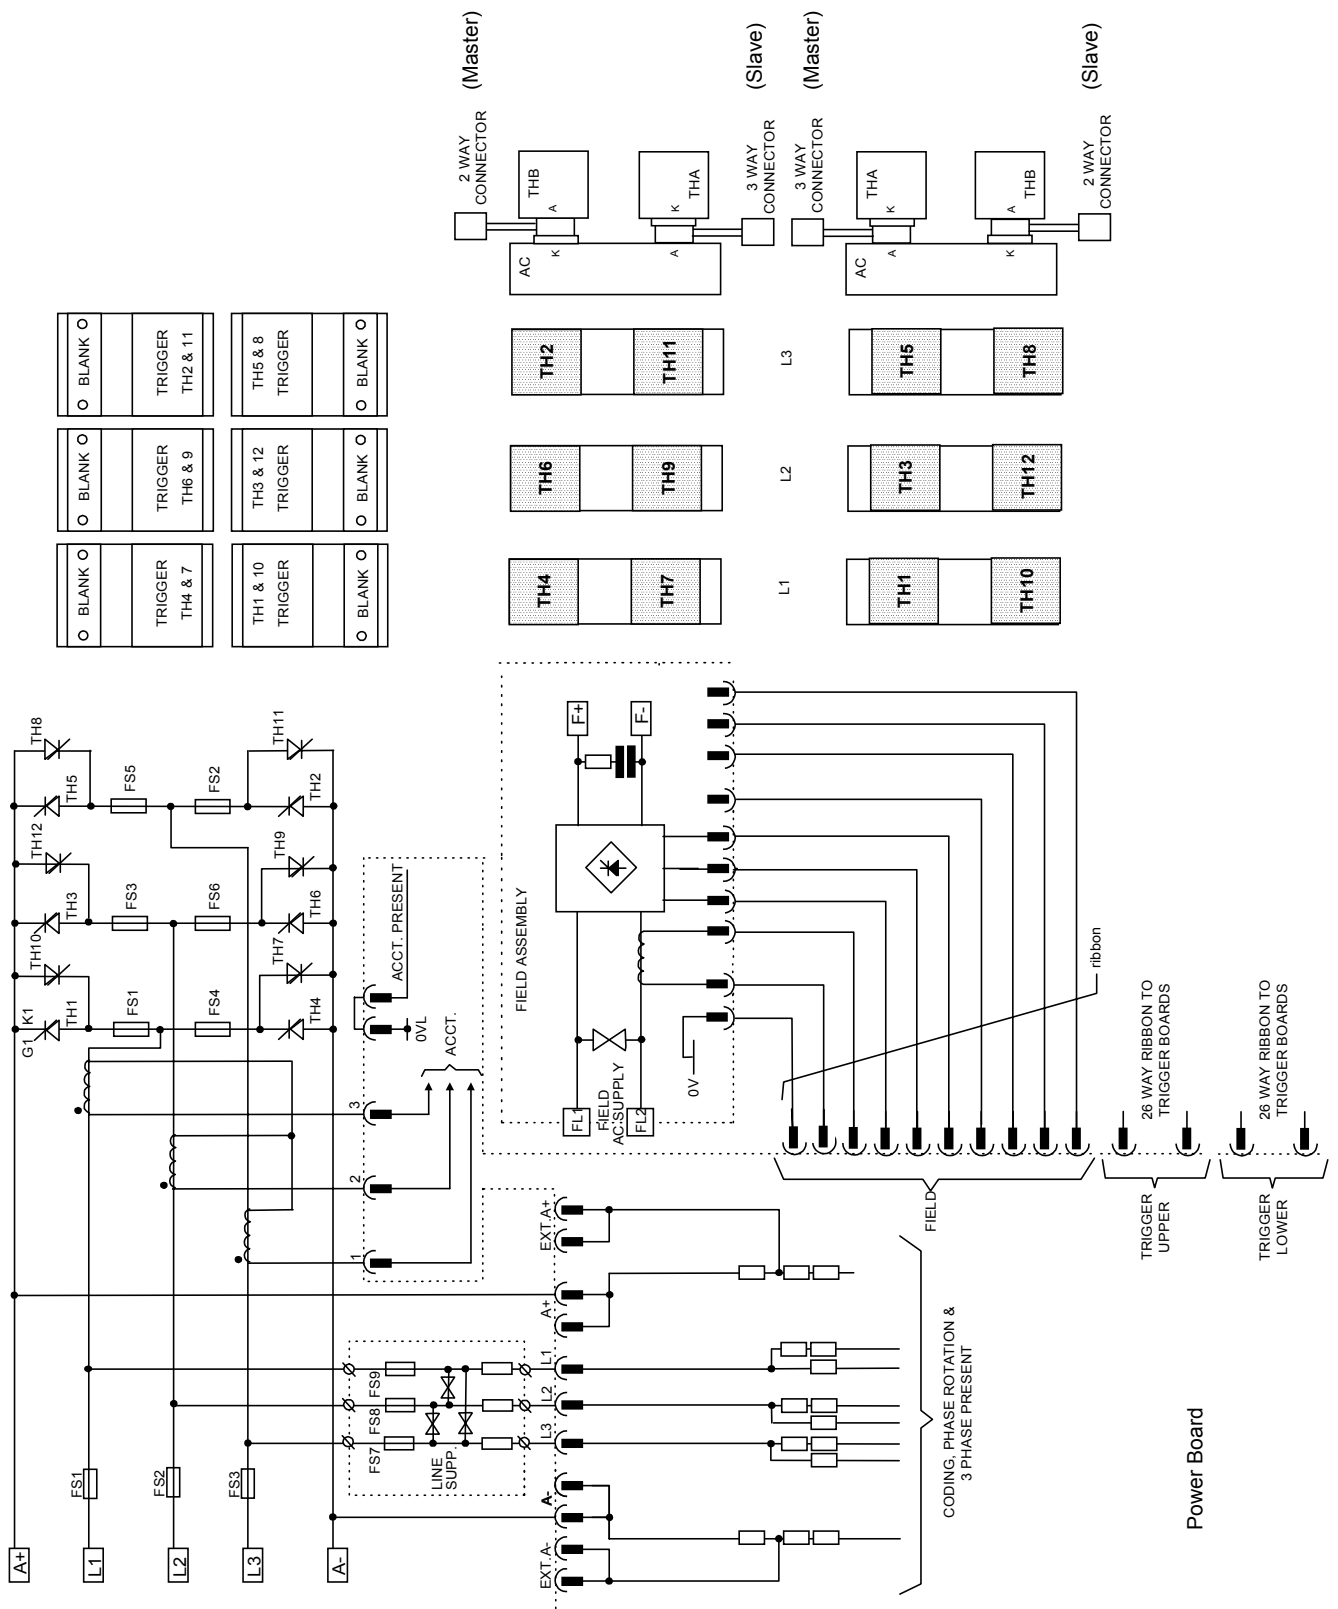


Figure 13-17 4 Quad Power Circuit – Frame H Units using AH466001U001

Optional Equipment

Contact your local Eurotherm Drives office to order optional equipment.

Item	Part Number
EMC Installation Guidelines for Modules and Systems <i>A Eurotherm Drives application manual detailing EMC requirements</i>	HA388879
590 Digital Section Control <i>A Eurotherm Drives application manual detailing the use of the block diagram to implement open and closed loop control of driven web section rolls</i>	HA388664
590 Digital Closed Loop Centre Winder <i>A Eurotherm Drives application manual detailing the use of the block diagram to implement closed loop centre winders</i>	HA388202
ConfigEd Lite <i>Eurotherm Drives' Windows-based block programming software</i>	Order by name
External AC Supply (RFI) Filter <i>For Drives without internal filters, on cable runs in excess of 25 metres</i>	Refer to Chapter 11: "External AC Supply (RFI) Filters" for Part Numbers
Microtach Option Board <i>Two board types for connecting to a plastic or glass fiber Microtach encoder</i>	AH386025U001 AH386025U002
Encoder Option Board <i>A board to interface to a wire-ended encoder</i>	AH387775U001 (universal)
Tacho Calibration Option Board <i>A switchable calibration board for interfacing to AC/DC analog tachogenerators</i>	AH385870U001
Comms Option Board (P1) Board <i>Various board types for supporting communication protocols for connection to other equipment.</i>	6055/EI00/00 6055/PROF/00 6055-L-00 (US) 6055/LINK/00 (Europe) 6055/DNET/00 6055/CAN/00 (Europe) 6055/CNET/00 6055/MBP/00 6055/ETH/00 (US) 6055/ENET/00 (Europe)


Table 13-1 Optional Equipment

Speed Feedback Option Boards

Each option board below is shown with the correct selection for the SPEED FBK SELECT parameter.

The selections are ARM VOLTS FBK, ANALOG TACH, ENCODER and ENCODER/ANALOG.

(ARM VOLTS FBK is default and requires no option board).

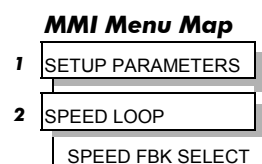


13-20 Standard and Optional Equipment

Microtach Option Board

There are two kinds of Eurotherm Drives' Microtach, each requiring a different board:

- 5701 Microtach (plastic fibre)
- 5901 Microtach (glass fibre)


If fitted, refer to the Microtach Technical Manual for further information.

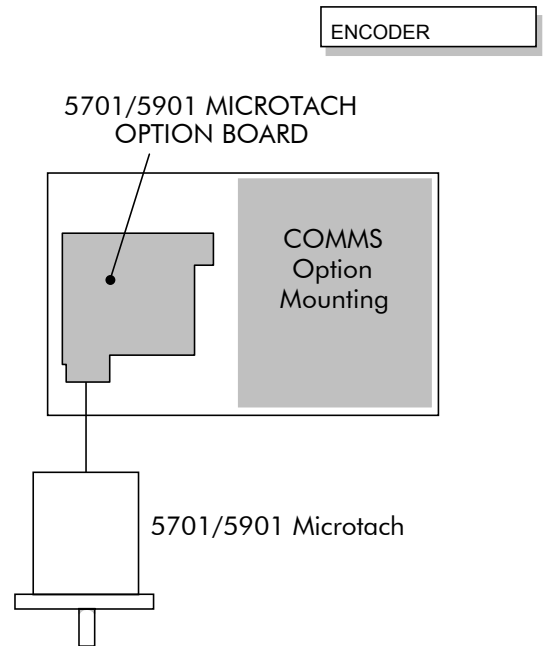

Wire-Ended Encoder Option Board

The board accepts connection from a wire-ended encoder.


If fitted, refer to the Encoder Technical Manual for further information.

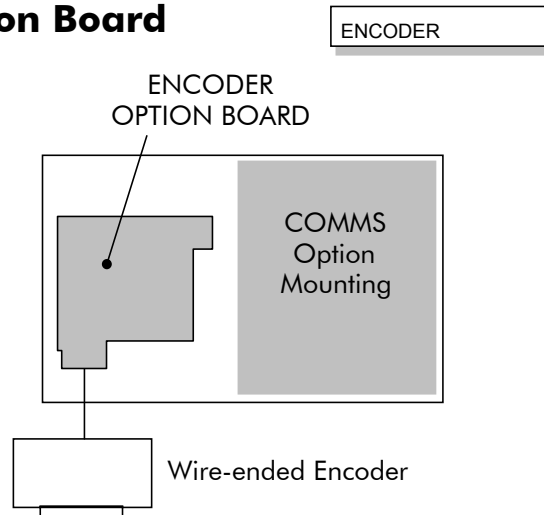

Tacho Calibration Option Board


The board accepts connection from an analog tachogenerator.

If fitted, refer to the Tachogenerator Technical Manual for further information.

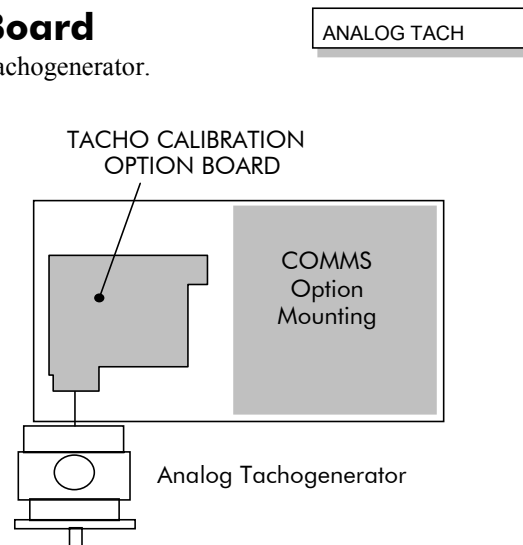

Combined Tacho and Encoder Feedback

If an analog tachogenerator and digital encoder are to be used, the Encoder Option Board receives the digital signal, the analog signal is routed to Terminals B2 (Tacho) and B1 (0V). Please refer to Eurotherm Drives Engineering Department for assistance with this feature.

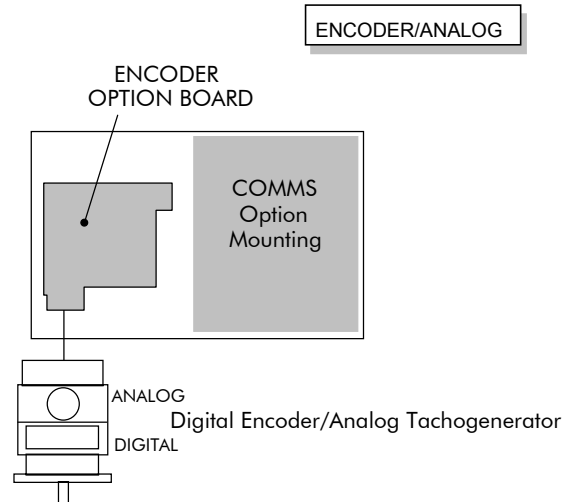



Communications Technology Options

COMMS Option Technology Box

Various protocols are supported, each requiring a different Technology Box. The type of Technology Box fitted is selected in the TYPE parameter:

- RS485 (EI BINARY, EI ASCII or MODBUS RTU)
- PROFIBUS DP
- LINK
- DEVICENET
- CANOPEN
- LONWORKS
- CONTROLNET
- MODBUS PLUS
- ETHERNET

MMI Menu Map

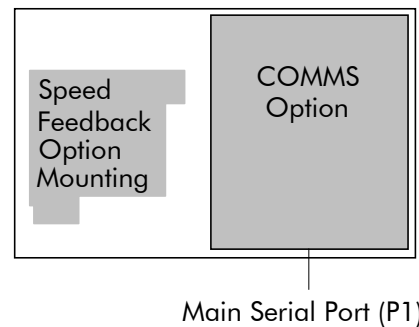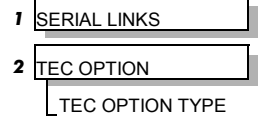

The option allows the 590+ Drive to be controlled as part of a system. The system can also comprise other Eurotherm Drives products such as the 605 and 584SV Inverters, or any other equipment using the same protocol.

13-22 Standard and Optional Equipment

SERIAL COMMUNICATIONS

Communications Technology Option

The plug-in COMMS Option Technology Box provides a serial data port, allowing drives to be linked together to form a network. Using a PLC/SCADA or other intelligent device, this network can be continuously controlled to provide supervision and monitoring for each drive in the system. Refer to the Communications Interface Technical Manual for further details.

Config Ed Lite

This is Eurotherm Drive's Windows-based block programming software. It has a graphical user-interface and drawing tools to allow you to create block programming diagrams quickly and easily. Contact your local Eurotherm Drives sales office.

System Port (P3)


This port has several uses:

1. **ConfigEd Lite:** Parameters can be monitored and updated by ConfigEd Lite (or other suitable PC programming tool)
2. **UDP Support:** It can be used to upload and download information to a PC
3. **5703 Support:** A Eurotherm 5703 Setpoint Repeater Unit can be connected

The port is an un-isolated RS232, 9600 Baud (default), supporting the standard EI BISYNCH ASCII communications protocol, contact Eurotherm Drives for further information.

A standard P3 lead is used to connect to the drive.

P3 Port Pin	Lead	Signal
1	Black	0V
2	Red	24V
3	Green	TX
4	Yellow	RX

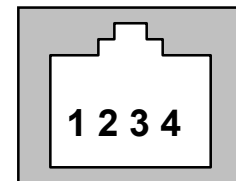

6-Way Lead to DB9/DB25 Connector

Note: There is 24V present on pin 2 of the P3 port. This may damage your PC or the drive.

P3 Port Pin	Lead	Female DB9 Pin	Female DB25 Pin
1	Black	5	7
2	Red	not connected	not connected
3	Green	2	3
4	Yellow	3	2

UDP Support

The P3 port can be used to transfer an ASCII representation of the drive's settings between the drive and a host computer.

The transfer uses a simple ASCII file structure and XON / XOFF protocol. This is provided by most communications packages. Host computers tested include IBM PCs XT/AT, running both Windows and MSDOS, Psion Organiser 3 and many more.

Transferring data from the drive to a host computer is defined as "Downloading", whereas transferring data from a host computer to the drive is defined as "Uploading".

Refer to Chapter 6: "Programming Your Application" - SYSTEM PORT P3 for parameter details.

UDP Menu Structure

```

.....SYSTEM PORT (P3)
.....P3 SETUP
.....MODE //                Disable/5703 Setup Mode
.....5703 SUPPORT //        Submenu for 5703 parameters
.....P3 BAUD RATE //        Baud rate for the P3 Port
.....DUMP MMI (TX) //        Transfer the MMI to Host
.....UDP XFER (RX) //        Transfer Parameters From Host
.....UDP XFER (TX) //        Transfer Parameters To Host
    
```

SYSTEM PORT (P3) Setup

Set MODE parameter (Tag No. 130) to DISABLE (default) using the MMI

Set P3 BAUD RATE parameter (Tag No. 198) to 9600 (default) using the MMI


1 Stop bit (fixed)

NO Parity (fixed)

8 bits (fixed)

XON/XOFF Handshaking (fixed)

MMI Menu Map

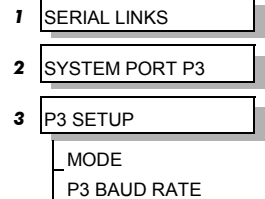


UDP Transfer Procedure

UDP UpLoad (UDP XFER (RX))

This is the transfer of the parameters from the host computer to the drive. This information is written directly to EEprom, so **all the drive's current settings will be overwritten.**

- Connect the drive to the host using the appropriate lead.
- Using a standard communications package prepare the host to transfer an ASCII file. Remember to set up the host's serial port first.
- Set the P3 MODE parameter to DISABLE.
- Start uploading on the drive by selecting UDP XFER (RX) on the MMI and pressing the UP (↑) key, as instructed.
- When the drive says RECEIVING, begin the file transmission.
- The file ends in a **:00000001FF** which the drive uses to close the file.
- As indicated, reset the drive by pressing the **E** key.

MMI Menu Map

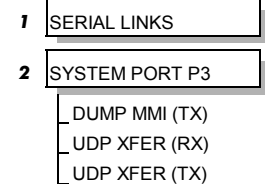

UDP Download (UDP XFER (TX))

This is the transfer of the parameters from the drive to a host computer. This information fully describes the drive's settings in a Binary format.

- Connect the drive to the host using the appropriate lead.
- Using a standard communications package prepare the host to receive an ASCII file. Remember to set up the host's serial port first.
- Perform a PARAMETER SAVE of the drive's settings. This ensures the Dump matches the drive's settings, (the listing is of the drive's currently saved settings, i.e. held in EEprom.
- Set the P3 MODE parameter to DISABLE.
- Prepare the host PC to receive a file; use the file extension .UDP to differentiate it from .MMI format files.
- Start downloading on the drive by selecting UDP XFER ((TX) on the MMI and pressing the UP (↑) key, as instructed.

- The file ends in a ctrl-z. With some packages this automatically closes the downloaded file but if this is not the case, when the drive says it has finished and the host has stopped scrolling text, close the file by hand. The last line should read :0000001FF

The file can now be treated like any normal file.

Download MMI (MMI DUMP (TX))

This is the transfer of the MMI description from the drive to a host computer. This information fully documents the drive's settings in a textual format that is clear and easy to read.

- Connect the drive to the host using the appropriate lead.
- Using a standard communications package prepare the host to receive an ASCII file. Remember to set up the host's serial port first.
- Perform a PARAMETER SAVE of the drive's settings. This ensures the Dump matches the drive's settings, (the listing is of the current settings, NOT the saved settings held in EEprom).
- Set the P3 MODE parameter to DISABLE.
- Prepare the host PC to receive a file; use the file extension .MMI to differentiate it from .UDP format files.
- Start downloading on the drive by selecting DUMP MMI (TX) on the MMI and pressing the UP (↑) key, as instructed.
- The file ends in a ctrl-z. With some packages this automatically closes the file but if this is not the case, when the drive says it has finished and the host has stopped scrolling text, close the file by hand.
- The file can now be treated like any normal text file.

MMI Dump

The following file was produced by performing a MMI DUMP (TX) to a PC, as described above. The file shows the drive default settings.

Note: When printing this file, it is useful to select a proportionally-spaced text, such as Courier, so that the text columns line-up. Note that in the list below, 'menus' have been highlighted (bold) to make the list easier to use.

```
DIGITAL DC DRIVE
ISSUE:4.4
..MENU LEVEL
...DIAGNOSTICS
.....SPEED DEMAND      [89 ] = 0.00 %
.....SPEED FEEDBACK    [207 ] = 0.00 %
.....SPEED ERROR       [297 ] = 0.00 %
.....CURRENT DEMAND    [299 ] = 0.00 %
.....CURRENT FEEDBACK  [298 ] = 0.00 %
.....POS. I CLAMP      [87 ] = 0.0 %
.....NEG. I CLAMP      [88 ] = 0.0 %
.....ACTUAL POS I LIM  [67 ] = 0.0 %
.....ACTUAL NEG I LIM  [61 ] = 0.0 %
.....INVERSE TIME O/P  [203 ] = 200.00 %
.....AT CURRENT LIMIT  [42 ] = FALSE
.....AT ZERO SPEED     [77 ] = TRUE
.....AT ZERO SETPOINT  [78 ] = TRUE
.....AT STANDSTILL     [79 ] = TRUE
.....STALL TRIP        [112 ] = OK
.....RAMPING           [113 ] = FALSE
.....PROGRAM STOP      [80 ] = TRUE
.....DRIVE START       [82 ] = OFF
.....DRIVE ENABLE       [84 ] = DISABLED
.....OPERATING MODE    [212 ] = STOP
.....FIELD ENABLE      [169 ] = DISABLED
.....FIELD DEMAND      [183 ] = 0.00 %
```

Example only

14-4 Serial Communications

5703 Support

This unit provides the facility to run a line of drives in speed-lock without the use of a 5720 Quadraloc controller; for accurate speed-holding, encoder feedback is required. Ratioed speed-locking is supported, although the unit is not intended to replace the Quadraloc in applications requiring high accuracy.

A 16-bit speed signal is passed between drives through a fibre-optic link and the P3 port on each drive (a port otherwise used only off-line for the upload and download of EEPROM data). The port operates RS232 compatible signal levels, the 5703/1 converts these signal levels to fibre optic signals for transmission and from fibre optics to RS232 for reception.

Hardware Description

The 5703/1 is housed in a DIN rail mounted box and is provided with a cable to connect into the P3 port. The cable is 400mm long to limit transmission errors, the primary unit-to-unit interconnection is intended to be achieved by a fibre optic cable.

The 5703 unit itself is simply an electric signal-to-light drive and does not alter the signal in any way, this is achieved within the software data of the drive.

It is fitted with one fibre optic receiver and two fibre optic transmitters, the fibre optic receiver has a fixed function to receive data from the preceding unit while the transmitter sends data to the following unit. The additional transmitter can be used either to re-transmit the incoming signal or provide a second transmission of the output signal, this gives the unit wide functionality. When the link is in the normal right hand position, assuming the board is mounted with the fibre optics downward, the second transmitter repeats the output signal. In the left hand position it repeats the input signal.

The 5703/1 can be configured to point to any relevant parameter in the block diagram, the default connections are such that the scaled input is connected to the "additional speed demand" and the output to the "speed demand".

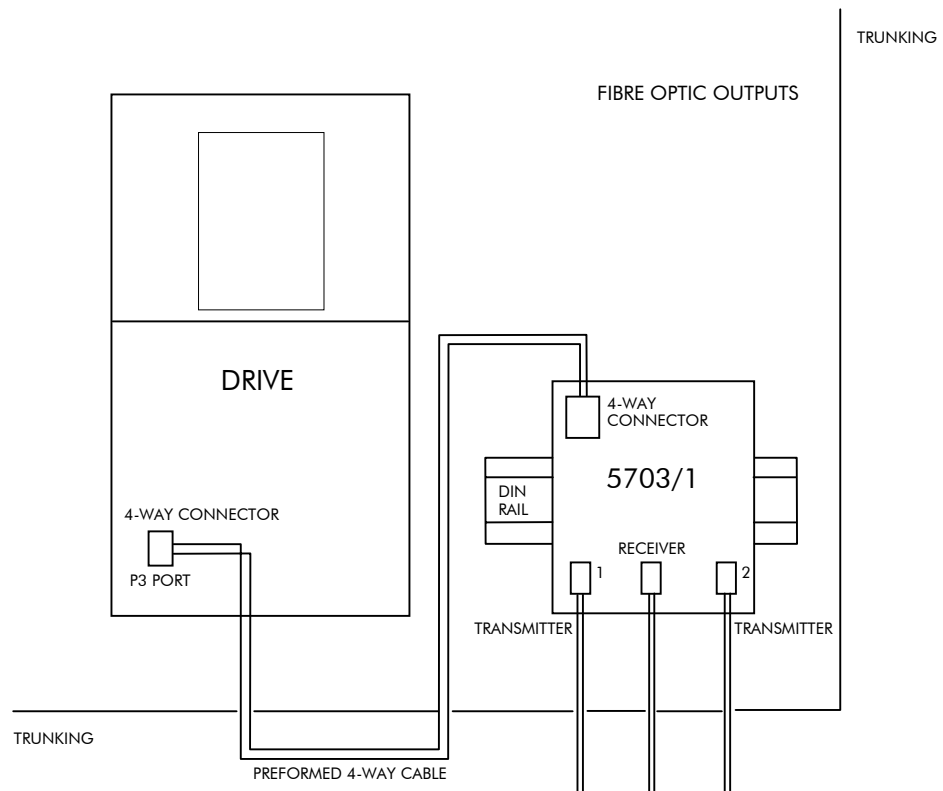


Figure 14-1 5703/1 Product Outline Drawing

5703 Support

This unit provides the facility to run a line of drives in speed-lock without the use of a 5720 Quadraloc controller; for accurate speed-holding, encoder feedback is required. Ratioed speed-locking is supported, although the unit is not intended to replace the Quadraloc in applications requiring high accuracy.

A 16-bit speed signal is passed between drives through a fibre-optic link and the P3 port on each drive (a port otherwise used only off-line for the upload and download of EEPROM data). The port operates RS232 compatible signal levels, the 5703/1 converts these signal levels to fibre optic signals for transmission and from fibre optics to RS232 for reception.

Hardware Description

The 5703/1 is housed in a DIN rail mounted box and is provided with a cable to connect into the P3 port. The cable is 400mm long to limit transmission errors, the primary unit-to-unit interconnection is intended to be achieved by a fibre optic cable.

The 5703 unit itself is simply an electric signal-to-light drive and does not alter the signal in any way, this is achieved within the software data of the drive.

It is fitted with one fibre optic receiver and two fibre optic transmitters, the fibre optic receiver has a fixed function to receive data from the preceding unit while the transmitter sends data to the following unit. The additional transmitter can be used either to re-transmit the incoming signal or provide a second transmission of the output signal, this gives the unit wide functionality. When the link is in the normal right hand position, assuming the board is mounted with the fibre optics downward, the second transmitter repeats the output signal. In the left hand position it repeats the input signal.

The 5703/1 can be configured to point to any relevant parameter in the block diagram, the default connections are such that the scaled input is connected to the "additional speed demand" and the output to the "speed demand".

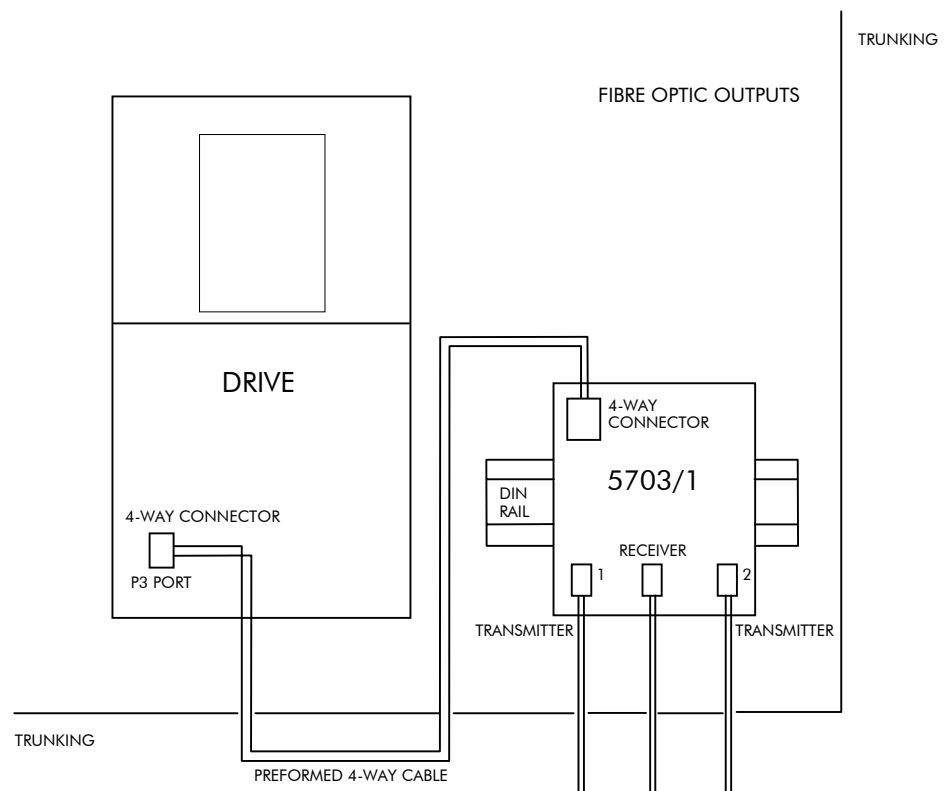


Figure 14-2 5703/1 Product Outline Drawing

Commissioning the 5703/1

The P3 port is configured for 5703 support using the MMI. The drive's RS422 serial link will then allow control over the scaling of the input by a keypad or by a host processor. Refer to Chapter 16: "The Default Application" for the block diagram, and also see Figure 14-3 Wiring Diagram for 5703/1 Speed Repeater below.

Refer to Chapter 6: "Programming Your Application" - 5703 SUPPORT for parameter details.

MMI Menu Map

1	SERIAL LINKS
2	SYSTEM PORT P3
3	P3 SETUP
4	5703 SUPPORT
	SETPT. RATIO
	SETPT. SIGN
	5703 INPUT
	5703 OUTPUT

The Inputs of the Drive

The speed setpoint from the 5703/1 enters the drive via the P3 port and, after scaling, is added together with analog inputs 1, 2 and 3 (ramped).

IN BASIC TACHO-FOLLOWER MODE, ALL THE ANALOG INPUTS MUST BE DISABLED TO PREVENT LOSS OF ACCURACY, yet it may be necessary in some applications to provide analog inputs for trim signals or inch setpoints:

1. The ramp input may be disabled by taking terminal C7 (Ramp Hold) permanently high; the ramp is automatically cleared when the drive is quenched, and its output will never move from (exactly) zero. The ramp input may often be of use in line master drives; but the ramp should be disabled in slave drives. Note that the P3 setpoint may be passed through the ramp function; in such a case, the analog input to the ramp (terminal A4) is automatically disconnected.
2. Analog input 1 (terminal A2) is used for inch setpoints. During normal running, the terminal is shorted to 0V and the deadband function is used so that no signal at all passes to the summing junction. The analog inch setpoints are set a little above the threshold of the deadband so as to give the required inching speeds, forward or backward. Selection between analog inching and absolutely zero analog input is thus accomplished automatically.
3. Analog input 2 (terminal A3) may be disabled by writing zero to its scaling block; this will normally be done through the MMI at commissioning, but may be overridden by the serial link. Alternatively, this input may be used for a local analog trim.

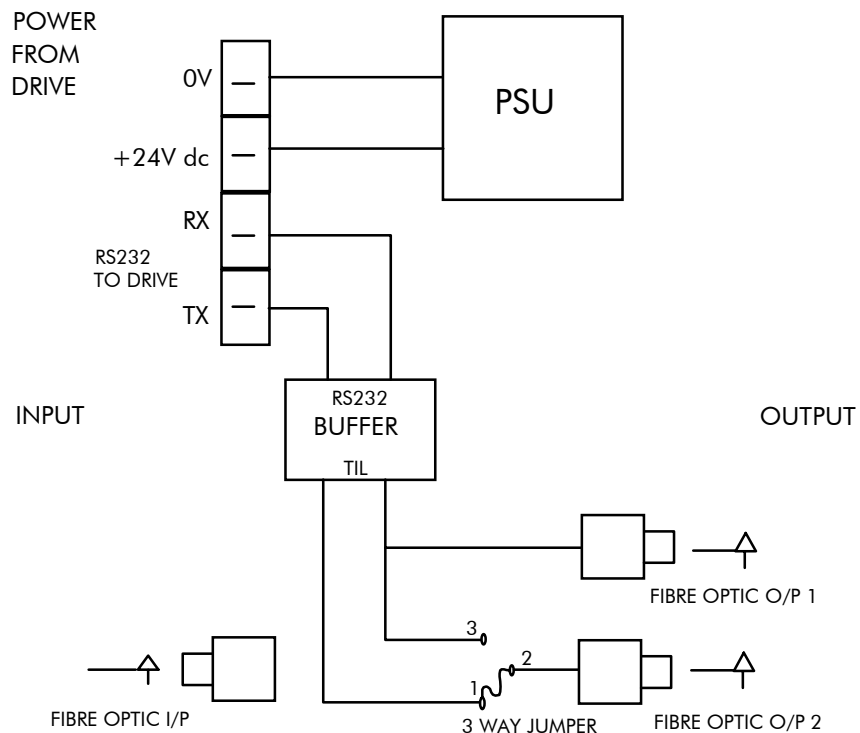


Figure 14-3 Wiring Diagram for 5703/1 Speed Repeater

Error Codes

ERROR REPORT (EE)

The EI-BISYNCH Prime Set contains the EE mnemonic. This is also an output parameter in the MAIN PORT (P1), AUX PORT (P2) and SYSTEM PORT (P3) function blocks, where the parameter value can be read and reset. Refer to the COMMS Option Technical Manual for further details.

The following values are returned if an enquiry (reading information from the drive) is performed on this Read/Write parameter.

Writing any value to this parameter will set the value to >00C0. Clearing the last error value may be useful in seeing a repetitive error re-occurring.

Value	Description
>00C0	No error
>01C7	Invalid mnemonic
>02C2	Checksum (BCC) error
>03C2	Framing or overrun error
>04C8	Attempt to read from a write-only parameter
>05C8	Attempt to write to a read-only parameter
>07C7	Invalid message format
>07C8	Invalid data (encoding error)
>08C8	Data out of range

14-8 Serial Communications

590+ DRV FRAME H

Changing DC Output Terminals (Frame H)

- Remove the left-hand cover plate(s) and retain the cover and screws.
- Remove and retain the 12 M6 nuts clamping the outgoing terminals to the cross plates.
- Remove the 12 M6 bolts securing the outgoing busbar assembly (assemblies). Remove the assembly (assemblies).
- Carefully remove the gasket(s) for use on the left-hand side.
- Refit the cover to the right-hand side of the drive.
- Refit the gasket to the left-hand side of the drive.
- Refit the terminal assemblies.

Note: The 2Q terminal assembly is not polarised and may be fitted in any orientation. The 4Q terminal assemblies are handed and must be reversed to fit on the left-hand side.

- Move the terminal markers as appropriate, the A+ terminal will still be at the bottom or AC input at the end of the product.
- Tighten terminal assembly bolts to the torque given in Chapter 11.

Removing the Cover (Frame H)


The cover is manufactured from sheet metal and weighs:-

- 2Q Non-Regenerative = 10kg (22 lbs)
- 4Q Regenerative = 15kg (33 lbs)

To remove the cover use a flat headed screwdriver to undo the two screws at the base of the cover.

Now lift the cover base outwards and upwards, once the cover has been raised two centimetres it can now be removed.

To replace the cover follow the procedure in reverse, engaging the locating studs at the top, moving into final location and tightening mounting screws.

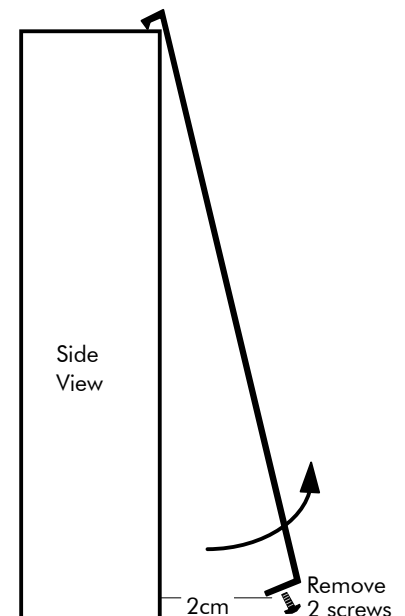


Installing the Fan (Frame H)

Refer to Chapter 11: “Technical Specifications” - Cooling for fan ratings

The fan unit supplied should be installed on the cubicle, with or without ducting (refer to the Installation Drawing). The drive is force-cooled using the fan units supplied with the drive. As a general rule allow at least 150mm (6 inches) of clear space above and below the drive for free air flow. We suggest the cubicle has an air inlet at the base of the cubicle equivalent to 1.22m² (4ft²), variable depending upon the filter type used, to allow the maximum throughput of air.

The fan assembly provided is permanently wired as shown below.

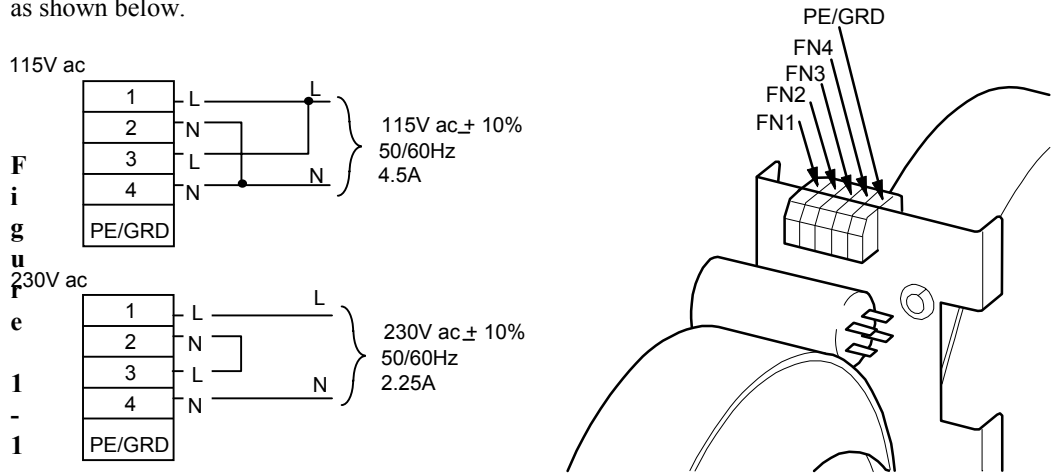

Fan Wiring Diagram

THE DEFAULT APPLICATION


Block Diagrams

The drive is supplied with a pre-programmed set of parameters providing for basic speed control. The following block diagrams show this factory set-up.


















If you make any permanent changes to the block diagram, remember to update the non-volatile memory within the drive by performing a PARAMETER SAVE. Refer to Chapter 5: “The Keypad” - Saving Your Application.




To return to the default application, refer to Chapter 5: “The Keypad” - Menu Shortcuts and Special Key Combinations.


16-2 The Default Application

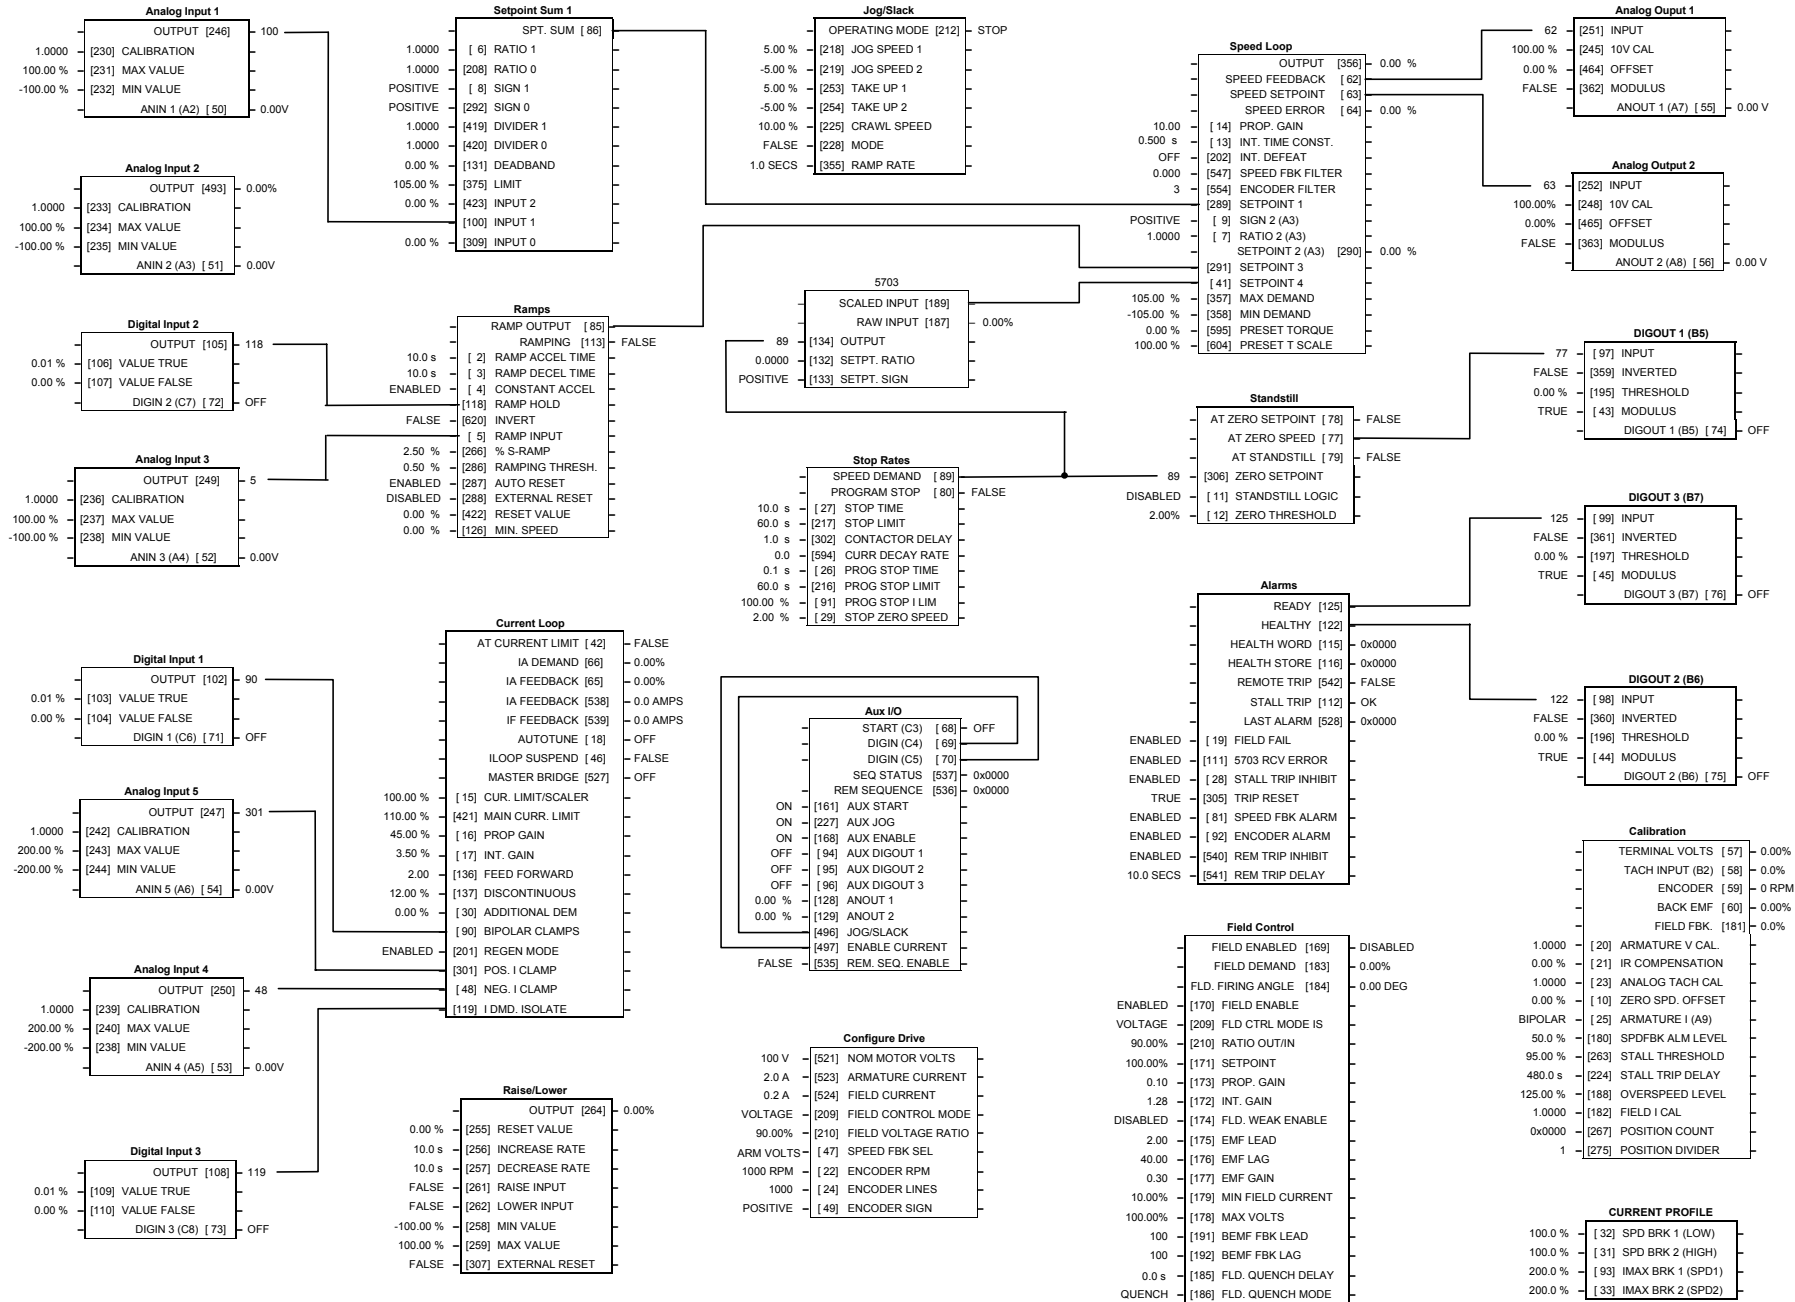


Programming Block Diagram - Sheet 1

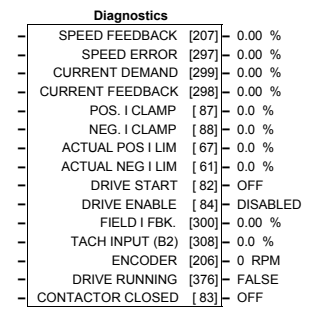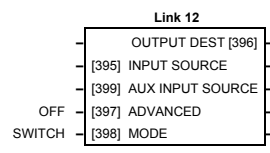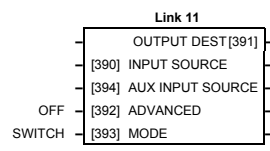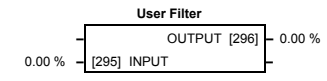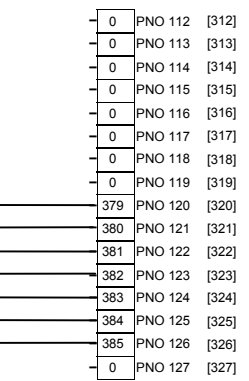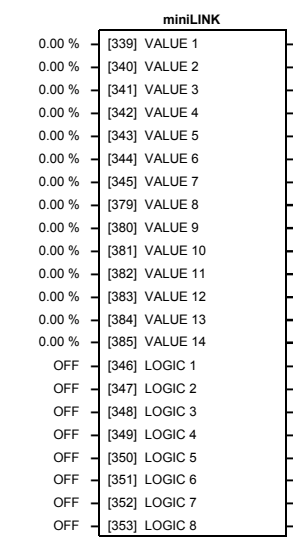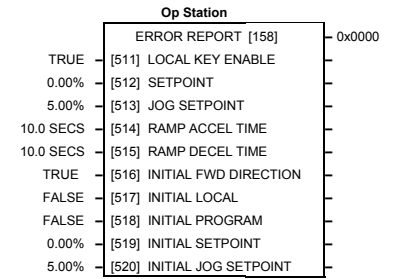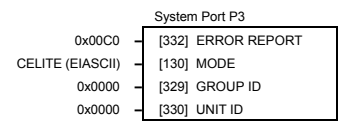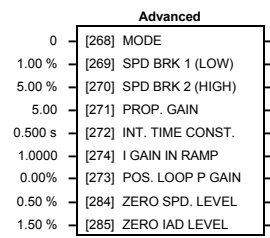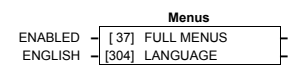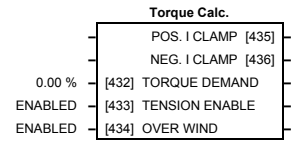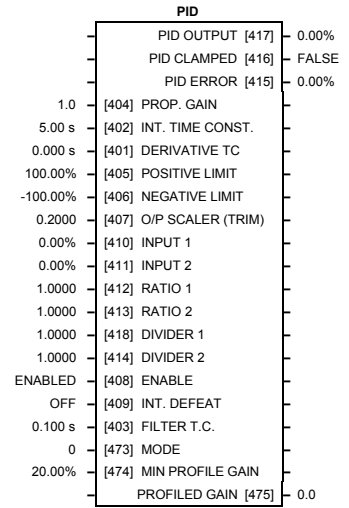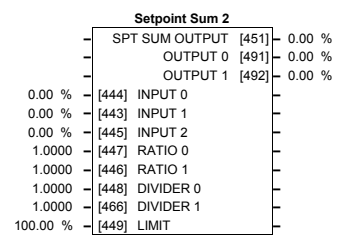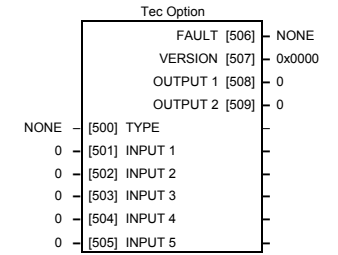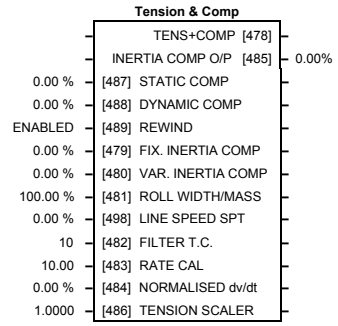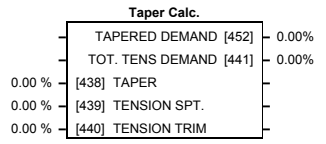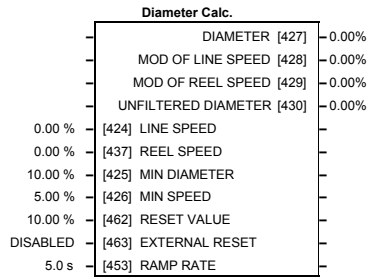

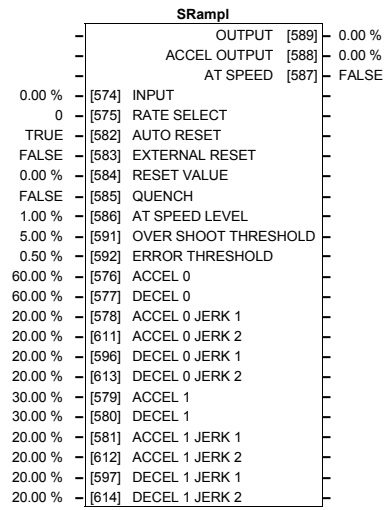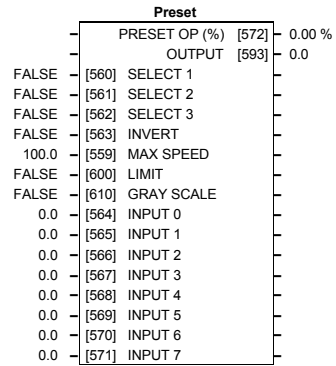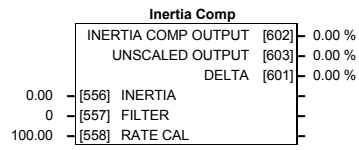


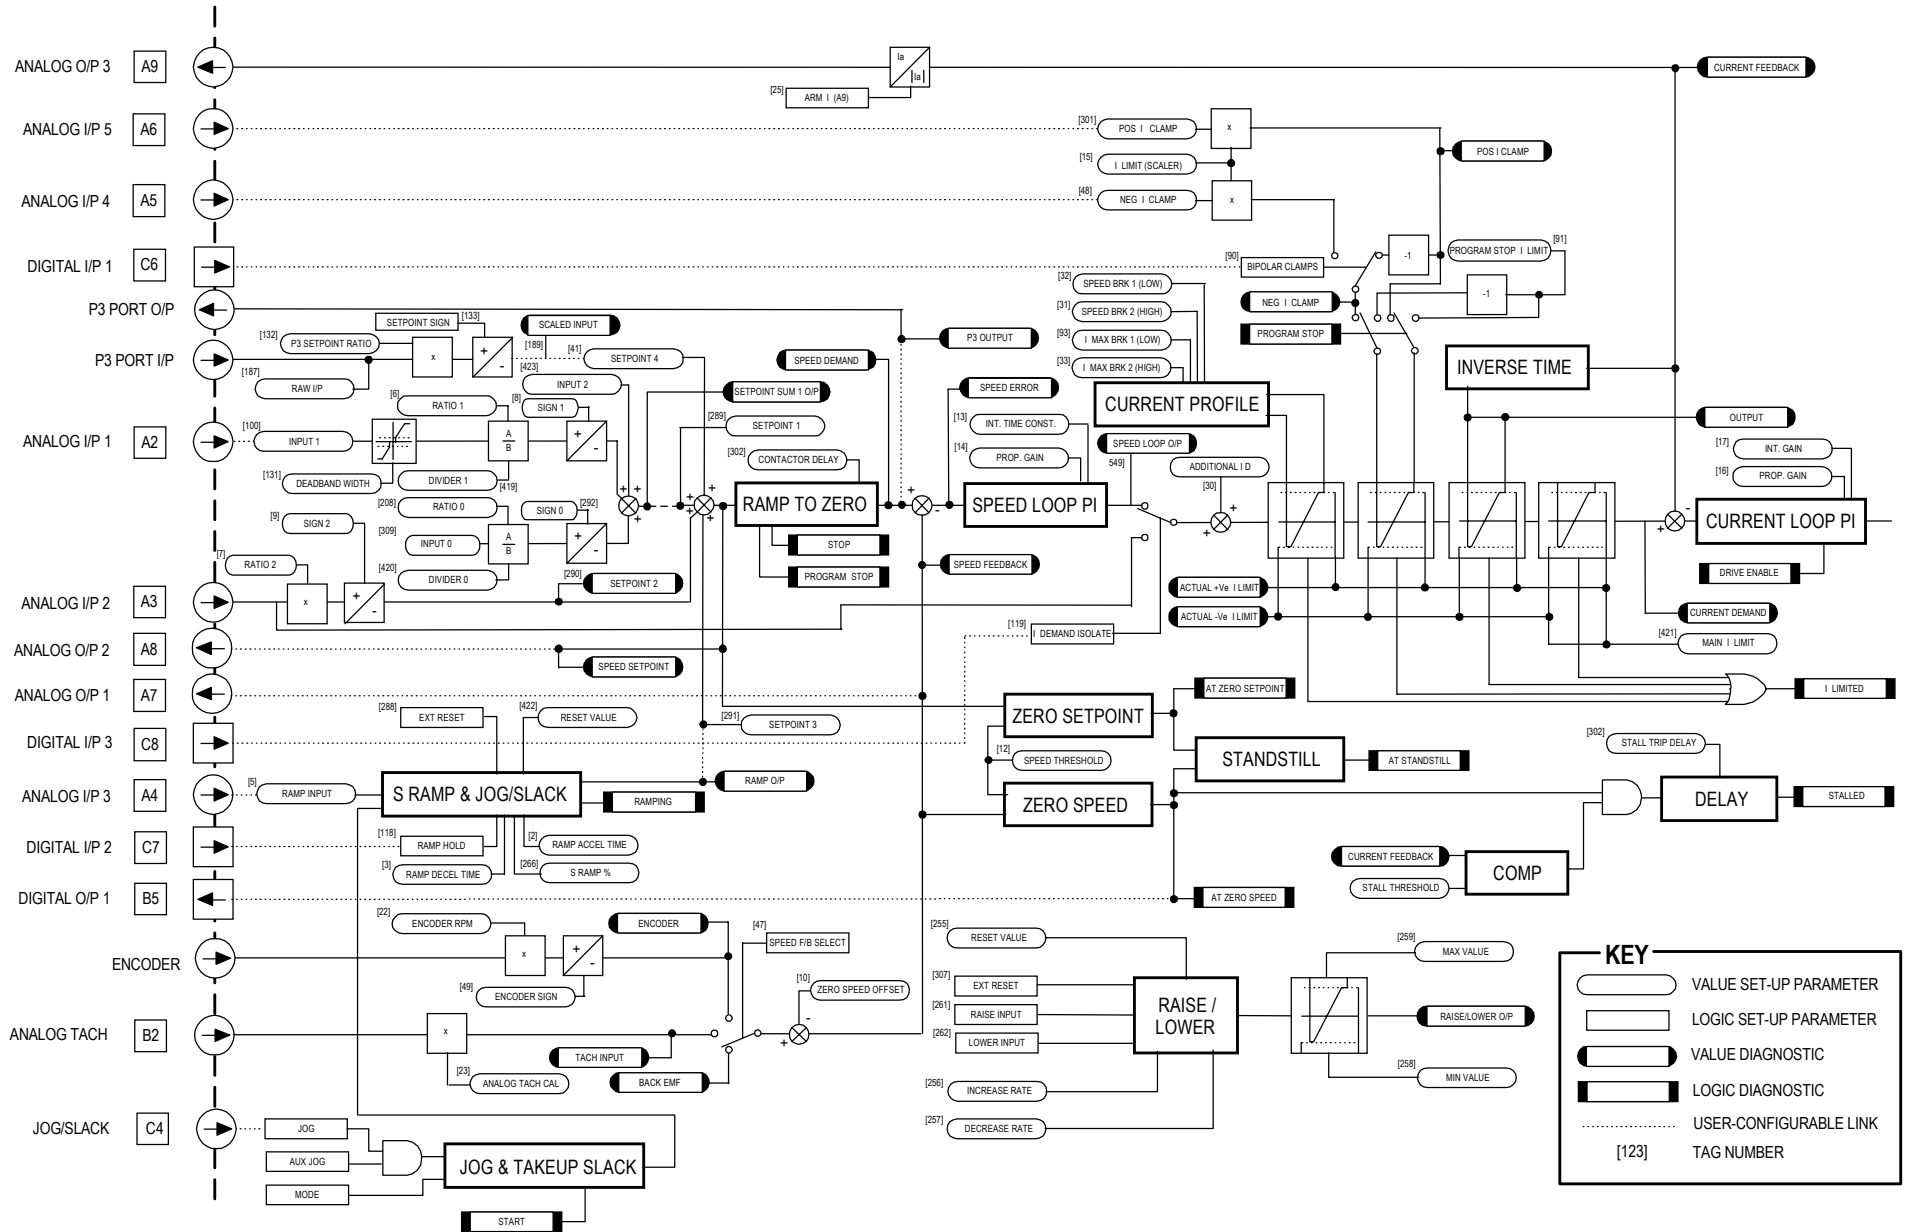


Main Block Diagram

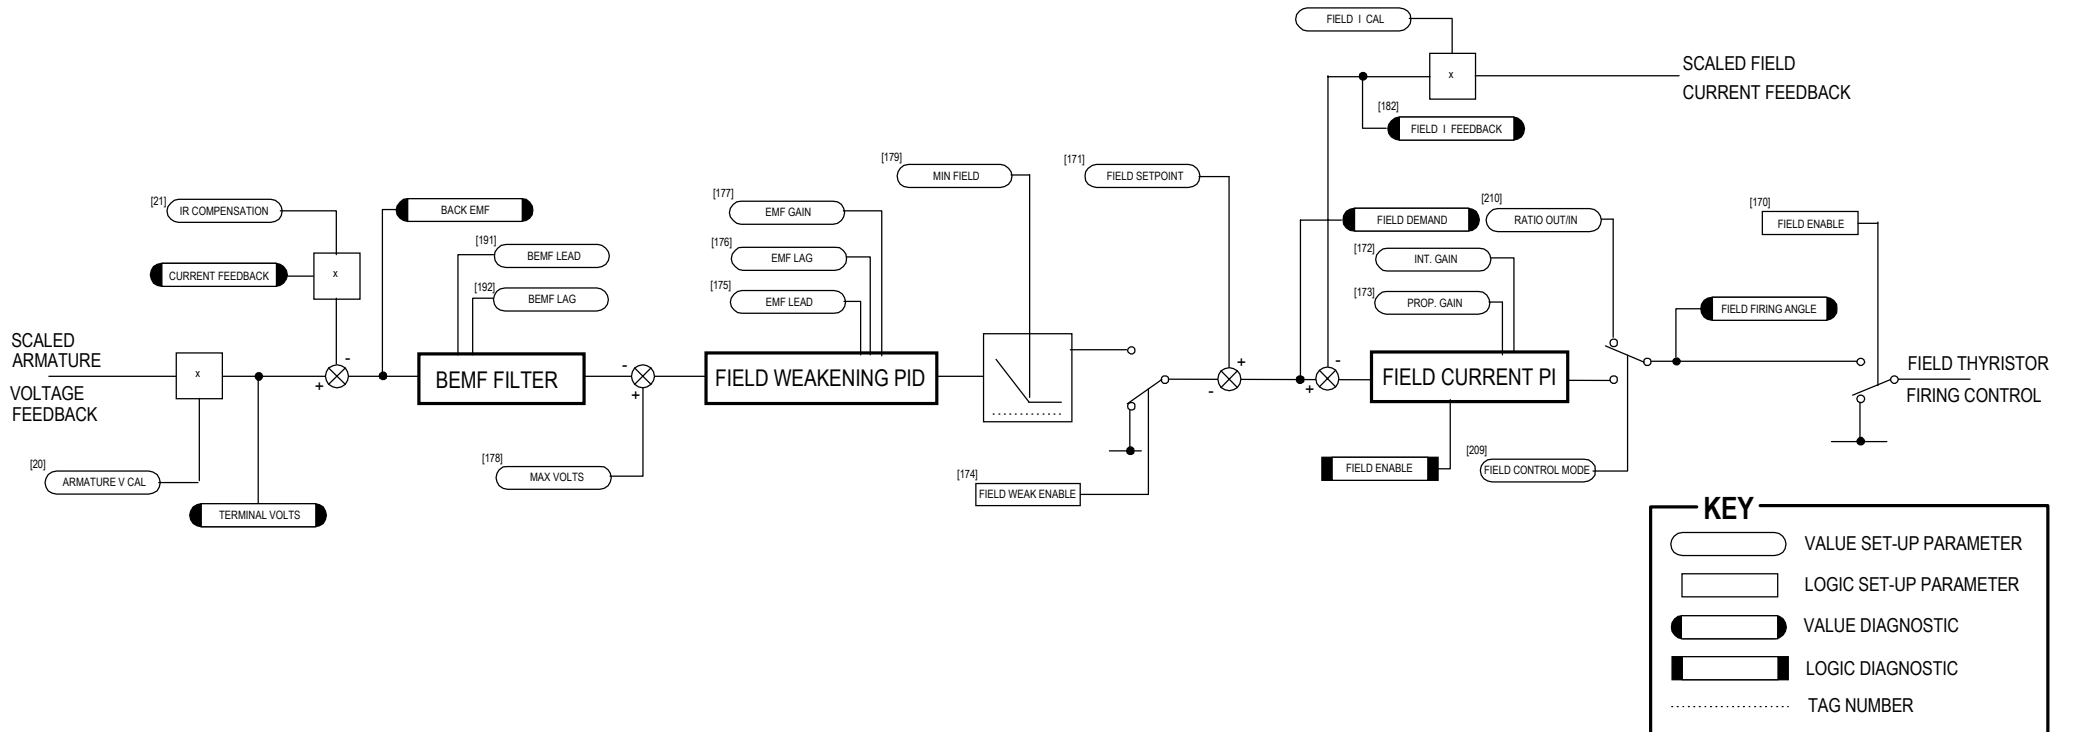


Field Control Block Diagram

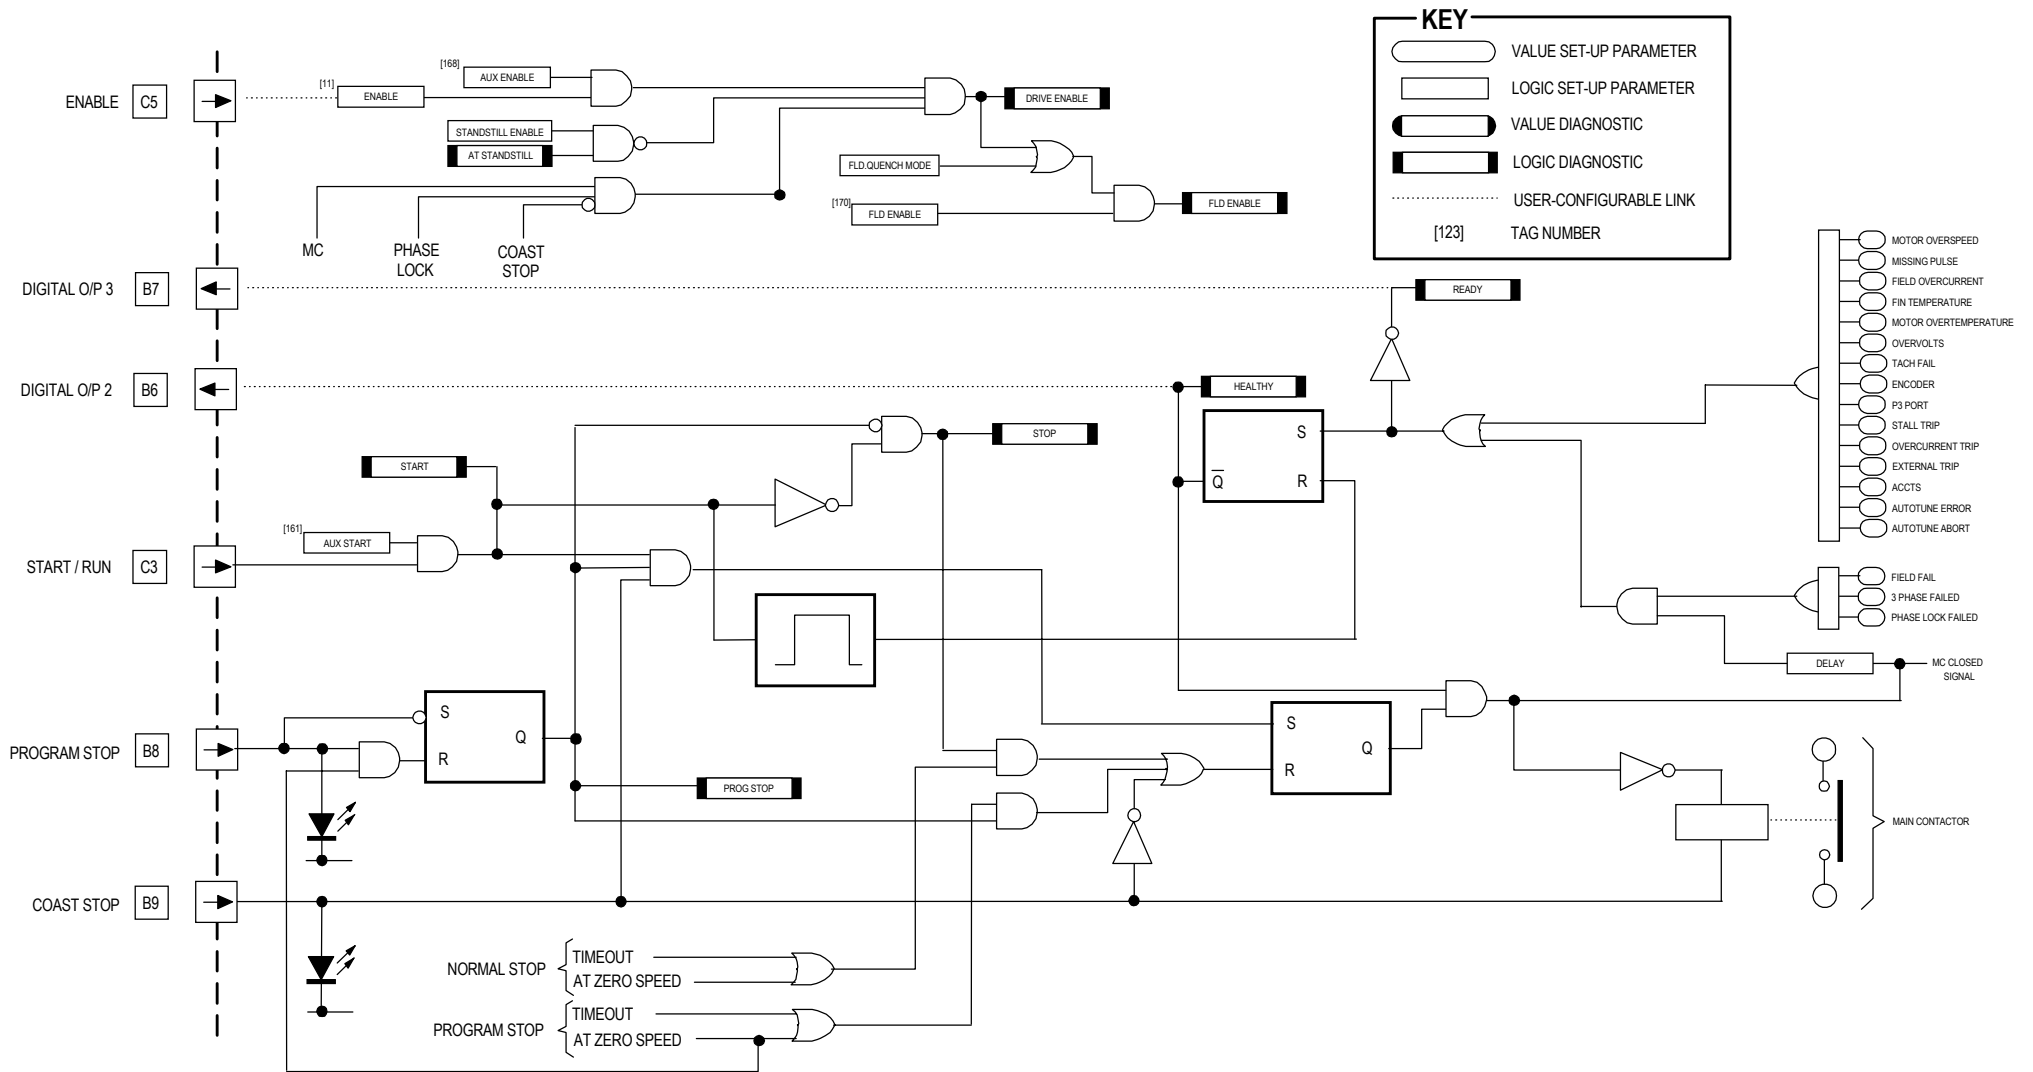

Start/Healthy Logic Block Diagram

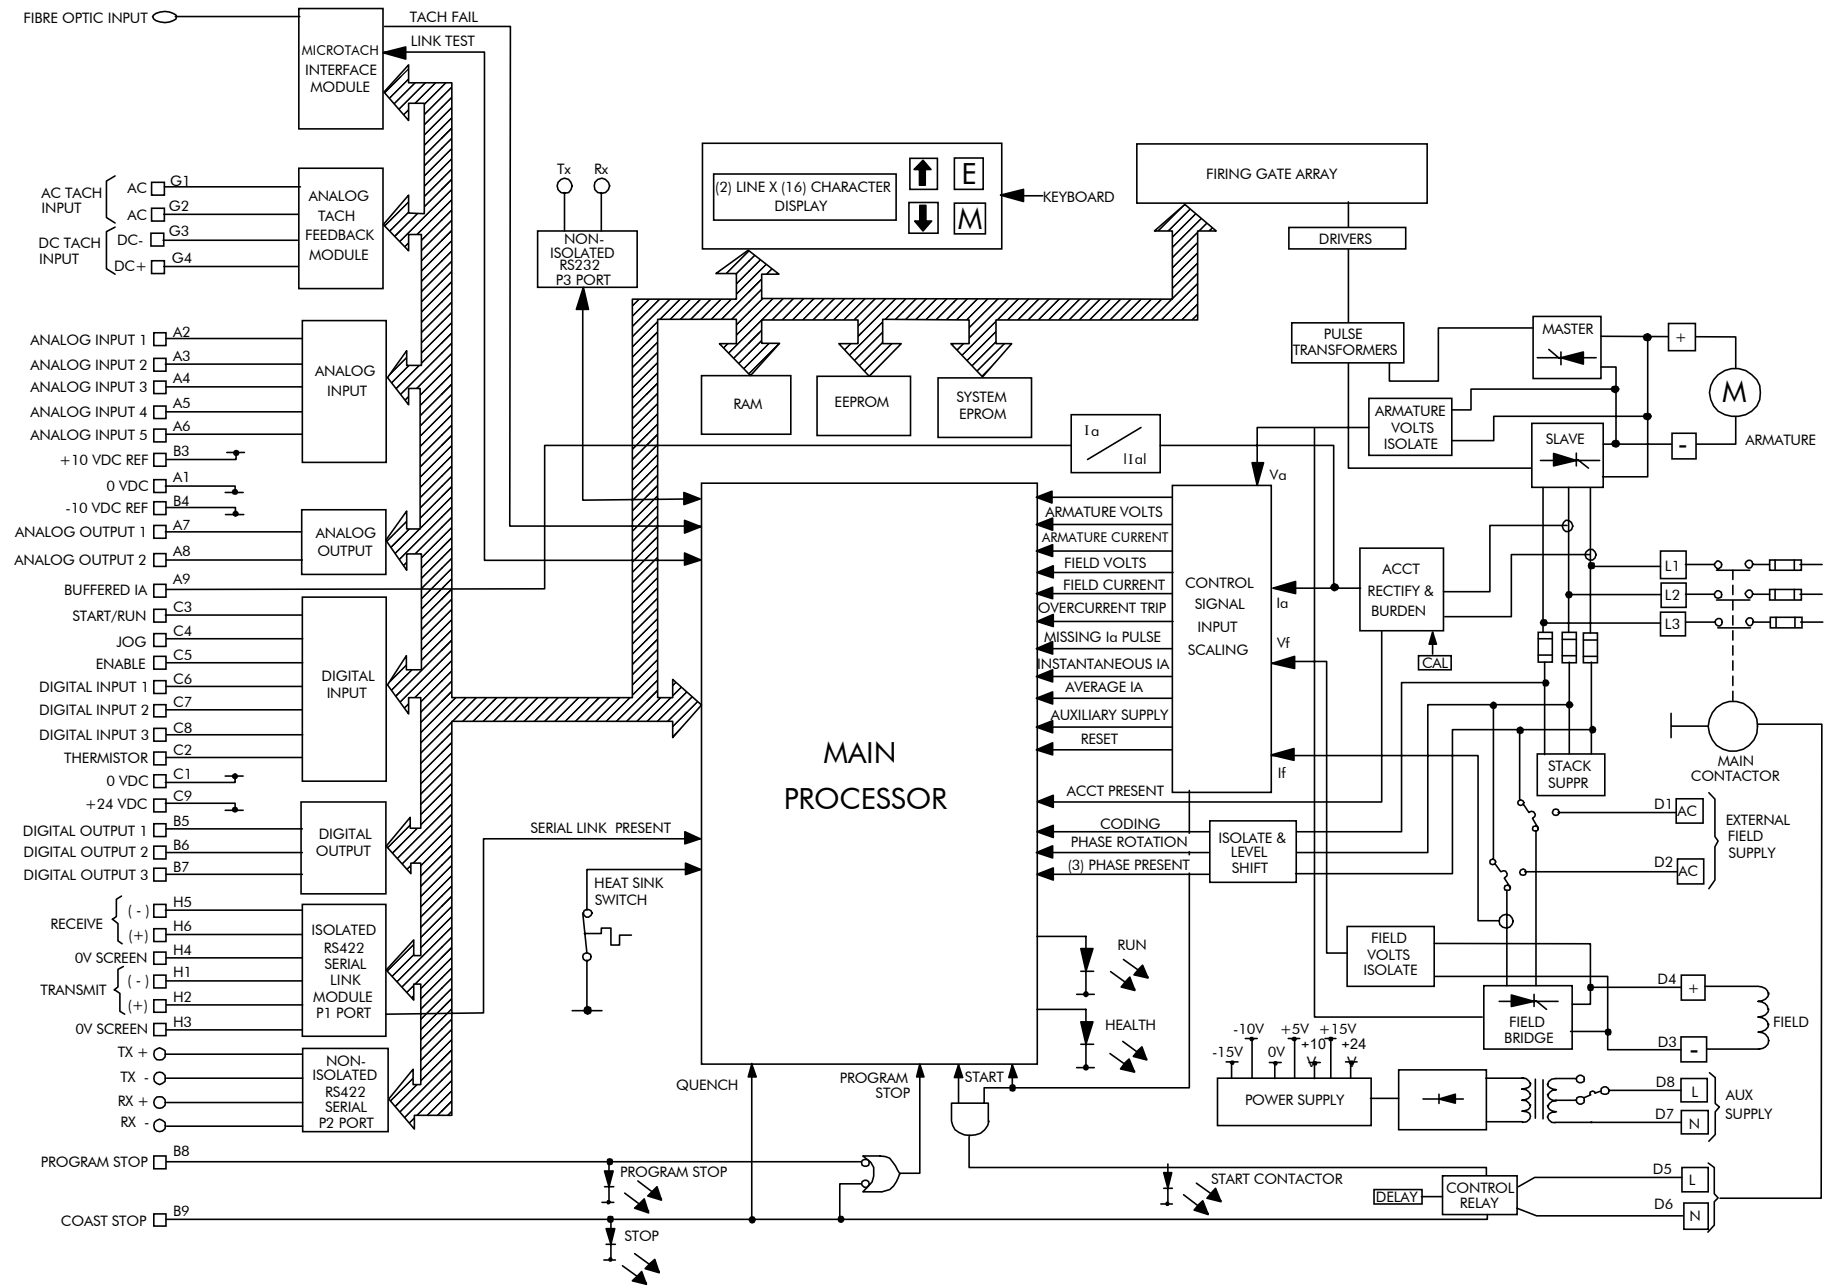

Functional Block Diagram

ISS.	MODIFICATION	ECN No.	DATE	DRAWN	CHK'D
E	First printed release of HA470388.	00763	14/02/00	CM	GR
1	Added two drawings to Chapter 3, changed 34A drive to 35A throughout, other small amendments.	ECO791	22/3/00	CM	GR
1	First printed release of HA470388U001. Manual re-worked for US	15909 (15573) (15543) (16239) (15028)	29/2/02	CM	GR
1	First printed release of HA470388U002. Manual re-worked for US	16951 (17130) (16807) (17615)	03/09/03	CM	GR
FIRST USED ON		MODIFICATION RECORD			
		590+ DRV Series DC Digital Drive			
 EUROTHERM DRIVES		DRAWING NUMBER			SHT. 1
		ZZ470388U002			OF 1

